

भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला Patiala Locomotive Works, Patiala



LOCO TESTING & DISPATCH REPORT OF IGBT BASED 3 PHASE ELECTRIC LOCOMOTIVE

LOCO NO.: 39365

TYPE: WAP-7

RAILWAY SHED: CR/PADX

PROPULSION SYSTEM: MEDHA

HOTEL LOAD: MEDHA

DATE OF DISPATCH: 27.05.2024

लोको निर्माण रिकार्ड



पटियाला रेलइंजिन कारख़ाना, पटियाला Patiala Locomotive Works, Patiala

LOCO NO. - 39365

RAILWAY/SHED: CR/PADX

DOD: May-2024

INDEX

SN	PARA	ACTIVITIES	PAGE NO.
		Testing & Commissioning (ECS)	,
1.	1.0 1.1 1.2 1.3 1.4	Continuity Test of the cables Continuity Test of Traction Circuit Cables Continuity Test of Auxiliary Circuit Cables Continuity Test of Battery Circuit Cables Continuity Test of Screened Control Circuit Cables	1-4
2.	2.0 2.1 2.2 2.3	Low Tension test Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics)	5-6
3	3.0 3.1 3.2 3.3 3.4	Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode	7-10
4	4.0 4.1 4.2 4.3 4.4 4.5 4.6 4.7 4.8 4.9	Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86) Maximum current relay (Pos. 78) Test current sensors Test DC Link Voltage Sensors (Pos 15.6/*) Verification of Converter Protection Circuits (Hardware limits) Sequence of BUR contactors	11-16
5.	5.0 5.1 5.2 5.3 5.3.1 5.3.2 5.3.3 5.4 5.5 5.6 5.7 5.8 5.9	Commissioning with High Voltage Check List Safety test main circuit breaker Auxiliary Converter Commissioning Running test of 3 ph. auxiliary equipments Performance of Auxiliary Converters Performance of BURs when one BUR goes out Auxiliary circuit 415/110 Hotel Load Circuit Traction Converter Commissioning Test protective shutdown SR Test Harmonic Filter Test important components of the locomotive	16-25
6.	6.0	Running Trial of the locomotive	25-26
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27
8.	1-6	Annexure HLC	28-33
9.	1-10	Pneumatic Test Parameters	34-37
10.		Loco Check Sheet(LAS)	38
11.	-	Component History (LAS,ECS,ABS)	39-41
12.	-	Component History & Testing Parameter (Bogie Shop)	42-43
13	-	Warranty Conditions as per Tenders	44-46

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3 936 Mem 1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ok	100 ΜΩ	M-1-
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	2000
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	2000
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	2000
Transformer	Power Converter 1	ok	100 ΜΩ	1500
Transformer	Power Converter 2	ok	100 ΜΩ	2500
Power Converter 1	TM1, TM2, TM3	ok	100 ΜΩ	1500
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	1500
Earth	Power Converter 1	ok	100 ΜΩ	1000
Earth	Power Converter 2	ok	100 ΜΩ	1000

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 ΜΩ	1000
Transformer	BUR2	OK	100 ΜΩ	1000
Transformer	BUR3	OR	100 MΩ	1000
Earth	BUR1	OV_	100 ΜΩ	800
Earth	BUR2	OV.	100 M Ω	800
Earth	BUR3	al	100 ΜΩ	800
BUR1	HB1	2K	100 ΜΩ	1000
BUR2	HB2	ne-	100 ΜΩ	1000
HB1	HB2	OR	100 ΜΩ	1000
HB1	TM Blower 1	OK	100 MΩ	200
HB1	TM Scavenge Blower 1	ne	100 ΜΩ	150
HB1	Oil Cooling Unit 1	or one	100 ΜΩ	100
HB1	Compressor 1	ne	100 MΩ	100
HB1	TFP Oil Pump 1	De-	100 MΩ	150
HB1	Converter Coolant Pump 1	or-	100 ΜΩ	120
HB1	MR Blower 1	or or	100 ΜΩ	1.50
HB1	MR Scavenge Blower 1	. 02-	100 ΜΩ	200
HB1	Cab1	OK.	100 ΜΩ	100
Cab1	Cab Heater 1	ok.	100 MΩ	1.00
HB2	TM Blower 2	OL	100 ΜΩ	150
HB2	TM Scavenge Blower 2	or	100 ΜΩ	2er
HB2	Oil Cooling Unit 2	OL	100 ΜΩ	200
HB2	Compressor 2	ac	100 ΜΩ	150
HB2	TFP Oil Pump 2	al_	100 M Ω	150
HB2	Converter Coolant Pump 2	De	$100~{ m M}\Omega$	100
HB2	MR Blower 2	ne_	100 ΜΩ	270
HB2	MR Scavenge Blower 2	ne	100 MΩ	Zes
HB2	Cab2	DL	100 ΜΩ	100
Cab2	Cab Heater 2	ne	100 ΜΩ	100

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	ok
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	9K
Battery (Wire no. 2052)	Connector 50.X7-2		94
SB2 (Wire no 2050)	Connector 50.X7-3		OK

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>6</u> ΜΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value <u><i>GS</i></u> MΩ
•	> 50 MΩ	

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK,
Memotel circuit of cab1 &2	10A	OK.
Memotel speed sensor	10A	9K
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	ox_

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	ok .
TE/BE meter bogie-1 & 2	08E, 08F	ok.
Terminal fault indication cab-1 & 2	09F	•
, , , , , , , , , , , , , , , , , , ,		OK.
Brake pipe pressure actual BE electric	06H	OK
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	8K
Auxiliary current sensors	12B, 12F	٥K
Oil circuit transformer bogie 1	12E, 12I	°K
Magnetization current	12C, 12G	οK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	ek.
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	UK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	⁹ <
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	9K
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= 10KΩ± ± 10%)	13A	OK
UIC line	13B	OK
Connection FLG1-Box TB	13A	2

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page : 5 of 27

2.0 Low Tension test2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.915
Resister to maximum current relay.	1 Ω ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3,352
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.22
Between wire 6 & 7	0.2 Ω	0.252
Between wire 5 & 7	0.4 Ω	0:452
For train bus, line U13A to earthing.	10 kΩ± 10%	10:012
For train bus, line U13B to earthing.	10 k Ω ± 10%	99952
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	30095
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.282
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0/2952
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.2952
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0,292
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ ± 10%	2.241
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.7K2
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9KL
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.8 425
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	390 D
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω± 10%	re A
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	1052

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39365

Type of Locomotive; WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks cfacted ox	
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green		
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	choeked on	

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	OK
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	3K
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	QL_
Test control Pneumatic devices	Sheets of Group 06	95
Test lighting control	Sheets of Group 07	9<
Pretest speedometer	Sheets of Group 10	DK
Pretest vigilance control and fire system	Sheets of Group 11	ax
Power supply train bus	Sheets of Group 13	De

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yey
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.09
Traction converter-2 software version:	1.09
Auxiliary converter-1 software version:	1.04
Auxiliary converter-2 software version:	1.04
Auxiliary converter-3 software version:	1:04
Vehicle control unit -1 software version:	3
Vehicle control unit -2 software version:	3

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	10%
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100%.
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	2-57,

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

	•		
TE/BE at 'BE maximal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	100.1.
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS 0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	44-J,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	744,
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0° C to 40° C	13°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	12°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	12.500
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40° C	
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	12°C

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page : 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result
	nesure desired in sequence	obtained
Emergency shutdown through	VCD must onen	
emergency stop switch 244	VCB must open.	chocked on
emergency stop switch 244	Panto must lower.	
Shut Down through cab activation	VCB must open.	
switch to OFF position	Panto must lower.	chocked ax
Switch to off position	Fanto must lower.	
Converter and filter contactor	FB contactor 8.41 is closed.	h
operation with both Power	By moving reverser handle:	
Converters during Start Up.	Converter pre-charging contactor	
	12.3 must close after few seconds.	
	• Converter contactor 12.4 must close.	clocked ox
	Converter re-charging contactor	ا
	12.3 must opens.	/
	By increasing TE/BE throttle:	
	• FB contactor 8.41 must open.	
	• FB contactor 8.2 must close.	
_	• FB contactor 8.1 must close.	
		<u> </u>
Converter and filter contactor operation with both Power	, ,	[]
Converters during Shut Down.	• VCB must open.	
Converters during shat bown.	Panto must lower.	
·		
	• Converter contactor 12.4 must open.	cheeted
	• FB contactor 8.1 must open.	<i> </i> >
	• FB contactors 8.41 must close.	Į l
	• FB contactor 8.2 must remain closed.	
~	<u> </u>	

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

	<u> </u>	1
Contactor filter adaptation by isolating any bogie	After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open.	charted oc
Test earth fault detection battery	By connecting wire 2050 to	
circuit positive & negative	earth, create earth fault	Y
	negative potential.	
	message for earth fault	
	By connecting wire 2095	- Checker of
	to earth, create earth	
·	fault positive potential.	
	message for earth fault	
Test fire system. Create a smoke in	When smoke sensor-1 gets	<u> </u>
the machine room near the FDU.	activated then	
Watch for activation of alarm.	 Alarm triggers and fault 	
4	message priority 2	
•	appears on screen.	0 100
	When both smoke sensor	choesed on
	1+2 gets activated then	
	A fault message priority	
	1 appears on screen and	
·	lamp LSF1 glow.Start/Running interlock occurs and	
	TE/BE becomes to 0.	·
Time, date & loco number	Ensure correct date time and Loco	
inne, date & loco number	number	QL_
	,	

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

4.0 Sensor Test and Converter Test

Page: 11 of 27

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.047	Oy_
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.04 Up	OK,
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.05	3
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.054	OK.
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	5.84P	o.k
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	$9.12V_p$, $6.45V_{RMS}$ and same polarity.	9.11VP 6.44Vpms	DA-

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$, $41.5V_{RMS}$ and opposite polarity.	58.5V	8.
		41.60 pms	°<
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15508	٥٧
		LI DVD MC	

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{\rm eff}/350V_{\rm p}$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply 200V_{RMS} through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25×V	2-59/
SLG2_G 87-XUPrim	25 kV	250%	25 W	250-11

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	1744	170%
SLG2_G 87-XUPrim	17 kV	170%	17KU	1704'

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KV	3007
SLG2_G 87-XUPrim	30 kV	300%	30KV	300-/1

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjus	ted to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	√(Yes/No)
Try to activate the cab in driving mode:	L(Yes/No)
Contactor 218 do not close; the control	
electronics is not be working.	
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V _{RMS} through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	٠.
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V _{RMS} through variac to wire no. 1501 & 1502; Decrease the supply voltage below 140V _{RMS} ± 4V; Fine tune the minimum voltage relay so that VCB opens.	L(YES/NO)
THE tune the minimum voltage relay to that veb opens.	

4.5 Maximum current relay (Pos. 78)

display.

Disconnect wire 1521 & 1522 of primary current tran &1522 (including the resistor at Pos. 6.11); Put loco in si on contact 136.3; Close VCB; supply 3.6A _{RMS} at the comaximum current relay Pos. 78 for correct over current	mulation for driving mode; Open $R_3 - R_4$ open wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	UYES/NO)
Keep contact R_3 – R_4 of 136.3 closed; Close VCB; Tune th /9.9 A_p at the open wire 1521;	ne resistor 78.1 for the current of 7.0A _{RMS}
VCB onens with Priority 1 fault message on	(Yes/No)

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 29365

Type of Locomotive: WAP-7/WAG-9HC

Page : 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)	,	<u>,</u>
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298mm
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1		
	or 2 pin no. 7(+) & 8(-)		336mn
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		C
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		347mB
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		1250mm

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39345

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown	Measured limit	1
	should take place		
Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in	For 18.2/1=	Ŋ
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 18.2/2=	V
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=	l
for Power Converter 1	with priority 1 fault for each	For 18.4/4=	-
	sensor.	For 18.5/1=	
		For 18.5/2=	I
		For 18.5/3=	
•			J
Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in	For 18.2/1=	1)
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 8.2/2=	Ĭ
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=	Λ
for Power Converter 2	with priority 1 fault for each	For 18.4/4=	
	lsensor.	For 18.5/1=	\ a
		For 18.5/2=	1
·		For 18.5/3=	J
	·		l
Fibre optic failure In Power	Remove one of the orange		1
Converter1	fibre optic plugs on traction	,	İ
	converter. VCB should trip	ak	
	Solver to Solve and the		
Fibre optic failure In Power	Remove one of the orange		-
Converter2	fibre optic plugs on traction	- Pro-	
- Control Col E	converter. VCB should trip		1
	Converter, VCB should trip		

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	closs	open	clos	open	clos	open	clos.	class	Open
BUR1 off	Dosp	open	close	000	open	COS	open	open	clas
BUR2 off	opey	open	cless	cless	Class	closs	Open	Open	208
BUR3 off	open	Closs	open	close	Clise	close	open	Орем	cluse

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Y9
No rubbish in machine room, on the roof, under the loco.	Tey
All the electronic Sub-D and connectors connected	Pey
All the MCBs of the HB1 & HB2 open.	Ney .
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes .
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Ky
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	7es

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	charted of
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	chapped on
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	choeted or
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	c-focked on
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	charged on
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cheetedox
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	creened or
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		cheeked &

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	10.5	12.7
Oil pump transformer 2	9.8 amps	9.5	10.0
Coolant pump converter 1	19.6 amps	4.1	5-7
Coolant pump converter 2	19.6 amps	4.0	5-5
Oil cooling blower unit 1	40.0 amps	25.8	(13.0
Oil cooling blower unit 2	40.0 amps	24.3	99,3
Traction motor blower 1	34.0 amps	30.4	144.0
Traction motor blower 2	34.0 amps	27.9	142.8
Sc. Blower to Traction motor blower 1	6.0 amps	3.4	6.9
Sc. Blower to Traction motor blower 1	6.0 amps	4,3	7.0
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.5	49.8
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	30.6	48.7

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	1004V	Yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636V	Yes
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Amp	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1005	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yey
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amp	<i>P</i> (3)
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	21Amp	رقع
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	11 1700/1	49
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	170~	Yes.

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10060	Tay
BUR3 7303- XUUZI	DC link voltage of BUR3	60% (10%=100V)	637V	You
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	TAN	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	22 Arap.	. Ye,
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12 Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110-	Yes

* Readings are dependent upon charging condition of the battery.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery Charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.7	12.5
Machine room blower 2	15.0 amps*	4.1	12.1
Sc. Blower to MR blower 1	1.3 amps	1.6	2.8
Sc. Blower to MR blower 2	1.3 amps	1.2	2.0
Ventilator cab heater 1	1.1 amps	1.2	118
Ventilator cab heater 2	1.1 amps	1.2	1.8
Cab heater 1	4.8 amps	5.1	52
Cab heater 2	4.8 amps	5-1	52

^{*} For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 38365

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted on
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted ac
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chalted on
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chelted on
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choired a

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 38365

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
charging and charging	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	offeet of
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheefed on
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheefed u
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	chalted &
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chelped on
of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted on
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chared a

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the Converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears	ochoeked on
Measurement of	Disturbance in Converter 1 Start up the loco with both the	7
protective shutdown by Converter 2 electronics.	converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	o chocked on

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	checked on

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

Test earth fault detection harmonic filter circuit.	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. 	o cheered on
	 Earth fault relay 89.6 must pick up. Diagnostic message comes that - Earth fault in harmonic filter circuit 	s chocked on
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	OK.

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	Chocked on
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	choested ou
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	charged on
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	cheeted on
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	chored or

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

eck

		•
Marker light	Both front and tail marker light should glow from both the cabs	creeked ox
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	chaeped on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	choesed w
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	charted on charted on
Illuminated Push button	All illuminated push buttons should glow during the operation	Acetal &
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running **Trial of the locomotive**

SN	Description of the items to be seen during trail run	Action which should take place			een during trail run	
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Rolped as			
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	footal			
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Locker			
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	cetal Su			
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	ored			

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 38365

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

		,go 0 4.		
6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	0] .
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .	.	
	locomotive	For 60 seconds do not press vigilance foot switch or		
		sanding foots switch or TE/BE throttle or BPVG		
	'	switch then		
		Buzzer should start buzzing.	/	
		LSVW should glow continuously.	/	
		Do not acknowledge the alarm through BPVG or	chae	100
	<u> </u>	vigilance foot switch further for 8 seconds then:-		
		Emergency brake should be applied		
		automatically.		
		VCB should be switched off.		
		Resetting of this penalty brake is possible only after		
		180 seconds by bringing TE/BE throttle to 0 and		
		acknowledge BPVR and press & release vigilance	V	
-		foot switch.)	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).	Lack	ed ac
	1	With park brake in applied condition.	-Trep	
		• With direct loco brake applied (BP< 4.75Kg/cm ²).	9	peelok
.		• With automatic train brake applied (BP<4.75Kg/cm ²).	(CKI	weer -
		• With emergency cock (BP < 4.75 Kg/cm ²).	1	-
8.	Check traction interlock	Switch of the brake electronics. The	9	1.4
		Tractive /Braking effort should ramp down, VCB	(CFOOL	ed ou
		should open and BP reduces rapidly.	ر ا	
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	Chock 2 chock	ealor
10	braking.	should start reducing.	ال	
10.	Check for BUR	In the event of failure of one BUR, rest of the two	7 choos	- 1002
	redundancy test at	BURs can take the load of all the auxiliaries. For this	(CXOU	eel
	ventilation level 1 & 3 of	switch off one BUR.		
	loco operation	Auxiliaries should be catered by rest of two BURs.		
11.	Charletha namer	Switch off the 2 BURs; loco should trip in this case.	A - A	
1 1	Check the power converter	Create disturbance in power converter by switching	Cotos	rector
	isolation test	off the electronics. VCB should open and converter should get isolated and traction is possible with	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	
	וזטומנוטוו נפזנ	another power converter.		-
		another power converter.	U	

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39365

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	014	OK (
2	Marker Red	Ju	de	
3	Marker White	X.	OK	
4	Cab Lights	9	OK 1	
5	Dr Spot Light	Qr	CK.	
6	Asst Dr Spot Light	<i>Ø∉</i>	OL	
7	Flasher Light	Đự	OK.	choesel work
8	Instrument Lights	94	UK	C. C. C. DO STA
9	Corridor Light	Ox.	ax /	
10	Cab Fans	OF-	isk	:
11	Cab Heater/Blowers	×	ors	
12	All Cab Signal Lamps Panel 'A'	DIF_	OK	

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format for 2x500KVA IGBT based Hotel Load Converter for 3-phase Electric Locomotives

Locomotive No.: 39365	Page: 1 of 6
Type of Locomotive:	
Make of Hotel Load Converter:	<u> </u>
Netails of Equipment	

Equipment	SI. No	Equipment	SI. No
HLC1	3185	IV Coupler CAB1 ALP	
HLC2	3186	IV Coupler CAB1 LP	_
Converter-1	3186	IV Coupler CAB2 ALP	
Converter-2	3185	IV Coupler CAB2 LP	
UIC Coupler for Hotel Load Converter (353.3/2 CAB2)		UIC Coupler for Hotel Load Converter (353.3/3 CAB1)	-

1. Polarity test of Hotel Load Winding:

Apply 198 /140 to the primary winding of the transformer (at 1U; wire no. 2 at surge arrestor and at 1V; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformer.

Output Winding Nos.	Description of winding	Prescribed Output Voltage &Polarity with input supply	Measured Output	Measured Polarity
2UH1 & 2VH1	For Hotel load between cable 91- 94	5.9 ,4.2 and same polarity	OL	OX_
2UH2 & 2VH2	For Hotel load between cable 91A- 94A	5.9 ,4.2 and same polarity	O.L.	Da

Page: 2 of 6

2. Visual Inspection:

Fitment of Units and Earthing to Sub-assemblies

Verify the following Equipments Fitment and grounding cables are connected to Locomotive body.

SI. No.	Equipment Name	Unit Fitment (Yes/No)	Provision of Earthing (Yes/No)
1	HLC1	428	Yes
2	HLC2	4	4
3	Output Contactor unit1 HLC1		4
4	Output Contactor unit2 HLC2	4	i,
5	IV Coupler CAB1 ALP	1	7
6	IV Coupler CAB1 LP	4	4
7 :	IV Coupler CAB2 ALP	4	4
8	IV Coupler CAB2 LP	4	7
.9	UIC Coupler for Hotel Load Converter (353.3/3 CAB1)	- 4	4
10	UIC Coupler for Hotel Load Converter (353.3/2 CAB2)	7	ر
11	CT (LEM sensor) under HLC1	9	4,
12	CT(LEM sensor) under HLC2	7	4

3. Cable Routing and Laying

3.1 Control cable routing and layout

Verify the connections, tightness and cable routing of the following Control cable.

SI. No.	Cables Details	Performed (Yes/No)
1	From Wago SB1 to HLC1 are connected as per wiring format	409
2	From SB1 to UIC Coupler Hotel Load Converter (353.3/3 CAB2) through Bayonet connector XK22HL:01(22pin)is connected as per wiring format	4
3	From SB1 wago(XF22S:01/53) to IV coupler CAB1 ALP are connected as per wiring format	7
4	From SB1 wago(XF22S:01/54) to IV coupler CAB1 LP are connected as per wiring format	72
5	From Wago SB2 to HLC2 are connected as per wiring format	4
6	From SB2 to UIC Coupler Hotel Load Converter (353.3/2 CAB2) through Bayonet connector XK77HL:02 (22 pin) is connected as per wiring format	7
7	From SB2 wago (XF77S:01/53) to IV coupler CAB2 ALP are connected as per wiring format	7
8	From SB2 wago (XF77S:01/54) to IV coupler CAB2 LP are connected as per wiring format	4
9	From HLC1 to Contactor unit 1 through 4 Core Cable are connected as per wiring format	. 7
10	From HLC2 to Contactor unit 2 through 4 Core Cable are connected as per wiring format	7
11	From SB to VCU are connected as per wiring format	4 .
12	From CT (HLC1 LEM sensor) to SR1 are connected as per wiring format	4
13	From CT (HLC2 LEM sensor) to SR2 are connected as per wiring format	4

3.2 Power cable routing and layout

Verify the connections, tightness and cable routing of the following Power cable.

SI. No.	Cables Details	Performed Yes/No)
1	From Transformer to HLC1(2UH1 & 2VH1) are connected as per wiring format	yes
2	From Transformer to HLC2(2UH2 &2VH2) are connected as per wiring format	4
3	From HLC1 to Output Contactor unit1 are connected as per wiring format	4
4	From HLC 2 to Output Contactor unit 2 are connected as per wiring format	4
5	From Output Contactor unit 1 to IV Coupler CAB1 ALP and IV Coupler CAB2ALP through Junction box are connected as per wiring format	4
6	From Output Contactor unit 2 to IV Coupler CAB2 LP and IV Coupler CAB1 LP through Junction box are connected as per wiring format	7

4. Continuity test:

Check the continuity test for the External connections made to Equipments.

Note: This continuity test should be done before power ON the Locomotive Battery.

4.1 Control cable continuity

SI. No.	Cables Details	Performed (Yes/No)
1	From Wago SB1 to HLC1 are connected as per wiring format From SB1 to UIC Coupler Hotel Load Converter (353.3/3 CAB2) through Bayonet connector XK22HL:01(22pin)is connected as per wiring format	
2		
3	From SB1 wago(XF22S:01/53) to IV coupler CAB1 ALP are connected as per wiring format	7
4	From SB1 wago(XF22S:01/54) to IV coupler CAB1 LP are connected as per wiring format	6
5	From Wago SB2 to HLC2 are connected as per wiring format	4
6	From SB2 to UIC Coupler Hotel Load Converter (353.3/2 CAB2) through Bayonet connector XK77HL:02(22pin) is connected as per wiring format	4
7	From SB2 wago (XF77S:01/53) to IV coupler CAB2 ALP are connected as per wiring format	4
8	From SB2 wago(XF77S:01/54) to IV coupler CAB2 LP are connected as per wiring format	٢
9	From HLC1 to Contactor unit 1 through 4 Core Cable are connected as per wiring format	4
10	From HLC2 to Contactor unit 2 through 4 Core Cable are connected as per wiring format	7
11	From SB to VCU are connected as per wiring format	
12	From HLC1 LEM sensor to SR1 are connected as per wiring format	9
13	From HLC2 LEM sensor to SR2 are connected as per wiring format	7

Page: 5 of 6

4.2 Power cable continuity

These cables continuity should be checked before mounting of converter in the locomotive.

SI. No.	Cables Details	Performed (Yes/No)
1.	From Transformer to HLC1(2UH1 & 2VH1) are connected as per wiring format	(1.00/10)
2	From Transformer to HLC2(2UH2 &2VH2) are connected as per wiring format	
3	From HLC1 to Output Contactor unit1 are connected as per wiring format	
4	From HLC 2 to Output Contactor unit 2 are connected as per wiring format	
5	From Output Contactor unit 1 to IV Coupler CAB1 ALP and IV Coupler CAB2ALP through Junction box are connected as per wiring format	
6	From Output Contactor unit 2 to IV Coupler CAB1 LP and IV Coupler CAB2 LP through Junction box are connected as per wiring format	

5. Battery power ON

Tests Supply Voltages

Remove all Control cable connectors (Analog and Digital Input/output connectors) from HLC1, HLC2. While Switch ON Battery supply observe is there any MCBs tripping. Wait for one or two minutes after switching ON Circuit breaker(MCB1) and observe for any overheating symptoms like smell, smoke, temperature etc. from the wire bunches. If any such symptoms are noticed, there might be a short circuit in the wire bunch. Check up once again continuity wherever suspected. After that check the Voltage levels at all equipments connectors as mentioned below.

Test Details	Acceptance	Observations
Voltage Level at HLC1: I. Between wago terminal XF22S:03/54 and XF22S:03/58 II. Between wago terminal XF22S:03/53 and XF22S:03/58	~110VDC	UX
Voltage Level at HLC2: I. Between wago terminal XF77S:03/52 and XF77S:03/56 II. Between wago terminal XF77S:03/51 and XF77S:03/56	~110VDC	ex.

Note: After Above tests switch off the Power and restore all removed connectors and once again switch ON the 110 V Supply and ensure that no MCB tripping due to abnormality.

Page: 6 of 6

6. Converter operation (ON/OFF) test

Power supply is directly available to the Hotel Load Converter via Hotel Load Converter winding (2UH1-2VH1) and (2UH2-2VH2). As soon as BLDJ is closed power will be available to the Hotel Load Converter. Connect the test jig of Hotel Load Converter to the UIC and IV Coupler. Charge the locomotive and switch on the BLHO, LSHO indication should glow. Hotel Load Converter screen will show message "waiting for ON command". One by one Hotel Load Converter can be switched on by test jig. Finally both the Hotel Load Converter should be turned out simultaneously. Observe the flow of air from the air duct, this will ensure that Hotel Load Converter is ON. Both the Hotel Load Converters are ON, then voltage and frequency should be measured as per the table below:-

Converters should run without any irregularities.

otel Load Converter 1			
	Output Voltage		Output Frequency
U-V	V-W	U-W	(Hz)
OK	عد	OK	OK

Hotel Load Conver	ter 2	<u> </u>	
	Output Voltage		Output Frequency
U-V	V-W	U-W	(Hz)
OL_	OR	0/	UK
·			

7. Earth Fault Test

- **7.1 Input Earth Fault:**-Ground the input terminal of the Hotel Load Converter using a proper resistance and then turn on the Hotel Load Converter. The converter should trip with the message "Input earth fault".
- **7.2 Output Earth Fault:**-Ground the output terminal of the Hotel Load Converter using a proper resistance and then turn on the Hotel Load Converter. The converter should trip with the message "Output earth fault".

Note: These to be done for the both the converters (HLC1 and HLC2) separately.

Page: 33/A

33 A

LOCO NO: 39365

Status of RDSO modifications

	Modification No.		
1.		Description	Remarks
	Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	ØK/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and D.	Qk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit controls	
5.	RDSO/2011/EL/MS/0400	Modification sheet for shifting the termination of polytering	Ok/Not Ok
6.	Rev.'0' Dt 10.08.11 RDSO/2011/EL/MS/0401	lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase learners.	Øk/Not Ok
7.	Rev.'0' Dt 10.08.11 RDSO/2011/EL/MS/0403	three phase locomotives to avoid fire baseds	OK/Not Ok
8.	Rev.'0' Df 30.11.11 RDSO/2012/EL/MS/0408	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	OK/Not Ok
9.	Rev.'0' RDSO/2012/EL/MS/0411	assembly.	Ok/Not Ok
10	Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16 RDSO/2012/EL/MS/0419	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Qk/Not Ok
2	Rev.'0' Dt 20.12.12	Master Controller of three phase locomotives	Ok/Not Ok
	Rev. 0' Dt 23.01.13	arrangement in Primary Over Current Relay of three phase locomotives.	Qk/Not Ok
.		Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Øk/Not Ok
	Rev.'0' Dt 18.07.13	phase electric locomotives.	Øk/Not Ok
. L	21.20.10.10	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
	2010.12.10	three phase electric locomotives.	ØK/Not Ok
_	7.101.10 Dt 12.00.14		Øk/Not Ok
	Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Øk/Not Ok
	2.01.12.17		QK/Not Ok
	RDSO/2018/EL/MS/0475	Modification in existing Control Electronics (CE) reporting	ØK/Not Ok
	· · · · · · · · · · · · · · · · · ·	Implementation of push pull scheme.	ENTIOL OR

Signature of JE/SSE/ECS

PLW/PATIALA

Loco No.39365

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: FAIVELEY			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.	For Faiveley	60 sec. (Max.)	60 sec.
	Record pressure Build up time (8.0 kg/cm2)	For Knorr	120 sec. (Max.)	
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.5 kg/cm2
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.6
		no. F60.812 Version 2	kg/cm2, closes	
4.5			5.5±0.15 kg/cm2	5.5
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	Solating Cocks & KABA co		-
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	Ok
4.7	Class Barr 2 isolation Cook		Rises.	OI:
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	Ok
1.0	Open Pan -2 isolating Cock Record Pantograph Rise time		Panto-2 Rises 06 to 10 seconds	9 sec
1.8 1.9	Record Pantograph Rise time Record Pantograph Lowering Time		06 to 10 seconds	9 sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.5 kg/cm2
1.10	Parito ilile ali leakage		Min.	in 5 min.
1.11	High Reach Panto emergency test and reset.		IVIIII.	Ok
2.0	Main Air Supply System			OK .
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
2.1	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min.& 48
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	Ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 sec
	compressors, Check pressure build time of individual			CP2-27 sec
	compressor from 8 kg/cm2 to 9 kg/cm2			
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.4 kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.6 kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10 .2kg/cm2
		MM3882 &	kg/cm2, Closes at	
		MM3946	8±0.20 kg/cm2	8 kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.3 min

PLW/PATIALA

Loco No.: 39365

2.7	Check unloader va	lve operation time				Approx. 12 Sec.	11 sec.
2.8		Valve functioning (12	24 & 87)			Operates when	11.5
						Compressor	kg/cm2
						starts	,
2.9	Check CP-I delivery	safety valve setting	g (10/1). Run CP	D&M t	est spec.	11.50±0.35	11.4
	Direct by BLCP.			MM3882 & MM3946		kg/cm2	kg/cm2
2.10	Check CP-2 deliver	y safety valve settin	g (10/2). Run CP	D&M t	est spec.	11.50±0.35	
	direct by BLCP			MM3882	& MM3946	kg/cm2	
2.11	Switch 'OFF' the co	ompressors and ensu	ure that the safety	D&M t	est spec.		
	valve to reset at pr	ressure 1.2 kg/cm2 lo	ess than opening	MM3882	& MM3946		
	pressure.						
2.12		h 'OFF' compressor,			ck sheet no.	5.0±0.10kg/cm2	5.0 kg/cm2
		Main Reservoir, Sta	•	F60.812 Ve	ersion 2		
		sure of Duplex Check	v Valve 92F.				_
2.13	FP pressure:				ck sheet no.	6.0±0.20kg/cm2	6.0 kg/cm2
		est point 107F FPTP.	Open isolate cock	F60.812 Ve	ersion 2		
	136F. Check pressu						
3.0	Air Dryer Operat						
3.1	·	0 of 2 nd MR to start				Tower to change	Ok
		ck Air Dryer Towers t				every minute	01
3.2		ops from Air Dryer a	t Compressor stops			51	Ok
3.3		humidity indicator				Blue	Blue
4.0	Main Reservoir Le			5014		CL LLL L	0.61 / 2
4.1	1	9) in full service, Che	eck MR Pressure air	D&M test spec. MM3882 & MM3946		Should be less	0.6 kg/cm2
	leakage from both	Cabs.		IVIIVI3882	& IVIIVI3946	than 1 kg/cm2 in 15 minutes	in 15 min.
4.2	Check BD Air leaka	ge (isolate BP chargi	ng cock-70\	D8.M+	est spec.	0.15 kg/cm2 in 5	0.05
4.2	CHECK DF All leaka	ge (isolate br chargi	rig cock-70)		& MM3946	minutes	kg/cm2 in 5
				1411413002	Q 1411413340	iiiiidees	min.
5.0	Brake Test (Auto	matic Brake opera	ation)				
5.1		& Brake Cylinder pr					
3.1	Record Brake ripe	a brane cymiaer pr	cosure at Each Step				
	Check proportiona	lity of Auto Brake sy	stem	CLW's che	ck sheet no.		
				F60.812	Version 2		
		1					
	Auto controller	BP Pressure kg/cr	n2	BC (WAG-9	& WAP-7)	BC (WAP-5)	
	position			Kg/cm2		Kg/cm2	
		Value	Result	Value	Result	Value	
	Run	5±0.1	5.05 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
	1	1					I
	Full service	3.35±0.2	3.4 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	Full service Emergency	3.35±0.2 Less than 0.3	3.4 Kg/cm2 0.25 Kg/cm2	2.50±0.1 2.50±0.1	2.5Kg/ cm2 2.5Kg/ cm2	5.15±0.30 5.15±0.30	-

Loco No.: 39365

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	6 sec.
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 2.5 kg/cm2	Ok
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2 Opens at BP 2.85- 3.15 kg/cm2	4.1 kg/cm2 3 kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2 WAG9 - BC 2.50 ± 0.1 kg/cm2	D&M test spec. MM3882 & MM3946	4±1 sec. 7.5±1.5 sec. 21±3 sec.	8 sec.
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAP7 WAG9	D&M test spec. MM3882 & MM3946	17.5±2.5 sec. 52±7.5 sec.	18 sec.
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	79 sec.
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake. * Allow The MR pressure to build up to maximum stipulated limit. * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A-9 (Automatic brake controlling) at run position. * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe. The test shall be carried out with all the compressors in working condition.	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.7 kg/cm2
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.6 kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (Max.)	7 sec.

PLW/PATIALA

Loco No.: 39365

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	14 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now De- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	DDCO letter no	Pressure Setting Needed is12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	RDSO letter no. EL/3.2.19/3-phase (CCB), dtd 30.01.2023		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s faiveley	Presently not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			50 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

	Roof compnent Cab-1 & Cab-2										
S.NO.	DESCRIPTION	PL NO.	QPL/Nos.	SUPPLIER	Sr.No.	Warranty					
1	Pantograph	25880068	2	Contansys	14133-03/24,14172-03/24	·					
2	Servo Motor	25880068	2	Contansys	14164-03/24,14159-03/24	1					
	Air Intoles Filter Assemble	29480103	2	PARKER	O/C1436P/A/02, O/C1436P/B/LH/01	1					
3	Air Intake Filter Assembly	29480103		PARKER	(PLW)-03-24						
4	Insulator Panto Mounting	29810127	8	BHEL	12-2023, 01-2024						
			Middle roo	f Component	•						
5	High Voltage Bushing	29731021	1	RADIANT	RE/22/03/24/HVB-07						
6	Voltage Transformer	2965028	1	Sadtem	2023-N-663161						
7	Vaccum Circuit Breaker	25712202	1	AUTOMETER	AALN/04/2024/062/VCBA/062						
8	Insulator Roof Line	29810139	9	IEC	04-23, 06-23						
9	Harmonic Filter	29650033	1	RESITECH	02/24/232496/13	Ass per PO/IRS Conditions					
10	Earthing Switch	29700073	1	AUTOMETER	AALN/03/2024/013/ES/333						
11	Surge Aresster	29750052	2	CG POWER	54860-2023,54859-2023						
			Air Brake (Components							
12	Air Compressor (A,B)	29511008	2	ELGI	EXKS-922052 A EXKS -922049 B						
13	Air Dryer	29162051	1	PRAG POLYMER	W-3934-04-24						
14	Auxillary Compressor	25513000	1	CEC	147-04-24						
15	Air Brake Panel	29180016	1	FAIVELEY	NOV-23-07-WAG9-3219						
16	Controller (A,B)	29180016	2	FAIVELEY	L23-147 A L23-150 B]					
17	Break Up Valve	29162026	2	FAIVELEY							
18	Wiper Motor		4	AUTO INDUSTRY							



			365/CR/PADX/WA	P-/	84.	ake
S.N.	Equipment	PL No.	Equipment S			ilai
1	Complete Shell Assembly with piping	29171064	Sr. 147, 04		AEU	AEU
2	Side Buffer Assly Both Side Cab I	29130050	47, 03/24	NV, 03/24	AEU	ARU
3	Side Buffer Assly Both Side Cab II		131, 03/24	NV, 03/24	FAS	FAS
4	CBC Cab I & II	29130037	3543	3523		Mechwel
5	Hand Brake		06/23- 1	5709	Woulled	Mechwei
6	Set of Secondry Helical Spring	29045034 29041041			AB	OKE
7	Battery Boxes (both side)	29680013	26, 03/24,	33, 03/24	D R Steel	D R Steel
8	Traction Bar Bogie I		1468, 0	4/24	N	IKE
9	Traction Bar Bogie II	and the same	1466, 0	4/24	N	IKE
10	Centre Pivot Housing in Shell Bogie I side	20100057	43, 04	/24		NIL
11	Centre Pivot Housing in Shell Bogie II side	29100057	35, 04	/24		NIL
12	Elastic Ring in Front in Shell Bogie I side	20100010	Sr. 06, Batch 06	6, Mfg 12/23		SPL
13	Elastic Ring in Front in Shell Bogie II side	29100010	Sr. 21, Batch 06	6, Mfg 12/23	S	SPL
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	BHEL-77-03-24-2	2057337, 2024	В	HEL
15	Oil Cooling Radiator I		02/24, FG415002,	/M1/23-24/648	APOLLO INDU	JSTRIAL CORPS
15	Oil Cooling Radiator II	29470031	02/24, FG415002,		APOLLO INDI	JSTRIAL CORPS
16	Main Compressor I with Motor		EXKS 92204		E	LĞi
17	Main Compressor I with Motor	29511008	EXKS 92205		E	LGi
18	Transformer Oil Cooling Pump I		23091398		Flo	wwell
19 20	Transformer Oil Cooling Pump II		23091396		Flo	wwell
	Oil Cooling Blower OCB I		03/24, PDS2403022	2, LHP1001461028	PD ST	EELS LTD
21	Oil Cooling Blower OCB II	29470043	03/24, AC-58182,		A	CCEL
22	TM Blower I		04/24, 23P3005AF		SAINI ELECT	RICAL PVT LTD
	TM Blower II	29440075	03/24, 23P3005A		SAINI ELECT	RICAL PVT LTD
24	Machine Room Blower I		03/24, MF		G.T.R C	OP(P) LTD
25	Machine Room Blower II	29440105	03/24, MF-24.03.05		G.T.R C	OP(P) LTD
26	Machine Room Scavenging Blower I		02/24, D25-6317, CF25/D6679		SAMAL HARAND PVT L	
27		29440129	02/24, D25-6310		SAMAL HA	RAND PVT LTD
28	Machine Room Scavenging Blower II		02/24, ST-		G.T.R C	OP(P) LTD
29	TM Scavenging Blower Motor I	29440117	02/24, ST-		G.T.R C	COP(P) LTD
30	TM Scavenging Blower Motor II		5371,			
31	Traction Convertor I		5372,			
32	Traction Convertor II		3737,			TO THE RESIDENCE
33	Vehicle Control Unit I	29741075		02/24	M	EDHA
34	Vehicle Control Unit II		3761,			
35	Aux. Converter Box I (BUR 1)			03/24		
36	Aux. Converter Box 2 (BUR 2 + 3)	20176645		704/02/2024	KAYSONS ELF	CTRICAL PVT LTI
37	Axillary Control Cubical HB-1	29176645 29176657		03135, 03/24		ALIT LTD
38	Axillary Control Cubical HB-2	29176669		02345, 02/24		ALIT LTD
39	Complete Control Cubicle SB-1	29176669 29178174		/2403/34		NICS PVT LTD
40	Complete Control Cubicle SB-2		SLFB0001240			SALIT LTD
41	Filter Cubical (FB) (COMPLETE FILTER	29480140				TS WORKS
42	Driver Seats	29171131		20, 24, 33		1EDHA
43	Hotel Load Converter I	29741087		03/24		1EDHA
44	Hotel Load Converter II	20220511	3185,	03/24		sal pipes
45	Transformer oil steel pipes	29230044	2105	02/24		1EDHA
46	Hotel Load Contactor I	WELL 85		03/24		MEDHA
47	Hotel Load Contactor II			03/24		S N FORCE
48		29731057	213	, 218	PRES	3 IN FUNCE
49	Ballast Assembly (only for WAG-9)	29170163				EE COPP
50		29611908	9	05		SEE CORP
51		29470067 29480103				AFI
52	0/	23400103	08/WZ/06	5,06 / VVZ/07	VICTORY	LUMINARIES
33		mar	NAME STORM	(2)		ANICIT UPPA /LAS/UF

पी. एल. डब्ल्यू **P.L.W** Issue No.: 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)
Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 39365

Rly: CR

Shed: PADX

ITEM TO BE CHECKED	Specified Value	Obs	served Valu	ıe
Charle proper Eitment of Hotel Load Converter & its output contactor.	OK		OK	
Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2. TM scavenging blower 1 & 2 & Oil Cooling unit.	OK			
	OK)K	
Check proper of Fittment of Oil Cooling unit (COO).	OK			500
Check proper Fitment of FB panel on its position.	OK		OV	
Check proper Fitment of assembled SB1 & SB2 panel.	OK		or	
Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		OK	
Check proper Filment of Administry Convertor 1, 2 & CR21 & 2)	OK		ΔV	
Check proper Fitment of Traction Convenies 1 & 2 (SN-1 & 2).	OK		-	
Check proper fitment, torquing & Locking of Main compressor both side with the compressor safety wire rope.	OK		ox	
Check proper fitment of Main compressor both side with the compressor safety that the compressor safet	OK		OK	
Check proper resulting of Secondary Fields Springs between Bogic & Chairs	OK		OR	4
	OK		OK	
	OK		OK	
Check coolant level in SR 1 & 2 Expansion Tank.				
Check Transformer Oil Level in both conservators Tallik (Dreather Lank).			1	
damage during online working of Locomotives.			ok	
Check proper fitment of both battery box.				
Check for any gap between Main Transformer mounting base & Loco Shell.			OK	
Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK		OK	
Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch. ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std :35-60 mm Lateral Std- 45-50 mm	LP 54	ALP LP 53 53 3) 53	2 34
Ruffer height: Range (1090, +15,-5)			L/S	R/S
Drg No IB031-02002.	mm	FRONT	1095	1102
	III.	REAR		1095
	641 mm	1 12		R/S
	041 111111	FRONT		64
Drg No-SK.DL-3430.		100 00 00000000000000000000000000000000		
		REAK		648
Height of Rail Guard (114 mm + 5 mm12 mm).	114 mm + 5			R/S
As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	117	118
7.0 0.0 0.0 0.0 0.0 0.0 0.0 0.0 0.0 0.0	1.3	REAR	116	118
	1090 +15		1098	
CBC Height: Range (1090, +15,-5)	1030, . 10		1100	
	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2. TM scavenging Blower 1 & 2 & Oil Cooling unit. Check proper of Fitment of oil cooling unit (OCU). Check proper Fitment of HB 1 & 2 and its respected lower part on its position. Check proper Fitment of FB panel on its position. Check proper Fitment of FB panel on its position. Check proper Fitment of Sasembled SB1 & SB2 panel. Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Check proper fitment, torquing & Locking of Main Transformer bolt. Check proper fitment of Main compressor both side with the compressor safety wire rope. Check proper fitment of Bogie Body Safety Chains. Check proper fitment of Bogie Body Safety Chains. Check proper fitment of Cow catcher. Check proper fitment of Cow catcher. Check proper fitment of Cow catcher. Check proper fitment and maintain required gasp from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives. Check proper fitment of both battery box. Check proper fitment of Dush battery box. Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001 Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch. ELRS/TC/ 0082 (Rev 1) dated 17.09.2015 Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-SK.DL-3430. Height of Rail Guard. (114 mm + 5 mm,-12 mm). As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	Check proper Fitment of Hotel Load Converter & its output contactor. Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB OK Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB OK Check proper Fitment of Oil cooling unit (OCU). Check proper Fitment of IB 1 & 2 and its respected lower part on its position. OK Check proper Fitment of Fib panel on its position. Check proper Fitment of Fib panel on its position. Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Check proper Fitment of Main compressor both side with the compressor safety wire rope. Check proper fitment of Bogie Body Safety Chains. Check proper fitment of Bogie Body Safety Chains. Check proper fitment of Cow catcher. Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safety Chains. OK Check proper fitment of Degie Body Safe	Check proper Fitment of Hotel Load Converter & its output contactor. Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB OK Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB OK Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB OK Check proper Fitment of Gli Cooling unit. Check proper Fitment of Gli Cooling unit. Check proper Fitment of Savenibled SB1 & SB2 panel. OK Check proper Fitment of assembled SB1 & SB2 panel. OK Check proper Fitment of assembled SB1 & SB2 panel. OK Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2). OK Check proper Fitment of Gregie Body Safety Chains. Check proper Fitment of Bogie Body Safety Chains. Check proper fitment of Social Safety	Check proper Filment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Coke proper Filment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TMB Blower 1 & 2, TMB Coke proper Filment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TMB Blower 1 & 2, TMB Coke proper Filment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TMB Blower 1 & 2

(Signature of SSE/Elect. Loco (UF))

DATE 27/0x/29

(Signature of SSE/JE/Elect Loco)

NAME SHOBHAM SHA RMA

DATE 27/05/24

(Signature of JE/UF)

NAME ANICIT UPPAL

DATE 27/05/24

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 39365

RLY: CR

SHED: PADX PROPULSION SYSTEM: MEDHA

HOTEL LOAD CONVERTER: MEDHA

LIST OF ITEMS FITTED BY ECS

<u> </u>	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER
SN		29612937	4110/	4132	POWER TECH
1	LED Based Flasher Light Cab I & II	29612925	2537/2441/	2425/2564	KEPCO
2	Led Marker Light Cab I & II	29170011	3105/		KKI
3	Cab Heater Cab I & II	29470080	4651/4589/		MTI
4	Crew Fan Cab I & II	2947 0000	66	7.17.2	1A(O A B A A
5	Master Controller Cab I	29860015	66		WOAMA
6	Master Controller Cab II	29170564	492B	485A	HIND
7	Complete Panel A Cab I & II		4320	1	
8	Complete Panel C Cab I & II	29170539	508B	484A	HIND
9	Complete Panel D Cab I & II	29170564	CGKFI24042331		
10	Complete Cubicle- F Panel Cab I & II	29178162	MTELS2308312/M2308312		CG AAL
11	Speed Ind.& Rec. System	29200040	M1EL523063		HBL
12	Battery (Ni- Cd)	29680025	<u> </u>	28	PPS INTERNATIONAL
13	Set of Harnessed Cable Complete	29600418			
14	Transformer Oil Pressure Sensor (Cab-1) (pressure sensor oil circuit transformer)	29500047	TGIC/CLW/2462-FEB-2024	TGIC/CLW/2442-FEB-2024	TOPGRIP INDUSTRIES
15	Transformer Oil Pressure Sensor (Cab-2)	1	TGIC/CLW/2453-FEB-2024	TGIC/CLW/2454-FEB-2024	
16	Transformer Oil Temperature Sensor (Cab- 1)(temperature sensor oil circuit transformer)	29500035	BG/TFP/42	228-FEB-24	BG INDUSTRIES
17	Transformer Oil Temperature Sensor (Cab-2)		BG/TFP/56	571-FEB-24	
18	Roof mounted Air Conditioner I	00011000	KKI/HVAC	/CLW/2445	KKI
	Roof mounted Air Conditioner II	29811028	KKI/HVAC/CLW/2450		
19	Root mounted Air Conditions is	 	India rail navigator	5846	
20	RTIS(Real time information system)		Power supply module	5800	Aventel Ltd., India
20	Triblica min manager 2		Rail MSS Terminal	5800	

Loco No. 39365

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-16	SIMPLEX	29100677	100950	As per PO/IRS
REAR	SL-22	SIMPLEX	29100677	100950	conditions

2. Hydraulic Dampers (PL No. 29040140) Make: KONI

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	26198	26426	26472	26577	26461	26050
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	DX9-076	DX94-055	DX91-082	DX96-116	DX89-021	DX91-098
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
FREE END	DX89-130	DWJ2-115	DX94-154	DX95-044	DX94-071	DTC1-059
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
Bull Gear No.	23-A-62	5053	5066	4974	23-G-34	23-A-54
Bull Gear Make	LMS	GGAG	GGAG	GGAG	GGAG	GGAG

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	NBC	FAG	FAG
End	PO NO. & dt	2312	2312	2312	2875	2312	2312
Free	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	2312	2312	2312	2312	2312	2312

6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	879	789	1015	1008	1021	879
FREE END	802	1014	1019	901	815	786

Loco No. 39365

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	IN	IN	IN	IN	IN	IN
GE Brg. PL 29030110	MAKE	FAG	NBC	NBC	NBC	FAG	FAG
FE Brg. PL 29030110	MAKE	FAG	NBC	NBC	NBC	FAG	FAG

9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KPE	KPE	KM	KM
BACKLASH (0.254 – 0.458mm)	0.2880	0.270	0.320	0.310	0.260	0.260

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	17.70	16.45	17.35	177.15	17.42	16.82
LEFT SIDE	16.10	16.43	16.72	15.65	16.62	18.63

11. TRACTION MOTOR: (PL No. 29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	BB	566661	J 2300179
2	BB	566661	J 2300181
3	BB	566661	J 2300190
4	BB	566661	J 2300180
5	BB	566661	J 2400008
6	BB	566661	J 2400003



SSE/ Bogie Shop

TOP 13 COSTLIEST ITEMS OF WAP-7 LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29741087	2X500KVA IGBT Based Hotel Load Converter to CLW Specn. no. CLW/ES/3/IGBT/0490 aLT.D (REV.1) issued on December,2017	As per clause no. 3.1.6 of CLW SPECN. NO. CLW/ES/3/IGBT/0490 ALT.D REV.1 ISSUED ON DEC-2017. [60 months after commissioning or 72 months from date of supply whichever earlier]
3	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
4	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
5	29600418	SET OF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018.	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

6	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.
		COMPLETE ENTER CURIOUE ALONG MUTU ALL	
7	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
8	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.

9	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
10	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
13	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



भारत सरकार GOVERNMENT OF INDIA रेल मंत्राल्य MINISTRY OF RAILWAYS पटियाला रेलइंजन कारखाना PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244

फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310 पटियाला, 147003, भारत् PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: 03.07.2024

(Through Mail)

Sr. Div. Mechanical Engineer, Diesel Loco Shed, Pune.

Email: srdmedpune@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 39365 WAP-7.

संदर्भ:- (i) Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 39365 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to DLS/PADX/CR on 11.06.2024. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B. (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

्निशांत बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/CR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

Loco No. 39365

List of balance items of KAVACH pneumatic pipes & fitting yet to be supplied later on . These items are currently under procurement process at PLW. The same will be advised to the shed for collection of the material as soon as it will be received at PLW.

SN	PL No.	Description of item	Qty.
		ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 nos.
2	29611994	FEMALE TEE 3/8" BSPP – BRASS	06 nos.
	·	HEX PLUG -3/8" BSPT — BRASS	02 nos.
		FEMALE TEE 1/2" BSPP – BRASS	04 nos.
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos.
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos.
		HEX PLUG - 1/2" BSPT - BRASS	04 nos.
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos.
3	29170114	Copper Tube OD 9.52mm (3/8") X 1.245 Mm W.T X 6 Mtr	1.2 Mtr

AWMABS

SSF/G/ABS

SN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.		WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	-	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.		80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	<u>-</u>	DIN Rail fitted inside the driver desk (LP Side)	02 nos.





Annexure-C

SN	PL No.	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm ² provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 nos.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	-	Harness provided from KAVACH SB to SB-1	05 wires
5.		Harness provided from KAVACH SB to SB-2	. 05 wires
6.		Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.		Harness provided from KAVACH SB to CAB-1	24 wires
8.	_	Harness provided from KAVACH SB to CAB-2	16 wires

AWM/Ees

SSEIGIECS