


भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला Patiala Locomotive Works, Patiala

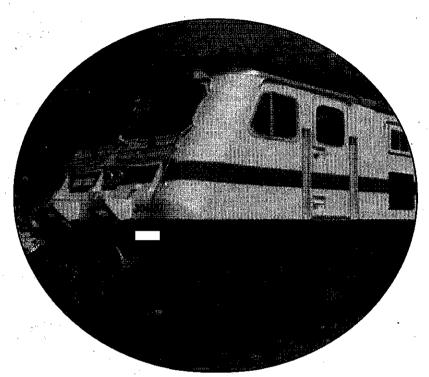

LOCO TESTING & DISPATCH REPORT OF IGBT BASED 3 PHASE ELECTRIC LOCOMOTIVE

LOCO NO.:

39421

TYPE:

WAP-7

RAILWAY SHED:

NCR/CNB

PROPULSION SYSTEM:

MEDHA

HOTEL LOAD:

AAL

DATE OF DISPATCH:

31.12.2024

लोको निर्माण रिकार्ड



पटियाला रेलइंजिन कारख़ाना, पटियाला Patiala Locomotive Works, Patiala

LOCO NO. - 39421

RAILWAY/SHED: NCR/CNB

DOD: DEC-2024

INDEX

SN	PARA	ACTIVITIES	PAGE NO.
<u> • 1</u>		Testing & Commissioning (ECS)	
1.	1.0	Continuity Test of the cables	
İ	1.1	Continuity Test of Traction Circuit Cables	
i	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
ļ	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
1	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	J-0
)	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	
1	3.2	Download Software	7-10
Ì	3.3	Analogue Signal Checking	
j	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
<i>•</i>	4.1	Test wiring Transformer Circuits – Polarity Test	
İ	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
ì	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)]
ŀ	4.5	Maximum current relay (Pos. 78)	11-16
ŀ	4.6	Test current sensors	
ŀ	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
ŀ	4.7	Verification of Converter Protection Circuits (Hardware limits)	
ŀ	4.0	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
J.	5.0 5.1	Commissioning with High Voltage Check List	
ì			
i	5.2	Safety test main circuit breaker	1
1	5.3	Auxiliary Converter Commissioning	,
i I	5.3.1	Running test of 3 ph. auxiliary equipments Performance of Auxiliary Converters	
1	5.3.2	Performance of BURs when one BUR goes out	16-25
1	5.3.3	Performance of BURs when one BUR goes out	10-25
1	5.4 5.5	Auxiliary circuit 415/110	
1	5.5	Hotel Load Circuit Treation Converter Commissioning	
1	5.6 5.7	Traction Converter Commissioning Test protective shutdown SP	
1	5.7	Test protective shutdown SR Test Harmonia Filter	
1	5.8 5.0	Test Harmonic Filter Test important company of the lecomotive	
<u> </u>	5.9	Test important components of the locomotive	25.06
6. 7.	6.0 7.0	Running Trial of the locomotive Final Check List to be verified at the time of Loco dispatch	25-26 27
	1-6	Annexure HLC	28-33
8. 9.	7-6 1-10	Pneumatic Test Parameters	34-37
10.	1-10	Loco Check Sheet(LAS)	38
10. 11.	-	Component History (LAS,ECS,ABS)	39-41
12.	-	Component History & Testing Parameter (Bogie Shop)	42-43
13		Warranty Conditions as per Tenders	44-46

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WÖRKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39421 - MEDHA

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	750 m2
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	ok	100 ΜΩ	850m
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	700 mr.
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	650M9
Transformer	Power Converter 1	ok	100 ΜΩ	800 ms
Transformer	Power Converter 2	ok	100 ΜΩ	100 Mg
Power Converter 1	TM1, TM2, TM3	ok	100 MΩ	Grome.
Power Converter 2	TM4, TM5, TM6	oK	100 ΜΩ	700mg
Earth	Power Converter 1	øK	100 ΜΩ	800ma
Earth	Power Converter 2	ok	100 ΜΩ	650 ms

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

₽.L.W ₽.L.W

DOC:140.17EC3/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

and the state of t	10 0		Management
То	Continuity(OK/		Measured Megger Value
	Not UK)		Wiegger value
RUR1	OX	100 ΜΩ	ToomL
		100 ΜΩ	600 M
·		100 MΩ	600 ML
		100 ΜΩ	SOO MYL
BUR2		100 ΜΩ	600 ML
BUR3		100 M Ω	600 M/L
HB1		100 MΩ	FOR ML
HB2		100 M Ω	600 ML
HB2		100 MΩ	700 M
TM Blower 1		100 MΩ	600 ma
TM Scavenge Blower 1		100 ΜΩ	600 ma
Oil Cooling Unit 1		100 ΜΩ	FOO MA
Compressor 1		100 ΜΩ	600 mr
TFP Oil Pump 1		100 ΜΩ	700 M/L
Converter Coolant	OK	100 ΜΩ	600 M/L
MR Blower 1	DK	100 ΜΩ	500 Mr
MR Scavenge Blower 1		100 MΩ	600 MM
Cab1		100 ΜΩ	700 MM
Cab Heater 1		100 MΩ	600 MA
TM Blower 2		100 ΜΩ	600 M/L
TM Scavenge Blower 2		100 ΜΩ	600 m2
Oil Cooling Unit 2		100 ΜΩ	FOD MA
Compressor 2		100 ΜΩ	SOOMA
TFP Oil Pump 2		100 ΜΩ	600 mn
Converter Coolant Pump 2		100 ΜΩ	700 ML
MR Blower 2		100 ΜΩ	700 MM
MR Scavenge Blower 2		100 MΩ	600 M/L
Cab2	•	100 ΜΩ	600 MAL
Cab Heater 2		100 MΩ	700 M
	BUR3 BUR1 BUR2 BUR3 HB1 HB2 HB2 TM Blower 1 TM Scavenge Blower 1 Oil Cooling Unit 1 Compressor 1 TFP Oil Pump 1 Converter Coolant Pump 1 MR Blower 1 MR Scavenge Blower 1 Cab 1 Cab Heater 1 TM Blower 2 TM Scavenge Blower 2 Oil Cooling Unit 2 Compressor 2 TFP Oil Pump 2 Converter Coolant Pump 2 MR Blower 2 MR Scavenge Blower 2 Oil Cooling Unit 2 Compressor 2 TFP Oil Pump 2 Converter Coolant Pump 2 MR Blower 2 MR Scavenge Blower 2 Cab2	BUR1 OK BUR2 OK BUR3 OLK BUR1 OK BUR2 OK BUR2 OK BUR3 OK BUR3 OK HB1 OK HB2 OK HB2 OK TM Blower 1 OK Oil Cooling Unit 1 OK Compressor 1 OK TFP Oil Pump 1 OK MR Blower 1 OK MR Scavenge Blower 1 OK Cab1 OK Cab Heater 1 OK TM Scavenge Blower 2 OK TFP Oil Pump 2 OK Compressor 2 TEP Oil Pump 2 OK Cab2 OK Cab Heater 2 OK	Not OK Megger Value (min)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39421

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	σK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	юK
Battery (Wire no. 2052)	Connector 50.X7-2		oK
SB2 (Wire no 2050)	Connector 50.X7-3		OR

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>&</u> MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value 60 MΩ
AVEGE TO		

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

W. J. W. W. Berry

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
04B	oK
10A	ØK.
10A	oK
01A, 12A	øK.
06F, 06G	oK
	Sheet Nos. 04B 10A 10A 01A, 12A

Ly

DOC.NO.F/EC3/01

Effective Date: Feb 2022 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

and the second s		
Master controller cab-1 &2	08C, 08D	oK
TE/BE meter bogie-1 & 2	08E, 08F	ØK .
Terminal fault indication cab-1 & 2	09F	ø K
Brake pipe pressure actual BE electric	06H	οK
Primary current sensors	12B, 12F	øK
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	OK
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	ok .
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	ΘK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	oK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	οK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	oK.
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	OK
10KΩ± ± 10%)		
UIC line	13B	οK
Connection FLG1-Box TB	13A	OK

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.810
Resister to maximum current relay.	1 Ω ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	331
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.22
Between wire 6 & 7	0.2 Ω	0.22
Between wire 5 & 7	0.4 Ω	240
For train bus, line U13A to earthing.	10 kΩ± 10%	989K2
For train bus, line U13B to earthing.	10 k Ω ± 10%	10.0K2
Insulation resistance of High Voltage Cable from the top of the roof to the earth	200 MΩ	300191
(by1000 V megger).	# 1	
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.78.0
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.291
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.301
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.242
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	2.7K2
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.380
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.810
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	3902
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	NPA)
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	1052

M.J.q

(Ref: WI/ECS/10)

DOC.NO.F/ECS/VI

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942)

Type of Locomotive: WAP-7/WAG-9HC

Page · f

Note:

Page : 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	Checked old
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	checked ok

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	Checked ok
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked. $\mathscr{O}K$
Test traction control	Sheets of Group 08.	σK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	oK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	oK
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	ΘK
Pretest speedometer	Sheets of Group 10	oK
Pretest vigilance control and fire system	Sheets of Group 11	OK.
Power supply train bus	Sheets of Group 13	OK

क्षेत्र हल्यू

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39421

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.0 Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.09
Traction converter-2 software version:	1 09
Auxiliary converter-1 software version:	1.04
Auxiliary converter-2 software version:	1.04
Auxiliary converter-3 software version:	1.04
Vehicle control unit -1 software version:	3.0
Vehicle control unit -2 software version:	3.0

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	UN
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	ore.
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	104,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100-1.
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	257.



(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	(00,1,
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	25),
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741,
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0° C to 40° C	14°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1400
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1300
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13.5°C
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14 ^{0c}

मी एस डब्ल्यू

DOC.NO.F/ECS/C (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39421

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

Functional test in simulation mode 3.4

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	Checked ok
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	checkedok
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB-contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	7 checked oll
	Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed.	Checked oll

Effective Date: Feb 2022

₽.L.W ₽.L.W (Ref: WI/ECS/10)

DOC:NO.F/ECS/01

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

Contactor filter adaptation by	Isolate any one bogie through bogie	
isolating any bogie	cut out switch. Wait for self-test of	\ /
	the loco.	V
	• Check that FB contactor 8.1 is open.	
	• Check that FB contactor 8.2 is open.	Enecked or
	After raising panto, closing VCB, and	
	setting TE/BE	1)
	• FB contactor 8.1 closes.	1/
	• FB contactor 8.2 remains open.	<i>Y</i>
Test earth fault detection battery	By connecting wire 2050 to)
circuit positive & negative	earth, create earth fault	/
	negative potential	
	message for earth fault	
	By connecting wire 2095	Charledok
	to earth, create earth	
	fault positive potential.	
in the second se	• message for earth fault	11
		γ
Test fire system. Create a smoke in	When smoke sensor-1 gets	
the machine room near the FDU.	activated then	1/
Watch for activation of alarm.	Alarm triggers and fault	(
	message priority 2	1)
	appears on screen.	11
	When both smoke sensor	Checkedok
	1+2,gets activated then	Shecke
	A fault message priority	11
	1 appears on screen and	
	lamp LSF1 glow.	11
	Start/Running interlock occurs and	1/
	TE/BE becomes to 0.	y
Time, date & loco number	Ensure correct date time and Loco	,,,
	number	OK
	Marian Commence of the Commenc	

Effective Date: Feb 2022

P.L.W

7'd (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

DOC.140.1 /EQU/

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.04vA	°k_
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.071	علا
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.05Vl	Ox
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.0419	on
2U _B & 2V _B	For aux converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.8 VP	on
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.10V1 6.44V2ms	ð K

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$, $41.5V_{RMS}$ and opposite polarity.	386 UP , 41.5URMS)	٥٠
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15-54	9u

11 00215

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{\rm eff}/350V_{\rm p}$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply 200V_{RMS} through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25KV	250 %
SLG2_G 87-XUPrim	25 kV	250%	25KV	250%

Decrease the supply voltage below $140\,V_{RMS}$. VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	1707
SLG2 G 87-XUPrim	17 kV	170%	1711	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

v v v	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30 KV	300 Y.
SLG2_G 87-XUPrim	30 kV	300%	30 KV	300%

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

कुछ छ। प्र

Doc.No.F/ECS/UT (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39421

Functionality test:

display.

display.

/9.9A_p at the open wire 1521;

VCB opens with Priority 1 fault message on

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

Minimum voltage relay (Pos. 86) 4.4

Minimum voltage relay (Pos. 86) must be adjust	ted to approx 68% /
Activate loco in cooling mode. Check Power supply of 48V to	(Yø\$/No)
minimum voltage relay. Disconnect primary voltage	
transformer (wire no. 1511 and 1512) from load resistor (Pos.	
74.2) and connect variac to wire no. 1501 and 1502. Supply	
200V _{RMS} through variac. In this case; <i>Minimum voltage relay</i>	
(Pos. 86) picks up	
Try to activate the cab in driving mode:	(Yes/No)
Contactor 218 do not close; the control	
electronics is not be working.	
Turn off the variac:	(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection;	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V _{RMS} through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V _{RMS} through variac to wire no.	(Yes/No)
1501 & 1502; Decrease the supply voltage below	
140V _{RMS} ± 4V;	· ·
Fine tune the minimum voltage relay so that VCB opens.	
4.5 Maximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transforme	er; Connect variac to wire 1521
&1522 (including the resistor at Pos. 6.11); Put loco in simulatio	n for driving mode: Open R ₂ - R ₄
on contact 136.3; Close VCB; supply $3.6A_{RMS}$ at the open wi	re 1521; Tune the drum of the
maximum current relay Pos. 78 for correct over current value;	
160	
VCB opens with Priority 1 fault message on	(Yes/No)

Keep contact $R_3 - R_4$ of 136.3 closed; Close VCB; Tune the resistor 78.1 for the current of 7.0 A_{RMS}

Effective Date: Feb 2022

P.L.W

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page : 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	T
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		-
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		296ma
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		336MA
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		347mg
Hotel load current sensors (Pos. 33/1 & 33/2)	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	₩	
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		1252mn

Effective Date: Feb 2022

मा एत डब्ब

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39 42/

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

should take place	Measured limit	
Increase the current quickly in	For 18.2/1=	
the test winding of the current	For 18.2/2=	/
sensors, VCB will off at 2.52A	For 18.2/3=	1
with priority 1 fault for each	For 18.4/4=	70
sensor.	For 18.5/1=	
	For 18.5/2=	
	For 18.5/3=	
	1	
Increase the current quickly in	For 18.2/1=	
the test winding of the current	For 8.2/2=)
sensors, VCB will off at 2.52A	For 18.2/3=	[
with priority 1 fault for each	For 18.4/4= (İ
sensor.	For 18.5/1=	70
	For 18.5/2=	(
O Service Serv	For 18.5/3=	}
end was sense		
Remove one of the orange		
	ml	
converter. VCB should trip		
Remove one of the orange		
fibre optic plugs on traction	" pK	
converter. VCB should trip		
	the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor. Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor. Remove one of the orange fibre optic plugs on traction converter. VCB should trip Remove one of the orange fibre optic plugs on traction	the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor. Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor. For 18.2/3= For 18.5/1= For 18.5/2= For 18.2/2= For 18.2/2= For 18.2/2= For 18.2/3= For 18.2/3= For 18.2/3= For 18.2/3= For 18.2/3= For 18.2/3= For 18.2/3= For 18.2/3= For 18.2/3= For 18.5/3= Remove one of the orange fibre optic plugs on traction converter. VCB should trip

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Chadana	1 14	1 = 2 (=		<u> </u>					
Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close		Open	Close

Effective Date: Feb 2022

P.L.W

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39421

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Doc.No.F/ECS/01

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	conse	den	close	Nen	Clore	Nen	Close	Close	den
BUR1 off	class	den	10080	conse	den	COOLE	Den	den	1 Dose
BUR2 off	Nen					· Close			clase
BUR3 off	coen								classe

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly	Ves
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Yes

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

ф 101 веец **Р.С.**М

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	the abraha a anthrollan inte DUN		chealed oil
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Checked oll
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	Checked ok
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	checiled oil
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	checked old
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Checked oll
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Checked ok
Interlocking Dantograph- VCB in driving Mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Charled o K

Effective Date: Feb 2022

PATIALA LOCOMOTÎVÊ WORKS, PATIALA

(Ref: WI/ECS/10)

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

Doc.No.F/ECS/01

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Typical phase	Measured	Measured
current	continuous phase current	starting phase current
9.8 amps	7.8	9.8
9.8 amps	2.5	10 ~ 0
19.6 amps	4.5	7.9
19.6 amps	3 8	8-3
40.0 amps	25.0	95.0
40.0 amps	26.0	108-0
34.0 amps	31.5	140.0
34.0 amps	300	120.0
6.0 amps	4.5	12.3
6.0 amps	4.8	11.3
25 amps at 0 kg/ cm ² 40 amps at 10	3).0	42.0
kg/ cm ² 25 amps at 0		
kg/cm ² 40 amps at 10	300	380
	9.8 amps 9.8 amps 19.6 amps 19.6 amps 40.0 amps 40.0 amps 34.0 amps 34.0 amps 6.0 amps 25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ² 25 amps at 0 kg/ cm ²	current 9.8 amps 7.8 9.8 amps 7.5 19.6 amps 3.8 40.0 amps 25.0 40.0 amps 26.0 34.0 amps 31.5 34.0 amps 3.5 6.0 amps 4.6 25 amps at 0 kg/cm² 4.6 25 amps at 10 kg/cm² 3.0 40 amps at 10 kg/cm² 3.0 40 amps at 10 3.0

Effective Date: Feb 2022

माः ५ल उब्बर

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

	O) 1110 J117171	<u> </u>		4.4	
•	Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
	BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	9881	Yey
	BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636V	408
	BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 AM	φώ

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1001	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637	Yey
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Barp	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	21Amp	Ye,
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	1) Am)	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110√	C

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1002	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637V	Yey
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	2) Ami	Yo
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	1) Any	Yej
* Readings are d	Voltage battery of BUR 3	110%(10%=10V)	1101	K

Readings are dependent upon charging condition of the battery.

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WÖRKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 20 of 27

Checked o

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	<u></u>

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current draws by the

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.1	10.0
Machine room blower 2	15.0 amps*	4.1	9.0
Sc. Blower to MR blower 1	1.3 amps	10	2.7
Sc. Blower to MR blower 2	1.3 amps	1.2	2.8
Ventilator cab heater 1	1.1 amps	10	1-2
Ventilator cab heater 2	1.1 amps	1.0	1.2
Cab heater 1	4.8 amps	4,9	5.1
Cab heater 2	4.8 amps	4.9	5.1

For indigenous MR blowers.

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942)

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked OK
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked oil
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked OIL
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkedoll
*	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok
onverter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked oll

Effective Date: Feb 2022

W.J.q

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3942)

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked oll
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked oll
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	Checked ak
AC part of the traction circuit of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok
of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok
Converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked oll

Effective Date: Feb 2022

P.L.W

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WÖRKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39421

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears Disturbance in Converter 1	checked ok
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off. • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	Checked ok

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained	
currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	Checked old	

Effective Date: Feb 2022

P.L.W

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 37 42/

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	 FB contactor 8.2 must close FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop 	Checked ok
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	checked olk
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	øΚ

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	checked ok	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	checked oll	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	Checked oll	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Checked old	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	Checkedok	

Effective Date: Feb 2022

P.L.W

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 3942

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

	The state of the s	Page: 25 of 27
Marker light	Both front and tail marker light should glow from both the cabs	checked ok
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Checked ok
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	Checked ok
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	checkedok
Illuminated Push button	All illuminated push buttons should glow during the operation	Checked old
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: 7
rew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remark
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco. \mathcal{C}	neckede
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	necked old
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By	ecked
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	eciked 614
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	ecilal

Ge

Effective Date: Feb 2022

M.J.A

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 3942/

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Charkwieit	32001 21
0.	Check vigilance	Set the speed more than 1.5 kmph and ensure that
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .
	locomotive	For 60 seconds do not press vigilance foot switch or
		sanding foots switch or TE/BE throttle or BPVG
		switch then
1.		Buzzer should start buzzing.
ĺ		LSVW should glow continuously.
		Do not asknowledge the alarm through pour
	e e	vigilance foot switch further for 8 seconds then:
		• Emergency brake should be applied
		automatically.
		VCB should be switched off.
		Resetting of this penalty brake is possible only after
		32 seconds by bringing TE/BE throttle to 0 and
		acknowledge BPVR and press & release vigilance
		foot switch.
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).
		With park brake in applied condition
		• With direct loco brake applied (BP< 4.75Kg/cm ²).
	•	• With automatic train brake applied (BP<4.75Kg/cm²).
		• With emergency cock (BP < 4.75 Kg/cm ²).
8.	Check traction interlock	Switch of the brake electronics. The
		Tractive / Braking effort should ramp down, VCB
		should open and BP reduces rapidly.
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed
	braking.	should start reducing.
10.	Check for BUR	In the event of failure of one BUR, rest of the two
	redundancy test at	BURs can take the load of all the auxiliaries. For this
	ventilation level 1 & 3 of	switch off one BUR. (Checked all
	loco operation	Auxiliaries should be catered by rest of two BURs.
		Switch off the 2 BURs; loco should trip in this case.
11.	Check the power	Create disturbance in power converter by switching
	converter	off the electronics. VCB should open and converter
1		
	isolation test	should get isolated and traction is possible with another power converter.

9

issue No.03

Effective Date: Feb 2022

W.J.A

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	oK	OK -	
2	Marker Red	oK	014	
3	Marker White	OK	øK /	· · · · · · · · · · · · · · · · · · ·
4	Cab Lights	OK	ok	
5	Dr Spot Light	oK	OK	
6	Asst Dr Spot Light	0/4	oK	T Checkled Workindold
7	Flasher Light	OK	o.k	
8	Instrument Lights	øK	oK	
9	Corridor Light	oK	OK	
10	Cab Fans	OK	614	
11	Cab Heater/Blowers	σK	OK /	
12	All Cab Signal Lamps Panel 'A'	OK	OIL /	

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format for 2x500KVA IGBT based Hotel Load Converter for 3-phase Electric Locomotives

Locomotive No.: 39421	Page: 1 of 6
Type of Locomotive: ぬぬで	
Make of Hotel Load Converter: AAL	

Details of Equipment: -

Equipment	SI. No	Equipment	SI. No
HLC1	1024020187	IV Coupler CAB1 ALP	
HLC2	1024020188	IV Coupler CAB1 LP	
Converter-1	1024020187	IV Coupler CAB2 ALP	
Converter-2	1024020188	IV Coupler CAB2 LP	
UIC Coupler for Hotel Load Converter (353.3/2 CAB2)	The second second	UIC Coupler for Hotel Load Converter (353.3/3 CAB1)	

1. Polarity test of Hotel Load Winding:

Apply 198 /140 to the primary winding of the transformer (at 1U; wire no. 2 at surge arrestor and at 1V; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformer.

Output Winding Nos.	Description of winding	Prescribed Output Voltage &Polarity with input supply	Measured Output	Measured Polarity
2UH1 & 2VH1	For Hotel load between cable 91- 94	5.9 ,4.2 and same polarity	Ov	OK
2UH2 & 2VH2	For Hotel load between cable 91A- 94A	5.9 ,4.2 and same polarity	00	Ou_

2. Visual Inspection:

Fitment of Units and Earthing to Sub-assemblies

Verify the following Equipments Fitment and grounding cables are connected to Locomotive body.

SI. No.	Equipment Name	Unit Fitment (Yes/No)	Provision of Earthing (Yes/No)		
1	HLC1	Yes	Yes		
2	HLC2	Yes	Yes		
3	Output Contactor unit1 HLC1	Yes	Yes		
4	Output Contactor unit2 HLC2	Yes	Yes		
5	IV Coupler CAB1 ALP	Yes	Yes		
6	IV Coupler CAB1 LP	Yes	Yes		
7	IV Coupler CAB2 ALP	Yes	Yes		
8	IV Coupler CAB2 LP	Yes	Yes		
9	UIC Coupler for Hotel Load Converter (353.3/3 CAB1)	Yes	Yes		
10	UIC Coupler for Hotel Load Converter (353.3/2 CAB2)	Yes	Yes		
11	CT (LEM sensor) under HLC1	Yes	Yes		
12	CT(LEM sensor) under HLC2	Yes	Yes		

Page: 3 of 6

3. Cable Routing and Laying

3.1 Control cable routing and layout

Verify the connections, tightness and cable routing of the following Control cable.

SI. No.	Cables Details	Performed (Yes/No)
1	From Wago SB1 to HLC1 are connected as per wiring format	Yes
2	From SB1 to UIC Coupler Hotel Load Converter (353.3/3 CAB2) through Bayonet connector XK22HL:01(22pin)is connected as per wiring format	Yes
3	From SB1 wago(XF22S:01/53) to IV coupler CAB1 ALP are connected as per wiring format	Yes
4	From SB1 wago(XF22S:01/54) to IV coupler CAB1 LP are connected as per wiring format	Yes Yes
5	From Wago SB2 to HLC2 are connected as per wiring format	Yes
6	From SB2 to UIC Coupler Hotel Load Converter (353.3/2 CAB2) through Bayonet connector XK77HL:02 (22 pin) is connected as per wiring format	Yes
7	From SB2 wago (XF77S:01/53) to IV coupler CAB2 ALP are connected as per wiring format	Yes
8	From SB2 wago (XF77S:01/54) to IV coupler CAB2 LP are connected as per wiring format	Yes
9	From HLC1 to Contactor unit 1 through 4 Core Cable are connected as per wiring format	Yes Yes Yes
10	From HLC2 to Contactor unit 2 through 4 Core Cable are connected as per wiring format	Yes
11	From SB to VCU are connected as per wiring format	Yes
12	From CT (HLC1 LEM sensor) to SR1 are connected as per wiring format	Yes Yes
13	From CT (HLC2 LEM sensor) to SR2 are connected as per wiring format	Yes

3.2 Power cable routing and layoute bh bh

Verify the connections, tightness and cable routing of the following Power cable.

SI. No.	Cables Details	Performed Yes/No)
1	From Transformer to HLC1(2UH1 & 2VH1) are connected as per wiring format	Yes
2	From Transformer to HLC2(2UH2 &2VH2) are connected as per wiring format	Yes
3	From HLC1 to Output Contactor unit1 are connected as per wiring format	Yos
4	From HLC 2 to Output Contactor unit 2 are connected as per wiring format	Yes
5,	From Output Contactor unit 1 to IV Coupler CAB1 ALP and IV Coupler CAB2ALP through Junction box are connected as per wiring format	Yes
6	From Output Contactor unit 2 to IV Coupler CAB2 LP and IV Coupler CAB1 LP through Junction box are connected as per wiring format	Yes

4. Continuity test:

Check the continuity test for the External connections made to Equipments.

Note: This continuity test should be done before power ON the Locomotive Battery.

4.1 Control cable continuity

SI. No.	Cables Details	Performed (Yes/No)
. 1	From Wago SB1 to HLC1 are connected as per wiring format	Yes
2	From SB1 to UIC Coupler Hotel Load Converter (353.3/3 CAB2) through Bayonet connector XK22HL:01(22pin)is connected as per wiring format	Yes
3	From SB1 wago(XF22S:01/53) to IV coupler CAB1 ALP are connected as per wiring format	Yes
4	From SB1 wago(XF22S:01/54) to IV coupler CAB1 LP are connected as per wiring format	Yes Yes
5	From Wago SB2 to HLC2 are connected as per wiring format	Yes
6	From SB2 to UIC Coupler Hotel Load Converter (353.3/2 CAB2) through Bayonet connector XK77HL:02(22pin) is connected as per wiring format	Yes
7	From SB2 wago (XF77S:01/53) to IV coupler CAB2 ALP are connected as per wiring format	res
8 	From SB2 wago(XF77S:01/54) to IV coupler CAB2 LP are connected as per wiring format	Yes
9	From HLC1 to Contactor unit 1 through 4 Core Cable are connected as per wiring format	Les
10	From HLC2 to Contactor unit 2 through 4 Core Cable are connected as per wiring format	Yes
11	From SB to VCU are connected as per wiring format	
12	From HLC1 LEM sensor to SR1 are connected as per wiring format	Yes
13	From HLC2 LEM sensor to SR2 are connected as per wiring format	Yes Yes

Page: 5 of 6

4.2 Power cable continuity

These cables continuity should be checked before mounting of converter in the locomotive.

SI. No.	Cables Details	Performed (Yes/No)
1	From Transformer to HLC1(2UH1 & 2VH1) are connected as per wiring format	Les
2	From Transformer to HLC2(2UH2 &2VH2) are connected as per wiring format	Yes
3	From HLC1 to Output Contactor unit1 are connected as per wiring format	Yes
4	From HLC 2 to Output Contactor unit 2 are connected as per wiring format	Yes
5	From Output Contactor unit 1 to IV Coupler CAB1 ALP and IV Coupler CAB2ALP through Junction box are connected as per wiring format	Yes
6	From Output Contactor unit 2 to IV Coupler CAB1 LP and IV Coupler CAB2 LP through Junction box are connected as per wiring format	Yes

5. Battery power ON

Tests Supply Voltages

Remove all Control cable connectors (Analog and Digital Input/output connectors) from HLC1, HLC2. While Switch ON Battery supply observe is there any MCBs tripping. Wait for one or two minutes after switching ON Circuit breaker(MCB1) and observe for any overheating symptoms like smell, smoke, temperature etc. from the wire bunches. If any such symptoms are noticed, there might be a short circuit in the wire bunch. Check up once again continuity wherever suspected. After that check the Voltage levels at all equipments connectors as mentioned below.

Test Details	Acceptance	Observations
Voltage Level at HLC1: I. Between wago terminal XF22S:03/54 and XF22S:03/58 II. Between wago terminal XF22S:03/53 and XF22S:03/58	~110VDC	en en
Voltage Level at HLC2 : I. Between wago terminal XF77S:03/52 and XF77S:03/56 I. Between wago terminal XF77S:03/51 and XF77S:03/56	~110VDC	٩١٨

Note: After Above tests switch off the Power and restore all removed connectors and once again switch ON the 110 V Supply and ensure that no MCB tripping due to abnormality.

Page: 6 of 6

6. Converter operation (ON/OFF) test

Power supply is directly available to the Hotel Load Converter via Hotel Load Converter winding (2UH1-2VH1) and (2UH2-2VH2). As soon as BLDJ is closed power will be available to the Hotel Load Converter. Connect the test jig of Hotel Load Converter to the UIC and IV Coupler. Charge the locomotive and switch on the BLHO, LSHO indication should glow. Hotel Load Converter screen will show message "waiting for ON command". One by one Hotel Load Converter can be switched on by test jig. Finally both the Hotel Load Converter should be turned out simultaneously. Observe the flow of air from the air duct, this will ensure that Hotel Load Converter is ON. Both the Hotel Load Converters are ON, then voltage and frequency should be measured as per the table below:

Converters should run without any irregularities.

Hotel Load Converter 1				
	Output Voltage		Output Frequency	
U-V	V-W	U-W	(Hz)	
ov-	a. a.	DIL_	Sa	

Hotel Load Converter 2				
	Output Voltage		Output Frequency	
U-V	V-W	U-W	(Hz)	
91/	Op_	10-2_	ð K	
	26.7	and the second second		

7. Earth Fault Test

- 7.1 Input Earth Fault:-Ground the input terminal of the Hotel Load Converter using a proper resistance and then turn on the Hotel Load Converter. The converter should trip with the message "Input earth fault".
- **7.2 Output Earth Fault:**-Ground the output terminal of the Hotel Load Converter using a proper resistance and then turn on the Hotel Load Converter. The converter should trip with the message "Output earth fault".

Note: These to be done for the both the converters (HLC1 and HLC2) separately.

Page: 33/A

33 A

LOCO NO: 39421

Status of RDSO modifications

	He 1169 41 11		
Sn		Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	OK/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Øk/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	from MCPA circuit.	Øk/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Ok/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	draining of batteries in three phase electric locomotives.	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Øk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Øk/Not Ok
10	RDSO/2012/EL/MS/0413 Rev. 1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Øk/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Øk/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ók/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Ok/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Ok/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	©k/Not Ok
21	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09.19	Implementation of push pull scheme.	Øk/Not Ok

Signature of JE/SSE/ECS

Loco No.: 39421

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: Faiveley			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	56
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.50
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.45 Kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.45 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co	ock by Key (KABA Key)
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ок
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.40 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.		-NA-	-NA-
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 25
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-29 Sec
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-29 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.45 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.55 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10.1 Kg/cm2
		MM3882 &	kg/cm2, Closes at	
		MM3946	8±0.20 kg/cm2	8.1 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.2 minute

PLW/PATIALA

Loco No.: 39421

2.8 Check Auto Drain Valve functioning (124 & 87) Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP. 2.9 Check CP-2 delivery safety valve setting (10/2). Run CP Direct by BLCP. Check CP-2 delivery safety valve setting (10/2). Run CP Direct by BLCP. Direct by BLCP. Check CP-2 delivery safety valve setting (10/2). Run CP Direct by BLCP. Direct by BLCP.	10 sec ok 11.60 Kg/cm2 11.60 Kg/cm2 5.0 Kg/cm2 6.0 Kg/cm2 ok Blue 0.35 Kg/cm2 in 15 minutes 0.05 Gg/cm2 in 5 minutes	Operates when Compressor starts 11.50±0.35 kg/cm2 11.50±0.35 kg/cm2 5.0±0.10kg/cm2 Tower to change every minute	& MM3946 est spec. & MM3946 est spec. & MM3946 k sheet no. rsion 2 k sheet no.	D&M to MM3882 of D&M to MM382 o	ng (10/1). Run CP ing (10/2). Run CP insure that the safety less than opening or, Drain MR Pressure start Compressor, eck Valve 92F. TP. Open isolate cock	eck Auto Drain Valve functioning eck CP-I delivery safety valve settlect by BLCP. eck CP-2 delivery safety valve settlect by BLCP tch 'OFF' the compressors and enverous to reset at pressure 1.2 kg/cm/ssure. Pressure: Switch 'OFF' compressor drain cock of 1" Main Reservoir, Seck setting pressure of Duplex Chapters Sure: Test Gauge in Test point 107F FP' of Check pressure in Gauge.	2.9 Che Dire 2.10 Che dire 2.11 Swi valv pre 2.12 BP by c che 2.13 FP p Fit 136
2.9 Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP. 2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP 2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake Operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 5.0 CLW's check sheet no. F60.812 Version 2 5.0 D&M test spec. MM3882 & MM3946 CLW's check sheet no. F60.812 Version 2 Tower to change every minute 5.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change every minute 6.0 D&M test spec. MM3882 & MM3946 Tower to change many formatic Brake operation of the minute should be less of the minute should be	Kg/cm2 11.60 Kg/cm2 5.0 Kg/cm2 ok Blue 0.35 Kg/cm2 in 15 minutes 0.05 Gg/cm2 in 5	11.50±0.35 kg/cm2 11.50±0.35 kg/cm2 5.0±0.10kg/cm2 6.0±0.20kg/cm2 Tower to change every minute	& MM3946 est spec. & MM3946 est spec. & MM3946 k sheet no. rsion 2 k sheet no.	D&M to MM3882 of D&M to MM382 o	ing (10/2). Run CP sure that the safety 2 less than opening or, Drain MR Pressure start Compressor, eck Valve 92F. TP. Open isolate cock	ect by BLCP. eck CP-2 delivery safety valve setted by BLCP tch 'OFF' the compressors and enve to reset at pressure 1.2 kg/cm/ssure. Pressure: Switch 'OFF' compressor drain cock of 1" Main Reservoir, Seck setting pressure of Duplex Chapters Sure: Test Gauge in Test point 107F FP' of Check pressure in Gauge.	2.10 Che dire 2.11 Swi valv pre 2.12 BP by c che 2.13 FP I Fit 136
Direct by BLCP. 2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP 2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Check valve of 1" Main Reservoir, Start Compressor, Check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: If Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 Tower to change every minute Tower to change every minute 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 Skg/cm2 MM3882 & MM3946 D.Should be less than 1 kg/cm2 in 15 minutes Skg/cm2 Kg/cm3 Skg/cm2 CLW's check sheet no. CLW's check sheet no. CLW's check sheet no. CLW's check sheet no. CLW's check sheet no. CLW's check sheet no.	11.60 Kg/cm2 5.0 Kg/cm2 6.0 Kg/cm2 ok Blue 0.35 Kg/cm2 in 15 minutes 0.05 Gg/cm2 in 5	11.50±0.35 kg/cm2 5.0±0.10kg/cm2 6.0±0.20kg/cm2 Tower to change every minute	& MM3946 est spec. & MM3946 est spec. & MM3946 k sheet no. rsion 2 k sheet no.	D&M to MM3882 of D&M to MM382 o	ing (10/2). Run CP sure that the safety 2 less than opening or, Drain MR Pressure start Compressor, eck Valve 92F. TP. Open isolate cock	ect by BLCP. eck CP-2 delivery safety valve setted by BLCP tch 'OFF' the compressors and enve to reset at pressure 1.2 kg/cm/ssure. Pressure: Switch 'OFF' compressor drain cock of 1" Main Reservoir, Seck setting pressure of Duplex Chapters Sure: Test Gauge in Test point 107F FP' of Check pressure in Gauge.	2.10 Che dire 2.11 Swi valv pre 2.12 BP by c che 2.13 FP I Fit 136
direct by BLCP Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure. BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.0 Brake Test (Automatic Brake operation) CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 Tower to change every minute Tower to change every minute Tower to change every minute Blue E 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. MM3882 & MM3946 MM3882 & MM3946 Should be less than 1 kg/cm2 in 15 minutes MM3882 & MM3946 MM3882 & MM3946 Should be less than 1 kg/cm2 in 15 minutes Should be less than 1 kg/cm2 in 15 minutes Should be less than 1 kg/cm2 in 15 minutes Cleck BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 Cleck BP Air leakage (isolate BP charging cock-70) Check BP Air leakage (isolate BP charging cock-70) Check proportionality of Auto Brake system	Kg/cm2 5.0 Kg/cm2 6.0 Kg/cm2 ok Blue 0.35 Kg/cm2 in 15 minutes 0.05 Gg/cm2 in 5	kg/cm2 5.0±0.10kg/cm2 6.0±0.20kg/cm2 Tower to change every minute	& MM3946 est spec. & MM3946 k sheet no. rsion 2 k sheet no.	D&M to D&M to MM3882 of CLW's check F60.812 Ve	esure that the safety Pless than opening or, Drain MR Pressure start Compressor, eck Valve 92F.	ect by BLCP tch 'OFF' the compressors and enve to reset at pressure 1.2 kg/cm/ssure. Pressure: Switch 'OFF' compressor drain cock of 1" Main Reservoir, Seck setting pressure of Duplex Chapters Sure: Test Gauge in Test point 107F FP' of Check pressure in Gauge.	2.11 Swi valv pre 2.12 BP by c che 2.13 FP Fit 136
direct by BLCP Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure. BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.0 Brake Test (Automatic Brake operation) CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 Tower to change every minute Tower to change every minute Tower to change every minute Blue E 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. MM3882 & MM3946 MM3882 & MM3946 Should be less than 1 kg/cm2 in 15 minutes MM3882 & MM3946 MM3882 & MM3946 Should be less than 1 kg/cm2 in 15 minutes Should be less than 1 kg/cm2 in 15 minutes Should be less than 1 kg/cm2 in 15 minutes Cleck BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 Cleck BP Air leakage (isolate BP charging cock-70) Check BP Air leakage (isolate BP charging cock-70) Check proportionality of Auto Brake system	ok Blue 0.35 Kg/cm2 in 15 minutes 0.05 Gg/cm2 in 5	5.0±0.10kg/cm2 6.0±0.20kg/cm2 Tower to change every minute	est spec. & MM3946 k sheet no. rsion 2 k sheet no.	D&M to MM3882 of CLW's chec F60.812 Ve	esure that the safety Pless than opening or, Drain MR Pressure start Compressor, eck Valve 92F.	ect by BLCP tch 'OFF' the compressors and enve to reset at pressure 1.2 kg/cm/ssure. Pressure: Switch 'OFF' compressor drain cock of 1" Main Reservoir, Seck setting pressure of Duplex Chapters Sure: Test Gauge in Test point 107F FP' of Check pressure in Gauge.	2.11 Swi valv pre 2.12 BP by c che 2.13 FP Fit 136
valve to reset at pressure 1.2 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 D&M te	ok Blue 0.35 Kg/cm2 in 15 minutes 0.05 Gg/cm2 in 5	6.0±0.20kg/cm2 Tower to change every minute	& MM3946 k sheet no. rsion 2 k sheet no.	CLW's chec F60.812 Ve	P. Iess than opening or, Drain MR Pressure start Compressor, eck Valve 92F. TP. Open isolate cock	ve to reset at pressure 1.2 kg/cm: ssure. Pressure: Switch 'OFF' compressor drain cock of 1" Main Reservoir, S ock setting pressure of Duplex Cho pressure: Test Gauge in Test point 107F FP of. Check pressure in Gauge.	2.12 BP by c che 2.13 FP I Fit - 136
by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step CLW's check sheet no. 6.0±0.20kg/cm2 6.0 If CLW's check sheet no.	ok Blue 0.35 Kg/cm2 in 15 minutes 0.05 Gg/cm2 in 5	6.0±0.20kg/cm2 Tower to change every minute	rsion 2 k sheet no.	F60.812 Ve	eck Valve 92F. TP. Open isolate cock	drain cock of 1" Main Reservoir, S ock setting pressure of Duplex Cho pressure: Test Gauge in Test point 107F FP FF. Check pressure in Gauge.	2.13 FP Fit 136
Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system F60.812 Version 2 Fower to change every minute F60.812 Version 2 Fower to change every minute F0.81 Put Auto Brake spec. MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Kg/cm2 in 5) MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Kg/cm2 in 5) MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Kg/cm2 in 5) MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Kg/cm2 in 5) MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Kg/cm2 in 5) MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Kg/cm2 in 5) MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Kg/cm2 in 5) MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Kg/cm2 in 5) MM3882 & MM3946 Should be less than 1 kg/cm2 in 5 (Mg/cm2 in 5) MM	ok Blue 0.35 Kg/cm2 in L5 minutes 0.05 Gg/cm2 in 5	Tower to change every minute			·	Test Gauge in Test point 107F FP FF. Check pressure in Gauge.	Fit 136
3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system Tower to change every minute Tower to change every minute Tower to change every minute Tower to change every minute Expression and the severy minute Blue Expression and the severy minute Blue Expression and the severy minute Blue Expression and the severy minute Expr	0.35 Kg/cm2 in L5 minutes 0.05 Kg/cm2 in 5	every minute			rt Compressor, leave	Dryer Operation	
open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 5.0 Check BP Air leakage (isolate BP charging cock-70) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.	0.35 Kg/cm2 in L5 minutes 0.05 Kg/cm2 in 5	every minute			rt Compressor, leave		
3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step CLW's check sheet no.	0.35 Kg/cm2 in L5 minutes 0.05 Gg/cm2 in 5						
3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system Blue Blue Blue Blue Blue D&M test spec. MM3882 & MM3946 Should be less than 1 kg/cm2 in Kg/cm2 in Sminutes MM3882 & MM3946 MM3882 & MM3946 Should be less than 1 kg/cm2 in Sminutes Kg/cm2 in Sminutes Kg/cm2 in Sminutes Kg/cm2 in Sminutes CLW's check sheet no.	0.35 Kg/cm2 in L5 minutes 0.05 Gg/cm2 in 5	Blue					
4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 Check proportionality of Auto Brake system CLW's check sheet no.	0.35 Kg/cm2 in L5 minutes 0.05 Gg/cm2 in 5	Blue			at Compressor stops	eck Purge Air Stops from Air Drye	3.2 Che
4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D.15 minutes Columbs Should be less than 1 kg/cm2 in 15 minutes Explosion MM3882 & MM3946 Cleak test (Automatic Brake operation) Cleak proportionality of Auto Brake system CLW's check sheet no.	Kg/cm2 in L5 minutes 0.05 (g/cm2 in 5				or	eck condition of humidity indicate	3.3 Che
leakage from both cabs. MM3882 & MM3946 than 1 kg/cm2 in 15 minutes 15 minu	Kg/cm2 in L5 minutes 0.05 (g/cm2 in 5				in Reservoir Leakage Test	4.0 Ma	
4.2 Check BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 D.15 kg/cm2 in 5 Kg/c minutes S.0 Brake Test (Automatic Brake operation) S.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.	0.05 (g/cm2 in 5	than 1 kg/cm2 in			Check MR Pressure air		
5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.			-		ging cock-70)	eck BP Air leakage (isolate BP cha	4.2 Che
5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.					eration)	ike Test (Automatic Brake op	5.0 Bra
				Check proportionality of Auto Brake system			
Auto controller position BC (WAG-9 & WAG-7) Kg/cm2 BC (WAP-5) Kg/cm2		1 ' '	& WAG-7)	,		o controller position	Aut
BP Pressure kg/cm2 Value Result Value Re	Result	Value	Result	Value	m2	BP Pressure kg/o	
Run 5±0.1 5.05 Kg/cm2 0.00 _{0.00 Kg/cm2} 0.00	-	1	0.00 Kg/ cm2	0.00	5.05 Kg/cm2	5±0.1	Rur
Initial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 _{0.35Kg/cm2} 0.75±0.15	-	0.00	<u> </u>	0.40±0.1	4.6 Kg/cm2	ial 4.60±0.1	Init
Full service 3.35±0.2 3.4 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30	-		0.35Kg/ cm2	2.50.0.4	3.4 Kg/cm2	service 3.35±0.2	Full
		0.75±0.15		2.50±0.1			Em

PLW/PATIALA

Loco No.: 39421

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	8 Sec
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	
		MM3882 & MM3946	to Below 2.5	ОК
			kg/cm2	
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	
		F60.812 Version 2	4.05- 4.35	4.10Kg/cm2
			kg/cm2	
			Opens at BP	
			2.85- 3.15	3.0Kg/cm2
			kg/cm2	
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC developed			
	WAP5 – BC 5.15 \pm 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	8.0 sec
	WAG9 - BC 2.50 ± 0.1 kg/cm2		21±3 sec.	
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure			
	up to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	18.0 sec.
	WAG9		52±7.5 sec.	
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	75 Sec
	BP Pressure Steady at 5.5±0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test : The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.65
	functioning of brake.		60 Sec.	Kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A-9 (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors			
г с	in working condition.		DC	
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure	CDA//	2510201 / 5	2.5
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.5
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 Sec
	time	MM3882 & MM3946		

PLW/PATIALA

Loco No.: 39421

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.20±0.1 kg/cm2	0.20 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)		-NA-	-NA-
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled	_	Multi Loco	
7.3	TCAS and Non-TCAS mode enabled	_	Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is12 kg/sqcm causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

SAMSHER Digitally signed by SAMSHER SINGH BIST Date: 2025.01.27
16:29:00 +05'30'

Signature of SSE/Shop

39421

			F	Roof compnent Cab-1	& Cab-2	
S.NO.	DESCRIPTION	PL NO.	QPL/Nos.	SUPPLIER	Sr.No.	Warranty
1	Pantograph	25880068	2	Contransys	15136-08/24, 15137-08/24	
2	Servo Motor	25880068	2	Contransys	15129-08/24,15133-08/24	
3	Air Intake Filter Assembly	29480103	2	PARKER	O/C1641P/A/01 (PLW)09-24,	
٦	All littake Filter Assembly	23460103		FAIRLI	O/C1645P/A/01 (PLW)09-24	
4	Insulator Panto Mounting	29810127	8	IEC	05-24, 05-24	
			Middle	roof Component		
5	High Voltage Bushing	29731021	1	Safe System India	MFG/09/2024/HVB-76	
6	Voltage Transformer	29695028	1	PRAGATI	24/819181-Oct/2024	
7	Vaccum Circuit Breaker	25712202	1	AUTOMETERS	AALN/11/2024/066/VCBA/877	
8	Insulator Roof Line	29810139	9	MIL	03-2024, 06-2024, 07-2024	
9	Harmonic Filter	29650033	1	Daulat Ram	24K/RHFG/06/730-10/2024	As per PO/IRS Conditions
10	Earthing Switch	29700073	1	AUTOMETERS	AALN/10/2024/007/ES/454	
11	Surge Aresster	29750052	2	CG POWER & INDUS	TF 56228-2024, 56230-2024	
			Air Bra	ke Components		
12	Air Compressor (A,B)	29511008	2	ELGI	EXGS 923680 A, EXGS 923728 B	
13	Air Dryer	29162051	1	TRIDENT	LD2-10-0761-24	
14	Auxillary Compressor	25513000	1	CEC	RH 3383-08-24	
15	Air Brake Panel	29180016	1	Faiveley	Dec 24-20-WAG9-3793	
16	Controller (A,B)	29180016	2	Faiveley	K24-025 A, K24-028 B	
17	Break Up Valve	29162026	2	Faiveley		
18	Wiper Motor		4	Auto Industry		

SSE/ABS

SAMSHER Digitally signed by SAMSHER SINGH BIST Date: 2025.01.24 17:16:57 +05'30'

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 39421

RLY: NCR

SHED: CNB

PROPULSION SYSTEM: MEDHA

HOTEL LOAD CONVERTER: AAL

LIST OF ITEMS FITTED BY ECS

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER
1	LED Based Flasher Light Cab I & II	29612937	4654/	/4651	POWER TECH
2	Led Marker Light Cab I & II	29612925	143098/143140/	MATSUSHI P.TECH	
	Cab Heater Cab & II	29170011	3 2505	TOPGRIP	
	Crew Fan Cab I & II	29470080	5825/5768/	5742/5707	MTI
	Master Controller Cab I		72	31	WOAMA
	Master Controller Cab II	29860015	7232		110, 4111
7	Complete Panel A Cab I & II	29170564	1515	1515 1503	
8	Complete Panel C Cab & II	29170539	036/11 035/11		TOPGRIP/MEDHA
9	Complete Panel D Cab I & II	29170564	1496 1512		KONTACT CG
1 -	Complete Cubicle- F Panel Cab I & II	29178162	2570, 08/24		
11	Speed Ind.& Rec. System	29200040	5657/5657		LAXVEN
12	Battery (Ni- Cd)	29680025	B-145		HBL
	Set of Harnessed Cable Complete	29600418			PPS INTERNATIONAL
14	Transformer Oil Pressure Sensor (Cab-1) (pressure sensor oil circuit transformer)	29500047	BG/PS/1498 Jun-24	BG/PS/1480 Jun-24	BG INDUSTRIES
15	Transformer Oil Pressure Sensor (Cab-2)		BG/PS/1385 Jun-24	BG/PS/1406 Jun-24	
16	Transformer Oil Temperature Sensor (Cab- 1)(temperature sensor oil circuit transformer)	29500035	BG/TFP/88	13 Aug-2024	BG INDUSTRIES
17				57 Aug-2024	
18	Roof mounted Air Conditioner I	29811028	24K/RMPU/DC/02/1281		DAULAT RAM
	Roof mounted Air Conditioner II	29011020	24K/RMPU/	DC/02/1288	D/(02/1110 ut)
			India rail navigator		
20	RTIS(Real time information system)		Power supply module		Aventel Ltd., India
			Rail MSS Terminal		

SSE/ECS

JE/ECS

-		LOCO NO :- 39421				
S.N.	Equipment	PL No.		nt Serial No.		Make
1	Complete Shell Assembly with piping	29171064		68, 12/24	TF	RIDENT
	Side Buffer Assly Both Side Cab I	29130050	169, 10/24	192, 08/24	FASP	FASP
	Side Buffer Assly Both Side Cab II	23130030	19, 07/24	87, 11/24	FASP	FASP
4	CBC Cab I & II	29130037	1395, 10/24	1381, 09/24	ESCORTS	ESCORTS
5	Hand Brake		10/2	4- 1028	Rising E	ngg. Concern
6	Set of Secondry Helical Spring	29045034 29041041				GBD
7	Battery Boxes (both side)	29680013	38, 11/24	25, 11/24	BHARTIA	Bhartia Brigh
8	Traction Bar Bogie I		1822	2, 07/24		FASL
9	Traction Bar Bogie II		1827	7, 07/24		FASL
10	Centre Pivot Housing in Shell Bogie I side	20100057	189,	, 11/24		EVE
11	Centre Pivot Housing in Shell Bogie II side	29100057	192	, 11/24		EVE
12	Elastic Ring in Front in Shell Bogie I side		874	, 09/24	А	VADH
	Elastic Ring in Front in Shell Bogie II side	29100010	867	, 09/24	. А	VADH
	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	CG-77-12-24-L	T-1001/24, 2024		CG
15	Oil Cooling Radiator I		10/24, P:	1024RC2264	FINE AUT	OMOTIVE LTD
16	Oil Cooling Radiator II	29470031	11/24, P1124RC2400		FINE AUTOMOTIVE LTD	
	Main Compressor I with Motor		EXGS 923728, 10/24		ELGi	
18	Main Compressor II with Motor	29511008		3680, 10/24		ELGi
19	Transformer Oil Cooling Pump I			737, 06/24	FLO	W WELL
	Transformer Oil Cooling Pump II			741, 06/24		W WELL
21	Oil Cooling Blower OCB I			015, LHP1001602209		ELS PVT LTD
22	Oil Cooling Blower OCB II	29470043	12/24, PDS2412003, LHP1001601841			ELS PVT LTD
23	TM Blower I		12/24, ME/TMB/B-048/24			EN ENGG
	TM Blower II	29440075		TMB/B-057/24		EN ENGG
-	Machine Room Blower I			/F-24.11.18		O PVT LTD
	Machine Room Blower II	29440105		ΛF-24.11.20		O PVT LTD
-	Machine Room Scavenging Blower I			F25/D7129		ARAND PVT LTD
	Machine Room Scavenging Blower II	29440129		CF25/D7138		ARAND PVT LTD
	TM Scavenging Blower Motor I			T-24.10.130		O PVT LTD
	TM Scavenging Blower Motor II	29440117		ST-24.10.01		O PVT LTD
	Traction Convertor I), 12/24	GIRC	OTVILID
	Traction Convertor II			4, 5879		
	Vehicle Control Unit I			4, 3997		
	Vehicle Control Unit II	29741075		4, 3997	- N	/IEDHA
	Aux. Converter Box I (BUR 1)			4, 4016		
_	Aux. Converter Box 2 (BUR 2 + 3)			4, 4016		
	Axillary Control Cubical HB-1	29176645		1/2404/24	KAPATRO	ONICS PVT LTD
	Axillary Control Cubical HB-2	29176657	09/24, SLHE	320012409189		SALIT LTD
39	Complete Control Cubicle SB-1	29176669		310012407486		SALIT LTD
	Complete Control Cubicle SB-2	29178174		/505/02/2024		ELECTRICAL PVT
41	Filter Cubical (FB) (COMPLETE FILTER	29480140		24/G/0656/572	1	ECTIFIERS LTD
42	Driver Seats	29171131		, 222, 236, 243 1024020188		RUDEEP S ALLAINCE PVT I
	Hotel Load Converter I Hotel Load Converter II	29741087		1024020188		S ALLAINCE PVT I
45	Transformer oil steel pipes	29230044		nt pipes		
46	Hotel Load Contactor I		10/24, 1	1024020187		ALLAINCE PVT
47	Hotel Load Contactor II			.024020188		ALLAINCE PVT
48	Conservator Tank Breather Silica Gel	29731057	24-7859	9, 24-7857	YOGYA EN	NETRPRISES LTD
49 50	Ballast Assembly (only for WAG-9) Head Light	29170163 29611908	1040	0, 1028	F	NSAVE
11.7	ricau Ligiit	23011300		7,11591/11, 11586/50		RNATIONAL

NAME SHUMAN SHARM SSE/LAS

NAME Karan Singh JE/LAS/ NAMEANKIT UPPA JE/LAS/UF Issue No.: 05 Effective Date: July-2023

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA **ELECTRIC LOCO CHECK SHEET**

LOCO NO: 39421

CNBE Shed:

S. No.	ITEM TO BE CHECKED	Specified Value		served	Valu	ue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		OK		
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2. TM scavenging blower 1 & 2 & Oil Cooling unit.	OK		014		
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		OL		
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		(1)2		
1.5	Check proper Fitment of FB panel on its position.	OK		412		
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		0/2		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		912		
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		0/2		
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		ale		
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		OX		
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		0)	1	
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		U)		
1.13	Check proper fitment of Cow catcher.	OK		U.	12	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		U	14	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		U	JL.	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		0	K	
1.17	Check proper fitment of both battery box.	OK		O.	IL	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		C	ML	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK		(112	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAB	-1	C	AB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP	LP	ALP
		:35-60 mm	51		50	54
		Lateral Std- 45-50 mm			45	52
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S		R/S
	Drg No IB031-02002.	mm	FRONT	1091	,	1094
			REAR	10	-	1105
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/S		R/S
	Drg No-SK.DL-3430.		FRONT	648		649
			REAR	647		646
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S		R/S
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	118		117
			REAR	119		119
1.24	CBC Height: Range (1090, +15,-5)	1090, +15	FRONT:	1105		
	Drg No- IB031-02002.	-5 mm	REAR:			

(Signature of SSE/Elect. Loco)

NAME_SHUBHAM SHAPMA

DATE 31/12/24

(Signature of /JE/Elect Loco)

NAME Karan Singh DATE 3/12/24

Aukat Uplat (Signature of JE/UF)

NAME ANKIT UPPAL

DATE 7/12/24

Loco No. 39421

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-02/22	TACPL	29101104	102223	As per PO/IRS
REAR	SL-36	CRG	29101104	102224	conditions

2. Hydraulic Dampers (PL No.29040140) Make: KONI/KONI

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27746	27517	27751	27822	27355	27680
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	PLW24-322	PLW24-359	CNC24-2754	CNC24-2821	CNC24-2685	PLW24-518
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
FREE END	PLW24-318	PLW24-357	CNC24-2753	CNC24-2820	CNC24-2726	PLW24-521
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
Bull Gear No.	5791	5671	5705	5680	5539	5694
Bull Gear Make	GGAG	GGAG	GGAG	GGAG	GGAG	GGAG

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	FAG	NBC	FAG
End	PO NO. & dt	00091	00091	00091	00091	02311	00091
Free	MAKE	FAG	FAG	FAG	FAG	NBC	FAG
End	PO NO. & dt	00091	00091	00091	00091	02311	00091

6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	89 T	99 T	881 KN	87 T	797 KN	82 T
FREE END	793 KN	99 T	807 KN	92 T	993 KN	80 T

Loco No. 39421

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	SDI	SDI	KPE	SDI	KPE	KPE
GE Brg. PL 29030110	MAKE	NBC	NBC	NBC	NBC	FAG	NBC
FE Brg. PL 29030110	MAKE	NBC	NBC	NBC	NBC	FAG	NBC

9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KM	KM	KM	KM
BACKLASH (0.254 – 0.458mm)	0.340	0.260	0.300	0.280	0.280	0.270

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	15.55	17.32	16.71	15.42	15.85	16.13
LEFT SIDE	15.92	15.40	15.47	16.75	17.90	16.18

11. TRACTION MOTOR: (PL No.29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	TMS		PLW-3086
2	TMS		PLW-3089
3	TMS		PLW-3053
4	TMS		PLW-3060
5	TMS		PLW-3018
6	TMS		PLW-3092

Socie Sho

TOP 13 COSTLIEST ITEMS OF WAP-7 LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29741087	2X500KVA IGBT Based Hotel Load Converter to CLW Specn. no. CLW/ES/3/IGBT/0490 aLT.D (REV.1) issued on December,2017	As per clause no. 3.1.6 of CLW SPECN. NO. CLW/ES/3/IGBT/0490 ALT.D REV.1 ISSUED ON DEC-2017. [60 months after commissioning or 72 months from date of supply whichever earlier]
3	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
4	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
5	29600418	SET OF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018.	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

6	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.
		COMPLETE ELLTED CURIOLE ALCANO MUTULALI	
7	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
8	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.

9	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
10	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
13	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



भारत सरकार **GOVERNMENT OF INDIA**

रेल मंत्राल्य

MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना

PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244 फोन/ Phone: 0175- 2396422

मोबाईल: 9779242310 पटियाला, 147003, भारत PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

No. PLW/M/ECS/Tech/Kavach

Date: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Kanpur.

Email: elscnba@gmail.com

Sub:- Fitment of KAVACH in three Phase Electric Loco. No. 39421 WAP-7.

Ref:- (i). Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii).Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 39421 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/CNB/NCR on 18.01.2025. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed Date: 2025.02.26 13:30:34 +05'30'

(निशांत बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/NCR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

Loco No. 39421

SN	PL No.	Description of item	Qty.
4	20163241	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 nos
2	29611994	FEMALE TEE 3/8" BSPP – BRASS	06 nos
	23011334	HEX PLUG -3/8" BSPT – BRASS	02 nos
		FEMALE TEE 1/2" BSPP – BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos
	•	RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos
		HEX PLUG – 1/2" BSPT – BRASS	04 nos
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos
3	29170114	Copper Tube OD 9.52mm (3/8") X 1.245 Mm W.T X 6 Mtr	1.2Mtr

AWM/ABS & LFS

SSE/G/ABS

SN	PL No:	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.	-	WAGO bracket fitted in Machine room at back side of SB-1.	01 ņo.
7.	-	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	-	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	_	DIN Rail fitted inside the driver desk (LP Side)	02 nos.





Annexure-C

SN	PLNo.	Description of item	Quantity :
1.	42310301	Flexible conduit size 25mm ² provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	_	Harness provided from KAVACH SB to SB-1	07 wires
5.	-	Harness provided from KAVACH SB to SB-2	05 wires
6.	-	Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	-	Harness provided from KAVACH SB to CAB-1	៨ ម wires
8.	-	Harness provided from KAVACH SB to CAB-2	16 wires

AWWECS

SSEIGIECS