

# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला Patiala Locomotive Works, Patiala



# LOCO TESTING & DISPATCH REPORT OF IGBT BASED 3 PHASE ELECTRIC LOCOMOTIVE

LOCO NO.: 39425

TYPE: WAP-7

RAILWAY SHED: ECOR/WATE

PROPULSION SYSTEM: ALSTOM

HOTEL LOAD: MEDHA

**DATE OF DISPATCH:** 28.01.2025

लोको निर्माण रिकार्ड



## पटियाला रेलइंजिन कारख़ाना, पटियाला Patiala Locomotive Works, Patiala

**LOCO NO. - 39425** 

**RAILWAY/SHED: ECOR/WATE** 

DOD: Jan-2025

#### **INDEX**

SN	PARA	ACTIVITIES	PAGE NO.			
	Testing & Commissioning (ECS)					
1.	1.0	Continuity Test of the cables				
	1.1	Continuity Test of Traction Circuit Cables				
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4			
	1.3	Continuity Test of Battery Circuit Cables				
	1.4	Continuity Test of Screened Control Circuit Cables				
2.	2.0	Low Tension test				
	2.1	Measurement of resistor in OHMS ( $\Omega$ )	5-6			
	2.2	Check Points	3-0			
	2.3	Low Tension Test Battery Circuits (without control electronics)				
3	3.0	Downloading of Software				
	3.1	Check Points				
	3.2	Download Software	7-10			
	3.3	Analogue Signal Checking				
	3.4	Functional test in simulation mode				
4	4.0	Sensor test & convertor test				
	4.1	Test wiring Transformer Circuits – Polarity Test				
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)				
	4.3	Primary Voltage Transformer				
	4.4	Minimum voltage relay (Pos. 86)	11 10			
	4.5	Maximum current relay (Pos. 78)	11-16			
	4.6	Test current sensors				
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)				
	4.8	Verification of Converter Protection Circuits (Hardware limits)				
	4.9	Sequence of BUR contactors				
5.	5.0	Commissioning with High Voltage				
	5.1	Check List				
	5.2	Safety test main circuit breaker				
	5.3	Auxiliary Converter Commissioning				
	5.3.1	Running test of 3 ph. auxiliary equipments				
	5.3.2	Performance of Auxiliary Converters				
	5.3.3	Performance of BURs when one BUR goes out	16-25			
	5.4	Auxiliary circuit 415/110				
	5.5	Hotel Load Circuit				
	5.6	Traction Converter Commissioning				
	5.7	Test protective shutdown SR				
	5.8 5.0	Test Harmonic Filter  Test important components of the leasuretive				
6.	5.9 6.0	Test important components of the locomotive  Running Trial of the locomotive	25-26			
7.	7.0	Final Check List to be verified at the time of Loco dispatch	25-26			
8.	1-6	Annexure HLC	28-33			
9.	1-10	Pneumatic Test Parameters	34-37			
10.	, 10	Loco Check Sheet(LAS)	38			
11.	_	Component History (LAS,ECS,ABS)	39-41			
12.	-	Component History & Testing Parameter (Bogie Shop)	42-43			
13	-	Warranty Conditions as per Tenders	44-46			
		,				

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39425\_ALSTOM

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	012	100 ΜΩ	95°ne
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	Goona
Filter Cubicle	Earthing Choke	OR	100 ΜΩ	700ma.
Earthing Choke	Earth Return Brushes	OK	100 ΜΩ	800m2
Transformer	Power Converter 1	OK	100 ΜΩ	800ma
Transformer	Power Converter 2	OK	100 ΜΩ	Zooma
Power Converter 1.	TM1, TM2, TM3	OR	100 ΜΩ	Doomi
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	70000
Earth	Power Converter 1	OK.	100 ΜΩ	650m
Earth	Power Converter 2	OK	100 ΜΩ	700ma

#### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39425.

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OIL	100 M $\Omega$	800 WV
Transformer	BUR2	OK	100 ΜΩ	700 MM
Transformer	BUR3	OK	100 MΩ	GOO MY
Earth	BUR1	ØR.	100 MΩ	500 mm
Earth	BUR2 .	OK	100 MΩ	700 m
Earth	BUR3	011	100 MΩ	800 MM
BUR1	HB1	OK	100 M $\Omega$	600 m/
BUR2	HB2	012	100 M $\Omega$	Ferma
HB1	HB2	OK	100 MΩ	FOD m
HB1	TM Blower 1	014	100 ΜΩ	gooms
HB1	TM Scavenge Blower 1	OIL	100 MΩ	600mn
HB1	Oil Cooling Unit 1	OK	100 MΩ	FOOM
HB1	Compressor 1	OK	100 M <b>Ω</b>	600 ma
HB1	TFP Oil Pump 1	OLL	100 M $\Omega$	800 m
HB1	Converter Coolant Pump 1	OK	100 ΜΩ	600 m
HB1	MR Blower 1	OB	100 M <b>Ω</b>	600 m/2
HB1	MR Scavenge Blower 1	ØK	100 MΩ	600 m
HB1	Cab1	OK	100 MΩ	500 MM
Cab1	Cab Heater 1	OK	100 MΩ	800 m/
HB2	TM Blower 2	DIL	100 MΩ	900 000
HB2	TM Scavenge Blower 2 ^	OLL	100 M $\Omega$	600 m
HB2	Oil Cooling Unit 2	OR	100 MΩ	FOOM
HB2	Compressor 2	OK	100 MΩ	Rooma
HB2	TFP Oil Pump 2	OK	100 ΜΩ	600mm
HB2	Converter Coolant Pump 2	OR	100 MΩ	700 m
HB2	MR Blower 2	OK	100 ΜΩ	800m
HB2	MR Scavenge Blower 2	OK	100 ΜΩ	600 MM
HB2	Cab2	DK	100 MΩ	HOO M
Cab2	Cab Heater 2	OZ	100 ΜΩ	900m

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39485

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	O.L
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	Ok
Battery (Wire no. 2052)	Connector 50.X7-2		-
SB2 (Wire no 2050)	Connector 50.X7-3		

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value 6MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured .
2050	>50 MΩ	Value 6OMΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

#### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	cok
Memotel circuit of cab1 &2	10A	ak
Memotel speed sensor	10A	J GR
Primary voltage detection	01A, 12A	OK OK
Brake controller cab-1 & 2	06F, 06G	OK OK

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomctive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 34495

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	GK
Terminal fault indication cab-1 & 2	09F	nk .
Brake pipe pressure actual BE electric	06H	o k
Primary current sensors	12B, 12F	ρK
Harmonic filter current sensors	12B, 12F	ok
Auxiliary current sensors	12B, 12F	OK:
Oil circuit transformer bogie 1	12E, 12l	0K
Magnetization current	12C, 12G	Ole
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	o k
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	Gle
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	0/8
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	o k
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	ak
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	Glc
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	<u> </u>
$10$ K $\Omega$ ± ± $10$ %)		010
UIC line	13B	
Connection FLG1-Box TB	13A	ok

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

### Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

#### 2.0 Low Tension test

2.1 Measurement of resistor in OHMS  $(\Omega)$ 

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K <b>Ω</b> ± 10%	3917
Resister to maximum current relay.	1 <b>Ω</b> ± 10%	12
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3:31
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.27,
Between wire 6 & 7	Ό.2 Ω	0.21
Between wire 5 & 7	0.4 Ω	0.45
For train bus, line U13A to earthing.	10 k <b>Ω</b> ± 10%	10,0KZ
For train bus, line U13B to earthing.	10 k <b>Ω</b> ± 10%	99912
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	3001701
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.281>
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.291
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.301
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	<b>2.2 kΩ</b> ± 10%	2.2KZ
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	2.7K2.
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3.9Ka
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.8102
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	390JL
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 kΩ± 10%	MA
Resistance for headlight dimmer; Pos. 332.3.	10 <b>Ω</b> ± 10%	102

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	cheered or
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	checked ok

#### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	weeked ok
Test 48V supply	Sheet 04F & sheets of group 09	
Test traction control	Sheets of Group 08.	Ok
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	ole
Test earth fault detection battery circuit by making artificial earth fault	Sheet 04C	
to test the earth fault detection		0.18
Test control Pneumatic devices	Sheets of Group 06	o k
Test lighting control	Sheets of Group 07	ale
Pretest speedometer	Sheets of Group 10	o k
Pretest vigilance control and fire system	Sheets of Group 11	O K
Power supply train bus	Sheets of Group 13	ok

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3949 IJ

3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Ves
Check that all the fibre optic cables are correctly connected to the bus stations.	Ves
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	403

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

<b>P. C. C.</b>	
Traction converter-1 software version:	1 09
Traction converter-2 software version:	1.09
Auxiliary converter-1 software version:	1.04
Auxiliary converter-2 software version:	1.04
Auxiliary converter-3 software version:	1.04
Vehicle control unit -1 software version:	3.0
Vehicle control unit -2 software version:	2.0

#### 3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	o K
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	ak
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	10.1.
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	120/
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	259.

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39485

Type of Locomotive: WAP-7/WAG-9HC

Page : 8 of 27

	EX CI ANCED OIGI		
TE/BE at 'BE maximal'	FLG1; AMSB_0101-	Between 99% and 101%	1
position from both cab	XangTrans	Between 99% and 101%	1001,
	FLG2; AMSB_0101- XangTrans		
	FLG1; AMSB 0101-		
TE/BE at 'BE Minimal'	XangTrans	Between 20% and 25%	25),
position from both cab	FLG2; AMSB 0101-		200
`	XangTrans		
TE/BE at '1/3' position	HBB1; AMS_0101-		
in TE and BE mode in	LT/BDEM>1/3	Between 42 and 44%	44-1-
both cab.	HBB2; AMS_0101-		
	LT/BDEM>1/3		
TE/BE at '1/3' position	HBB1; AMS 0101-		
in TE and BE mode in	LT/BDEM>2/3	Between 72 and 74%	741.
both cab.	HBB2; AMS_0101-		
	LT/BDEM>2/3		
Both temperature	SLG1; AMSB 0106-	Between 10% to 11.7% depending	, 00
sensor of TM1	XAtmp1Mot	upon ambient temperature	16°C.
Jenson or mil		0°C to 40°C	
÷			
		Between 10% to 11.7% depending	1700
Both temperature	SLG1; AMSB 0106-	upon ambient temperature 0°C to 40°C	17
sensor of TM2	Xatmp2Mot	40 C	
, dis-			
		Between 10% to 11.7% depending	· (3)
Both temperature	SLG1; AMSB 0106-	upon ambient temperature 0°C to 40°C	16.50
sensor of TM3	Xatmp3Mot	40 C	
			·
		Between 10% to 11.7% depending	. 0
Both temperature	SLG2; AMSB 0106-	upon ambient temperature 0°C to	16°C
sensor of TM4	XAtmp1Mot	40°C	
		_	
		Between 10% to 11.7% depending	.3 -
Both temperature	SICO ANTED OLOG	upon ambient temperature 0°C to	
sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	40°C	•
School of 1910	Aumpziviot		
Both temperature	SLG2; AMSB 0106-	Between 10% to 11.7% depending	17°C
•	Xatmp3Mot	upon ambient temperature 0°C	1/
	*	to 40°C	
	A		

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39425

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

#### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through	VCB must open.	checled
emergency stop switch 244	Panto must lower.	ok
Shut Down through cab activation	VCB must open.	chechol
switch to OFF position	Panto must lower.	checked
Converter and filter contactor	FB contactor 8.41 is closed.	
operation with both Power	By moving reverser handle:	
Converters during Start Up.	<ul> <li>Converter pre-charging contactor</li> </ul>	
·	12.3 must close after few seconds.	-111
	• Converter contactor 12.4 must close.	charked ole
	Converter re-charging contactor	o Ole
	12.3 must opens.	
	By increasing TE/BE throttle:	
	• FB contactor 8.41 must open.	·
	FB contactor 8.2 must close.	
	• FB contactor 8.1 must close.	
	Bring TE/BE to O	
operation with both Power	,	
Converters during Shut Down.	VCB must open.  Ponto must become	1-101
	<ul><li>Panto must lower.</li><li>Converter contactor 12.4 must open.</li></ul>	checked.
	• FB contactor 8.1 must open.	OK
	• FB contactors 8.41 must close.	p
,	• FB contactor 8.2 must remain closed.	
	- 15 contactor of 2 mast remain closed.	
A.		ļ

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39485

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

Contactor filter adaptation by	Isolate any one bogie through bogie	1
isolating any bogie	cut out switch. Wait for self-test of	
Set of the second secon	the loco.	1.
	• Check that FB contactor 8.1 is open.	
	• Check that FB contactor 8.2 is open.	oneckes
·	After raising panto, closing VCB, and setting TE/BE	ok
·	• FB contactor 8.1 closes.	
	• FB contactor 8.2 remains open.	_
Test earth fault detection battery	By connecting wire 2050 to	ก
circuit positive & negative	earth, create earth fault	
	negative potential.	
	message for earth fault	
	By connecting wire 2095	checkel
	to earth, create earth	ok .
	fault positive potential.	ļ
	message for earth fault	
Test fire system. Create a smoke in	When smoke sensor-1 gets	7
the machine room near the FDU.	activated then	
Watch for activation of alarm.	Alarm triggers and fault	
	message priority 2	
	appears on screen.	
	When both smoke sensor	checkel
	1+2 gets activated then	checkel
	A fault message priority	J ~ K
	1 appears on screen and	
	lamp LSF1 glow.	i
	Start/Running interlock occurs and	ľ
	TE/BE becomes to 0.	4
Time, date & loco number	Ensure correct date time and Loco	
	number	lok
	1	[ '

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39425

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

#### 4.0 Sensor Test and Converter Test

#### 4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.0578	SV.
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.0500	٥٧
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.04	<sup>D</sup> K
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0510	٥٤
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.94P 5-64RINS	<sup>©</sup> v
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.10 VP 6.44 VEMS1	a

#### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V <sub>p</sub> , 41.5V <sub>RMS</sub> and opposite polarity.	5864 41.50 RM	00
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15.518	S <sub>C</sub>

11. overs)

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39425

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

#### 4.3 Primary Voltage Transformer

Apply  $250V_{\rm eff}/350V_{\rm p}$  by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25kV	a50%
SLG2_G 87-XUPrim	25 kV	250%	85KV	250 Y.

Decrease the supply voltage below  $140 \, V_{RMS}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim .	17kV	170%	17 KV	170 Y
SLG2_G 87-XUPrim	17 kV	170%	17 1/4	120 X

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV *	300%	302 KV	Zenx
SLG2_G 87-XUPrim	30 kV	300%	BOKY	2008

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 3 92495

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

#### 4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Tanctionality tost.	. 1
Minimum voltage relay (Pos. 86) must be adjus	
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V <sub>RMS</sub> through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	∖(Yes/No)
Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.	L(Yes/No)
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	
working	•
Test Under Voltage Protection	
A	102 101 1
Activate the cab in cooling mode; Raise panto;	L(Yes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no. 1501 & 1502; Decrease the supply voltage below 140V <sub>RMS</sub> ± 4V;	L(Yes/No)
Fine tune the minimum voltage relay so that VCB opens.	
The take the training of that the opens.	

#### 4.5 Maximum current relay (Pos. 78)

display.

Disconnect wire 1521 & 1522 of primary current trar &1522 (including the resistor at Pos. 6.11); Put loco in sign contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the omaximum current relay Pos. 78 for correct over current v	mulation for driving mode; Open $R_3 - R_4$ open wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	L(Yes/No)
Keep contact $R_3$ – $R_4$ of 136.3 closed; Close VCB; Tune th /9.9 $A_p$ at the open wire 1521;	e resistor 78.1 for the current of 7.0A <sub>RMS</sub>
VCB opens with Priority 1 fault message on	∠(Yés/No)

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39425

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

#### 4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)	<del>-</del> -	298 MB
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		336ng
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
:	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)	_	345mil
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		1252mm

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 394 35

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

This test is to be done by the commissioning engineer of the firm if required.

#### 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown	Measured limit
· · · · · · · · · · · · · · · · · · ·	should take place	
Current sensors (Pos 18.2/1, 18.2/2,	increase the current quickly in	For 18.2/1= \gamma
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 18.2/2=
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=
for Power Converter 1	with priority 1 fault for each	For 18.4/4=
	sensor.	For 18.5/1= \p \cho \k
	· ·	For 18.5/2=
		For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in	For 18.2/1=
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 8.2/2=
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=
for Power Converter 2	with priority 1 fault for each	For 18.4/4=
	sensor.	For 18.5/1= 6 0k
		For 18.5/2=
		For 18.5/3=
	A.	
Fibre optic failure In Power	Remove one of the orange	,
Converter1	fibre optic plugs on traction	
	converter. VCB should trip	<i>0 </i> <
w <sup>14</sup>		
Fibre optic failure In Power	Remove one of the orange	
Converter2	fibre optic plugs on traction	
	converter. VCB should trip	ok

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

L

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

#### Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	close	olen	clare	de	clase	Nen	(20 20	Jose	den
BUR1 off	Case	cler	Combe	classo	den	case	Den	Den	1 Dane
BUR2 off	open	ales	(AD)SE	POATS	CLAN	10280	coler	allen	(anse
BUR3 off	open	10000	Den	1.00%	10030	(10)	Sen	den	Clore

#### 5.0 Commissioning with High Voltage

#### 5.1 Check List

Yes/No
Wes .
YEI .
Va
1/20
108
1
1/3
163
100
1 /03
Kes .
183
163
103

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3 9495

Type of Locomotive: WAP-7/WAG-9HC

Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	checkel ok
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	eneckes Ok
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	checked
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	cheeked
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in <b>O</b> position.	VCB must open. Panto must lower.	Checkes 01x
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL- <b>key in O</b> position.	VCB must open. Panto must lower.	checked ok
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	checked o
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		checked

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39435

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

#### 5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	10.0	11.5
Oil pump transformer 2	9.8 amps	9.2	9.7
Coolant pump converter 1	19.6 amps	59	13.3
Coolant pump converter 2	19.6 amps	5.5	120
Oil cooling blower unit 1	40.0 amps	42.0	115.0
Oil cooling blower unit 2	40.0 amps	41.8	120.0
Traction motor blower 1	34.0 amps	32,0	P-8-0
Traction motor blower 2	34.0 amps	34.0	8-9.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.6	13.5
Sc. Blower to Traction motor blower 1	6.0 amps	4.5	14.2
Compressor 1	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	21.3	48.5
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	23.0	46.0

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39425

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

#### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10014	Yey
BURI 7303 XUUZI	DC link voltage of BUR1	60% (10%=100V)	636 V	49
BUR1 7303 XUIZ1.	DC link current of BUR1	0% (10%=50A)	1 Am	44

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10025	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	6374	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7000)	Yoy
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Any	163
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	(2 Bry)	Ye,
BUR2 7303 –XUUB	Voltage battery of BUR2	110%(10%=10V)	1100	Per

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

commissioning engi	<del>, '                                   </del>			
Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10040	709
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	6374	Yey
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	22 Amp	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12 Am)	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	710~	)Ši

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39425

Type of Locomotive: WAP-7/WAG-9HC

Page: 20 of 27

#### 5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

#### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.7	8,2
Machine room blower 2	15.0 amps*	4.8	8.3
Sc. Blower to MR blower 1	1.3 amps	1.2	4.7
Sc. Blower to MR blower 2	1.3 amps	2.8	8.3
Ventilator cab heater 1	1.1 amps	1,3	1.9
Ventilator cab heater 2	1.1 amps	1.3	1.9
Cab heater 1	4.8 amps	4.6	4.8
Cab heater 2	4.8 amps	4.6	4.8

<sup>\*</sup> For indigenous MR blowers.

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>

IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3 9495

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

#### 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### **5.6 Traction Converter Commissioning**

#### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheekedok
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked old
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked ok
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkedok
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok
Pulsing of drive converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cneckedok

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

#### For Converter 2

Test Function   Results desired in sequence   Result obtained					
Test Function	Results desired in sequence	Nesult obtained			
Measurement of charging and pre-charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok			
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked-ok			
1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	enecked ok			
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	checked or			
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charmed ox			
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked ok			
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ox			

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
	rosans assired in sequence	The same of the sa
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on DDU	checked ok
	appears	)
	Disturbance in Converter 1	
Measurement of	Start up the loco with both the	
protective shutdown	converter. Raise panto. Close VCB.	
by Converter 2	Move Reverser handle to forward or	
electronics.	reverse. Remove one of the orange	
	fibre optic feedback cable from	
·	converter 2. Check that converter 2	checkel or
	electronics produces a protective shut	CHECKEST OK
·	down.	r en
	<ul> <li>VCB goes off</li> </ul>	\
	Priority 1 fault mesg. on diagnostic	
	display appears	
·	Disturbance in Converter 2	J

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence Result obtained
currents	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

**	<ul> <li>FB contactor 8.2 must close.</li> <li>FB contactor 8.1 must close</li> <li>Check the filter current in diagnostic laptop</li> <li>Bring the TE/BE throttle to O</li> <li>Switch off the VCB</li> <li>FB contactor 8.1 must open.</li> <li>FB discharging contactor 8.41 must close</li> <li>Check the filter current in diagnostic laptop</li> </ul>	checked ok
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit	enecked ok
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	ok

#### 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark		
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	enecked ok		
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	,		
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	Mecked on		
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	meckedor		
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	checkedok		

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	checkedok
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Chocked ok
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	checked ox
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	checkedok
Illuminated Push button	All illuminated push buttons should glow during the operation	checked of
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m <sup>3</sup> /minute	Cab 1 LHS! Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### 6.0 Running Trial of the locomotive

SN	Description of the items to Action which should take place be seen during trail run		
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Checked
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	CNEKOS Ok
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	checkes
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm<sup>2</sup>, by pressing BPCS again.</li> </ul>	cnecked
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	checke

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	9
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .	
	locomotive	For 60 seconds do not press vigilance foot switch or	
		sanding foots switch or TE/BE throttle or BPVG	,
		switch then	
	·	Buzzer should start buzzing.	
		LSVW should glow continuously.	
		Do not acknowledge the alarm through BPVG or	
		vigilance foot switch further for 8 seconds then:-	Mech
		Emergency brake should be applied automatically.	ok
		VCB should be switched off.	
		Resetting of this penalty brake is possible only after	
		32 seconds by bringing TE/BE throttle to 0 and	
		acknowledge BPVR and press & release vigilance	
		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).	Checke
	·	With park brake in applied condition.	-NA
		• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	
		• With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).	Check
•	,	• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).	p ok
8.	Check traction interlock	Switch of the brake electronics. The	7
	check traction interjock	Tractive /Braking effort should ramp down, VCB	Check
		should open and BP reduces rapidly.	OK
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	9000
	braking.	should start reducing.	DOK
10.	Check for BUR	In the event of failure of one BUR, rest of the two	7
	redundancy test at	BURs can take the load of all the auxiliaries. For this	
	ventilation level 1 & 3 of	switch off one BUR.	checke
	loco operation	Auxiliaries should be catered by rest of two BURs.	V 04
		Switch off the 2 BURs; loco should trip in this case.	)
11.	Check the power	Create disturbance in power converter by switching	$\overline{\eta}$
	converter 🚧	off the electronics. VCB should open and converter	Chron
	isolation test	should get isolated and traction is possible with	OK
		another power converter.	<i>\\</i>

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39495

Type of Locomotive: WAP-7/WAG-9HC

Page : 27 of 27

## 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	ok	ok_	
2	Marker Red	ols_	nok	A Company
3	Marker White	0k	O/c	
4	Cab Lights	ols	ok	
5	Dr Spot Light	0/5	Ok	
-6	Asst Dr Spot Light	ok	OK.	mecked working o
7	Flasher Light	01<	O/s	•
8	Instrument Lights	o le	ak	
9	Corridor Light	ok *	ok	
10	Cab Fans	0/2	0k	
11	Cab Heater/Blowers	0/5	ok ok	
12	All Cab Signal Lamps Panel 'A'	V/F	018	
		ok	Op.	

#### PATIALA LOCOMOTIVE WORKS, PATIALA

## Testing & Commissioning Format for 2x500KVA IGBT based Hotel Load Converter for 3-phase Electric Locomotives

Locomotive No.: 39425	Page: 1 of 6
Type of Locomotive: WAP7	
Make of Hotel Load Converter: MEDHA	_
Details of Equipment: -	

Equipment	SI. No	Equipment	SI. No
HLC1	3343	IV Coupler CAB1 ALP	
HLC2	3344	IV Coupler CAB1 LP	
Converter-1	3343	IV Coupler CAB2 ALP	
Converter-2	3344	IV Coupler CAB2 LP	
UIC Coupler for Hotel Load Converter (353.3/2 CAB2)		UIC Coupler for Hotel Load Converter (353.3/3 CAB1)	

#### 1. Polarity test of Hotel Load Winding:

Apply 198 /140 to the primary winding of the transformer (at 1U; wire no. 2 at surge arrestor and at 1V; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformer.

Output Winding Nos.	Description of winding	Prescribed Output Voltage &Polarity with input supply	Measured Output	Measured Polarity
2UH1 & 2VH1	For Hotel load between cable 91- 94	5.9 ,4.2 and same polarity	øK	Ols
2UH2 & 2VH2	For Hotel load between cable 91A- 94A	5.9 ,4.2 and same polarity	OK	0k

dis

Page: 2 of 6

#### 2. Visual Inspection:

#### Fitment of Units and Earthing to Sub-assemblies

Verify the following Equipments Fitment and grounding cables are connected to Locomotive body.

SI. No.	Equipment Name	Unit Fitment (Yes/No)	Provision of Earthing (Yes/No)
1	HLC1	yes	jes.
2	HLC2	yes	yes
3	Output Contactor unit1 HLC1	yes	yes
4	Output Contactor unit2 HLC2	yes	yes
5	IV Coupler CAB1 ALP	yes	yes
6	IV Coupler CAB1 LP	yes	yes .
7	IV Coupler CAB2 ALP	yes	yes .
8	IV Coupler CAB2 LP	yes	yes
9	UIC Coupler for Hotel Load Converter (353.3/3 CAB1)	her	yes
10	UIC Coupler for Hotel Load Converter (353.3/2 CAB2)	Hes	Jes
11	CT (LEM sensor) under HLC1	yes	yes
12	CT(LEM sensor) under HLC2	yes	Yes

Page: 3 of 6

## 30

## 3. Cable Routing and Laying

## 3.1 Control cable routing and layout

Verify the connections, tightness and cable routing of the following Control cable.

SI. No.	Cables Details	Performed (Yes/No)
1	From Wago SB1 to HLC1 are connected as per wiring format	yes
2	From SB1 to UIC Coupler Hotel Load Converter (353.3/3 CAB2) through Bayonet connector XK22HL:01(22pin)is connected as per wiring format	yes
3	From SB1 wago(XF22S:01/53) to IV coupler CAB1 ALP are connected as per wiring format	yes
4	From SB1 wago(XF22S:01/54) to IV coupler CAB1 LP are connected as per wiring format	yes
5	From Wago SB2 to HLC2 are connected as per wiring format	yes.
6	From SB2 to UIC Coupler Hotel Load Converter (353.3/2 CAB2) through Bayonet connector XK77HL:02 (22 pin) is connected as per wiring format	yes
7	From SB2 wago (XF77S:01/53) to IV coupler CAB2 ALP are connected as per wiring format	yes
8	From SB2 wago (XF77S:01/54) to IV coupler CAB2 LP are connected as per wiring format	yes:
9	From HLC1 to Contactor unit 1 through 4 Core Cable are connected as per wiring format	yes
10	From HLC2 to Contactor unit 2 through 4 Core Cable are connected as per wiring format	Aed
11	From SB to VCU are connected as per wiring format	Yes .
12	From CT (HLC1 LEM sensor) to SR1 are connected as per wiring format	Aer .
13	From CT (HLC2 LEM sensor) to SR2 are connected as per wiring format	yes

Page: 4 of 6

## 3.2 Power cable routing and layout

Verify the connections, tightness and cable routing of the following Power cable.

SI. No.	Cables Details	Performed Yes/No)
1	From Transformer to HLC1(2UH1 & 2VH1) are connected as per wiring format	yes
2	From Transformer to HLC2(2UH2 &2VH2) are connected as per wiring format	Jes
3	From HLC1 to Output Contactor unit1 are connected as per wiring format	Hos
4	From HLC 2 to Output Contactor unit 2 are connected as per wiring format	yes
5	From Output Contactor unit 1 to IV Coupler CAB1 ALP and IV Coupler CAB2ALP through Junction box are connected as per wiring format	yes
6	From Output Contactor unit 2 to IV Coupler CAB2 LP and IV Coupler CAB1 LP through Junction box are connected as per wiring format	Yes

#### 4. Continuity test:

Check the continuity test for the External connections made to Equipments.

Note: This continuity test should be done before power ON the Locomotive Battery.

#### 4.1 Control cable continuity

SI. No.	Cables Details	Performed (Yes/No)
1	From Wago SB1 to HLC1 are connected as per wiring format	Yes
2	From SB1 to UIC Coupler Hotel Load Converter (353.3/3 CAB2) through Bayonet connector XK22HL:01(22pin)is connected as per wiring format	yes
3	From SB1 wago(XF22S:01/53) to IV coupler CAB1 ALP are connected as per wiring format	Hes
4	From SB1 wago(XF22S:01/54) to IV coupler CAB1 LP are connected as per wiring format	her
5	From Wago SB2 to HLC2 are connected as per wiring format	Her
6	From SB2 to UIC Coupler Hotel Load Converter (353.3/2 CAB2) through Bayonet connector XK77HL:02(22pin) is connected as per wiring format	yes
7	From SB2 wago (XF77S:01/53) to IV coupler CAB2 ALP are connected as per wiring format	yes
8	From SB2 wago(XF77S:01/54) to IV coupler CAB2 LP are connected as per wiring format	yes
. 9	From HLC1 to Contactor unit 1 through 4 Core Cable are connected as per wiring format	Her
10	From HLC2 to Contactor unit 2 through 4 Core Cable are connected as per wiring format	yes
11	From SB to VCU are connected as per wiring format	ya.
12	From HLC1 LEM sensor to SR1 are connected as per wiring format	Qiei .
13	From HLC2 LEM sensor to SR2 are connected as per wiring format	yes

Page: 5 of 6

#### 4.2 Power cable continuity

These cables continuity should be checked before mounting of converter in the locomotive.

SI. No.	Cables Details	Performed (Yes/No)
1	From Transformer to HLC1(2UH1 & 2VH1) are connected as per wiring format	Yes
2	From Transformer to HLC2(2UH2 &2VH2) are connected as per wiring format	yes
3	From HLC1 to Output Contactor unit1 are connected as per wiring format	her
4	From HLC 2 to Output Contactor unit 2 are connected as per wiring format	Aer
5	From Output Contactor unit 1 to IV Coupler CAB1 ALP and IV Coupler CAB2ALP through Junction box are connected as per wiring format	yes
6	From Output Contactor unit 2 to IV Coupler CAB1 LP and IV Coupler CAB2 LP through Junction box are connected as per wiring format	yes

#### 5. Battery power ON

#### Tests Supply Voltages

Remove all Control cable connectors (Analog and Digital Input/output connectors) from HLC1, HLC2. While Switch ON Battery supply observe is there any MCBs tripping. Wait for one or two minutes after switching ON Circuit breaker(MCB1) and observe for any overheating symptoms like smell, smoke, temperature etc. from the wire bunches. If any such symptoms are noticed, there might be a short circuit in the wire bunch. Check up once again continuity wherever suspected. After that check the Voltage levels at all equipments connectors as mentioned below.

Test Details	Acceptance	Observations
Voltage Level at HLC1:  I. Between wago terminal XF22S:03/54 and XF22S:03/58  II. Between wago terminal XF22S:03/53 and XF22S:03/58	~110VDC	ok .
Voltage Level at HLC2: I. Between wago terminal XF77S:03/52 and XF77S:03/56 II. Between wago terminal XF77S:03/51 and XF77S:03/56	~110VDC	ok

**Note:** After Above tests switch off the Power and restore all removed connectors and once again switch ON the 110 V Supply and ensure that no MCB tripping due to abnormality.

Page: 6 of 6

#### 6. Converter operation (ON/OFF) test

Power supply is directly available to the Hotel Load Converter via Hotel Load Converter winding (2UH1-2VH1) and (2UH2-2VH2). As soon as BLDJ is closed power will be available to the Hotel Load Converter. Connect the test jig of Hotel Load Converter to the UIC and IV Coupler. Charge the locomotive and switch on the BLHO, LSHO indication should glow. Hotel Load Converter screen will show message "waiting for ON command". One by one Hotel Load Converter can be switched on by test jig. Finally both the Hotel Load Converter should be turned out simultaneously. Observe the flow of air from the air duct, this will ensure that Hotel Load Converter is ON. Both the Hotel Load Converters are ON, then voltage and frequency should be measured as per the table below:-

Converters should run without any irregularities.

Hotel Load Converter 1					
	Output Voltage		Output Frequency		
U-V	V-W	U-W	(Hz)		
ok	Ok	Ok	0 k		

Hotel Load Converter 2				
	Output Voltage		Output Frequency	
U-V	V-W	U-W	(Hz)	
O.K	o.k	Ok	Ok	

#### 7. Earth Fault Test

- **7.1 Input Earth Fault:**-Ground the input terminal of the Hotel Load Converter using a proper resistance and then turn on the Hotel Load Converter. The converter should trip with the message "Input earth fault".
- **7.2 Output Earth Fault:-**Ground the output terminal of the Hotel Load Converter using a proper resistance and then turn on the Hotel Load Converter. The converter should trip with the message "Output earth fault".

Note: These to be done for the both the converters (HLC1 and HLC2) separately.

Page: 33/A

33 A

## Status of RDSO modifications

LOCO NO: 39425

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	6k/Not 0k
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Ok/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	6k/Not 0k
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Øk/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Øk/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	6k/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Øk/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Øk/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Øk/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Øk/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives. *	Øk/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Ok/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Øk/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Øk/Not Ok
21	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09.19	Implementation of push pull scheme.	Ok/Not Ok

Signature of JE/SSE/ECS

### Loco No.39425

# PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: FAIVELEY			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.	For Faiveley	60 sec. (Max.)	58 sec.
	Record pressure Build up time (8.0 kg/cm2)	For Knorr	120 sec. (Max.)	
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.4 kg/cm2
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.6
		no. F60.812 Version 2	kg/cm2, closes	
4.5			5.5±0.15 kg/cm2	5.5
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	Solating Cocks & KABA co		-
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	Ok
4.7	Class Barr 2 isolating Cook		Rises.	OI:
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	Ok
1.0	Open Pan -2 isolating Cock		Panto-2 Rises 06 to 10 seconds	9 sec
1.8	Record Pantograph Rise time  Record Pantograph Lowering Time		06 to 10 seconds	8 sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.5 kg/cm2
1.10	Parito ilile dii leakage		Min.	in 5 min.
1.11	High Reach Panto emergency test and reset.		IVIIII.	Ok
2.0	Main Air Supply System			OK .
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
2.1	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min.& 50
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	Ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-29 sec
	compressors, Check pressure build time of individual			CP2-28 sec
	compressor from 8 kg/cm2 to 9 kg/cm2			
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.4 kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.6 kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10 .2kg/cm2
		MM3882 &	kg/cm2, Closes at	
		MM3946	8±0.20 kg/cm2	8 kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.4 min

Loco No.: 39425

2.7	Check unloader val	ve operation time				Approx. 12 Sec.	11sec.
2.8		/alve functioning (12	24 & 87)			Operates when	11.5
		<b>.</b>	,			Compressor	kg/cm2
						starts	<b>0,</b> -
2.9	Check CP-I delivery	safety valve setting	(10/1). Run CP	D&M t	est spec.	11.50±0.35	11.4
	Direct by BLCP.			MM3882	& MM3946	kg/cm2	kg/cm2
2.10	Check CP-2 delivery	y safety valve setting	g (10/2). Run CP	D&M t	est spec.	11.50±0.35	
	direct by BLCP			MM3882	& MM3946	kg/cm2	
2.11	Switch 'OFF' the co	mpressors and ensu	ire that the safety	D&M t	est spec.		
	valve to reset at pr	essure 1.2 kg/cm2 le	ess than opening	MM3882	& MM3946		
	pressure.						
2.12		n 'OFF' compressor,			ck sheet no.	5.0±0.10kg/cm2	5.0 kg/cm2
	1 -	Main Reservoir, Sta	•	F60.812 Ve	ersion 2		
		ure of Duplex Check	Valve 92F.				
2.13	FP pressure:		On an include and		ck sheet no.	6.0±0.20kg/cm2	6.0 kg/cm2
	_	est point 107F FPTP.	Open isolate cock	F60.812 Ve	ersion 2		
2.0	136F. Check pressu						
3.0 3.1	Air Dryer Operati	of 2 <sup>nd</sup> MR to start	Camanananan laawa			Tayyan ta ahanaa	Ok
3.1	· ·	k Air Dryer Towers t				Tower to change every minute	UK
3.2		•	t Compressor stops			every minute	Ok
3.3	Check condition of	•	t compressor stops			Blue	Blue
4.0	Main Reservoir Lea	•				Biac	Bide
4.1		9) in full service, Che	eck MR Pressure air	D&M t	est spec.	Should be less	0.6 kg/cm2
	leakage from both	•			& MM3946	than 1 kg/cm2 in	in 15 min.
						15 minutes	
4.2	Check BP Air leakag	ge (isolate BP chargi	ng cock-70)	D&M t	est spec.	0.15 kg/cm2 in 5	0.05
				MM3882	& MM3946	minutes	kg/cm2 in 5
							min.
5.0	Brake Test (Auto	matic Brake opera	ation)				
5.1	Record Brake Pipe	& Brake Cylinder pr	essure at Each Step				
	Chack proportional	lity of Auto Brake sy	stom	CLW/s cho	ck sheet no.		
	Check proportional	iity of Auto Brake sy	Stem		Version 2		
				100.012	Version 2		
	Auto controller	BP Pressure kg/cn	n2	BC (WAG-9	8 WAP-7)	BC (WAP-5)	
	position			Kg/cm2	,	Kg/cm2	
		Value	Result	Value	Result	Value	
		Value	Result	value	Result	value	
	Run	5±0.1	5.05 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
	Full service	3.35±0.2	3.4 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-

Loco No.: 39425

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	7 sec.
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	
		MM3882 & MM3946	to Below 2.5	Ok
		0114	kg/cm2	
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.1
		F60.812 Version 2	4.05- 4.35	kg/cm2
			kg/cm2	
			Opens at BP 2.85- 3.15	3 kg/cm2
			kg/cm2	3 Kg/CIIIZ
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.	Kg/CIIIZ	
J.J	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC developed	1011013002 & 1011013340		
	WAP5 – BC 5.15 $\pm$ 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	7 sec.
	WAG9 - BC 2.50 ± 0.1 kg/cm2		21±3 sec.	7 500.
	107.03		2223 300.	
F.C.	Mayo Auto Droko Controllor handle to full conder and	DOM tost sacs		
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to	D&M test spec. MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure up	IVIIVI3882 & IVIIVI3946		
	to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	19 sec.
	WAG9		52±7.5 sec.	15 500.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	75 sec.
	BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test : The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.7
	functioning of brake.		60 Sec.	kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A-9 (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors in			
F.0	working condition.		DC (0'	
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure			
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.6
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 sec.
	time	MM3882 & MM3946	, ,	
L	<u>I</u>	I.	ı	İ

Loco No.: 39425

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	14 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now De- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	DDCC Letter To	Pressure Setting Needed is12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	RDSO letter no. EL/3.2.19/3-phase (CCB), dtd 30.01.2023		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s faiveley	Presently not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			50 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

39425

			Ro	oof compnent Cab-1	. & Cab-2				
S.NO.	DESCRIPTION	PL NO.	•	SUPPLIER	Sr.No.	Warranty			
1	Pantograph	2.6E+07	2	Contransys	15135-08/24, 15138-08/24				
2	Servo Motor	2.6E+07	2	Contransys	15139-08/24,15146-08/24				
3	Air Intake Filter Assembly	2.05+07	2	PARKER	O/C1661P/A/01 (PLW)10-24,				
	All lillake Filler Assembly	2.96+07	2	PARKER	O/C1671P/A/02 (PLW)10-24				
4	Insulator Panto Mounting	3E+07	8	BHEL	08-2024, 09-2024				
			Middle	roof Component					
5	High Voltage Bushing	3E+07	1	ELECTRANEX	EIPL-5823-11-24				
6	Voltage Transformer	3E+07	1	CG POWER & INDU	243312-18.09.2024				
7	Vaccum Circuit Breaker	2.6E+07	1	AUTOMETERS	AALN/11/2024/037/VCBA/848				
8	Insulator Roof Line	3E+07	9	MIL	05-2024, 06-2024, 07-2024				
9	Harmonic Filter	3E+07	1	Elecos Engineering	EEPL/HF/1585	As per PO/IRS Conditions			
10	Earthing Switch	3E+07	1	AUTOMETERS	AALN/04/2024/037/ES/037	, ,			
11	Surge Aresster	3E+07	2	CG POWER & INDU	56299-2024, 56301-2024				
			Air Bra	ke Components					
12	Air Compressor (A,B)	3E+07	2	ELGI	EXGS-923707 A EXGS -923708 B				
13	Air Dryer	2.9E+07	1	KNORR	E24-E0430				
14	Auxillary Compressor	2.6E+07	1	ELGI	BXFS 109376				
15	Air Brake Panel	2.9E+07	1	FAIVELEY	OCT-24-40-WAG9-3691				
16	Controller (A,B)	2.9E+07	2	FAIVELEY	M 24-145 A L24-045 B				
17	Break Up Valve	2.9E+07	2	FAIVELEY					
18	Wiper Motor		4	AUTO INDUSTRY					



SSE/ABS

### PLW/PTA

# ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 39425

RLY:ECoR SHED: WAT

PROPULSION SYSTEM: MEDHA

HOTEL LOAD CONVERTER: MEDHA

LIST OF ITEMS FITTED BY ECS

	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER
SN	DESCRIPTION OF THE PROPERTY OF	29612937	26799/		MATSUSHI P.TECH
1	LED Based Flasher Light Cab I & II	29612925	143519/143573/143533/143511		MATSUSHI P.TECH
2	Led Marker Light Cab I & II	29170011	3276/		KKI
3	Cab Heater Cab I & II	29470080	5867/5688/	5744/5728	MTI
4	Crew Fan Cab I & II	2541 0000	70		WOAMA
5	Master Controller Cab I	29860015	70	42	VVOAIVIA
6	Master Controller Cab II	29170564	KT-1491	KT-1518	KONTACT
7	Complete Panel A Cab I & II	29170539	3366	3578	KEPCO/ALSTOM
8	Complete Panel C Cab I & II	29170564	KT-1400	KT-1401	KONTACT
9	Complete Panel D Cab I & II	29178162	2563 8/24	2597 8/24	CG
10		29200040		MTELM-2410371/MTELS-2410372	
11	Speed Ind.& Rec. System	29680025		85	HBL
12		29600418			PPS INTERNATIONAL
13	Set of Harnessed Cable Complete Transformer Oil Pressure Sensor (Cab-1)		DO (DO (4.570 h.m. 04	BG/PS/1494 Jun-24	
14	(pressure sensor oil circuit transformer)	29500047	BG/PS/1578 Jun-24		BG INDUSTRIES
15	Cancer (Coh 2)		BG/PS/1576 Jun-24	BG/PS/1383 Jun-24	
-	Transformer Oil Temperature Sensor (Cab-		BG/TFP/759	93 May-2024	BG INDUSTRIES
16	1)(temperature sensor oil circuit transformer)	29500035		21 Feb-2024	BO INDOCTATED
17	Transformer Oil Temperature Sensor (Cab-2)				
18	Roof mounted Air Conditioner I	29811028	24K/RMPU/DC/02/1310 24K/RMPU/DC/02/1320		DAULAT RAM
19	Roof mounted Air Conditioner II			100/02/1320	
			India rail navigator		Aventel Ltd., India
20	RTIS(Real time information system)		Power supply module	·	Averiler Ltd., india
			Rail MSS Terminal		

SSE/ECS

JEVECS

			25/WAP-7/ECoR/V			
.N.		PL No.		nt Serial No.		ake
_	Complete Shell Assembly with piping	29171064		, 12/24		ILAI
2	Side Buffer Assly Both Side Cab I	29130050	not visible, 11/24	not visible, 09/24	AEU	AEU
3	Side Buffer Assly Both Side Cab II	23130030	230, 04/24	not visible, 09/24	AEU	AEU
4	CBC Cab I & II	29130037	1323, 07/24	1290, 06/24	ESCORTS	ESCORTS
5	Hand Brake		9/24	4-17722	Modified	Mechwel
6	Set of Secondry Helical Spring	29045034 29041041			GB	3D
7	Battery Boxes (both side)	29680013	84, 12/24	87, 12/24	BHARTIA BRIGHT	BHARTIA BRIG
3	Traction Bar Bogie I		8652	2, 09/24	K'	M
9	Traction Bar Bogie II		8654	4, 09/24	K'	M
0	Centre Pivot Housing in Shell Bogie I side		035	5, 11/24	E'	VE
1	Centre Pivot Housing in Shell Bogie II side	29100057	38,	, 11/24	E'	VE
_	Elastic Ring in Front in Shell Bogie I side			5, 09/24	AV/	ADH
_	Elastic Ring in Front in Shell Bogie II side	29100010		3, 09/24		ADH
	Main Transformer	29731008 for WAG 9		-10644-017, 2024		ND
		29731057 for WAP-7	11/24 D	1424002454	FINE ALITO	MACTIVE LTD
-	Oil Cooling Radiator I	29470031		1124RC2451		MOTIVE LTD
16	Oil Cooling Radiator II			5002/24-25/193		r exchangers
17	Main Compressor I with Motor	29511008		3708, 10/24	EC	LGi
18	Main Compressor II with Motor			3707, 10/24		LGi
19	Transformer Oil Cooling Pump I			313, 08/23		VWELL 4
20	Transformer Oil Cooling Pump II	1111,6010	240817	299, 08/23		VWELL
21	Oil Cooling Blower OCB I	29470043	10/24, 324103	773, 32410AF3773	SAINI ELECTR	RICAL PVT LTD
22	Oil Cooling Blower OCB II	29470043	10/24, 324103	772, 32410AF3772	SAINI ELECTR	RICAL PVT LTD
23 .	TM Blower I	20440075	12/24AC-6105	0, CFLXKAM23166	AC	CCEL
24	TM Blower II	29440075	12/24, AC-610	75, CGLXKAM6639	AC.	CCEL
25	Machine Room Blower I	THE PERSON SELECTION	11/24, D42-5	831, M42/D5878	SAMAL HAR	AND PVT LTD
26	Machine Room Blower II	29440105		821, M42/D5868	SAMAL HAR	AND PVT LTD
27	Machine Room Scavenging Blower I	RESIDENCE OF THE PROPERTY OF THE PERSON OF T		SM-24.09.55		PVT LTD
28	Machine Room Scavenging Blower II	29440129		SM-24.09.62		PVT LTD
29	TM Scavenging Blower Motor I	HI I LOUIS BY THE PARTY OF THE		ST-24.10.171		PVT LTD
		29440117		5T-24.10.177		PVT LTD
30	TM Scavenging Blower Motor II	ACCEPTED TO THE		/PROPULSIONA/4137		1 4 1 2 1 2
31	Traction Convertor I			/PROPULSIONA/4138	_	
32	Traction Convertor II			/PROPULSIONA/4138	To the second of	
33	Vehicle Control Unit I	29741075		/PROPULSIONA/4138		TIL
34 35	Vehicle Control Unit II Aux. Converter Box I (BUR 1)			1/10303/20A/1221		
36	Aux. Converter Box 1 (BUR 1)  Aux. Converter Box 2 (BUR 2 + 3)			1/10303/20B/1221		
37	Axillary Control Cubical HB-1	29176645		B10012409340	STESA	LIT LTD
38	Axillary Control Cubical HB-2	29176657		/2024/06/HB2P7/062	· AUTOMETERS AI	LLIANCE PVT LT
39	Complete Control Cubicle SB-1	29176669	07/24, SLSI	B10012407478		LIT LTD
40	Complete Control Cubicle SB-2	29178174		024/D/0321/1058		TIFIESRS LTD
41	Filter Cubical (FB) (COMPLETE FILTER	29480140		09/2024/19/FB/121	AUTOMETERS AI	
42	Driver Seats	29171131		/25-80, 15, 4, 78		ABI
43	Hotel Load Converter I	29741087		24, 3344		DHA ·
44	Hotel Load Converter II	29230044		3343 ANT PIPES	IVILI	DHA
45 46	Transformer oil steel pipes Hotel Load Contactor I	23230044		3343	ME	DHA
47	Hotel Load Contactor II			3344	ME	DHA
48	Conservator Tank Breather Silica Gel	29731057	24-1014	14, 24-10127	YOGYA ENET	TERPRISES LTD
49	Ballast Assembly ( only for WAG-9)	29170163	The East of the		FALL PROPERTY OF THE PARTY OF T	- 1.1
	Head Light	29611908	016	54, 0156	EN:	SAVE

NAME SMURHAM CHAPMA SSE/LAS

NAME. Kaming Meena

NAME ALLUT OFFICE JE/LAS/UF Issue No. : 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

### पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 39425

RIV: ECOR

Shed: WATE

S. No.	ITEM TO BE CHECKED	Specified Value	Observed Value				
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK	6/2				
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.  TM scavenging blower 1 & 2 & Oil Cooling unit.	ОК		0/2			
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		0/2	_		
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		0/2	_		
1.5	Check proper Fitment of FB panel on its position.	OK		0/4	_		
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		DIL	-		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		OK		7	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		0/2			
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		6/2			
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		OR	_		
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		Uk	2		
.12	Check proper fitment of Bogie Body Safety Chains.	OK		U			
1.13	Check proper fitment of Cow catcher.	OK		0)	2		
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		ol.	2	1	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		0/	2		
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		0/			
1.17	Check proper fitment of both battery box.	OK		al	1		
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		a	12		
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	ОК			IL		
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CA	B-1	(	CAB-2	
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP	LP	ALP	
		:35-60 mm	5]				
		Lateral Std- 45-50 mm	20	11	58	44	
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	S	R/S	
	Drg No IB031-02002.	mm	FRONT				
				100		1096	
		17	REAR	110		1104	
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/S	S	R/S	
/	Drg No-SK.DL-3430.		FRONT	646	5	647	
			REAR	64	6	644	
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S		R/S	
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	111		115	
			REAR	110	1	114	
1.24	CBC Height: Range (1090, +15,-5)	1090, +15	FRONT:				
	ONO I IOIGINI I MINO ( 1000) - 1010/	,		,			

(Signature of SSE/Elect. Loco )

NAME SHUBHAM SHAPMA

DATE 201 25

(Signature of /JE/Elect Loco)

NAME Karan Singh

DATE 28/01/25

(Signature of JE/UF)

NAME ANKIT UPPAL

DATE 28/01/25

# **Loco No.** 39425

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-311	ECBT	29101104	102221	As per PO/IRS
REAR	SL-319	ECBT	29101104	102221	conditions

# 2. Hydraulic Dampers (PL No.29040140) Make: KONI/KONI

### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27738	27808	27635	27866	27688	27685
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

### 4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	PLW24-558	PLW24-597	PLW24-539	PLW24-662	PLW24-613	PLW24-564
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
FREE END	PLW24-571	PLW24-595	PLW24-540	PLW24-648	PLW24-615	PLW24-547
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
Bull Gear No.	5522	5749	5696	24-E-27	6118	5740
Bull Gear Make	GGAG	GGAG	GGAG	LMS	GGAG	GGAG

# 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

AXLE POSITION NO		1	2	3	4	5	6
Gear End	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
	PO NO. & dt	00091	00091	00091	00091	00091	00091
Free	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	00091	00091	00091	00091	00091	00091

# 6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	85 T	100 T	103 T	92 T	85 T	80 T
FREE END	94 T	95 T	85 T	80 T	86 T	88 T

# **Loco No.** 39425

### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5				
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

#### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	KPE	KPE	KPE	IN	KPE	KPE
GE Brg. PL 29030110	MAKE	SKF	NBC	SKF	SKF	SKF	NBC
FE Brg. PL 29030110	MAKE	SKF	NBC	SKF	SKF	SKF	NBC

### 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KM	EEE	KPE	KPE
BACKLASH (0.254 – 0.458mm)	0.280	0.290	0.280	0.300	0.340	0.340

# 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	16.52	17.71	16.52	16.98	15.82	15.46
LEFT SIDE	15.61	16.60	15.58	15.38	17.20	15.72

# 11. TRACTION MOTOR: (PL No.29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	TMS		PLW-3090
2	TMS		PLW-3054
3	TMS		PLW-3104
4	HIND RECTIFIER	101655	237010154/003
5	HIND RECTIFIER	101655	237010154/001
6	HIND RECTIFIER	101655	237010154/002

Sk Bogie Shor

# TOP 13 COSTLIEST ITEMS OF WAP-7 LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29741087	2X500KVA IGBT Based Hotel Load Converter to CLW Specn. no. CLW/ES/3/IGBT/0490 aLT.D (REV.1) issued on December,2017	As per clause no. 3.1.6 of CLW SPECN. NO. CLW/ES/3/IGBT/0490 ALT.D REV.1 ISSUED ON DEC-2017. [60 months after commissioning or 72 months from date of supply whichever earlier]
3	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
4	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
5	29600418	SET OF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018.	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

6	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.
		COMPLETE ELLTED CURIOLE ALCANO MUTULALI	
7	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
8	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.

9	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
10	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
13	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



#### भारत सरकार GOVERNMENT OF INDIA

रेल मंत्राल्य

# MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना
PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244 फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310 पटियाला, 147003, भारत् PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Waltair.

Email: srdee\_trsvskp@yahoo.co.in, elsvskp1982@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 39425 WAP-7.

संदर्भ:- (i). Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii).Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 39425 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/WAT/ECoR on 10.02.2025. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed by NISHANT BANSIWAL Date: 2025.02.24 17:55:30 +05'30'

(निशांत बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/ECoR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

# Loco No. 39425

SN	PL No.	Description of Item	Qty.	
1	20162241	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.	
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.	
		TEE UNION 3/8"X3/8" BRASS FITTINGS	02 nos.	
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.	
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.	
	2054400	FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.	
			MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 nos
2		FEMALE TEE 3/8" BSPP – BRASS	06 nos	
	29611994	HEX PLUG -3/8" BSPT – BRASS	02 nos	
		FEMALE TEE 1/2" BSPP – BRASS	04 nos	
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos	
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos	
		HEX PLUG – 1/2" BSPT – BRASS	04 nos	
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos	
3	29170114	Copper Tube OD 9.52mm (3/8" ) X 1.245 Mm W.T X 6 Mtr	1.2Mtr	

AWMIABS & LFS

SSE/G/ABS

SN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.		WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	-	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	-	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	-	DIN Rail fitted inside the driver desk (LP Side)	02 nos.





# Annexure-C

SN	PL No.	Description of Item	Quantity
1.	42310301	Flexible conduit size 25mm <sup>2</sup> provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	-	Harness provided from KAVACH SB to SB-1	07 wires
5.	-	Harness provided from KAVACH SB to SB-2	05 wires
6.		Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.		Harness provided from KAVACH SB to CAB-1	<b>⊋u</b> wires
8.	-	Harness provided from KAVACH SB to CAB-2	16 wires

AWMECS

SSEIGIECS