


# भारतीय रेल Indian Railways

डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernation Chorks, Patiala

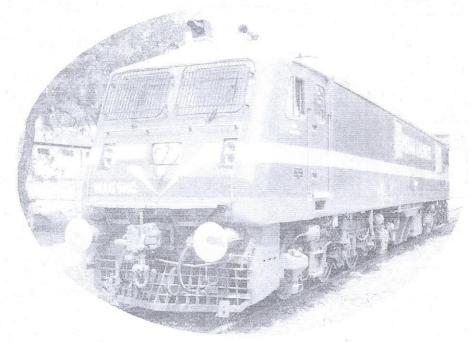

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

41524

TYPE:

WAG9HC

RAILWAY SHED:

NR/LDH

PROPULSION SYSTEM:

BT

DATE OF DISPATCH:

12.08.2021

लोको निर्माण रिकार्ड



# डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernisation Clocks, Patiala

LOCO NO.: 41524

RAILWAY/SHED: NR/LDH DOD: AUGUST 2021

#### INDEX

SN	PARA	ACTIVITIES	PAGE NO.
		Testing & Commissioning (TRS)	
1.	1.0	Continuity Test of the cables	
= ( )	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	
	2.2	Check Points	5-6
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	53
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	100
	4.4	Minimum voltage relay (Pos. 86)	, T
12	4.5	Maximum current relay (Pos. 78)	11-16
	4.6	Test current sensors	4.10
= = }	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.8	Verification of Converter Protection Circuits (Hardware limits)	11
	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	611 16
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	E #
	5.3.2	Performance of Auxiliary Converters	
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5.4	Auxiliary circuit 415/110	
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
0 1	5.8	Test Harmonic Filter	
6	5.9	Test important components of the locomotive	
6. 7.	6.0	Running Trial of the locomotive	25-26
-	7.0	Final Check List to be verified at the time of Loco dispatch	27
8.	8.0	Status of RDSO modifications	28
9.	1-10	Pneumatic Test Parameters	29 - 32
0.		Loco Check Sheet(LRS)	33
1.	-	Component History (LRS,TRS,ABS)	34-36
2.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13		Warranty Conditions as per Tenders	39 -41

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

#### 1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ox	100 ΜΩ	1000
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OX	100 ΜΩ	1000
Filter Cubicle	Earthing Choke	2×	100 ΜΩ	1000.
Earthing Choke	Earth Return Brushes	DK	100 ΜΩ	1000
Transformer	Power Converter 1	2X	100 ΜΩ	1500
Transformer	Power Converter 2	DK.	100 ΜΩ	2500
Power Converter 1	TM1, TM2, TM3	DK	100 ΜΩ	1500
Power Converter 2	TM4, TM5, TM6	nc	100 ΜΩ	1500
Earth	Power Converter 1	or	100 ΜΩ	2000
Earth	Power Converter 2	ne	100 ΜΩ	2000

#### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	0×	100 ΜΩ	Too
Transformer	BUR2	ox.	100 ΜΩ	700
Transformer	BUR3	W.	100 ΜΩ	700
Earth	BUR1	ne	100 ΜΩ	820
Earth	BUR2	D/	100 ΜΩ	820
Earth	BUR3	2K	100 ΜΩ	Sno
BUR1	HB1	2K	100 MΩ	1000
BUR2	HB2	ne	100 M $\Omega$	1008
HB1	HB2	DL.	100 ΜΩ	1000
HB1	TM Blower 1	2K	100 M $\Omega$	200
HB1	TM Scavenge Blower 1	2K	100 ΜΩ	250
HB1	Oil Cooling Unit 1	24	100 MΩ	1500
HB1	Compressor 1	DK	100 M $\Omega$	150
HB1	TFP Oil Pump 1	2K	100 ΜΩ	100
HB1	Converter Coolant Pump 1	OK	100 ΜΩ	110
HB1	MR Blower 1	ox.	100 ΜΩ	200
HB1	MR Scavenge Blower 1	OK	100 ΜΩ	2700
HB1	Cab1	DK.	100 MΩ	110
Cab1	Cab Heater 1	M	100 MΩ	150
HB2	TM Blower 2	DL	100 ΜΩ	150
HB2	TM Scavenge Blower 2	20K	100 MΩ	200
HB2	Oil Cooling Unit 2	DK	100 ΜΩ	LID
HB2	Compressor 2	of of	100 ΜΩ	200
HB2	TFP Oil Pump 2	ou	100 ΜΩ	200
HB2	Converter Coolant Pump 2	2X	100 ΜΩ	200
HB2	MR Blower 2	ne	100 ΜΩ	120
HB2	MR Scavenge Blower 2	ne	100 ΜΩ	200
HB2	Cab2 '	ne	100 ΜΩ	200
Cab2	Cab Heater 2	ou_	100 ΜΩ	200

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4

41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	DIL
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.X7-3		DK

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value &_ MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value <del>*7</del> 2_ MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

#### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	9K
Memotel speed sensor	10A	DK.
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	216



Doc.No.F/TRS/01 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	DK.
Terminal fault indication cab-1 & 2	09F	2K
Brake pipe pressure actual BE electric	06H	0K
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	OK
Oil circuit transformer bogie 1	12E, 12I	DK.
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	PK.
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OK
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= $10K\Omega \pm \pm 10\%$ )	13A	OK
UIC line	13B	ΟK
Connection FLG1-Box TB	13A	OK

(Ref: WI/TRS/10)

Page: 5 of 27

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

41524

Type of Locomotive: WAP-7/WAG-9HC

#### 2.0 Low Tension test

#### 2.1 Measurement of resistor in OHMS ( $\Omega$ )

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	$3.9$ K $\Omega \pm 10\%$	3.9 KR
Resister to maximum current relay.	1 <b>Ω</b> ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3.3.1
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.25
Between wire 6 & 7	0.2 Ω	0.25
Between wire 5 & 7	0.4 Ω	0.45
For train bus, line U13A to earthing.	10 k <b>Ω</b> ± 10%	IOKA
For train bus, line U13B to earthing.	10 k <b>Ω</b> ± 10%	10.0181
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	300MA
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0:28 \$
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.285
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.305
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	32
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	<b>2.2 kΩ</b> ± 10%	2.247
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k <b>Ω</b> ± 10%	2745
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3.9 KR
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.8 2
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	390-52
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k <b>Ω</b> ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10 <b>Ω</b> ± 10%	10.52

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4,524

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	e Roccoel OK
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	c Rocked QX

#### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	OK
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	DK.
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	214
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	OK
Pretest speedometer	Sheets of Group 10	DK
Pretest vigilance control and fire system	Sheets of Group 11	OK
Power supply train bus	Sheets of Group 13	On

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

	omotivo ivon	1	1
3.0	Downloading	of So	ftware

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	yes
Check that all the fibre optic cables are correctly connected to the bus stations.	yes
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.0.3.6
Traction converter-2 software version:	1.0,3.6
Auxiliary converter-1 software version:	1,8.2.2
Auxiliary converter-2 software version:	2.8.2.2
Auxiliary converter-3 software version:	3.8.2.2
Vehicle control unit -1 software version:	1.6.8.7
Vehicle control unit -2 software version:	1.6.8.7

#### 3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	914
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	117.
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1017.
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	25/1

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

41524

Type of Locomotive: WAP-7/WAG-9HC

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1011.
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	25.),
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	447,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	36.5°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	3710°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	37.0°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	36.8°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	37.0°C

Page : 8 of 27

gs.

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

#### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through	VCB must open.	cheered ou
emergency stop switch 244	Panto must lower.	Checker
Shut Down through cab activation	VCB must open.	cheecolon
switch to OFF position	Panto must lower.	Checker
Converter and filter contactor	FB contactor 8.41 is closed.	0
operation with both Power	By moving reverser handle:	
Converters during Start Up.	<ul> <li>Converter pre-charging contactor</li> </ul>	
	12.3 must close after few seconds.	(7.6g)
	• Converter contactor 12.4 must close.	cheered or
	<ul> <li>Converter re-charging contactor</li> </ul>	1 1 2
	12.3 must opens.	327
	By increasing TE/BE throttle:	
	• FB contactor 8.41 must open.	
	<ul> <li>FB contactor 8.2 must close.</li> </ul>	
	• FB contactor 8.1 must close.	7)
Converter and filter contactor		4)
operation with both Powe	The state of the s	/
Converters during Shut Down.	<ul> <li>VCB must open.</li> </ul>	chercod
e 2 e e	Panto must lower.	ou_
	• Converter contactor 12.4 must open.	
100	• FB contactor 8.1 must open.	
	• FB contactors 8.41 must close.	
7	• FB contactor 8.2 must remain closed.	
	*	
		-

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

2 2 2		<del>\</del>
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie (cut out switch. Wait for self-test of the loco.	
	<ul> <li>Check that FB contactor 8.1 is open.</li> <li>Check that FB contactor 8.2 is open.</li> </ul>	gehored on
	After raising panto, closing VCB, and setting TE/BE	
	<ul><li>FB contactor 8.1 closes.</li><li>FB contactor 8.2 remains open.</li></ul>	
Test earth fault detection battery circuit positive & negative	By connecting wire 2050 to earth, create earth fault negative potential.	
	<ul> <li>message for earth fault</li> <li>By connecting wire 2095</li> </ul>	chercedor
	to earth, create earth fault positive potential.	
	message for earth fault	
Test fire system. Create a smoke in the machine room near the FDU.	When smoke sensor-1 gets activated then	1
Watch for activation of alarm.	<ul> <li>Alarm triggers and fault message priority 2 appears on screen.</li> </ul>	
	When both smoke sensor 1+2 gets activated then	eheerodou
	<ul> <li>A fault message priority</li> <li>1 appears on screen and</li> </ul>	
	<ul><li>lamp LSF1 glow.</li><li>Start/Running interlock occurs and TE/BE becomes to 0.</li></ul>	
Time, date & loco number	Ensure correct date time and Loco number	ou ou
		12

48

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

#### 4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.0310	OK
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.0370	OK
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.04/	OK
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.04/p	OK
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.9 VP9 5-5 Vpm	OK.
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.10VP 6.43 JRM.	OK

#### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$ , $41.5V_{RMS}$ and opposite polarity.	58.5VP 41.4VRr	s) OK
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15.4VP,	2n

THE

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

#### 4.3 Primary Voltage Transformer

Apply  $250V_{eff}/350V_p$  by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply 200V<sub>RMS</sub> through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	25kV	250%	25×V	2501-
SLG2 G 87-XUPrim	25 kV	250%	284	2501.

Decrease the supply voltage below 140 V<sub>RMS</sub>. VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	1701
SLG2 G 87-XUPrim	17 kV	170%	17KV	170%.

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V<sub>RMS</sub> through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV	300%	30KJ	300%
SLG2 G 87-XUPrim	30 kV	300%	30KV	300-1-

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

#### Minimum voltage relay (Pos. 86)

Functionality test:	L: C00/	
Minimum voltage relay (Pos. 86) must be adjusted to approx 68%		
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage	(Yes/No)	
transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply		
200V <sub>RMS</sub> through variac. In this case; <i>Minimum voltage relay</i> ( <i>Pos. 86</i> ) <i>picks up</i>		
	()/ < /01-)	
Try to activate the cab in driving mode:	(Yes/No)	
Contactor 218 do not close; the control		
electronics is not be working.	(Vas/Na)	
Turn off the variac:	(Yes/No)	
Contactor 218 closes; the control electronics is be		
working		
Test Under Voltage Protection;		
Activate the cab in cooling mode; Raise panto;	(Yes/No)	
Supply 200V <sub>RMS</sub> through variac to wire no. 1501		
& 1502; Close the VCB; Interrupt the supply		
voltage		
The VCB goes off after 2 second time delay.	(M. (N. )	
Again supply 200V <sub>RMS</sub> through variac to wire no.	L(Yes/No)	
1501 & 1502; Decrease the supply voltage below	*	
140V <sub>RMS</sub> ± 4V; Fine tune the minimum voltage relay so that VCB opens.		
Fine tune the minimum voltage relay 30 that veb opens.		

#### 4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current tran &1522 (including the resistor at Pos. 6.11); Put loco in sir on contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the o maximum current relay Pos. 78 for correct over current v	mulation for driving mode; Open $R_3 - R_4$ pen wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact R <sub>3</sub> – R <sub>4</sub> of 136.3 closed; Close VCB; Tune th	e resistor 78.1 for the current of $7.0A_{RMS}$
/9.9A <sub>p</sub> at the open wire 1521;	
VCB opens with Priority 1 fault message on	(Yes/No)



Signature of the JE/SSE/Loco Testing

display.

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

#### 4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		296m
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		(
	Supply $333\text{mA}_{DC}$ to the test winding of sensor through connector $415.\text{AC}/1$ or 2 pin no. $7(+)$ & $8(-)$		330mg
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)	_	240 mp
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		-

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	or.
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	DR

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close



#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No .: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

#### Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	clos	open	clos	open	closs	open	clos	clos	open
BUR1 off	close	open	clos	close	open	close	open	opey	close
BUR2 off	open	open	close	closs	clos	clos	Oper	oper	class
BUR3 off	Open	close	open	close	close	Class	Open	oper	Clos

#### 5.0 Commissioning with High Voltage

#### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yes
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Teg
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	100
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Teg
KABA key interlocking system.	reg

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop n cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	o cheered on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop	VCB must open. Panto must lower. Emergency brake will be	cherroel ou
Under voltage	button 244.  Raise panto in cooling	applied. VCB must open.	cheexeelou
protection in cooling mode	mode. Close the VCB. Switch off the supply of catenary by isolator		cheiken ou
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Cheercelou
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	Cheeroelon
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cheekseloa
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	chessolva
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	CROEKED OU

Doc.No.F/TRS/01 (Ref: WI/TRS/10) Effective Date: March 2021

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	10.6	10.9
Oil pump transformer 2	9.8 amps	9,4	10,3
Coolant pump converter 1	19.6 amps	5.4	6.3
Coolant pump converter 2	19.6 amps	5.3	6.4
Oil cooling blower unit 1	40.0 amps	38,0	103.0
Oil cooling blower unit 2	40.0 amps	35.0	102.0
Traction motor blower 1	34.0 amps	20.1	720
Traction motor blower 2	34.0 amps	28:3	114.0
Sc. Blower to Traction motor blower 1	6.0 amps	2.2	2.4
Sc. Blower to Traction motor blower 1	6.0 amps	2.3	2.3
Compressor 1	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	25.9	118.0
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	23.0	100.3

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC Page: 19 of 27

#### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10500	Yes
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636V	Yes
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	I Bond	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10527	Yes
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amp	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	24 Am	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12/Amp	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1101	Yel

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10521	Yes
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	636 V	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Am	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	25An	Tes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12.5 Bm	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1/0√	Yes

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

fer

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of	Loads on BUR1	Loads in BUR2	Loads in BUR3
BURs		5.09	
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase	Measured phase current	Measured starting current
	current		n n on
Machine room blower 1	15.0 amps*	5.0	19.0
Machine room blower 2	15.0 amps*	5.6	23.0
Sc. Blower to MR blower 1	1.3 amps	1.6	6.0
Sc. Blower to MR blower 2	1.3 amps	1.9	8,0
Ventilator cab heater 1	1.1 amps	1.0	1.2
Ventilator cab heater 2	1.1 amps	1, 5	1.2
Cab heater 1	4.8 amps	5.0	5-1
Cab heater 2	4.8 amps	5.0	5./

<sup>\*</sup> For indigenous MR blowers.

fx

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

#### 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### 5.6 Traction Converter Commissioning

#### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

Test Function	Results desired	Result obtained
Vleasurement of charging and pre- charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	charged on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked on
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheired ou
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	c hoekeel ou
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheixed our
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chercelou
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	checad ou

Doc.No.F/TRS/01

#### (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

#### For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chalked ou
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	e horked ou
positive potential of DC Link of Converter 2.	demonstrate the same to the DMW supervisor.	chelkeel or
Earth fault detection on negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	cheixed ou
Earth fault detection or AC part of the traction circuit of Converter 2.	declare the successful operation and demonstrate the same to the DMW supervisor.	cherred or
Pulsing of line converte of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherred or
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	choekael ou

Doc.No.F/TRS/01

#### (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
	C. I the least with both the	
Measurement of	Start up the loco with both the	4
protective shutdown	converter. Raise panto. Close VCB.	
by Converter 1	Move Reverser handle to forward or	The second secon
electronics.	reverse. Remove one of the orange	
8 8	fibre optic feedback cable from	0.046
	converter 1Check that converter 1	cherred on
	electronics produces a protective shut	
Ern e e	down.	
v a s	VCB goes off	4 8 5
	Priority 1 fault mesg. on DDU	2
	appears	11
	Disturbance in Converter 1	D
Measurement of	Start up the loco with both the	h
protective shutdown	converter. Raise panto. Close VCB.	
by Converter 2	Move Reverser handle to forward or	/
electronics.	reverse. Remove one of the orange	
	fibre optic feedback cable from	0 000
	converter 2. Check that converter 2	chercel ou
==	electronics produces a protective shu	t  /
	down.	
	• VCB goes off	
	• Priority 1 fault mesg. on diagnostic	
- H	display appears	** ** ** ** ** ** ** ** ** ** ** ** **
a = =	Disturbance in Converter 2	
	Distuibuliet ill converter 2	Γ

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	o cheesed as

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page : 24 of 27

	• FB contactor 8.2 must close.	4)
	• FB contactor 8.1 must close	
2.7	<ul> <li>Check the filter current in</li> </ul>	
100	diagnostic laptop	
= 8	Bring the TE/BE throttle to O	chercel ve
	Switch off the VCB	
	• FB contactor 8.1must open.	a ^ a + a 0
	• FB discharging contactor 8.41	- a -
	must close	
** 5x a 1 11	Check the filter current in	
	diagnostic laptop	
Test earth fault	Make a connection between wire	()
detection harmonic	no. 12 and vehicle body. Start up	
filter circuit.	the loco. Close VCB.	
	• Earth fault relay 89.6 must pick up.	Chercedon
	Diagnostic message comes that -	
	Earth fault in harmonic filter circuit	
		1
Test traction motor	Traction converter manufacturer	9
speed sensors for	to declare the successful operation	Cox
both bogie in both	and demonstrate the same to the	
cabs	supervisor/ DMW	$\downarrow$

#### 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	cheeved on
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheesed on
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	chocked on
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	chelkeel ou
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	chercal ou

SELECT

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

		Page: 25 of 27
Marker light	Both front and tail marker light should glow from both the cabs	cheeked of
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cherrod on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	checked on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	cheixeel on
Illuminated Push button	All illuminated push buttons should glow during the operation	c heixed ox
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66	For contactor 8.1: 7
Crew Fan	Newton.	2
JEW Pd[]	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### 6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	cherked
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	charrel
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	cheuced
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm<sup>2</sup>, by pressing BPCS again.</li> </ul>	cheered on
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	cherked on

of the JE/SSE/Loco Te

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .	
	locomotive	For 60 seconds do not press vigilance foot switch or	
	80	sanding foots switch or TE/BE throttle or BPVG	
		switch then	
	36	Buzzer should start buzzing.	
	Žini u j	<ul> <li>LSVW should glow continuously.</li> </ul>	cheexcel
	g a 2	Do not acknowledge the alarm through BPVG or	Checken
	2	vigilance foot switch further for 8 seconds then:-	
		<ul> <li>Emergency brake should be applied</li> </ul>	
		automatically.	
		VCB should be switched off.	
		Resetting of this penalty brake is possible only after	
		180 seconds by bringing TE/BE throttle to 0 and	
		acknowledge BPVR and press & release vigilance	
		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).	cheeked ou
		With park brake in applied condition.	NA
		• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	9
		• With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).	(cherrodo
		• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).	
8.			
٥.	Check traction interlock	Switch of the brake electronics. The	Con a lui
		Tractive / Braking effort should ramp down, VCB	chemoda
9.		should open and BP reduces rapidly.	cherrela
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	chelkeel
10.	braking. Check for BUR	should start reducing.  In the event of failure of one BUR, rest of the two	
10.		BURs can take the load of all the auxiliaries. For this	7
	redundancy test at ventilation level 1 & 3 of	switch off one BUR.	(checked so
	loco operation	Auxiliaries should be catered by rest of two BURs.	
	loco operation	Switch off the 2 BURs; loco should trip in this case.	
11.	Chack the newer	Create disturbance in power converter by switching	0
11.	Check the power	off the electronics. VCB should open and converter	la formalis
	converter	should get isolated and traction is possible with	(characture
	isolation test	another power converter.	
	8	another power converter.	<u> </u>

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41524

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

#### 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	01	OK	
2	Marker Red	OK	OL	
3	Marker White	8K	OK	
4	Cab Lights	OK	9K	
5	Dr Spot Light	OK	δK	cherred worth
6	Asst Dr Spot Light	OV	DK	cherred worth
7	Flasher Light	OK	OK	
8	Instrument Lights	OK	or	
9	Corridor Light	DIE	OIL	
10	Cab Fans	OK	OK	
11	Cab Heater/Blowers	Ox	OK	
12	All Cab Signal Lamps Panel 'A'	OR	0×	

## Status of RDSO modifications

LOCO NO: 41524



Sn	Modification No.	Description	
1.	RDSO/2008/EL/MS/035		Remarks
	Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	OK/Not Ok
2.	RDSO/2009/EL/MS/037 Rev.'0' Dt 22.04.09	locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	three phase locomotives to improve reliability	f OK/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	from MCPA circuit	OK/NO TO
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin	
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	three phase locomotives to avoid fire because	* CIKININI LIK
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	draining of batteries in three phase electric legans to	Øk/Not Ok
3. 9.	RDSO/2012/EL/MS/0408 Rev.'0'	assembly.	Ok/Not Ok
	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	White and Red marker light in three phase electric	1
0	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve the interlocks.	Øk/Not Ok
1	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	OK/Not Ok
	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	arrangement in Primary Over Current Relay of three phase locomotives.	Øk/Not Ok
	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13 RDSO/2013/EL/MS/0426	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Øk/Not Ok
	Rev.'0' Dt 18.07.13 RDSO/2013/EL/MS/0427	phase electric locomotives	OK/Not Ok
	Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	QK/Not Ok
	Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Øk/Not Ok
		Removal of shorting link provided at c.d. terminal of	OK/Not Ok
		Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
F	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives	Ok/Not Ok
F	Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives	
F	Rev.'0' Dt 18.09.19	implementation of push pull scheme.	Ok/Not Ok

Signature of JE/SSE/TRS





#### DMW/PATIALA

Loco No.: 41524

# PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	Parameters	Reference	Value	D
1.0	Auxillary Air supply system (Pantograph & VCB)		Yaiue	Result
1.1	Ensure, Air is completely vented from pantograph			
-	Reservoir (Ensure Panto gauge reading is Zero)		0	0
1.2	Turn On BL Key. Now MCPA starts.		60 00	
7	Record pressure Build up time (8.5kg/cm2)		60 sec. (Max.)	57 Sec
1.3	Auxillary compressor safety Valve 23F setting	Faiveley Doc. No.		
		DMTS-014-1, 8	8.5±0.25kg/cm2	8.5 Kg/cm2
		CLW's check sheet	-	
		no. F60.812 Version		
		2		
	Check VCB Pressure Switch Setting	CLW's check sheet		
			Opens 4.5±0.15	4.5 Kg /cm2
		no. F60.812 Version	Of arrive proper	
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 is	12	5.5±0.15 kg/cm2	
1.6	Set Cab-1 Pan UP in Panel A.	solating Cocks & KABA c	ock by Key (KABA Key)	
	The state of the s		Observed Pan-2	OK
1.7	Close Pan-2 isolating Cock		Rises.	
	Open Pan -2 isolating Cock		Panto-2 Falls Down	OK
1.8	Record Pantograph Rise time		Panto-2 Rises	
1.9	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10	Panto line air leakage		06 to 10 seconds	8 Sec
	Tonto line di leakage	-	0.7 kg/cm2 in 5	0.4 kg/cm2
2.0	Main Air Count of		Min.	in 5 Min.
2.1	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and test		
	closed drain cocks. MR air pressure build up time by each	performed by		=
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 Mts. Max.	6.8 Mts
	ii) with 1450 LPM compressor	20	ii) 8.5 Mts. Max.	0.0 1/12
_			•	and the second
	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	
	compressors		both compressors	
.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual		(iiidh)	CL 1-2/ 36C
	compressor from 8 kg/cm2 to 9 kg/cm2	2.0		CP2-27 Sec
4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	
-		MM3882 &	kg/cm2 Opens at	6.5 Kg/cm2
		MM3946	5.60±0.15kg/cm2	E E Valance
5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	5.5 Kg/cm2
		MM3882 &	kg/cm2 Opens at	10.1 Kg/cm2
			8±0.20 kg/cm2	011/-1
6	Run both the compressors Record Pressure build up time		The state of the s	8.1 Kg/cm2
	son sour the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.35 minu

#### DMW/PATIALA

#### Page 2 of 4 Loco No.:41524

2.7	Check unload	ler valve operation ti	me	T		7	
2.8	Check Auto D	rain Valve functioning	og (12A P. 07)	+		Approx. 12 Sec.	10 sec
			P (127 0( 0/)			Operates when	
2.9	Check CP-I de	livery safety valve ce	etting (10/1). Run CP			Compressor starts	
	Direct by BLC	P.	cong (10/1). Kun CP	1	I test spec.	11.50±0.35kg/cm2	11.6 Kg/cr
2.10			etting (10/2). Run CP		2 & MM3946		
	direct by BLC	b	ecung (10/2). Kun CP		i test spec.	11.50±0.35kg/cm2	11.6 Kg/cn
2.11			ensure that the safety		2 & MM3946		
	valve to reset	at pressure 17 kg/cr	n2 less than opening		test spec.		
	pressure.	or biesonie 12 kg/ci	iiz iess than opening	MM388	2 & MM3946		
2.12	BP Pressure: S	witch 'OFE' compres	sor, Drain MR Pressure				
	by drain cock	of 1" Main Reservoir	Sor, Drain MR Pressure		neck sheet	5.0±0.10kg/cm2	5.0 Kg/cm2
	check setting	pressure of Duplex C	hock Value Cor	no. F60.8	312 Version 2		
2.13	FP pressure:	pressure or Duplex C	neck valve 92F.	<u> </u>			
		in Tost point 1075 5	DTD O		eck sheet	6.0±0.20kg/cm2	6.0 Kg/cm2
	136F. Check n	ressure in Gauge.	PTP. Open isolate cock	no. F60.8	312 Version 2		
3.0	Air Dryer Op						
1	Onen Desir O	cidtion		-			(6)
3.4	open brain Co	ock 90 of 2" MR to st	art Compressor, leave			Tower to change	
	oheil for 1620	Check Air Dryer Town	ers to change.			i) Every minute	ОК
						(FTIL & SIL) ii)every	
3.2	Charle Duran A	- 64 - 6 - 11 -				two minute (KBIL)	
3.3	Check Furge A	ir Stops from Air Dry	er at Compressor stops				
4.0	Check conditio	n of humidity indica	tor		16	Blue	Blue
4.1	Dut Ant 2	r Leakage Test			The state of the s	The state of the s	Dide
4.1	Put Auto Brake	(A-9) in full service,	Check MR Pressure air	D&M	test spec.	Should be less than	0.4 Kg/cm2
	leakage from b	oth cabs.			& MM3946	1 kg/cm2 in 15	in 15
4.2						minutes	minutes
4.2	Check BP Air le	akage (isolate BP ch	arging cock-70)	D&M	test spec.	0.15 kg/cm2 in 5	0.03
-					& MM3946	minutes	
						iiiiiules	Kg/cm2 in 5 minutes
5.0	Brake Test (A	utomatic Brake op	eration)				3 minutes
5.1	Record Brake P	ipe & Brake Cylinder	pressure at Each Step				
-	Charle						
	Check proportio	onality of Auto Brake	system	CLW's c	heck sheet	All and the second seco	
				no. F60.83	12 Version 2		
-	Auto ocuturali						
1	Auto controller	position		BC (WAG-	9 & WAG-7)	BC (WAP-5)	
				Kg/cm2		Kg/cm2	
-							
		DD 2					
		BP Pressure kg/c	cm2	Value	Result	Value	Result
						-	i de la companya de l
	Run	5±0.1	5.0 Kg/cm2	0.00			
			4.6 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	
-	Initial		A SO MALENON	$0.40 \pm 0.1$	0.40Kg/ cm2	0.75±0.15	
	Initial	4.60±0.1	THO REFUIRE	0.000 0.000	arrangs unia		1
	Initial Full service	3.35±0.2	3.5 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0,30	



Loco No.:41524

5.2	bressure drop to 3.5 kg/cm7 Fneura		8±2 sec.	8 Sec
5.3	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 25 kg/cm2	ОК
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2		4.2 Kg/cm/ 2.9 Kg/cm/
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.	Kg/CIIIZ	
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2 WAG9 - BC 2.50 ± 0.1 kg/cm2	MM3882 & MM3946	4±1 sec. 7.5±1.5 sec.	
5.6	Move Auto Brake Controller handle to full service and	li li	21±3 sec.	22 Sec
	BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAG9 / WAP7 WAP5	D&M test spec. MM3882 & MM3946	17.5±25 sec.	
5.7		-	52±7.5 sec.	46 Sec
	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	76 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake.  * Allow The MR pressure to build up to maximum stipulated limit.  * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A (Automatic brake controlling) at run position.  * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe.  The test shall be carried out with all the compressors in working condition.	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.3 Kg/cm2
.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
.0	Direct Brake (SA-9)			-
.1	WAP5		3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.5Kg/cm2
.2	A1			5.5 Sec



#### DMW/PATIALA

Loco No.:41524

6.3			LOCO N	0.:41524
	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 &	0.2.±0.1 kg/cm2	0.2 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2	MM3946	10 -15 Sec.	11 Sec
7.0	Dynamic Brake (Brake Blending)			
7.1	This test is to be done by forcing signal by laptop 06H			
	Actual BE E1 = 100%	D&M test spec. MM3882 & MM3946	WAP7 & WAG9 - 2.5 kg/cm2.	
7.2	This test is to be done by forcing signal by laptop 06H Actual BE E1 = 50%	D&M test spec. MM3882 & MM3946	WAP5-5.15kg/cm2 WAP7 & WAG9 - 1.25 kg/cm2.	
D	Parking Brake	11110340	WAP5-2.55kg/cm2	
8.1	Press BPPB to Release brake	D&M test spec. MM3882 & MM3946	PB released Lamp off in Panel pressure in parking Brake gauge	
8.2	Press BPPB to apply parking brake		PB applied, Lamp On in panel Pressure in parking Brake gauge 0.0	Man Man services and a service
8.3	Manually release and apply Parking Brake by pressing solenoid valve 30F		kg/cm2 Verify release and application of	
3.4	Check Pressure in PB Gauge		parking Brake.	
3.5	Check Brake Block clearance	D&M test spec. MM3882 & MM3946	6.0.±0.15 kg/cm2 10 mm in TBU 3 mm in Disc. Brake	
0	Sanding Equipment	MINISTED	(WAP5)	
0.1	Check Isolating Cock-134F is in open position, Press		Sand on Rail	ОК
0.0	sander paddle Switch. (To confirm EP valves Operates) Test Vigilance equipment : As per D&M test specification			OK

Signature of Loco testing staff

Signature of SSE/Shop



Issue No.: 03 Effective Date: April-2021

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

#### डीजल रेळइंजन आधुनिकीकरण कारखाना पटियाला । DIESEL LOCO MODERNISATION WORKS, PATIALA

#### ELECTRIC LOCO CHECK SHEET

LOCO NO: 41524

Rly: NR

Shed: LDH

S. No.	ITEM TO BE CHECKED	Specified Value	Obs	served V	alue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	ОК		K	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2.	ОК	0	K	
1.3	Check proper of Fitment of oil cooling unit (OCU).	ОК	01	<u> </u>	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its	OK	0	R	
1.5	Check proper Fitment of FB panel on its position.	ОК	0	(	
1.6	Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2.	ОК	01	1	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	ОК	01	h	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK	0	4	
1.10	Check proper fitment, torquing & Locking of Main transformer holt.	OK	0		
1.12	Check proper fitment of compressor both side with the compressor safety wire rope.	OK	0		
1.13	Proper setting of the dampers as required.	OK	OF		
1.14	Check proper position of Secondary Helical Springs between Bogie &	ОК	6 K	-	
1.15	Check proper fitment of Body Bogie Safety Chains fitted properly.	OK	D	r	
1.16	Check proper fitment of Cow catcher.	ОК	01	>	
1.17	Check coolant level in SR 1 & 2 Expansion Tank	ОК	OK		
1.18	Check Transformer Oil Level in both conservators Tank (Breather	ОК	61	2	
1.19	Cattle Guard Height (150 mm) Drg No IB061-00160.	150 mm	61		
1.20	Check proper fitment of both battery box.	ОК	6 K	-	-
1.21	Check proper fitment of Push Pull rod its bolt torquing and safety slings.	OK	OK	)	
1.22	Buffer height: Range (1085 mm to 1105 mm) Drg No IB031-02002.	1085-1105 mm	4201	L/S	R/S
			FRONT	1101	1099
	*		REAR	1100	1098
.23	Buffer Length: Range (633.5 mm to 637 Mm) Drg No-SK.DL-4748.	633.5 - 637 mm		L/S	R/S
			FRONT	637	63
		5 a s	REAR	636	635
1.25	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S
		mm,-12 mm	FRONT	116	118
			REAR	117	119
1.26	CBC Height: Range (1085 mm to 1105 mm) <b>Drg No- IB031-02002</b>	1085-1105 mm	FRONT:	1092	1/5
			REAR:	1093	

(Signature of SSE/Elect. Loco)

NAME BHUPENDER GENGH

DATE 12 08 2

(Signature of JE/Elect Loco)

NAME SATISH KUMAR

DATE 12/08/2/

Sayey laws (Signature of JE/UF)

NAME SHOTPY KUMBR

DATE 12/08/21

B   Filter Cabical (FB-1)				DIESEL LOCO MODERNISATION LOCO NO -: 415		PATIALA		
1   Annie   29171056   TRIDENT   02/49,0772	S.N	Descrition of component	DI AL-	podz. Harie compo	lent			
2 Mish Transformer 2 29911064   FINDENT	1	Shall		Make				T a
200910077 MR PREATHER   29731057   29731057   2007A ENTERPRISES   21 669 21 2VYT-000000 ADV 013 2021	-		2917106	4 TRIDENT		Mfg. date & Serial no.		C
S. Compressor Dark Side	3	Conservator T. J.				02/49.07/21		
Selective flow both vide	4	Compressor bath	The state of the s					
6   Traction Bar Cab 1   29900035   SMRI   5658-03-21	5	Battery Boy but side	29511008			21-0642 2ATT-000000-ABY-013 ,2	021	
7   Traction fact Cab-2   29100059   KMR1   6585-03-21	6	Traction Pay College	29680013	BRITE METALLOY BUT		EUAS926186(04/21) EUES9264001604		
8 Side Buffer Assly Rolfs Side	7	Traction Bar Cab 2	29100069				)	
	8	Side Buffer Arch, Park Side	29100069	KMRI		6585-03-21		
1   Soft Depth Gazer (EC)	9 (	Oil Cooling Pump both Side		FASP				4
1   Secondry Heical Spring on Bogue   29045034   Sel. SPRINS PVT. LTD.   04-21 & 12-20	10 7	Transformer oil Steel pione		SAMAL HARAND OF INDIA BYT LTD		LP04-21-603,05-21-010,Lp05-21-036.04-21.5	70	4 ,
13   Secondry Helical Spring on Bogle   29045034   G.B. SPRING PYT. LTD.	11 S	Soft Draft Gear (CRC)	29230044	VIKANT ENGG. WORKS		D2458 & D2428	70	- 1
Secret Plot Housing   29100010   AWADH   334.04.21,365.04.21	12 S	econdry Helical Spring on Pari		HTEA ,RIL				-
14	13 E	LASTIC RING ( Center pivot Ring		G.B. SPRING PVT. LTD.	***************************************	04-21 & 12-20		- 4
Note   Load Contactor   29741087	14 C	enter Pivot Housing	7 59100010					-
Hotel Load Converter   29741087			29100057	AEW			******************************	1
29741087  3 TM-Blower  29741087  4 TM-Scavenging Blower Motor  29440075  3 Air CONTROL & CHEMICAL ENGG LTD & CGL  4 TM-Scavenging Blower Motor  29440175  3 Air Control & Chemical (FB-1)  29471075  3 Vehicle Control Cubicle SB-1  29471075  3 Vehicle Control Unit (VCU)  29741075  3 Vehicle Control Unit (VCU)  29741075  3 WAS Converter (BUR) 1  29470031  3 M/C Room Scavenging Blower Motor  3 M/C Room Scavenging Blower Motor  3 M/C Room Scavenging Blower  29440105  4 Incel Load Convertor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Hotel Load Convertor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Hotel Load Convertor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Hotel Load Convertor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Hotel Load Convertor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Hotel Load Convertor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Hotel Load Convertor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Hotel Load Convertor  29741075  4 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM COMPONENT Cab-2  Tim-Scavenging Blower Motor  29741075  3 MACHINE ROOM Cab-2  3 MACHINE	1 H	otel Load Contactor	Lagran	Machine room Component co	ab 1	334-04-21 ,365-04-21		1
3 IM-Blower	2 Hc	otel Load Converter			1			
SAMERY CARRIED   29440117   SAMAL HARAND   29171180   3440117   29171180   3440117   29171180   3440117   29171180   3440117   29171180   3440117   29171180   3440117   34401	3 TN	И-Blower				****		Τ
SAMAL HARAND SAMA	4 TM	1- Scavenging Blower Motor		AIR CONTROL & CHEMICAL ENGG. LTD &	CGL			
Filing Free Cubical (FB-1)   29480140   29480140   70   2000	Axi	illary Control Cubical (HB-1)	25440117	PAINIAL HARAND		TOTOS, COLUMNATOR		4
Vehicle Control Unit (VCU)	) Filt	er Cubical (FB-1)	***	HIND RECTIFIER	- 10	14/21 CF30/D5281		
Vehicle Control Unit (VCU)   29741075   BOMBARDIER   BTILL/06/2021/22/PROPULSION_A/1571	Cor	mplete Control Cubicle SB-1	2017422		10	3/21 & HB1/2021/G/0052/361		_
### Traction Convertor   29741075   G.T.R. CO. (P) LTD   SM-21-04-24   S	Ver	nicle Control Unit (VCU)	205		0	G/SP1/210000		Itio
Traction Convertor   29741075   BOMBARDIER   BTIL/07/2021/20/PROPULSION_A/1638	Aux	Converter (BUR) 1	300		В	TII /06/2024/00/07		As per PO condition
### Traction Convertor   29741075   G.T.R. CO. (P) LTD   SM-21-04-24   S	Oil	Cooling Unit (OCU)		OMBARDIER	ln:	7/21 8 2004 Days		0
### Traction Convertor   29741075   G.T.R. CO. (P) LTD   SM-21-04-24   S					ne	721 & 2021G/10578/63A/0886		ď
### Traction Convertor   29741075   G.T.R. CO. (P) LTD   SM-21-04-24   S				ANDARDS RADIATORS				pe
Hotel load convertor I.V. Coupler   29741087   BOMBARDIER   BTIL/07/2021/20/PROPULSION_A/1636	IM/C	Room Scavenging Blower		TR. CO. (D. CTEMICAL ENGG. LTD & C	GL 03	/21 & AC 45200 AG		As
Hotel Load Contactor			0.000		SA	1-21-04-24		
Hotel Load Contactor	Hotel	l load convertor I.V. Coupler		IVIBARDIER	ВТ	IL/07/2021/20/PDODU		
Hote   Load Converter   29741087	luar-			MACHINE CO.	***********	AVIOLATING AVIOLATION		
TM-Blower 29440075 AIR CONTROL & CHEMICAL ENGG. LTD & CGL 05/21 AC-45443, CGLUDAM-1571  AXIIlary Control Cubical HB-2 29171192 CAYSONS ELECTRICAL PVT. LTD. 06/21 & KSEL/HB2/100  Vehicle Control Unit (VCU) 29741075 BOMBARDIER BTIL/06/2021/22/PROPULSION A/1572  OGI Croling Unit (OCU) 29470031 APPOLO 06/21 & PDS2106001  M/C Room Scav. blower 29440105 AIR CONTROL & CHEMICAL ENGG. LTD & CGL  M/C Room Scav. blower 29440129 G.T.R. CO. (P) LTD 03/21 & AC-45443, CGLUDAM-1571  SAMAL HARAND 04/21 & CF30/D5263  OGI 21 & CF30/D5263  OG/21 & SEEL/HB2/100  OG/21 & Z1807  OG/21 & Z1807  OG/21 & SEEL/HB2/100  OG/21 & PDS2100N A/1572  OGI Cooling Unit (OCU) 29741075 BOMBARDIER 07/21 & 2021G/10578/64B/0887  OCU RADIATOR 29470031 APPOLO 06/21 & PDS2106001  M/C Room Scav. blower 29440105 AIR CONTROL & CHEMICAL ENGG. LTD & CGL  M/C Room Scav. blower 29440129 G.T.R. CO. (P) LTD 03/21 & AC-45379, CGLUAAM-10345  Traction Convertor 1.V. Coupler 29741087 BOMBARDIER BTIL/07/2021/16/PROPULSION A/1628  Driver Cubin  Driver Cubin 12325  ab Heater 29140050 Mechwell modified hand brake com fit. 12325  ab Heater 29170011 K.K. IRON 1612, 1632  Traction Conditioner 29470080 RANJAN 1612, 1628, 1630, 1613  ESTATION AND 1612, 1628, 1630, 1613	note	Load Contactor	29741087	MACHINE ROOM COMPONENT C	ab-2			
TM- Scavenging Blower Motor   29440117   SAMAL HARAND   05/21   AC-45443, CGLUDAM-1571	TAAD	Load Converter						
Axillary Control Cubical HB-2			The state of the s	CONTROL & CHEMICAL TITLE		***		
Complete Control Cubical HB-2   29171192   CAYSONS ELECTRICAL PVT. LTD.   06/21 & KSEL/HB2/100	Avillar	cavenging Blower Motor	29440117 SAN	AL HARAND	L 05/2	21 AC-45443 CGLUDAM 4574		
Vehicle Control Unit (VCU)   29741075   BOMBARDIER   BTIL/06/2021/22/PROPULSION_A/1572   BOMBARDIER   D7/21 & 2021G/10578/64B/0887   D7/21 & PDS2106001   D7/21 &	Compl	loto Control Cubical HB-2			04/2	1 & CF30/D5263		
Aux. Converter (BUR) 2&3	Vehicle	R Control Cubicle SB-2		LEX INDIA BUT LTD.	06/2	1 & KSEL/HB2/100		C
29440129   G.T.R. CO. (P) LTD   SM-21-04-97   SM-21-04-9	Aux C	Control Out (VCD)	29741075 BOM	BARDIER	06/2	1 & 21807		E C
29440129   G.T.R. CO. (P) LTD   SM-21-04-97   SM-21-04-9	Oil Coo	Oline Unit (OCU)	29741075 BOM		BTIL	/06/2021/22/PROPULSION A/1573		ono
29440129   G.T.R. CO. (P) LTD   SM-21-04-97   SM-21-04-9	CU RA	ADIATOR	7/147/00		0112	1 & 2021G/10578/64B/0887		0
29440129   G.T.R. CO. (P) LTD   SM-21-04-97   SM-21-04-9			29470031 APPO		06/2	& PDS2106001		g .
Traction Convertor	1/C Ro	Dom Scav blower		ONTROL & CHEMICAL ENGG LYD & CO.	03/21	& FG415002/M-2/20-21/1027	-	be !
29741075   BOMBARDIER   BTIL/07/2021   16/PROPULSION A/1628     Aland Brake   29140050   Mechwell modified hand brake com fit.   12325     Alah Beater   29811028   INTEC CORPORATION   21C-767, 21C744   29170011   K.K. IRON   1612, 1632   29470080   RANJAN   1612, 1632   29470080   RANJAN   1612, 1638   29171131   EASTRIN & MODERN RAILTECH   122/20-4,122/20-50, 353, 884	raction	Converter	29440129 G.T.R.	CO. (P) LTD	03/21	a AC-45379, CGLUAAM-10345	$\dashv$	As
Driver Cabin	otel loa	ad convertor LV C	29741075 BOMB	JARDIER	SIVI-2	1-04-97	-	
Driver Cabin   29140050   Mechwell modified hand brake com fit.   12325		- convertor r.v. coupler	29741087	(Market   Market   Ma	BTIL	07/2021/6/PROPULSION A/1628	-	
29140050   Mechwell modified hand brake com fit.   12325	and Br.	ake		Driver Cabin			46	
ab Heater 29170011 K.K. IRON 21C-767, 21C744 Q 5 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7			29140050 Mechi	well modified hand brake so- 6:				
rew Fans 29170011 K.K. IRON 1612, 1632 1612, 1632 1612, 1628, 1630, 1613 29171131 EASTRIN & MODERN RAILTECH 122/20-4, 122/20-50, 353, 884		ter	53011058 WILEC	CORPORATION DIAKE COM III.				
XXXX - 3 - XX			29170011 K.K. IR	ON	210-76	57, 21C744	0	_
XXXX - 3 - XX			29470080 RANJA	N			- L	E C
		7VT14-6	29171131 EASTRI	N & MODERN RAUTECH	1612,1	628, 1630, 1613	s pe	one
MIVIE LA LA LA COLO.	N	CALA .		TO WEILER	122/20	-4,122/20-50, 353, <b>8</b> 84		0
SELLAS SIGN	F/I X	SHURRADER CAL	VC- 1-			SIGN SIGN AND AND AND AND AND AND AND AND AND AN		_

# DWW/PTA

# ELECTRIC LOCO HISTORY SHEET (TRS)

ELECTRIC LOCO NO: 41524 LIST OF ITEMS FITTED BY TRS

RLY: NR

SHED: LDH

PROPULSION SYSTEM: BT

WARRANTY	COVERED								0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	CONDITIONS						
QPL		04 Nos.	02 Set	04 Set	04 Nos.	02 Set	04 Nos.	ON CO	1	02 Set	02 Nos.	02 Nos.	02 Nos.	01 Set	01 Set	01 Set
MAKE/SUPPLIER		M/s PCE	M/s MATSUSHI	M/s POWER TECH	M/s EIC	M/s KK IRON	M/s. MTI		M/s AUTOMETER	M/s. KEPCO	M/s. KEPCO	M/s PATRA & CHANDA	Ms. LAXVEN	M/s TELPRO	HBL	PPS DMW
ITEM SR. NO.	CAB-2	6/2021	22865	4467,2549	1405,1404	1632	1630,1628	AALN/05/2021/030/	MCT/049	KEPCO/A1/1650	KEPCO/CUF/093	PCE/947/3/21	12	MTELS2102245	No 224 maintenance kit)	MW
ITEM	CAB-1	6/2021	22893	2518,4487	1337,1403	1620	1612,1613	AALN/05/2021/041/	MCT/060	KEPCO/A1/1649	KEPCO/CUF/097	PCE/981/3/2021	15	MTELM2102266	Battery Set No 224 (Along with Battery maintenance kit)	PPS DMW
TEM PL	ON	29610023	25984962	25984860	29610461	29170011	29470080	29860015		29178204	29178162	29700012	29500059	29200040	29680025	29600418
DESCRIPTION OF ITEM		HEAD LIGHT LAMP	LED BASED FL LIGHT	LED MARKER LIGHT	DRIVER CAB LIGHT	CAB HEATER	CREW FAN	MASTER CONTROLLER		COMPLETE PANEL A,C,D	COMPLETE CUBICLE- F PANEL	HEATER ROTERY SWITCH	DIFFRENCIAL AMPLIFIRE	SPEED IND. & REC. SYSTEM	BATTERY (Ni- Cd)	HARNESSED CABLE COMPLETE
20		~	7	m	4	2	9	7		∞	o	10	-	12	13	4





(36)

			ROOF COMMONITRIT CAR 4 0 0		
ONO			ACOF COMPONENT CAB 1 & 2		Management
5	Description	QPL /Nos.		Sr. no.	warranty
	Pantograph	2	Contransys Private Ltd. Kolkata	10082-04/21/20001	T
	Servo motor	2	Contransys Private Ltd. Kolkata	10051 04/21,10083-04/21	
	Air Intake filter Assly	2	VIKRANT	10031-04/21,100/4-04/21	
	Insulator Panto Mtg.	∞	BHEL	12/20 12/20	
- 1			MIDDLE ROOF COMPONENT	04/21,02/21	
	High Voltage Bushing	1		CCC(100/10	
	Voltage Transformer	1	RITZ	2020/51460500	
	Vacuum Circuit Breaker	1	AUTOMETER ALIANCE	2105083	
-	Insulator Roof line	6	BHEL	06/30.06/30	
-	Harmonic Filter	1	RSI SwitchGear	7484400 to 00 000	
_	Earth Switch	T	PATRA & CHANDRA	440149/8,dt.U3/21	As per IRS/PO conditions
-,	Surge Arrester	2	ABB	HCE/238/9/20	
-					
			Air Brake Components		
~1	Air Compressor	2	Elgi	FILE 0261000 8 FILE 02000	
~	Air Dryer	1	Trident	102 02 520100A &EUAS 926186B	
4	Air Brake Panel	1	faiveley	MAB24 22 WA C 6470:	
1	Auxillary Compresssor	1	CEC	MAK21-33-WAG-9,1504	
91	Contoller	2 f	faiveley	C21 0414 C21	
>	Wiper Motor	4 E	Elgi	CZI-041A,CZI-03/B	
<b>B</b>	Breakup Valve	2 f	faivelev		

SSE/Testing

SSE/ABS

Loco No. 41524 Rly: NR Shed: LDH

Month: Aug

# 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1					
		2	3	4	5	6
DIA IN mm GE	1093	1093	1093	1093	1000	1000
DIA IN mm FE	1093	1000		1093	1093	1093
WHEEL PROFILE	1093	1093	1093	1093	1093	1093
GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

# 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITIO	N NO	1	2	3	1	-	T
S.T.	NANICE				4	5	6
	MAKE	KPE	KPE	KPE	KPE	KPF	IN
G.E. BEARING	MAKE	FAG	EAC	F. 6		101 -	III
F F DELE		TAG	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	EAC	FAG	
			1710	IAG	FAG	FAG	FAG

#### 9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	0
MAKE	KM	EEF	EEE			6
BACKLASH			<u> </u>	EEE	EEE	KM
(0.254 – 0.458mm)	0.330	0.300	0.320	0.295	0.300	0.340

# 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	0
RIGHT SIDE	17.40	10.00		-	3	. 6
THOIT GIBL	17.49	18.23	18.91	17.26	17.77	18.49
LEFT SIDE	15.96	40.00			11.11	10.49
-LI TOIDL	15.96	16.66	15.20	16.69	16.18	15.51

# 11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	
1	DAMA	1 0 No. & date	S. NO.
1	DMW		DMW-614
2	DMW	-	DMW-587
3	DMW	-	DMW-551
4	DMW		
5	DMW		DMW-512
6	DMW	<u>-</u>	DMW-0336
0	DIVIVV	t l=	DMW-559

SSE/ Bogie Shop

### DIESEL LOCO MODERNISATION WORKS

Loco No. 41524

Rly: NR Shed: LDH Month: Aug 21

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period	
FRONT	RONT SL-961	ECBT		100053	As per PO/IRS	
REAR SL-948		ECBT	29105146	100074	conditions	

# 2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make:ESCORT

#### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6	
MAKE/	DMW DMW		DMW	DMW	DMW	DMW	
S.NO	21295	21208	21190	21160	21168	21361	
Ultrasonic Testing	OK	OK	OK	OK	OK	OK	

#### 4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6	
GEAR END	20-1294 CNC/21- 05		CNC/21- 342	CNC/21- 330	CNC/21- 344	CNC/21- 528	
Ultrasonic Testing	OK	OK	OK	OK	OK	OK	
FREE END	CNC/21- 476	20-1410	CNC/21- 343	CNC/21- 329	CNC/21- 341	CNC/21- 526	
Ultrasonic Testing	OK	OK	OK	OK	OK	OK	

# 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions )

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	MAKE SKF		NBC	NBC	NBC	SKF
End	PO NO. & dt	771678	771567	771567	771567	771567	771678
Free	MAKE	SKF	NBC	NBC	NBC	NBC	SKF
End	PO NO. & dt	771678	771567	771567	771567	771567	771678

# 6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	919	1000	910	936	945	822
FREE END	950	943	938	968	989	829

|--|

_	
	V
	01
Y	-
	U

As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM /SPEC NO. [1] THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		MOTOR  AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM ME-II), TYPE  O WITHOUT  COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	
BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	W	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	2
29180016	29480140		29942007	70 70
N	9		7	

1	7	
(	11	
-	/	

O As per clause 16 of Spec. No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		LL AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH AL EQUIPMENTS AND CABLING TO CLW  SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE. APPLICABLE.
Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	*	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBIC AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.
29105146	29171192		29171210	29171209	29171180
∞	o		10	11	12