
भारतीय रेल Indian Railways

पिटयाला रेलइंजिन कारखाना, पिटयाला Patiala Locomotive Morks, Patiala

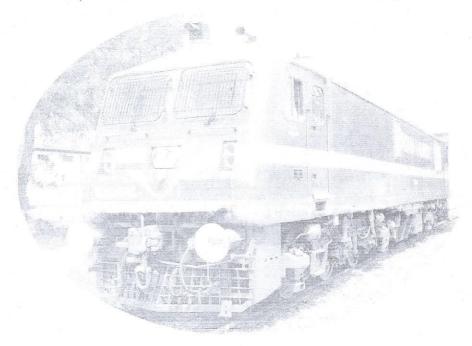

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

TYPE:

RAILWAY SHED:

PROPULSION SYSTEM:

DATE OF DISPATCH:

41577

WAG9HC

NER/GD

BT

11.01.2022

लोको निर्माण रिकार्ड



डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Patiala Locomotive Morks. Patiala

LOCO NO.: 41577

RAILWAY/SHED: NER/GD DOD: JANUARY 2022

INDEX

SN	PARA	ACTIVITIES	PAGE NO.
		Testing & Commissioning (TRS)	8
1.	1.0	Continuity Test of the cables	
4	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	0000 NORMER
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	28 2 20 20 20
	4,1	Test wiring Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.8	Verification of Converter Protection Circuits (Hardware limits)	= 11
	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	- e
	5.1	Check List	
	5.2	Safety test main circuit breaker	1 2
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	9.1
	5.3.2	Performance of Auxiliary Converters	16.05
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5.4	Auxiliary circuit 415/110	
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	a a
	5.7	Test protective shutdown SR	8
	5.8	Test Harmonic Filter	
	5.9	Test important components of the locomotive	25-26
6.	6.0	Running Trial of the locomotive	
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27
8.	8.0	Status of RDSO modifications	28
9.	1-10	Pneumatic Test Parameters	29 - 32
		Loco Check Sheet(LRS)	33
11.	-	Component History (LRS,TRS,ABS)	34-36
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13	-	Warranty Conditions as per Tenders	39 -41

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 415 77
1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer		100 ΜΩ	
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	×	100 ΜΩ	
Filter Cubicle	Earthing Choke		100 ΜΩ	
Earthing Choke	Earth Return Brushes		100 ΜΩ	
Transformer	Power Converter 1		100 ΜΩ	
Transformer	Power Converter 2		100 ΜΩ	
Power Converter 1 ·	TM1, TM2, TM3		100 ΜΩ	2 2
Power Converter 2	TM4, TM5, TM6		100 ΜΩ	=
Earth	Power Converter 1		100 ΜΩ	
Earth	Power Converter 2		100 ΜΩ	

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1		100 ΜΩ	
Transformer	BUR2		100 ΜΩ	
Transformer	BUR3		100 ΜΩ	
Earth	BUR1		100 ΜΩ	
Earth	BUR2		100 ΜΩ	
Earth	BUR3		100 M Ω	
BUR1	HB1		100 M Ω	
BUR2	HB2	1	100 ΜΩ	2
HB1	HB2		100 ΜΩ	E.
HB1	TM Blower 1		100 ΜΩ	
HB1	TM Scavenge Blower 1		100 ΜΩ	
HB1	Oil Cooling Unit 1		100 ΜΩ	
HB1	Compressor 1		100 ΜΩ	
HB1	TFP Oil Pump 1		100 ΜΩ	
HB1	Converter Coolant Pump 1		100 ΜΩ	
HB1	MR Blower 1		100 ΜΩ	
HB1	MR Scavenge Blower 1		100 ΜΩ	
HB1	Cab1		100 ΜΩ	
Cab1	Cab Heater 1		100 ΜΩ	
HB2	TM Blower 2		100 ΜΩ	=
HB2	TM Scavenge Blower 2		100 ΜΩ	
HB2	Oil Cooling Unit 2		100 ΜΩ	
НВ2	Compressor 2		100 ΜΩ	
HB2	TFP Oil Pump 2		100 ΜΩ	and the same of th
HB2	Converter Coolant Pump 2		100 ΜΩ	
НВ2	MR Blower 2		100 ΜΩ	
HB2	MR Scavenge Blower 2		100 ΜΩ	
HB2	Cab2	A 750 A 100 M 100 A 100	100 ΜΩ	in 1990 and a section of the transport of the part To a section Training
Cab2	Cab Heater 2		100 ΜΩ	

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	Du
Battery (Wire no. 2052)	Connector 50.X7-2		011
SB2 (Wire no 2050)	Connector 50.X7-3		en

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>I ο</u> ΜΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value 7 ΜΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	2K
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	DK.
Brake controller cab-1 & 2	06F, 06G	OK

fr

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4-1577

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	014
Terminal fault indication cab-1 & 2	09F	014
Brake pipe pressure actual BE electric	06H	Op
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	OK
Oil circuit transformer bogie 1	12E, 12I	014
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	0K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	oK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OK
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	OK
10KΩ± ± 10%)	- a	
UIC line	13B	OK.
Connection FLG1-Box TB	13A	OK

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 415 77

Type of Locomotive: WAP-7/WAG-9HC

2.0 Low Tension test

Page: 5 of 27

2.0 LOW Tellslott test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.9 K2
Resister to maximum current relay.	1Ω ± 10%	1-2
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.3-2
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.252
Between wire 6 & 7	0.2 Ω	0.2 12
Between wire 5 & 7	0.4 Ω	5.42
For train bus, line U13A to earthing.	10 kΩ± 10%	10.0KU
For train bus, line U13B to earthing.	10 kΩ ± 10%	10.0 KJ
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	3 00MS
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.28-52
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.2812
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.295
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0:28-12
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.18 KSI
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	2.68 + 52
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.942
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kΩ± 10%	1.8 12
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	390-52
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 kΩ± 10%	140
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	12.56

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 415 77

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cheeked OK
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheesed od

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	Checked on
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	er.
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	ou
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	Occ
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	OK
Pretest speedometer	Sheets of Group 10	OK
Pretest vigilance control and fire system	Sheets of Group 11	OK
Power supply train bus	Sheets of Group 13	Occ

Se

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 415 77
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.0.3.6
Traction converter-2 software version:	1,6,3.6
Auxiliary converter-1 software version:	1.8.2.2
Auxiliary converter-2 software version:	2.8.2.2
Auxiliary converter-3 software version:	3.8.2.2
Vehicle control unit -1 software version:	1.6.8.7
Vehicle control unit -2 software version:	1.6.8.7

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OIL
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	10%.
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1004-
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	244,

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

- II			
TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001.
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	244-
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS 0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	44.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	74.1.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	18°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1800
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1800
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	17°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	17°C
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	16°C

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 15 77

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	chercelor
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	cherkedon
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	y cheekeel en
Converter and filter contactor operation with both Power Converters during Shut Down.	 Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed. 	cheekedon

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC Page : 10 of 27

	3	
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie (cut out switch. Wait for self-test of the loco. • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open.	chelkedor
Test earth fault detection battery circuit positive & negative	By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault	o chewedou
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.	schoekedad
Time, date & loco number	Ensure correct date time and Loco number	OIL

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

4.0 Sensor Test and Converter Test

Page: 11 of 27

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10,0450	DV
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10,0400	OV
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.03VP	216
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.040	ore
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.84P 5-54Ryns	ou
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.10VP 6.42VRMS	ou

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$, $41.5V_{RMS}$ and opposite polarity.	58.5VP 41.2VPM	1 or
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.4781	on
		11.0V RM	



(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 415 77

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply 200V_{RMS} through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	25kV	250%	25 KV	25011
SLG2 G 87-XUPrim	25 kV	250%	25/LV	2501

Decrease the supply voltage below $140\,V_{RMS}$. VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLGI_G 87-XUPrim	17kV	170%	1720	170%
SLG2 G 87-XUPrim	17 kV	170%	17KV	1704-

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV	300%	30KV	300%
SLG2 G 87-XUPrim	30 kV	300%	30 KV	300%

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjust	red to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	L(Yes/No)
Try to activate the cab in driving mode:	, (Yes/No)
Contactor 218 do not close; the control	
electronics is not be working.	ь .
Turn off the variac :	L(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection;	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V _{RMS} through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	2
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V _{RMS} through variac to wire no.	(Yes/No)
1501 & 1502; Decrease the supply voltage below	W.
140V _{RMS} ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current transformer; Connect variac to wire 1521 &1522 (including the resistor at Pos. 6.11); Put loco in simulation for driving mode; Open R_3-R_4 on contact 136.3; Close VCB; supply 3.6A_{RMS} at the open wire 1521; Tune the drum of the maximum current relay Pos. 78 for correct over current value;

VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact $R_3 - R_4$ of 136.3 closed; Close VCB; Tune the /9.9 A_p at the open wire 1521;	resistor 78.1 for the current of 7.0A _{RMS}
VCB opens with Priority 1 fault message on display.	Yes/No)

St

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		-
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298 ma
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		
	Supply 333mA_{DC} to the test winding of sensor through connector $415.\text{AC}/1$ or 2 pin no. $7(+) \& 8(-)$. 230 mr
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
	Supply 342mA_{DC} to the test winding of sensor through connector $415.\text{AE/1or}$ 2 pin no. $7(+)$ & $8(-)$		340ma
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		



(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	O
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	Ou	
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	Ore	

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

1 Ste

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	close	Open	close	open	close	open	class	close	Open
BUR1 off	close	open	close	cles	open	closp	oben	open	clos
BUR2 off	open	open	close	clos	close	class	open	open	clos
BUR3 off	open	close	open	close	close	close	Oper	oper	close

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yes
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Tes
All the oil cocks of the gate valve of the transformer in open condition.	Tes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Tes
KABA key interlocking system.	The second

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	charged on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop	VCB must open. Panto must lower. Emergency brake will be	cherked on
	button 244.	applied.	
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	cheexcel ac
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	charked ar
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	Cherked on
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cheexalou
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	characol ou
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		Chelloolou



Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 415 77

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	10.2	11,0
Oil pump transformer 2	9.8 amps	10.7	11.5
Coolant pump converter 1	19.6 amps	5.9	6.2
Coolant pump converter 2	19.6 amps	5.5	6.6
Oil cooling blower unit 1	40.0 amps	43.0	123.0
Oil cooling blower unit 2	40.0 amps	42.0	122.0
Traction motor blower 1	34.0 amps	32.0	143.0
Traction motor blower 2	34.0 amps	34.5	160.0
Sc. Blower to Traction motor blower 1	6.0 amps	5'2	6.2
Sc. Blower to Traction motor blower 1	6.0 amps	3.9	5.6
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	2-7.0	95.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28 13	1100

fo

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10201	yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	635V	Yes
BURI 7303 XUIZI	DC link current of BUR1	0% (10%=50A)	1 Amp	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10101	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	636V	Yes
BUR2 7303-XUIZ I	DC link current of BUR2	1% (10%=50A)*	6 Amp	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	10 Am	Tes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	20 Am	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	. 110%(10%=10V)	1101	reg

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10121	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	636V	Yey
BUR3 7303-XUIZ I	DC link current of BUR3	1% (10%=50A)*	7 Am	Ye,
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	10 Am	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	2 1Am	Xe,
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1101	Yes

^{*} Readings are dependent upon charging condition of the battery.



Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3	
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery (charger and TM Scavenger blower 1&2	
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	chercelor
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	*
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.		

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	5.9	32.0
Machine room blower 2	15.0 amps*	5.7	32 - 0
Sc. Blower to MR blower 1	1.3 amps	1 · 6	10.0
Sc. Blower to MR blower 2	1.3 amps	1 . 6	11.7
Ventilator cab heater 1	1.1 amps	1.2	1.4
Ventilator cab heater 2	1.1 amps	1.2	1.4
Cab heater 1	4.8 amps	5.0	5'2
Cab heater 2	4.8 amps	5.0	5.2

^{*} For indigenous MR blowers.

As

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	charged or
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheixeelou
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeksel od
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chercelou
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekedou
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheefeed on
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheesed on

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	choescel on
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherked OK
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	cherked od
Earth fault detection on AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked ou
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekeel ou
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherked on

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1	Start up the loco with both the \mathcal{C} converter. Raise panto. Close VCB. Move Reverser handle to forward or	
electronics.	reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1	g chessed ox
*	electronics produces a protective shut down.	C EXECUTE I
	VCB goes offPriority 1 fault mesg. on DDU	
	appears Disturbance in Converter 1	
Measurement of	Start up the loco with both the	
protective shutdown	converter. Raise panto. Close VCB.)
by Converter 2	Move Reverser handle to forward or	/
electronics.	reverse. Remove one of the orange fibre optic feedback cable from	
	converter 2. Check that converter 2 electronics produces a protective shut	e telked on
	down.	1
	VCB goes off	
	Priority 1 fault mesg. on diagnostic display appears	
	Disturbance in Converter 2	

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	o cheesedor

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	 FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB
	 FB contactor 8.1must open. FB discharging contactor 8.41 must close Check the filter current in
Test earth fault detection harmonic filter circuit.	diagnostic laptop Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. Earth fault relay 89.6 must pick up. Diagnostic message comes that - Earth fault in harmonic filter circuit
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	cherced or
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cherkeelou
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	chelledou
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	chelpealou
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	c-folked ev

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	challod on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cheered on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	chercelou
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	chorrestus
Illuminated Push button	All illuminated push buttons should glow during the operation	chewood ou
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: For contactor 8.2: 3
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	College
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	Leeked
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Locker
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	cherry of
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	cheeced

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .	
	locomotive	For 60 seconds do not press vigilance foot switch or	
	- n	sanding foots switch or TE/BE throttle or BPVG	
		switch then	
		Buzzer should start buzzing.	
		• LSVW should glow continuously.	on
		Do not acknowledge the alarm through BPVG or	
		vigilance foot switch further for 8 seconds then:-	
		Emergency brake should be applied	
		automatically.	
		• VCB should be switched off.	
	5	Resetting of this penalty brake is possible only after	
		180 seconds by bringing TE/BE throttle to 0 and	
		acknowledge BPVR and press & release vigilance	
		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²). • Authorities the control of the cont	rej
	check starty rain interneon	• With park brake in applied condition.	
		3	
	5	• With direct loco brake applied (BP< 4.75Kg/cm²).	0 100
		e will agree than a same about a	
		• With emergency cock (BP < 4.75 Kg/cm²).	
8.	Check traction interlock	Switch of the brake electronics. The Tractive /Braking effort should ramp down VCB	de
		Tractive / Braking errort should ramp down, veb	-1
		should open and BP reduces rapidly.	
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed Cleeked	da
	braking.	should start reducing.	
10.	Check for BUR	In the event of failure of one BUR, rest of the two	
	redundancy test at	BURs can take the load of all the auxiliaries. For this	e de
	ventilation level 1 & 3 of	switch off one BUR.	
	loco operation	Auxiliaries should be catered by rest of two BURs.	
		Switch off the 2 BURs; loco should trip in this case.	
11.	Check the power	Create disturbance in power converter by switching	0 00
	converter	off the electronics. VCB should open and converter	30
	isolation test	should get isolated and traction is possible with	
		another power converter.	

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41577

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OK	or C	
2	Marker Red	OK	Ore	
3	Marker White	OU_	OK	
4	Cab Lights	OK	Qu	
5	Dr Spot Light	ou	OL	cheesed working
6	Asst Dr Spot Light	o le	ex	
7	Flasher Light	du	84	
8	Instrument Lights	OK	OK	-
9	Corridor Light	or	ON	
10	Cab Fans	OK	OU	
11	Cab Heater/Blowers	Ou	00	
12	All Cab Signal Lamps Panel 'A'	2rc	Ou	

Status of RDSO modifications

LOGO NO: 41577



Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	ØK/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	9k/Not 0k
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	OK/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Øk/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards	Ok/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Net Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Ok/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
	RDSO/2012/EL/MS/0413 Rev '1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Øk/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	OK/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	OK/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	ØK/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	OK/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Øk/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Øk/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Øk/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Øk/Not Ok
4	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	9K/Not Ok
	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Øk/Not Ok
	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09 19	Implementation of push pull scheme.	Øk/Not Ok

Signature of JE/SSE/TRS

Loco No.: 41577

DMW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	Parameters	Reference	Value	Result
1.0	Auxillary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph		0	0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	52 Sec
	Record pressure Build up time (8.5kg/cm2)			7-2-3-3
1.3	Auxillary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.55 Kg/cm2
		DMTS-014-1, 8	_	0,
	and the second of the second o	CLW's check sheet		
		no. F60.812 Version	25	-
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.5 Kg /cm2
		no. F60.812 Version	kg/cm2 closes	=
		2	5.5±0.15 kg/cm2	
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	olating Cocks & KABA co	ock by Key (KABA Key)	
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK
	Open Pan -2 isolating Cock		Panto-2 Rises	17
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	7 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.2 kg/cm2
			Min.	in 5 Min.
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and test		
	closed drain cocks. MR air pressure build up time by each	performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
)	i) with 1750 LPM compressor		i) 7 Mts. Max.	6.75 Mts
	ii) with 1450 LPM compressor		ii) 8.5 Mts. Max.	
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27.5 Sec
	compressors, Check pressure build time of individual			0
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-27.5 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.4 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.6 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10.1 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	8±0.20 kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.35 minute

Page 2 of 4 Loco No.:41577



2.7	Check unloader valve operation time					Approx. 12 Sec.	10
2.8	Check Auto Drain Valve functioning (124 & 87)						10 sec
						Operates when Compressor starts	
2.9	Check CP-I del	ivery safety valve set	ing (10/1). Run CP	D&M	test spec.	11.50±0.35kg/cm2	24 5 1/ /
	Direct by BLCP.				2 & MM3946	11.30±0.35kg/cm2	11.5 Kg/cm
2.10	Check CP-2 delivery safety valve setting (10/2). Run CP				test spec.	11 50+0 25 kg/am 2	11.514.1
	direct by BLCP		0 (111)		2 & MM3946	11.50±0.35kg/cm2	11.5 Kg/cm
2.11	Switch 'OFF' the compressors and ensure that the safety				test spec.		
	valve to reset at pressure 12 kg/cm2 less than opening				2 & MM3946		
	pressure.				. a mini3540		
2.12	BP Pressure: S	witch 'OFF' compress	or, Drain MR Pressure	CLW's ch	eck sheet	5.0±0.10kg/cm2	F 0F
5	by drain cock of 1" Main Reservoir, Start Compressor, and				12 Version 2	5.0±0.10kg/cm2	5.05
	check setting pressure of Duplex Check Valve 92F.				12 VC131011 2		Kg/cm2
2.13	FP pressure:			CLW's ch	eck sheet	6.0±0.20kg/cm2	60 // 2/22
	Fit Test Gauge	in Test point 107F FP	TP. Open isolate cock		12 Version 2	0.0±0.20kg/cin2	6.0 Kg/cm2
	136F. Check pr	essure in Gauge.	a 1 - 4 - 1 Com (CA) (CA) (CA) (CA) (CA) (CA) (CA) (CA)		12 10/3/0// 2	0.0 2 0	
3.0	Air Dryer Ope		The same of the sa				L
3.1	Open Drain Co	ck 90 of 2 nd MR to sta	rt Compressor, Jeave			Towarts about	T
	open for Test (Check Air Dryer Tower	s to change.			Tower to change	
			3.			i) Every minute (FTIL & SIL) ii)every	OK
7						two minute (KBIL)	
3.2	Check Purge Ai	r Stops from Air Drye	r at Compressor stops			two minute (KBIL)	
3.3	Check conditio	n of humidity indicate	or			Blue	Division
4.0	Main Reservoi					Diue	Blue
4.1	Put Auto Brake (A-9) in full service, Check MR Pressure air		D&M test spec.		Should be less than	2 4 11 1 =	
	leakage from b	oth cabs.			& MM3946	1 kg/cm2 in 15	0.4 Kg/cm2
						minutes	in 15
4.2	Check BP Air le	akage (isolate BP cha	ging cock-70)	D&M t	est spec.	0.15 kg/cm2 in 5	minutes
					& MM3946	minutes	0.1 Kg/cm2 in 5
						minutes	minutes
5.0	Brake Test (A	utomatic Brake ope	eration)				illilates
5.1	Record Brake P	ipe & Brake Cylinder	pressure at Each Step				
		The area of midel pressure at Each Step					
	Check proportion	onality of Auto Brake	system	CLW's ch	neck sheet		
	A			no. F60.81	.2 Version 2		
	A						
7	Auto controller	position		BC (WAG-9 & WAG-7)		BC (WAP-5)	
				Kg/cm2		Kg/cm2	
	# W #5	DD Dragging In /-					
		BP Pressure kg/c	m2	Value	Result	Value	Result
							11
			3				
	Run	5±0.1	F 0 1/2/2	0.00		1	
			5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	_
	Initial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	
	Full service	3.35±0.2	3.5 Kg/cm2	2 50±0.1			
1 113			3.3 Ng/CIIIZ	2.50±0.1	2.5Kg/ cm2	5.15±0.30	
	Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1	2 5 Kg/cm2	5.15±0.30	
	Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	



Loco No.:41577

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure Automatic Brake Controller handle is Full Service from Run	D&M test spec. MM3882 & MM3946	8±2 sec.	6 Sec
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	PD proceure falls	
	The Ineligency cock,	MM3882 & MM3946	BP pressure falls to Below 2.5	ОК
		WIWI3662 & WIWI3946	kg/cm2	OK
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.3 Kg/cm
		F60.812 Version 2	4.05- 4.35	4.5 Kg/ CITI
			kg/cm2	
			Opens at BP	3.0 Kg/cm
			2.85- 3.15	3.0 Kg/cm
			kg/cm2	
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.	1.6/ 0.112	
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC developed			
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
	WAG9 - BC 2.50 ± 0.1 kg/cm2	11	21±3 sec.	21 Sec
3.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure			
	up to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7	19	17.5±25 sec.	
	WAP9		52±7.5 sec.	46 Sec
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	72 Sec
	BP Pressure Steady at 5.5 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test : The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.2 Kg/cm
	functioning of brake.		60 Sec.	
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
7	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.	*	1 4 5 41 6	
	The test shall be carried out with all the compressors	96		
F.C.	in working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
c 0	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)		T	,
6.1	Apply Direct Brake in Full Check BC pressure			=
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.5Kg/cm2
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	6.5 Sec
20070	time	MM3882 & MM3946		

(32)

DMW/PATIALA

Loco No.:41577

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.2 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Dynamic Brake (Brake Blending)			
7.1	This test is to be done by forcing signal by laptop 06H Actual BE E1 = 100%	D&M test spec. MM3882 & MM3946	WAP7 & WAG9 - 2.5 kg/cm2. WAP5-5.15kg/cm2	
7.2	This test is to be done by forcing signal by laptop 06H Actual BE E1 = 50%	D&M test spec. MM3882 & MM3946	WAP7 & WAG9 - 1.25 kg/cm2. WAP5-2.55kg/cm2	
8.0	Parking Brake		1 77 8/	1
8.1	Press BPPB to Release brake	D&M test spec. MM3882 & MM3946	PB released Lamp off in Panel pressure in parking Brake gauge 60kg/cm2	
8.2	Press BPPB to apply parking brake		PB applied, Lamp On in panel Pressure in parking Brake gauge 0.0 kg/cm2	
8.3	Manually release and apply Parking Brake by pressing solenoid valve 30F		Verify release and application of parking Brake.	
8.4	Check Pressure in PB Gauge		6.0.±0.15 kg/cm2	
8.5	Check Brake Block clearance	D&M test spec. MM3882 & MM3946	10 mm in TBU 3 mm in Disc. Brake (WAP5)	
9.0	Sanding Equipment			
9.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	OK
.0.0	Test Vigilance equipment : As per D&M test specification			ОК

Signature of loco testing staff

Signature of SSE/Shop

Issue No.: 03 Effective Date: Oct-2021

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco) Page 1 of 1

डीजल रेळइंजन आधुनिकीकरण कारखाना पटियाला। DIESEL LOCO MODERNISATION WORKS, PATIALA

ELECTRIC LOCO CHECK SHEET

LOCO NO: 41577 Rlv: NER Shed: S. No. ITEM TO BE CHECKED Specified **Observed Value** Value Check proper Fitment of Hotel Load Converter & its output contactor. 1.1 ОК Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM 1.2 NA OK Blower 1 & 2. 91 Check proper of Fitment of oil cooling unit (OCU). 1.3 OK Check proper Fitment of HB 1 & 2 and its respected lower part on its 60 1.4 OK Check proper Fitment of FB panel on its position. 1.5 OK Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2. 1.6 OK 6 Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). 1.7 OK 01 Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2). 1.8 ОК Check proper fitment, torquing & Locking of Main transformer bolt. 6 1.10 01 Check proper fitment of compressor both side with the compressor safety OK 1.12 OK wire rope. 1.13 Proper setting of the dampers as required. OK Check proper position of Secondary Helical Springs between Bogie & Shell 61 1.14 OK Check proper fitment of Body Bogie Safety Chains fitted properly. 6 1.15 OK 6 1.16 Check proper fitment of Cow catcher. OK Check coolant level in SR 1 & 2 Expansion Tank 1.17 OK Check Transformer Oil Level in both conservators Tank (Breather Tank). 1.18 OK 0 1.19 Check proper fitment of both battery box. OK 6 Check proper fitment of Push Pull rod its bolt torquing and safety slings. 1.20 OK 6 Buffer height: Range (1085 mm to 1105 mm) Drg No IB031-02002. 1.21 1090-1105 L/S R/S mm FRONT 1103 1100 REAR 1103 1102 Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-1.22 641 mm L/S R/S SK.DL-3430. FRONT 645 644 REAR 646 645 1.23 Height of Rail Guard. (114 mm + 5 mm,-12 mm). 114 mm + L/S R/S 5 mm,-12 FRONT 115 118 mm REAR 110 115 CBC Height: Range (1085 mm to 1105 mm) Drg No- IB031-02002. 1.24 1085-1105 FRONT: 1103 mm REAR:

(Signature of SSE/Elect. Loco)

(Signature of JE/Elect Loco)

1091

-			SEL LOCO MODERNISATION WORK LOCO NO -:41577	S, PATIALA	
			Under frame component		
S.r	N. Descrition of component	PL No.			
-		TENO.	Make	Mfg. date & Serial no.	Warra
1	Shell	29171027		mg. date a serial no.	cover
2	Main Transformer			28/49 ,12/2021	upto
3	Conservator Tank BREATHER	29731057			
4	Compressor both side	29731057	T- O O 13 / FIATE IVE VISED	HRL-65-12-21-0090002021 (00900 21-6353, 21-2780	4
5	Battery Box both side	29511008		EIIHS977225/11/2015	
6	Traction Bar Cab-1	29680013	Chandra udyog & BRUTE	EUHS927335(11/21) & EUFS927020(09/21) _
7	Traction Bar Cab-2	29100069	KMRI	44/01449 (10/21)	tio
8	Side Buffer Assly Both Side	29100069	KMRI .		PO condition
9	Oil Cooling Pump both Side	11803587		7053-09-21	8
10	Transfer William Both Side	29530027	SAMAL HARAND OF INDIA PVT.LTD.	LP 09-21,10-21 &LP 10-21,09-21	0
11	Transformer oil Steel pipes	29230044	RANSAL PVT.LTD	D2474 & D2432	
12	Soft Draft Gear (CBC)	29130027	SN		per
	Secondry Helical Spring on Bog	ie 29045024		07-21 & 05-21	As
13	ELASTIC RING (Center pivot Rin	g) 29100010	SSPI		
14	Center Pivot Housing	29100057			
1	III-a-17	1 - 2 - 2 - 2 - 2 - 1	Machine room Component cab 1	417-07-21 & 420-07-21	
2	Hotel Load Contactor	29741087	Component cab 1		<u> </u>
3	Hotel Load Converter	29741087		****	T-
	TM-Blower		C ELECTRICALS COMPANY (P) LIMITE		
4	TM- Scavenging Blower Motor	29440117	G.T.R.CO (P) LTD.		
5	Axillary Control Cubical (HB-1)	29171180 H	CAYSONS ELECTRICALS PVT. LTD.	ST-21-08-285	
6	Filter Cubical (FB-1)	29480140	AUTOMETER ALLIANCE LTD.	10/21 & KSEL/HB-1/127	5
7 (Complete Control Cubicle SB-1	29171209	HIND RECTIFIERS LIMITED	09/21 & AALN/09/2021/03/HB2G9/017	per PO condition
8 1	Vehicle Control Unit (VCU)	29741075 B	OMBARDIER LIMITED	05/21 & SB1/2021/H/0069/631	puo
9 1	Aux. Converter (BUR) 1	29741075 B	OMPARTIER	BTIL/11/2021/31/PRPULSION_A/2017	00
10 0	OIL COOLING BLOWER(OCB)	29470043 P	DETELLE	12/21 & 2021M/10202/20A/0153	0
11 (OCU RADIATOR .	29470031 8	TANDARD RADIATORS	PDS2107001	ē
12 A	И/C Room Blower	29440105 G	TANDARD RADIATORS T.R CO (P) LTD.	10/21 & 051-SRPL	
13 N	A/C Room Scavenging Blower	29440129 G	T.R CO (P) LTD.	MF-21-07-123	As
4. T	raction Convertor	29741075 BG	DAGRADAGE	SM-21-08-320	
.5 H	otel load convertor I.V. Coupler	29741087	JIVIBARDIER	BTIL/11/2021/27/PRPULSION_A/2010	
			ACHINE DOOM OO	7 323/01/2010	
H	otel Load Contactor	29741087	ACHINE ROOM COMPONENT Cab-2		
2 H	otel Load Converter	29741087			
110	M-Blower		ELECTRICALS COMPANY (P) LIMITED		
111	W- Scavenging Blower Motor	29440117 G	T.R.CO (P) LTD.	- CHAIDZIIIII	
Ax	killary Control Cubical HB-2	29171192 AL	TOMETER ALLIANCE LTD.	ST-21-08-299	c
Co	omplete Control Cubicle SB-2	29171210 TR	OLEX INDIA PVT. LTD.	07/21 & AALN/07/2021/04/HB2G9/062	condition
Au	ehicle Control Unit (VCU)	29741075 BO	MBARDIER	11/21 & 211033	pu
Au	IX. Converter (BUR) 2&3	29741075 BO	MBARDIER	BTIL/11/2021/31/PRPULSION_A/2018	8
1011	L COOLING BLOWER(OCB)	29470043 PD	STEFLS	10/21 & 2021M/10320/5B/0151	0
M	L COOLING RADIATOR (OCR)	29470031 STA	ANDARD RADIATORS	PD\$2107007	
M/	/C Room blower	29440105 G.T	R CO (P) LTD	10/21 & 056-SRPL	per
Tra	C Room Scav. blower -	29440129 G.T	RCO(P) ITD	MF-21-10-312	As
Hot	oction Convertor	29741075 BOI	MBARDIER	SM 21-09-361	
Tuor	tel load convertor I.V. Coupler	29741087		BTIL/11/2021/27/PRPULSION_A/2009	
Har	nd Brake		Driver Cabin	50 (a) in any in gr	
	Conditioner	29140050 Mod	dif. Mechwell com.fitt.	12869	
Cab	Heater	29811028 KI	KI POWER DRIVES PVT. LTD		2 -
	w Fans	73110011 F2C	JRIS	11, 40	condition
	er Seats	29470080 RAN	Office and the second s	801, 824, 804, 889	of local
		29171131 FEB		104, 102, 154, 110	200
SIG	N. J. Jupinder grage SSE/LAS			V/L-	
				NAME TO STATE OF COMMANDER	

डी.एम.डब्लयु D.M.W. DWW/PTA

ELECTRIC LOCO HISTORY SHEE, (TRS)

ELECTRIC LOCO NO: 41577

LIST OF ITEMSFITTED BY ECS

0,

RLY: NER

SHED: GD

PROPULSION SYSTEM: BT

WARRANTY	COVERED					a	2		AS PER IRS / P.O CONDITIONS		Э		3		
OPL		04 Nos.	02 Set	04 Set	04 Nos.	02 Set	04 Nos.	02 Nos.	02 Set	02 Nos.	02 Nos.	02 Nos.	01 Set	01 Set	01 Set
MAKE/SUPPLIER		M/s PCE	M/s SCS	M/s MASTUSHI	M/s EIC	M/s ESCORT	M/s. RANJAN	M/s WOAMA	M/s. KEPCO	M/s. CROMPTON	M/s PATRA & CHANDA	Ms. TROLEX	M/s TELPRO	HBL	PPS DMW
R. NO.	CAB-2	9/2021	FLE03694	138870,138819	2716,2752	86	756,800	3728	KEPCO/A1/1938	CG/CF/21040729	PCE/194/7/2021	7625	MTELS2108172	ery Set No 278 Battery maintenance kit)	MW
ITEM SR. NO	CAB-1	9/2021	FLE03724	138837,138776	2721,2725	06	768,812	3211	KEPCO/A1/1920	CG/CF/21040731	PCE/158/7/2021	7719	MTELM2108172	Battery Set No 278 (Along with Battery maintens	PPS DMW
ITEM PL	NO.	29610023	25984962	25984860	29610461	29170011	29470080	29860015	29178204	29178162	29700012	29500059	.29200040	29680025	29600418
DESCRIPTION OF ITEM		HEAD LIGHT LAMP	LED BASED FL LIGHT	LED MARKER LIGHT	DRIVER CAB LIGHT	CAB HEATER	CREW FAN	MASTER CONTROLLER	COMPLETE PANEL A,C,D	COMPLETE CUBCLE- F PANEL	HEATER ROTER' SWITCH	DIFFRENCIAL AMPLIFIRE	SPEED IND. & REC. SYSTEM	BATTERY (Ni- C¢)	HARNESSED CABLE COMPLETE
Z S		_	7	m	4	2	9	7	ω	0	10	-	12	13	44

SSETTRE





36

		ROOF COMPONENT CAB 1 & 2	77
S.No. Description	QPL /Nos	Supplier	Sr. no
1 Pantograph	2	Cotrasys Pvt.Ltd	10814-10/21 10806-10/21
2 Servo motor	2	Cotrasys Pvt.Ltd	
3 Air Intake filter Assly	2	VIKRANT	
4 Insulator Panto Mtg.	8	IEC	06/21,06/21
		MIDDLE ROOF COMPONENT	
5 High Voltage Bushing	ר	ABB	IZCD12986386
6 Voltage Transformer	ъ	Sadtem	2021-N,625428
7 Vacuum Circuit Breaker	1	Autometer Alliance	AALN/08/2021/018/VCBA/237
8 Insulator Roof line	9	IEC	5/21,5/21
9 Harmonic Filter	1	Rsi Switchgear	448182/5
10 Earth Switch	1	Autometer Alliance	AALN/07/2021/011/FS/245
11 Surge Arrester	2	CG POWER	9851190 9851191
		Air Brake Components	
	2	Elgi	EUFS927020A,EUHS927335B
13 Air Dryer	Ы	PRAG	2487-8-21
14 Auxillary Compresssor	1	ELGI	BUDS104444
15 Air Brake Panel	1	Faively	JUNE-21-20-WAG9-1575
16 Contoller	2	Faively	E21-075A, E21-072B
17 Breakup Valve	2	Faively	
18 wiper motor	4	FIG	

SSE/Testing

E/ABS

DIESEL LOCO MODERNISATION WORKS

Loco No. 41577

1. BOGIE FRAME:

ROGIE	FRAME NO	Make	DINI			
FRONT	SI-611		PL No.	PO No. & dt.	Warranty Period	
	01-011	ANUP	2011-	101276	As per PO/IRS	
REAR	SL-564	ANUP	29105146	1010==	conditions	
REAR	SL-564	ANUP	29105146	101276	1	

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: KNOOR/ESCORT.

3. AXLES:

		0			T
	-	3	4	5	6
DMW	DMW	DMW	DMW		Dans
21997	21863	21002		DIVIV	DMW
014	2.000	21903	22012	21996	21931
OK	OK	OK	OK	OK	01/
	DMW 21997 OK	DIVIV	DIVIVV	21997 21863 21983 22012 OK OK OK	21997 21863 21983 22012 21996 OK OK OK OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	2	T		7
GEAR END	CNC/21-	CNC/21-	3	4 .	5	6
8	1694	1696	CNC/21-	CNC/21-	CNC/21-	CNC/21
Ultrasonic Testing	OK	OK		1716	1652	1379
EDEE END	CNC/21-	011	OK	OK	OK	OK
FREE END	1699	CNC/21- 1680	CNC/21- 1682	CNC/21- 1712	CNC/21-	LMS-21-
Ultrasonic Testing	OK	OK			1- CNC/21- 1653	H-34
		OIL	OK	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (PL-No. 29010020, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	1			1		
	1	2	3	4	5	6
	NBC	NBC	NBC	NBC	NRC	NBC
PO NO. & dt	01616	01616	01616		-	INBC
MAKE	NDO			01616	01616	01616
1000	INBC	NBC	NBC	NBC	NBC	NBC
FUNU. & dt	01616	01616	01616	01616	01616	.01616
	AXLE POSITION NO MAKE PO NO. & dt MAKE PO NO. & dt	MAKE NBC PO NO. & dt 01616 MAKE NBC	MAKE NBC NBC PO NO. & dt 01616 01616 MAKE NBC NBC PO NO. & dt	MAKE NBC NBC NBC PO NO. & dt 01616 01616 MAKE NBC NBC NBC PO NO. & dt 04646	MAKE NBC NBC NBC NBC PO NO. & dt 01616 01616 01616 01616 MAKE NBC NBC NBC NBC PO NO. & dt 01616 01616 NBC NBC	MAKE NBC NBC

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4		
BULL GEAR END	000		3	4	5	6
	003	829	845	917	991	075
FREE END	915	852	855	001	001	0/3
		002	000	864	959	887



Loco No. 41577

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1				1	
	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092 5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1000 -	1002.0
WHEEL PROFILE	014		1002.0	1002.0	1092.5	1092.5
GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITIO	NNO	1	2	3	1		
ST	MAKE	LEVE		0	4	5	6
U.1.	IVIANE	KPE	KPE	KPE	KPE	KP	KP
G.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAC	F 0 0
F.E. BEARING	MANICE				170	FAG	FAG
· · · · · · · · · · · · · · · · · · ·	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	
MAKE	KM	KM	KM	KM	KM	KM
BACKLASH 0.254 - 0.458mm)	0.330	0.320	0.340	0.340	0.320	0.330

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

XLE POSITION NO	2	3	1	E	0
RIGHT SIDE	16.19	15.30	17.30	17.70	10
LEFT SIDE	16 47	18	16.00	17.70	19
LLI I OIDL	16.47	18	16.80		17.40

11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

XLE POSITION NO	MAKE	PO No. & date	S. NO.
1	BHEL	566628	
2	BHEL	566628	201210666
3	BHEL	566628	201210665
4	BHEL	566628	201210663
5	BHEL	566628	201210663
6	BHEL	566628	201210667

W. Basis

	TOP 12 C	COSTLIEST ITEMS OF WAG9HC LOCO WITH	TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS
S No	PL No	DESCRIPTION	Warranty Period
\leftarrow	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
. 2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
m	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT 8	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF WAP-7 LOCO TO CLW SPEC. NO. CLW/MIS/3/152 ALT-SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	SET OF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018.	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

ιΩ	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.
9	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
_	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.

∞	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMIMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH AL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.