

भारतीय रेल Indian Railways

डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernation Chorks, Patiala



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

41584

TYPE:

WAG9HC

RAILWAY SHED:

SCR/LGD

PROPULSION SYSTEM:

BT

DATE OF DISPATCH:

28.01.2022

लोको निर्माण रिकार्ड



डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernisation Ulorks. Patiala

LOCO NO.: 41584

RAILWAY/SHED: SCR/LGD DOD: JANUARY 2022

INDEX

SN	PARA	ACTIVITIES	PAGE NO.
		Testing & Commissioning (TRS)	<u> </u>
1.	1.0	Continuity Test of the cables	
	1.1	Continuity Test of Traction Circuit Cables	A
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	7 40
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.8	Verification of Converter Protection Circuits (Hardware limits)	
	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	16.05
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5.4	Auxiliary circuit 415/110	
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
	5.8	Test Harmonic Filter	
	5.9	Test important components of the locomotive	25-26
6.	6.0	Running Trial of the locomotive	25-26
7.	7.0	Final Check List to be verified at the time of Loco dispatch	
8.	8.0	Status of RDSO modifications	28
9.	1-10	Pneumatic Test Parameters	29 - 32
10.		Loco Check Sheet(LRS)	33
11.	-	Component History (LRS,TRS,ABS)	34-36
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13	-	Warranty Conditions as per Tenders	39 -41

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	CR	100 ΜΩ	Res 12
Filter Cubicle	Terminal Box of Harmonic Filter	OF	100 ΜΩ	sour
	Resistor (Roof)			
Filter Cubicle	Earthing Choke	00	100 ΜΩ	10000
Earthing Choke	Earth Return Brushes	Oz	100 ΜΩ	Soor
Transformer	Power Converter 1	CA	100 ΜΩ	loves
Transformer	Power Converter 2	00	100 ΜΩ	Sour
Power Converter 1	TM1, TM2, TM3	08	100 ΜΩ	Sour.
Power Converter 2	TM4, TM5, TM6	ON	100 ΜΩ	Dou A
Earth	Power Converter 1	OR	100 ΜΩ	1002
Earth	Power Converter 2	CE	100 ΜΩ	jevor

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	Gr.	100 ΜΩ	Swa
Transformer	BUR2	OFL	100 ΜΩ	Son
Transformer	BUR3	CO	100 M Ω	1000
Earth	BUR1	OF	100 ΜΩ	1000
Earth	BUR2	OF	100 M Ω	1500
Earth	BUR3	CSR	$100~{ m M}\Omega$	ieon
BUR1	HB1	OK	100 M Ω	Seor
BUR2	HB2	CX	100 M Ω	2002
HB1	HB2	BR	100 ΜΩ	2001
HB1	TM Blower 1	OF	100 ΜΩ	1500
HB1	TM Scavenge Blower 1	OF	100 M Ω	1001
HB1	Oil Cooling Unit 1	GR	100 ΜΩ	1500
HB1	Compressor 1	OF	100 M Ω	2001
HB1	TFP Oil Pump 1	O.	100 ΜΩ	2002
HB1	Converter Coolant Pump 1	OR.	100 ΜΩ	1502
HB1	MR Blower 1	6p	100 ΜΩ	soon
HB1	MR Scavenge Blower 1	OR	100 ΜΩ	/ eve
HB1	Cab1	OB	100 ΜΩ	2502
Cab1	Cab Heater 1	OF	100 ΜΩ	2502
HB2	TM Blower 2	OF	100 MΩ	(est
HB2	TM Scavenge Blower 2	OP	100 ΜΩ	200
HB2	Oil Cooling Unit 2	OB	100 M Ω	1000
HB2	Compressor 2	Op	100 ΜΩ	1 con
HB2	TFP Oil Pump 2	OB	100 ΜΩ	1000
HB2	Converter Coolant Pump 2	610	100 M Ω	year
HB2	MR Blower 2	GE	100 ΜΩ	your
HB2	MR Scavenge Blower 2	000	100 M Ω	300r
HB2	Cab2	00	100 ΜΩ	3002
Cab2	Cab Heater 2	00	100 ΜΩ	Seva

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	br-
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.X7-3		ove

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>1</u> ° MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value <u>6a</u> MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	ok
Memotel speed sensor	10A	٥K
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	OK

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	OK
Terminal fault indication cab-1 & 2	09F	OK
Brake pipe pressure actual BE electric	06H	OK
Primary current sensors	12B, 12F	0K
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	OK
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	DK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	2K
Traction motor speed sensors (2nos) . and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	ok
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= $10K\Omega \pm 10\%$)	13A	ex.
UIC line	13B	OK
Connection FLG1-Box TB	13A	OK

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.942
Resister to maximum current relay.	1 Ω ± 10%	12
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.32
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.25
Between wire 6 & 7	0.2 Ω	0.252
Between wire 5 & 7	0.4 Ω	0-45
For train bus, line U13A to earthing.	10 k Ω ± 10%	10.0K2
For train bus, line U13B to earthing.	10 k Ω ± 10%	398 KZ
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	NM Eagl
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/2.	≲0.3 Ω	0-28 12
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	108.0
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.2852
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ ± 10%	2.2KM
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.752
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9 KSL
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kΩ± 10%	1.8kr
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	3902
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	10.52

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cheeped on
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheeped on

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	etered or
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	2K
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	OK
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	DK
Pretest speedometer	Sheets of Group 10	OK
Pretest vigilance control and fire system	Sheets of Group 11	OK
Power supply train bus	Sheets of Group 13	01-

St

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

LUCC	omotive No.: 7	
3.0	Downloading of Software	

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.0.3.6
Traction converter-2 software version:	1.0.3.6
Auxiliary converter-1 software version:	1.8.2.2
Auxiliary converter-2 software version:	2.8.2.2
Auxiliary converter-3 software version:	3.8.2.2
Vehicle control unit -1 software version:	1.6.8.7
Vehicle control unit -2 software version:	1.6.8.7

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured
			Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	DIL
TE/BE at 'o' position	FLG1; AMSB_0101- Xang Trans	Between 9% and 11%	104-
from both cab	FLG2; AMSB_0101- Xang Trans		
TE/BE at 'TE maximal'	FLG1; AMSB_0101- Xang Trans	Between 99 % and 101 %	1001-
position from both cab	FLG2; AMSB_0101- Xang Trans		
TE/BE at 'TE minimal'	FLG1; AMSB_0101- Xang Trans	Between 20 % and 25 %	257,
position from both cab	FLG2; AMSB_0101- Xang Trans		

Se

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4-1584

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101-	Between 99% and 101%	1001.
TE/BE at 'BE Minimal' position from both cab	XangTrans FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	241.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	44%
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	74.1-
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	17°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1700
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	17°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	18.5
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1800
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	17°C



(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	Charteelon
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	cherkedou
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	eleweda
Converter and filter contactor operation with both Power Converters during Shut Down.		pchoekedou

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.	
	• Check that FB contactor 8.1 is open.	geterked ou
	• Check that FB contactor 8.2 is open.	of checken of
	After raising panto, closing VCB, and setting TE/BE	
	FB contactor 8.1 closes.	
	• FB contactor 8.2 remains open.	9
Test earth fault detection battery	By connecting wire 2050 to	}
circuit positive & negative	earth, create earth fault	
	negative potential.	
	 message for earth fault 	& checked on
	By connecting wire 2095	
	to earth, create earth	
	fault positive potential.	1
	 message for earth fault 	
	OCCUPATION WOODSHIP	
Test fire system. Create a smoke in	When smoke sensor-1 gets	-
the machine room near the FDU.	activated then	1)
Watch for activation of alarm.	Alarm triggers and fault mossage priority 2	
	message priority 2	
8 0	appears on screen. When both smoke sensor	o Cheeked on
	1+2 gets activated then	
	A fault message priority	
	1 appears on screen and	
	lamp LSF1 glow.	
•	Start/Running interlock occurs and	
	TE/BE becomes to 0.	
Fime, date & loco number	Ensure correct date time and Loco	or
	number	

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10-04~1	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.04 Vp	or
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.0419	OR
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.0510	SV.
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.9 VP 5.5 VRMS	OK
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.10VP 6.42VRMs	OK

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$, $41.5V_{RMS}$ and opposite polarity.	58.5Vl)	ox.
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.4Vl	2hr

11. avems

fr

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25-KV	250.1.
SLG2_G 87-XUPrim	25 kV	250%	25 KV	2509-

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	170%
SLG2 G 87-XUPrim	17 kV	170%	17KV	170%.

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	BOKY	300%
SLG2_G 87-XUPrim	30 kV	300%	BOKV	300/.

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

2021 (Ref: WI/TRS/10) DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjusted to approx 68%		
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	√(Yes/No)	
Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.	L(Yes/No)	
Turn off the variac :	, (Yes/No)	
Contactor 218 closes; the control electronics is be		
working		
Test Under Voltage Protection		
	()/ (0/)	
Activate the cab in cooling mode; Raise panto;	(Yes/No)	
Supply 200V _{RMS} through variac to wire no. 1501		
& 1502; Close the VCB; Interrupt the supply		
voltage		
The VCB goes off after 2 second time delay.		
Again supply 200V _{RMS} through variac to wire no. 1501 & 1502; Decrease the supply voltage below	(Yes/No)	
A CONTROL OF THE PROPERTY OF T		
140V _{RMS} ± 4V; Fine tune the minimum voltage relay so that VCB opens.		

4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current transformer; Connect variac to wire 1521 &1522 (including the resistor at Pos. 6.11); Put loco in simulation for driving mode; Open $R_3 - R_4$ on contact 136.3; Close VCB; supply 3.6A _{RMS} at the open wire 1521; Tune the drum of the maximum current relay Pos. 78 for correct over current value;		
VCB opens with Priority 1 fault message on	, (Yes/No)	
10 Sandan Colo (Managara Carangara) in Managara Colo (Managara Carangara) in Colo (Managara) in Colo (Managa		
display.		
Keep contact $R_3 - R_4$ of 136.3 closed; Close VCB; Tune the resistor 78.1 for the current of 7.0 A_{RMS}		
/9.9A _p at the open wire 1521;		
VCB opens with Priority 1 fault message on	(Yes/No)	
display.		
display.		

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	0
Primary return current	Supply 90mA_{DC} to the test winding of sensor through connector $415.\text{AA}/1\text{or}$ 2 pin no. $7(+)$ & $8(-)$		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298mA
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		330 mp
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
8	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		342ma
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		

fr

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	O BIK
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	POK
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK	
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK	

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

fr.

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	clos	open	clos	open	close	open	clos	close	open
BUR1 off	cless	open.	cless	clos	open	close	open	Obey	close
BUR2 off	open	open	0838	closs	closs	clos	Opes	oben	clos
BUR3 off	open	close	oben	close	-	close	open	Oper	close

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	40)
No rubbish in machine room, on the roof, under the loco.	Yey
All the electronic Sub-D and connectors connected	Yey
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	7es
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Ton

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.



DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result	
Emergency stop in cooling mode			Chalpadou	
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN	VCB must open. Panto must lower.	Ackad od	
	position. Close the VCB. Push emergency stop button 244.	Emergency brake will be applied.	20	
Under voltage protection in cooling mode	Under voltage Raise panto in cooling rotection in mode. Close the VCB.		cheesed on	
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Checked on	
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	Charleson on	
Shutdown in driving mode	the VCB. Bring the BL-key in O		cheekedon	
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	chlekedon	
Interlocking pantograph- VCB in driving mode	terlocking Intograph- CB in driving Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		chered on	

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	11-1	14.0
Oil pump transformer 2	9.8 amps	11.3	13.0
Coolant pump converter 1	19.6 amps	5.9	7.9
Coolant pump converter 2	19.6 amps	5.6	7.9
Oil cooling blower unit 1	40.0 amps	39.0	175.0
Oil cooling blower unit 2	40.0 amps	38.3	131.0
Traction motor blower 1	34.0 amps	32.7	169.0
Traction motor blower 2	34.0 amps	32.3	131.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.5	31.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.2	26.3
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.3	126.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.0	117.3

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 1584

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	1045	Yes
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636V	709
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	due HI	jes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1050V	Yes
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	6 Amb	Tes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Amp	Yen
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12-Asm)	Tes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1101	Yes

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10501	Yey
BUR3 7303- XUUZI	DC link voltage of BUR3	60% (10%=100V)	6370	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	22 Amp	Tes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12 Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1101	Yes

^{*} Readings are dependent upon charging condition of the battery.

St

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3	
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery C charger and TM Scavenger blower 1&2	
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	Leeke
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.		

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary	Typical	Measured phase	Measured
machine	phase	current	starting current
	current		
Machine room blower 1	15.0 amps*	5.7	83.D
Machine room blower 2	15.0 amps*	5.6	26.5
Sc. Blower to MR blower 1	1.3 amps	1.8	10.7
Sc. Blower to MR blower 2	1.3 amps	1.8	12.5
Ventilator cab heater 1	1.1 amps	1.5	1.6
Ventilator cab heater 2	1.1 amps	1.5	1.6
Cab heater 1	4.8 amps	4.8	4.9
Cab heater 2	4.8 amps	4.8	4.3

^{*} For indigenous MR blowers.

Se

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cfeikeel ou
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekeelou
Earth fault detection on negative patential of DC Link of Converter 1	Traction converter manufacturer to declars the successful apprentian and demonstrate the same to the DMW supervisor.	Charged on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chelked on
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherpedon
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	c Reeked on

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeped on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheked ok
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked on
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	Checkeel on
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekeel od
of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Charked on
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Chacked on

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears	c Loeneel ou
D.0.	Disturbance in Converter 1	
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	e cheekeeley

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	exerced on

St

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB
	 FB contactor 8.1must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	cholked ou
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheekedok
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	eteixed or
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	cheeped ae
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	c Lelped ou

fr

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

		. ago. 20 or 27
Marker light	Both front and tail marker light should glow from both the cabs	efected on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	chelpedae
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cherred on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	cherocela
Illuminated Push button	All illuminated push buttons should glow during the operation	Cheekada
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria:	For contactor 8.1: For contactor 8.2:
) (1) (2) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4	The minimum contact pressure is 54 to 66 Newton.	
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m ³ /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks	
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Loucedon	
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	cheesed	
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	cholosof	
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	Locked	
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	chesod	

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

peration of the locomotive brakes are released it., 8 Kc 1 Kg/cm². For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then • Buzzer should start buzzing. • LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP<4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). 7. Check traction interlock Check traction interlock Switch of the brake electronics. The Tractive/Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with another power converter.	6.	Check vigilance	Sat the speed more than 1.5 limits and	
locomotive For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP<4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. The Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			Set the speed more than 1.5 kmph and ensure that	6
sanding foots switch or TE/BE throttle or BPVG switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:- Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. The check the power converter off the electronics. VCB should open and converter should get isolated and traction is possible with		1 2		
switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:- Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP<4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.7		locomotive	Mar. 0-0000 V. 17 EU	
Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock With park brake in applied condition. With direct loco brake applied (BP<4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²)				
LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With park brake in applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Check traction interlock Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. Greated start reducing Greated start reducin			0 188000	
Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75 Kg/cm²). • With automatic train brake applied (BP< 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With automatic train brake applied (BP< 4.75 Kg/cm²). • With automatic train brake applied (BP< 4.75 Kg/cm²). • With emergency cock (BP < 4			85000	Plan polak
vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (2		Chester
Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with			1.77	
automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75 Kg/cm²). • With automatic train brake applied (BP< 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURS can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter isolation test checked w c				
VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²)		2		
Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter isolation test should get isolated and traction is possible with				
180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter isolation test Sould get isolated and traction is possible with		a I		
acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with		9		
foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter isolation test Solution test				
Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. P. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Description: With automatic train brake applied (BP< 4.75Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. P. Check regenerative brake should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		©		
With park brake in applied condition. • With park brake in applied condition. • With direct loco brake applied (BP<4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with	7			
With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. Gheck regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching converter isolation test Should get isolated and traction is possible with Check state Check calls	7.	Check start/run interlock	,	cheekedore
With automatic train brake applied (BP<4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. P. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. In the event of failure of one BUR, rest of the two redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching converter isolation test should get isolated and traction is possible with			With park brake in applied condition.	NA
With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Gheck regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing.			• With direct loco brake applied (BP< 4.75Kg/cm ²).	9
• With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed braking. In the event of failure of one BUR, rest of the two redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter isolation test Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test			• With automatic train brake applied (BP<4.75Kg/cm ²).	chercelon
Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 10. Check the power converter isolation test 11. Check the power should get isolated and traction is possible with 12. Check the brake electronics. The Tractive /Braking effort should ramp down, VCB				3
9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 11. Check the power converter isolation test 2. Check regenerative should start reducing. 12. Check regenerative should start reducing. 13. Check the power should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 14. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	8.	Check traction interlock	Switch of the brake electronics. The	0
9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 11. Check the power converter isolation test 2. Check regenerative should start reducing. 12. Check regenerative should start reducing. 13. Check the power should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 14. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		ar.	Tractive /Braking effort should ramp down, VCB	6 checked as
9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 11. Check the power converter isolation test 2. Check regenerative should start reducing. 12. Check regenerative should start reducing. 13. Check the power should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 14. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			should open and BP reduces rapidly.	
10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 11. Check the power converter isolation test 12. Check the power should get isolated and traction is possible with 13. Check for BUR In the event of failure of one BUR, rest of the two BURs, rest of the two BURs is checked as the load of all the auxiliaries. For this switch off one BUR. 14. Check the power converter by switching off the electronics. VCB should open and converter isolation test	9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	Ectoerodou
redundancy test at ventilation level 1 & 3 of loco operation Check the power converter isolation test Rurs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		braking.	should start reducing.	John
ventilation level 1 & 3 of loco operation Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Check the power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with	10.	TO SECURE AND A SECURE OF THE		0
loco operation Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		•/	20 20	chercedae
Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching converter off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with			The state of the s	
11. Check the power create disturbance in power converter by switching converter off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with		loco operation		
converter off the electronics. VCB should open and converter should get isolated and traction is possible with				
isolation test should get isolated and traction is possible with	11.			
		converter	off the electronics. VCB should open and converter	checkeda
another power converter.		isolation test	should get isolated and traction is possible with	
			another power converter.	

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41584

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OF	or (
2	Marker Red	OK	DK	9
3	Marker White	0 K	OK	
4	Cab Lights	OK	OK	
5	Dr Spot Light	OK	0 K	e Losked with Kind
6	Asst Dr Spot Light	OK	OK	chelled working
7	Flasher Light	OK	OK	
8	Instrument Lights	01	DIC	
9	Corridor Light	ov	DK	
10	Cab Fans	or	0 ×	
11	Cab Heater/Blowers	OK	OK	
12	All Cab Signal Lamps Panel 'A'	ON	OK	

Status of RDSO modifications



LOCO NO: 4/84

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08		
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	9K/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Øk/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	OK/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	OK/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Øk/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase-locomotives.	Ok/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Øk/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Øk/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Øk/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Ok/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Ok/Not Ok
21	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09.19	Implementation of push pull scheme.	Ok/Not Ok





DMW/PATIALA

Loco No.: 41584

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	Parameters	Reference	Value	Result
1.0	Auxillary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph		0	0
	Reservoir (Ensure Pantograph gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	56 Sec
2	Record pressure Build up time (8.5kg/cm2)		-	
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.5 Kg/cm2
		DMTS-014-1, 8	_	
		CLW's check sheet		
		no. F60.812 Version		
	· · · · · · · · · · · · · · · · · · ·	2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.5 Kg/cm2
		no. F60.812 Version	kg/cm2	
		2	closes 5.5±0.15	5.5kg/cm2
			kg/cm2	
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Iso	olating Cocks & KABA co	ock by Key (KABA Key)	
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	OK
	September Septem		Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10	Pantograph line air leakage		0.7 kg/cm2 in 5	0.45 kg/cm2
			Min.	in 5 Min.
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and test		
	closed drain cocks. MR air pressure build up time by each	performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		- :
	i) with 1750 LPM compressor		i) 7 Min. Max.	6min
	ii) with 1450 LPM compressor		ii) 8.5 Min. Max.	
	4	50		
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors.		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27.5 See
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-27.5 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.4 Kg/cm2
		MM3882 &	kg/cm2	
		MM3946	Opens at	
			5.60±0.15kg/cm2	5.6 Kg/cm2



DMW/PATIALA

Loco No.: 41584

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10 Kg/cm2
		MM3882 & MM3946	kg/cm2 Opens at 8±0.20 kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.5 minute
2.7	Check unloader valve operation time		Approx. 12 Sec.	9 sec
2.8	Check Auto Drain Valve functioning (124 & 87)		Operates when Compressor starts	
2.9	Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP.	D&M test spec. MM3882 & MM3946	11.50±0.35kg/cm2	11.5 Kg/cm2
2.10	Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP	D&M test spec. MM3882 & MM3946	11.50±0.35kg/cm2	11.5 Kg/cm2
2.11	Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 12 kg/cm2 less than opening pressure.	D&M test spec. MM3882 & MM3946		
2.12	BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, and check setting pressure of Duplex Check Valve 92F.	CLW's check sheet no. F60.812 Version 2	5.0±0.10kg/cm2	5.0 Kg/cm2
2.13	FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.	CLW's check sheet no. F60.812 Version 2	6.0±0.20kg/cm2	6.0 Kg/cm2
3.0	Air Dryer Operation			
3.1	Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change.		Tower to change i) Every minute (FTIL & SIL) ii)every two minute (KBIL)	ОК
3.2	Check Purge Air Stops from Air Dryer at Compressor stops		two minute (RDIE)	
3.3	Check condition of humidity indicator		Blue	Blue
4.0	Main Reservoir Leakage Test			
4.1	Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.	D&M test spec. MM3882 & MM3946	Should be less than 1 kg/cm2 in 15 minutes	0.75 Kg/cm2 in 15 minutes
4.2	Check BP Air leakage (isolate BP charging cock-70)	D&M test spec. MM3882 & MM3946	0.15 kg/cm2 in 5 minutes	0.1 Kg/cm2 in 5 minutes



Page 3 of 4

DMW/PATIALA

Loco No.: 41584

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

5.0	Brake Test (Aut	omatic Brake ope	eration)	4						
5.1	Record Brake Pipe	e & Brake Cylinder	pressure at Each Ste	ер						
	Check proportion	ality of Auto Brake	system	CLW's check sheet no. F60.812 Version 2						
	Auto controller po	osition		BC (W.	AG-9 & '	WAG-7)Kg/cm	12			
		BP Pressure kg/c	m2	Value	a		Result			
						g.	-			
1 2	Run	5±0.1	5.0 Kg/cm2	0.00	3	0.0	0 Kg/ cm2			
-	Initial	4.60±0.1	4.6 Kg/cm2	0.40±0.1			10Kg/ cm2			
	Full service	3.35±0.2	3.5 Kg/cm2	2.50±0.1			5Kg/ cm2			
	Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1		2.	5Kg/ cm2			
5.2		pressure drop to 3 ntroller handle is Full		D&M test spec. MM3882 & MM3946	8±2 s	ec.	7 Sec			
5.3	Operate Asst. Driv	ver Emergency Cock	,	D&M test spec. MM3882 & MM3946	550	ressure falls ow 2.5	ОК			
5.4	Check brake Pipe	Pressure Switch 69	Foperates	CLW's check sheet no. F60.812 Version 2	Close 4.05- kg/cr	es at BP 4.35 m2 is at BP 3.15	4.2 Kg/cm2 3.0 Kg/cm2			
5.5	1	Controller handle f ing time from 0.4 k d.		D&M test spec. MM3882 & MM3946	J, J,					
	WAP7 - BC 2.50 ± WAG9 - BC 2.50 ±	Control of the control			7.5±1 21±3	5 sec. sec.	19 Sec			

32)

DMW/PATIALA

Loco No.: 41584

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

5.6	Move Auto Brake Controller handle to full service and Ekg/cm2. Move Brake controller to Running position BC BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC devel	Relea	essure 3.5 se time to fall	D&M spec. MM3				
	BC release Time			MM3	946	17.5±2	5	
	WAP7					sec.		
	WAP9					52±7.5	sec.	47 Sec
5.7	Move Auto Brake Controller handle to Release, Check B	P Pre	ssure Steady	CLW'	s check	60 to 8	0	74 Sec
	at 5.5 0.2 kg/cm2 time.			sheet	no.	Sec.		
				F60.8	12			
				Versi	on 2			
5.8	Auto Brake capacity test : The capacity of the A9 valve i	n rele	ased condition	RDSO		BP		
	must confirm to certain limit in order to ensure comper	satio	n for air	Motiv		pressur	e	
	leakage in the train without interfering with the automa	itic fu	functioning of power			should		
	brake.			torate	fall belo		4.25	
	* Allow The MR pressure to build up to maximum stipul	ated l	imit.	report no.				Kg/cm2
	* Close brake pipe angle cock and charge brake pipe to	cm2 by A	MP G		4.0 kg/d		1.6/ 51112	
	(Automatic brake controlling) at run position.		No. 1	1 July,	Sec.			
	* Couple 7.5mm dia leak hole to the brake hose pipe of	locon	notive. Open	1999		1		
	the angle cock for brake pipe.			hadest Utasimeso				
	The test shall be carried out with all the compressors in	worki	ng condition.					
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press D	river I	End paddle			BC com	es	0
	Switch (PVEF)					to '0'		
6.0	Direct Brake (SA-9)							
6.1	Apply Direct Brake in Full. Check BC pressure		CLW's check s	heet			T	
	WAG9/WAP7		no. F60.812 V	ersion	3.5±0	0.20 kg/cr	n2	3.5Kg/cm2
	WAP5		2			±0.3 kg/cr		
6.2	Apply Direct Brake, Record Brake Cylinder charging time		D&M test spec	C.	8 sec	. (Max.)		6.5 Sec
1	3		MM3882 & M			,,		0.0 000
6.3	Check Direct Brake Pressure switch 59 (F)	D&I	M test spec.		0.2.±0.1	kg/cm2	0.2	kg/cm2
		MN	13882 & MM394			.		G ,
6.4	Release direct brake & BC Release time to fall BC				10 -15 S	ec.	12	Sec
7.0	pressure up to 0.4 kg/cm2							
7.1	Sanding Equipment	T						
/.I	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)	1			Sand on	Rail	ОК	
7.2	Test Vigilance equipment : As per D&M test						OK	
	specification			v			ОК	

Aftas

Signature of loco testing staff

0

Signature of SSE/Shop



Issue No.: 03

Effective Date: Oct-2021

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

डीजल रेळइंजन आधुनिकीकरण कारखाना पटियाला। DIESEL LOCO MODERNISATION WORKS, PATIALA

ELECTRIC LOCO CHECK SHEET

S. No.	O NO: 4 584 Rly: SCR		Shed: LGD				
1.1	TO BE CHECKED	Specified Value	0	bserved	Value		
1.2	Check proper Fitment of Hotel Load Converter & its output contactor.	_0K-		NA -			
1.3	Blower 1 & 2, MR Scavenging Blower 1 & 2, TM	ОК		OK			
1.4	Check proper of Fitment of oil cooling unit (OCU).	ОК		6K			
1.5	Check proper Fitment of HB 1 & 2 and its respected lower part on its	OK		or			
1.6	Check proper Fitment of FB panel on its position.	ОК		65			
444.00000	Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2.	ОК		35			
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	ОК	070	OT			
1.8	Check proper Fitment of Traction converter 1 & 2 (SP-1 & 2)	ОК	- Parana	36			
1.10	Check proper fitment, torquing & Locking of Main transformer half	ОК		35			
	wire rope.	ОК		35			
1.13	Proper setting of the dampers as required.	ОК	1	30			
1.14	Check proper position of Secondary Helical Springs between Bogie & Shell	OK		DE			
1.15	Check proper fitment of Body Bogie Safety Chains fitted properly	OK		3K			
1.16	Check proper fitment of Cow catcher.						
1.17	Check coolant level in SR 1 & 2 Expansion Tank	OK		01	-		
1.18	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		30			
1.19	Check proper fitment of both battery box.	OK		0K			
1.20	Check proper fitment of Push Pull rod its bolt torquing and safety slings.	OK		OR			
1.21	Buffer height: Pange (1005 mm to 1105 mm) Reserved and safety slings.	ОК	(35			
	Buffer height: Range (1085 mm to 1105 mm) Drg No IB031-02002.	1090-1105		L/S	R/S		
		mm	FRONT	1092	1100		
1.22	Duffer I and D	=	REAR	1090	1100		
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-SK.DL-3430.	641 mm		L/S	R/S		
	J. 130,		FRONT	646			
20			REAR		645		
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm +		645 L/S	645 R/S		
		5 mm,-12	FRONT	116			
24	one w	mm	REAR		117		
.24	CBC Height: Range (1085 mm to 1105 mm) Drg No- IB031-02002.	1085-1105	FRONT:	1092	115		
- 1		mm	REAR:	1017			

(Signature of SSE/Elect. Loco)

NAME BHUPSNOER SONGY

DATE 28/01/22

(Signature of JE/Elect Loco)

NAME B SATISH CUMAR

DATE 28 (01/22

Bhalinder Sim

(Signature of JE/UF)

NAME BHALINDER SING

DATE 28/01/22

DIESEL LOCO MODERNISATION WORKS, PATIALA LOCO NO -:41584

Under frame component

S.N.	Descrition of component	PL No.	Make	Mfg. date & Serial no.	covered upto
1	Shell	29171064	TRIDENT	31/49 ,12/2021	
	Main Transformer	29731057	HIGH VOLT (HVE-027-2021), TARAPUR	HVE/65/12/21/2663 ,2021	
	Conservator Tank BREATHER	29731057	YOGYA ENTERPRISES	21-7878, 21-6330	
	Compressor both side	29511008	ELGI	EUHS927328(11/21) ,EUHS927339(11/21)	1 _
-	Battery Box both side	29680013	BRITE	41/01449(10/21) ,43/01449(10/21)	Ęį
_	Traction Bar Cab-1	29100069	KM	6902-08-21	g
7	Traction Bar Cab-2	29100069	KM	6904-08-21	8
	Side Buffer Assly Both Side	11803587	AEU	Lp08-21,07-21 ,Lp10-21 ,09-21	As per PO condition
_		29530027	SAMAL HARAND OF INDIA PVT.LTD.	D2912 & D2931	<u>a</u>
	Oil Cooling Pump both Side	29230044	RANSAL PVT.LTD	52312 & 52331	å
	Transformer oil Steel pipes	29130037	KM	04-21 &03-21	Ä
	Soft Draft Gear (CBC)			04-21 803-21	1
	Secondry Helical Spring on	29045034	FRONTIER SPRING LIMITED		The sale
	ELASTIC RING (Center pivot	29100010	SSPL	2502/00/24) 2579/00/24)	1
14	Center Pivot Housing	29100057	Machine room Component cab 1	3592(09/21) ,3578(09/21)	ļ.,
1	TAA Dievvon	20440075	AIR CONTROL & CHEMICAL ENGG. LTD 8	07/21 & AC-47108 CGLUGAM-0694	Г
	TM-Blower	29440075 29440117	G.T.R CO (P) LTD.	ST-21-10-489	1
	TM- Scavenging Blower Motor	29440117		10/21 & C.G/HB-1/G21A135	1
-	Axillary Control Cubical (HB-1)			11/21 & AALN/11/2021/08/FB/051	-
	Filter Cubical (FB-1)		AUTOMETER ALLIANCE LTD.		┥ _
	Complete Control Cubicle SB-1		KAYSONS ELECTRICALS PVT. LTD.	11/21 &KEPCOL/SB-1/135 BTIL/11/2021/30/PROPULSION_A/2015	As per PO condition
-	Vehicle Control Unit (VCU)		BOMBARDIER		₹ ₩
-	Aux. Converter (BUR) 1		BOMBARDIER	12/21 & 2021M/10320/6A/0152	, S
	OIL COOLING BLOWER(OCB)		P.D STEELS	07/21& PDS2107009, MOTOR-1001071343	ŏ
	OIL COOLING RADIATOR (OCR)	29470031		10/21 & FG415002/M-1/21-22/223	ā
	M/C Room Blower	29440105	AIR CONTROL & CHEMICAL ENGG. LTD 8		e e
-	M/C Room Scavenging Blower		G.T.R CO (P) LTD.	SM-21-08-333	5
	Traction Convertor	29741075		BTIL/11/2021/26/PROPULSION_A/2008	1
7.00	Head Light Housing	29610953	PATRA & CHANDA MFG.& ENG.(I) PVT.		-
	Ballast Assembly	29170163	AKM		-
	Transformer oil pressure Sensor		TROLEX INDIA PVT. LTD.	10/21 & 21/7111, 09/21 & 21/6729	-
16	Transformer oil Temperature	29250035	FLORICAN	11/21 & 56958	
			Machine room Component cab 2		
1	TM-Blower	29440075	AIR CONTROL & CHEMICAL ENGG. LTD 8	07/21 & AC-47092, CGLUFAM-1187	
2	TM- Scavenging Blower Motor		G.T.R CO (P) LTD.	ST-21-10-468	1
3	Axillary Control Cubical HB-2	29171192	AUTOMETER ALLIANCE LTD.	10/21 & AALN/10/2021/03/HB2G9/113	
4	Complete Control Cubicle SB-2	29171210	KAYSONS ELECTRICALS PVT. LTD.	11/21 & KSEL/SB-2/084	
	Vehicle Control Unit (VCU)		BOMBARDIER	BTIL/11/2021/36/PROPULSION_A/2016	4:0
	Aux. Converter (BUR) 2&3		BOMBARDIER	12/21 & 2021M/10202/20B/0153	condition
	OIL COOLING BLOWER(OCB)		P.D STEELS	07/21& PDS2107 10, MOTOR-1001052301	€ 8
	OIL COOLING RADIATOR (OCR)	29470031		10/21 & FG415005/M-1/21-22/229	As per PO
	M/C Room blower		AIR CONTROL & CHEMICAL ENGG. LTD 8		1 5
	M/C Room Scav. blower		G.T.R CO (P) LTD.	SM-21-09-350	g
	Traction Convertor	29741075	BOMBARDIER	BTIL/11/2021/29/PROPULSION A/2014	As
	Head Light Housing	Committee of the second commit	PATRA & CHANDA MFG.& ENG.(I) PVT.	ļ	-
	Ballast Assembly	29170163		10/04 0 04/5074 74/7075	4
	Transformer oil pressure Sensor	29250047	TROLEX INDIA PVT. LTD.	10/21 & 21/6974 , 21/7075	-
15	Transformer oil Temperature	29250035	FLORICAN	11/21 & 56867	L
_		20442252	Driver Cabin	12057	Т
	Hand Brake		Modif. Mechwell com.fitt.	12857	0 5
-	Air Conditioner		KKI POWER DRIVES PVT. LTD.	KKI/HVAC/CLW/809, 824 91, 45	1 1 1
	Crow Fans	29170011		992, 954, 983, 1085	As per PO
	Crew Fans	29470080	II/WIANWIA	772, 734, 303, 1003	1 00 5

SIGN SPENSIF SINCOM NAME BULLINOFR SINCOM SSE/LAS

DWW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41584

LIST OF ITEMS FITTED BY ECS

SHED: LGD

RLY:SCR

PROPULSION SYSTEM:BT

WARRANTY	COVERED				E	a			CONDITIONS			81			
QPL		04 Nos.	02 Set	04 Set	04 Nos.	02 Set	04 Nos.	02 Nos.	02 Set	02 Nos.	02 Nos.	02 Nos.	01 Set	01 Set	01 Set
MAKE/SUPPLIER	- 17 - 17	M/s PCE	M/s SCS	M/s POWER TECH	M/s EIC	M/s ESCORT	M/s. RANJAN	M/s WOAMA	M/s. KEPCO	M/s. HIREACT	M/s PATRA & CHANDA	Ms. TROLEX	M/s TELPRO	HBL	PPS DMW
R. NO.	CAB-2	9/2021	FLE03712	5538,5567	2739,2562	20	996,944	3736	KEPCO/A1/1939	CF-2021G092-243B	PCE/133/7/2021	7920	MTELS2111307	No 280 maintenance kit)	NWV
ITEM SR. NO	CAB-1	9/2021	FLE03593	5563,5548	2642,2706	65	1001,763	3732	KEPCO/A1/1934	CF-2021G092-243A	PCE/144/7/2021	7961	MTELM2111308	Battery Set No 280 (Along with Battery maintenance kit)	PPS DMW
ITEM PL	ÖN	29610023	25984962	25984860	29610461	29170011	29470080	29860015	29178204	29178162	29700012	29500059	29200040	29680025	29600418
DESCRIPTION OF ITEM	8	HEAD LIGHT LAMP	LED BASED FL LIGHT	LED MARKER LIGHT	DRIVER CAB LIGHT	CAB HEATER	CREW FAN	MASTER CONTROLLER	COMPLETE PANEL A,C,D	COMPLETE CUBICLE- F PANEL	HEATER ROTERY SWITCH	DIFFRENCIAL AMPLIFIRE	SPEED IND. & REC. SYSTEM	BATTERY (Ni- Cd)	HARNESSED CABLE COMPLETE
NS	10	_	2	m	4	2	9	7	∞	o	10	7	12	13	41







	Warranty	Sr. no.	373-07/21	799-10/21						008/VCBA/227			307/ES/144 As per IRS/PO conditions	9851176		EUHS927328B			39-1880	43B		
41584	IENT CAB 1 & 2	Supplier	10807-10/21,1	10798-10/21,10799-10/21		05/21,05/21	COMPONENT	8/21/2578	2021-N,625448	nce AALN/08/2021/008/VCBA/227	5/21,5/21	RICAL 05/21/212207/04	nce AALN/06/2021/007/ES/144	9851172 985	Air Brake Components	EUHS 927330A, EUHS927328B	2488-8-21	BULS 104147	DEC- 21-53-WAG9-1880	K 21-087A,K21-043B		
	ROOF COMPONENT CAB 1 & 2	QPL /Nos. Su	2 Cotrasys Pvt.Ltd	2 Cotrasys Pvt.Ltd	2 VIKRANT	8 IEC	MIDDLE ROOF COMPONENT	1 EIPL	1 Sadtem	1 Autometer Alliance	9 IEC	1 RESITECH ELECTRICAL	1 Autometer Alliance	2 CG POWER	Air Brake	2 Elgi	1 PRAG	1 ELGI	1 FAIVELY	2 FAIVELY	2 FAIVELY	
		Description	Pantograph	Servo motor	Air Intake filter Assly	Insulator Panto Mtg.		High Voltage Bushing	Voltage Transformer	Vacuum Circuit Breaker	Insulator Roof line	Harmonic Filter	Earth Switch	Surge Arrester		Air Compressor	Air Dryer	Auxillary Compresssor	Air Brake Panel	Contoller	Breakup Valve	
		S.No.	1	7	m	4		2	9	7	∞	6	10	11		12	13	14	15	16	17	



SSE/ABS



DIESEL LOCO MODERNISATION WORKS



Loco No. 41584

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-1367	ACPL	20405440	101274	As per PO/IRS
REAR	SL-96	VED	29105146	101273	conditions

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: KNOOR/ESCORT

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	DMW	DMW	DMW	DMW	DMW	DMW
S.NO	22056	21919	22061	22035	22044	21853
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/21- 1806	CNC/21- 1804	CNC/21- 1723	CNC/21- 1810	CNC/21- 1837	CNC/21- 1766
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/21- 1812	CNC/21- 1783	CNC/21- 1797	CNC/21- 1816	CNC/21- 1838	CNC/21- 1765
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (PL No. 20010020, Warranty: As per PO/IRS conditions)

A	XLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	SKF	SKF	SKF	SKF	SKF	NBC
End	PO NO. & dt	771678	771678	771678	771678	771678	01616
Free	MAKE	SKF	SKF	SKF	SKF	SKF	SKF
End	PO NO. & dt	771678	771678	771678	771678	771678	771678

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	977	966	857	984	943	100T
FREE END	996	956	894	920	950	95T

Loco No. 41584



7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITIO	NO NO	1	2	3	4	5	6
S.T.	MAKE	KM	KM	KM	KM	KPE	KM
G.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM.	KM	KP	KM	KM
BACKLASH (0.254 – 0.458mm)	0.330	0.320	0.330	0.320	0.330	0.330

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	17	16.50	18.80	17.50	17.30	17.99
LEFT SIDE	15.50	15.50	17.12	16.01	16.91	17.69

11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	DMW	_	DMW-955
2	DMW	-	DMW-954
3	DMW	_	DMW-942
4	DMW	_	DMW-936
5	DMW	-	DMW-953
6	DMW	-	DMW-935

SSE/ Bogie Shop

	6	
1	39)	
(

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS	DESCRIPTION Warranty Period	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT Supply whichever earlier as per special conditions given by CLW	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.	SET OF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018. As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW Specn. CLW/ES/3/0458 & Clause	
OSTLIEST ITER		IGBT BASED 3-PH EQUIPMENT	MAIN TRANSFOR WAP7 3- PHASE E SPECN NO.CLW/E	COMPLETE SHELL WAP-7 LOCO TO 8	SET OF HARNESSI LOCOMOTIVES TO ALT-NIL WITH DN CABLE FOR WAP-	
TOP 12 C	PL No	29741075	29731057	29171064	29600418	
	S No	Н.	7	ю	4	

		1	Ŗ
	1)-	
/	4		
(7	

FO.	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.
9	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
Pron	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.

1	11
1	11
1	`)
-	/

∞ σ	29105146	BogieFrame Complete for WAP-7 for 3 Phase Co Co Locorotive to CLW specification No. CLW/R.S/3/Bogie/003 alt-1 and CLW Drg.Na.1209.01.112-202 Alt-Nil COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EFUIPMENTS AND CABLING TO CLW SPECIFO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAPTLOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PEI CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply] AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMRETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIRMENTS AND CABLING (EXCLUDING CONTROL ELECRONICS) TO CLW SPECN. NO. CLW/E/3/0195/A ALT-H OR LATEST FOR WAP7 LOCOWITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMMETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIMAENTS AND CABLING (EXCLUDING CONTROL ELECTIONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-GOR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMRETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.WO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7.OCO WITH HOTEL LOAD WITH BARE CUBICLE AS PERCLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.