भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41659

TYPE: WAG9HC

RAILWAY SHED: NR/LDH

PROPULSION SYSTEM: CGL

DATE OF DISPATCH: 20.08.2022

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41659

RAILWAY/SHED: NR/LDH

DOD: 20-08-2022

INDEX

SN	PARA	ACTIVITIES	PAGE NO.
		Testing & Commissioning (ECS)	
1.	1.0	Continuity Test of the cables	
	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	5-6
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	11-10
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.8	Verification of Converter Protection Circuits (Hardware limits)	
	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	
	5.3.3	Performance of BURs when one BUR goes out	16-25
	<i>5.4</i>	Auxiliary circuit 415/110	
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
	5.8	Test Harmonic Filter	
	5.9	Test important components of the locomotive	
6.	6.0	Running Trial of the locomotive	25-26
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27
8.	8.0	Status of RDSO modifications	28
9.	1-10	Pneumatic Test Parameters	29 - 32
10.		Loco Check Sheet(LAS)	33
11.	-	Component History (LAS,ECS,ABS)	34-36
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13	-	Warranty Conditions as per Tenders	39 -41

Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/659 1.0 Continuity Test of the cables Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	1000
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	1000
Filter Cubicle	Earthing Choke	OK	100 ΜΩ	1000
Earthing Choke	Earth Return Brushes	OR	100 ΜΩ	1000
Transformer	Power Converter 1	OK	100 ΜΩ	1000
Transformer	Power Converter 2	OK	100 ΜΩ	1000
Power Converter 1	TM1, TM2, TM3	OK	100 ΜΩ	800
Power Converter 2	TM4, TM5, TM6	OK	100 ΜΩ	200
Earth	Power Converter 1	OK	100 ΜΩ	1100
Earth	Power Converter 2	OK	100 ΜΩ	1100

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.



PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/659

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 MΩ	1000
Transformer	BUR2	OK	100 MΩ	1000
Transformer	BUR3	OK	100 M Ω	1000
Earth	BUR1	OK	100 M Ω	1100
Earth	BUR2	OK	100 M Ω	1100
Earth	BUR3	OK	100 M Ω	1100
BUR1	HB1	OK	100 M Ω	1000
BUR2	HB2	OK	100 M Ω	1000
HB1	HB2	OK	100 M Ω	1000
HB1	TM Blower 1	OK	100 MΩ	300
HB1	TM Scavenge Blower 1	OK	100 MΩ	2500
HB1	Oil Cooling Unit 1	OK	100 ΜΩ	300
HB1	Compressor 1	OK	100 ΜΩ	200
HB1	TFP Oil Pump 1	OK.	100 ΜΩ	150
HB1	Converter Coolant Pump 1	ΘK	100 ΜΩ	200
HB1	MR Blower 1	OK	100 MΩ	200
HB1	MR Scavenge Blower 1	OK	100 ΜΩ	150
HB1	Cab1	OK	100 ΜΩ	200
Cab1	Cab Heater 1	OK	100 ΜΩ	200
HB2	TM Blower 2	OK	100 ΜΩ	300
HB2	TM Scavenge Blower 2	OK	100 ΜΩ	250
HB2	Oil Cooling Unit 2	OK	100 MΩ	300
HB2	Compressor 2	OK	100 ΜΩ	200
HB2	TFP Oil Pump 2	OK	100 ΜΩ	150
HB2	Converter Coolant Pump 2	OK	100 MΩ	200
HB2	MR Blower 2	OK	100 ΜΩ	2000
HB2	MR Scavenge Blower 2	OK	100 MΩ	150
HB2	Cab2	ØK	100 ΜΩ	200
Cab2	Cab Heater 2	OK	100 ΜΩ	200

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	DK
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.X7-3		o K

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>1</u> • MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 & 2050	Prescribed value: $> 50 \ \text{M}\Omega$	Measured Value

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	OK
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	OK.
Brake controller cab-1 & 2	06F, 06G	Die



Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	OK.
Terminal fault indication cab-1 & 2	09F	OK
Brake pipe pressure actual BE electric	06H	OK
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	OK.
Auxiliary current sensors	12B, 12F	OK
Oil circuit transformer bogie 1	12E, 12l	OK
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	or,
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	04
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	Ou
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OR
Train Bus cab 1 & 2 Wire U13A& U13B to earthing resistance=	13A	OL
10KΩ± ± 10%)		
JIC line	13B	OK.
Connection FLG1-Box TB	13A	0 <u>L</u>

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.9K2
Resister to maximum current relay.	1Ω ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.352
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm~10\%$	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.2-2
Between wire 6 & 7	0.2 Ω	0.25
Between wire 5 & 7	0.4 Ω	0-451
For train bus, line U13A to earthing.	10 kΩ± 10%	998KI
For train bus, line U13B to earthing.	10 kΩ ± 10%	10:0 K52
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	300MN
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.30-12
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	2.2852
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.28-2
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.2 KZ
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	2.71 K2
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 kΩ ± 10%	3.9KN
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kΩ± 10%	1.8kv
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390Ω ± 10%	3902
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 kΩ± 10%	· NA
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	10-52



PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cheeked ox
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	Cheeked a

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	cherked on
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked
Test traction control	Sheets of Group 08.	OUR
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	DK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	ac
Test control Pneumatic devices	Sheets of Group 06	DK
Test lighting control	Sheets of Group 07	OU_
Pretest speedometer	Sheets of Group 10	OK
Pretest vigilance control and fire system	Sheets of Group 11	ax.
Power supply train bus	Sheets of Group 13	OK

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/659
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yey
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Tes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

Traction converter-1 software version:	26
Traction converter-2 software version:	26
Auxiliary converter-1 software version:	3.0
Auxiliary converter-2 software version:	3.0
Auxiliary converter-3 software version:	3.0
Vehicle control unit -1 software version:	2008
Vehicle control unit -2 software version:	2008

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	0K
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	10.1.
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1001
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	24.1-



PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal'	' FLG1; AMSB 0101-		
position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	100 %
TE/BE at 'BE Minimal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	244
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	44 4,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0° C to 40° C	37°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	300
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	3200
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	35°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	3600
	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	36°C

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Emergency shutdown through emergency stop switch 244 Shut Down through cab activation switch to OFF position Converter and filter contactor operation with both Power Converters during Start Up. Converter and filter contactor 12.3 must close after few seconds. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must close. FB contactor 8.2 must close. FB contactor 8.1 must open. Panto must lower. Converter and filter contactor operation with both Power Converters during Shut Down. Exercise 14. Converter and filter contactor 9. FB contactor 8.1 must close. FB contactor 8.1 must open. Panto must lower. Converter contactor 12.4 must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactor 8.1 must open. FB contactor 8.41 must open. FB contactor 8.41 must open. FB contactor 8.41 must close. FB contactor 8.41 must open. FB contactor 8.41 must close. FB contactor 8.41 must close. FB contactor 8.41 must open. FB contactor 8.41 must close.	Test Function	Result desired in sequence	Result obtained
Shut Down through cab activation switch to OFF position Converter and filter contactor operation with both Power Converters during Start Up. FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.2 must close. FB contactor 8.4 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Converter contactor 12.4 must open. FB contactor 8.4 must open.	J ,	The state of the s	cheeked as
Switch to OFF position Panto must lower. Converter and filter contactor operation with both Power Converters during Start Up. FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Converter contactor 12.4 must open. Panto must lower. Converter and filter contactor operation with both Power Converter contactor 12.4 must open. FB contactor 8.41 must open.	emergency stop switch 244	Tunto mast lower.	
Converter and filter contactor operation with both Power Converters during Start Up. FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.41 must close. FB contactor 8.41 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Converters during Shut Down. FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.4 must close. FB contactor 8.41 must close.	Shut Down through cab activation	VCB must open.	checkedou
Operation with both Power Converters during Start Up. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Bring TE/BE to O. Converter contactor 12.4 must open. Fanto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactor 8.41 must open. FB contactor 8.41 must open. FB contactors 8.41 must open.	switch to OFF position	Panto must lower.	
Converters during Start Up. Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. FB contactor 8.1 must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open.	Converter and filter contactor		9
12.3 must close after few seconds. • Converter contactor 12.4 must close. • Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: • FB contactor 8.41 must open. • FB contactor 8.2 must close. • FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Bring TE/BE to O. Bring the cab activation key to "O" • VCB must open. • Panto must lower. • Converter contactor 12.4 must open. • FB contactor 8.1 must open.	operation with both Power		
Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. FB contactor 8.1 must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactor 8.41 must open. FB contactor 8.41 must open. FB contactor 8.41 must open.	Converters during Start Up.		
Converter contactor 12.4 must close. • Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: • FB contactor 8.41 must open. • FB contactor 8.2 must close. • FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Bring TE/BE to O. Bring TE/BE to O. Bring the cab activation key to "O" • VCB must open. • Panto must lower. • Converter contactor 12.4 must open. • FB contactor 8.1 must open. • FB contactor 8.41 must close.			charrode
Tonverter and filter contactor operation with both Power Converters during Shut Down. 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close. Bring TE/BE to O. Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactor 8.41 must close.		• Converter contactor 12.4 must close.	6 Creater
By increasing TE/BE throttle: • FB contactor 8.41 must open. • FB contactor 8.2 must close. • FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Bring TE/BE to O. Bring TE/BE to O. Bring TE/BE to O. Bring TE/BE to O. • VCB must open. • Panto must lower. • Converter contactor 12.4 must open. • FB contactor 8.1 must open. • FB contactors 8.41 must close.		 Converter re-charging contactor 	
• FB contactor 8.41 must open. • FB contactor 8.2 must close. • FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Bring TE/BE to O. Bring the cab activation key to "O" • VCB must open. • Panto must lower. • Converter contactor 12.4 must open. • FB contactor 8.1 must open. • FB contactor 8.41 must close.		12.3 must opens.	
• FB contactor 8.2 must close. • FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. Bring TE/BE to O. Bring the cab activation key to "O" • VCB must open. • Panto must lower. • Converter contactor 12.4 must open. • FB contactor 8.1 must open. • FB contactors 8.41 must close.		By increasing TE/BE throttle:	
• FB contactor 8.1 must close. Converter and filter contactor operation with both Power Converters during Shut Down. • FB contactor 8.1 must close. Bring TE/BE to O. Bring TE/BE to O. Bring TE/BE to O. • VCB must open. • Panto must lower. • Converter contactor 12.4 must open. • FB contactor 8.1 must open. • FB contactors 8.41 must close.		• FB contactor 8.41 must open.	
Converter and filter contactor operation with both Power Converters during Shut Down. Bring TE/BE to O. Panto must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close.	4.4	• FB contactor 8.2 must close.	
operation with both Power Converters during Shut Down. • VCB must open. • Panto must lower. • Converter contactor 12.4 must open. • FB contactor 8.1 must open. • FB contactors 8.41 must close.		• FB contactor 8.1 must close.	
 VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. 		Bring TE/BE to O .	7)
 Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. 			
 Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. 	Converters during shut bown.	•	
 FB contactor 8.1 must open. FB contactors 8.41 must close. 			o Exercise
• FB contactors 8.41 must close.			
		The second of th	



PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

Contactor filter adaptation by	Isolate any one bogie through bogie	
isolating any bogie	cut out switch. Wait for self-test of the loco.	
	• Check that FB contactor 8.1 is open.	1
	• Check that FB contactor 8.2 is open.	e charged on
	After raising panto, closing VCB, and setting TE/BE	
	• FB contactor 8.1 closes.	
	• FB contactor 8.2 remains open.	
Test earth fault detection battery	By connecting wire 2050 to	1
circuit positive & negative	earth, create earth fault	7
	negative potential.	
	 message for earth fault 	cheekela
	 By connecting wire 2095 	
	to earth, create earth	
	fault positive potential.	
	message for earth fault	
Test fire system. Create a smoke in	When smoke sensor-1 gets	1
the machine room near the FDU.	activated then	CV
Watch for activation of alarm.	 Alarm triggers and fault message priority 2 	
	appears on screen.	-0 . /0:
	When both smoke sensor	cherkedou
	1+2 gets activated then	
	 A fault message priority 	
	1 appears on screen and	
	lamp LSF1 glow.	
	 Start/Running interlock occurs and 	e e
	TE/BE becomes to 0.	V
ime, date & loco number	Ensure correct date time and Loco	Ope
	number	
*		

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.0446	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.0448	8K
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.000	OK
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.0440	OK
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.84P 5.54PMS	οu
2U _{F.} & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.10VP 6.44VPM	lon

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.	58.6 VI 41.4 VRMS	1 OK
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.41	OK
		11.0VR 128	



PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25×1	250/1
SLG2_G 87-XUPrim	25 kV	250%	28*V	2501

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	170%
SLG2 G 87-XUPrim	17 kV	170%	1714	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KV	300-1
SLG2_G 87-XUPrim	30 kV	300%	30KV	3007

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjus	Minimum voltage relay (Pos. 86) must be adjusted to approx 68%				
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	L(Yes/No)				
Try to activate the cab in driving mode:	(Yes/No)				
Contactor 218 do not close; the control	4.00,.00,				
electronics is not be working.					
Turn off the variac :	(Yes/No)				
Contactor 218 closes; the control electronics is be					
working					
Test Under Voltage Protection;					
Activate the cab in scaling mode, Paics pants.	(Vac/Na)				
Activate the cab in cooling mode; Raise panto; Supply 200V _{RMS} through variac to wire no. 1501	(Yes/No)				
& 1502; Close the VCB; Interrupt the supply					
voltage					
The VCB goes off after 2 second time delay.					
Again supply 200V _{RMS} through variac to wire no.	_(Yes/No)				
1501 & 1502; Decrease the supply voltage below					
140V _{RMS} ± 4V;					
Fine tune the minimum voltage relay so that VCB opens.					

4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current transformer; Connect variac to wire 1521 &1522 (including the resistor at Pos. 6.11); Put loco in simulation for driving mode; Open R_3-R_4 on contact 136.3; Close VCB; supply 3.6A_{RMS} at the open wire 1521; Tune the drum of the maximum current relay Pos. 78 for correct over current value;

maximum current relay ross. 75 for correct over current value,	
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact $R_3 - R_4$ of 136.3 closed; Close VCB; Tune the resisted /9.9 A_p at the open wire 1521;	or 78.1 for the current of 7.0 A _{RMS}
VCB opens with Priority 1 fault message on display.	(Yes/No)



Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/659

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6. Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	ſ
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		-
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415 AA/1or 2 pin no. 7(+) & 8(-)	-	2-89mg
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA _{DC} to the test winding of		-
	sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		335mpg
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
**************************************	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		345mp
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	Mrs	WA
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	NA

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	311

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close



PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	clos	open	clos	open	clos	open	clier	clos	ope,
BUR1 off	closy	open	cluss	closs	open	closs	oper	ober	clos
BUR2 off	open	open	clos	clos	clos	clos	open	Open	clos
BUR3 off	open	close	Open	close	close	clos	Oper	Open	Clos

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yes
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Yes

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Charged on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	choused on
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	cheeped on
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Chalkeela
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	chouseelon
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-ke y in O position.	VCB must open. Panto must lower.	cheesedon
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	cheexacta
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	chartedon



PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.5	14.0
Oil pump transformer 2	9.8 amps	9.2	12.5
Coolant pump converter 1	19.6 amps	5.3	フ・コ
Coolant pump converter 2	19.6 amps	5.2	6.6
Oil cooling blower unit 1	40.0 amps	41.7	193.0
Oil cooling blower unit 2	40.0 amps	42.3	196.0
Traction motor blower 1	34.0 amps	29.3	198.3
Traction motor blower 2	34.0 amps	29.7	191.3
Sc. Blower to Traction motor blower 1	6.0 amps	2.0	17.0
Sc. Blower to Traction motor blower 1	6.0 amps	1.9	16.3
Compressor 1	25 amps at 0 kg/cm ² 40 amps at 10 kg/cm ²	251	147.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	25.6	146.5

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/659

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BURI 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	1010V	Yey
BURI 7303 XUUZI	DC link voltage of BUR1	60% (10%=100V)	637V	Yes
BUR1 7303 XUIZI	DC link current of BUR1	0% (10%=50A)	1 Book	701

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1005	Yes
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637 V	Yes
BUR2 7303-XUIZ I	DC link current of BUR2	1% (10%=50A)*	7 Amy	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22Anh	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12Am	Tes
BUR2 .7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1100	Tes

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10050	Yey
BUR3 7303- XUUZI	DC link voltage of BUR3	60% (10%=100V)	637V	Tes
BUR3 7303-XUIZ I	DC link current of BUR3	1% (10%=50A)*	> Asup	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	2-142M	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	11 Am	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1100	70

^{*} Readings are dependent upon charging condition of the battery.



PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC Page : 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary	Typical	Measured phase	Measured
machine	phase	current	starting current
	current		
Machine room blower 1	15.0 amps*	5.5	30.0
Machine room blower 2	15.0 amps*	5.1	31.0
Sc. Blower to MR blower 1	1.3 amps	1.7	11.0
Sc. Blower to MR blower 2	1.3 amps	1.6	10.0
Ventilator cab heater 1	1.1 amps	1./	2.2
Ventilator cab heater 2	1.1 amps	1.1	2.2
Cab heater 1	4.8 amps	5.0	5-1
Cab heater 2		5.0	5.1
	. 4.8 amps		

^{*} For indigenous MR blowers.

for

Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/659

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chaired or
Measurement of discharging of DC Lir of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charged on
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charteel ox
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	eherred on
Earth fault detection on part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charreel or
Pulsing of line converter of Converter 1		
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charked on



Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
charging and charging	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chelked on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cherked on
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cholkeel on
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	efectived on
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cherkedou
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cherked on
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chauceelon

Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/659

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Results desired in sequence	Result obtained
Start up the loco with both the Converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears	o charged on
Disturbance in Converter 1	
converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears	o cheekeel oa
	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears Disturbance in Converter 1 Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	chelkeelon



Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop	ofered or
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	churedou
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	IL

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	charged on
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheesel of
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	chelyeelou
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	cheeved as
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	choixed ac

Issue No.03

Effective Date: Feb 2022

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4-1659

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

Marker light	Both front and tail marker light should glow from both the cabs	charged on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	charged on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheekeel ou
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Chelked en
Illuminated Push button	All illuminated push buttons should glow during the operation	Chelkool on
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: 5
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks	
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Lower	
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	cherred	
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	cheeped	
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	Rocked	
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Lorker	



PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4-1659

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

	Set the speed more than 1.5 kmph and ensure that	6. Check vigilance	6.
	brakes are released i.e. BC < 1 Kg/cm ² .	operation of t	
	For 60 seconds do not present it.	locomotive	
	For 60 seconds do not press vigilance foot switch or		
	sanding foots switch or TE/BE throttle or BPVG switch then		
	Buzzer should start buzzing.		
cheeke			
7	LSVW should glow continuously. Do not asknowled by the state of		
	Do not acknowledge the alarm through BPVG or		
	vigilance foot switch further for 8 seconds then:-		
	 Emergency brake should be applied automatically. 		
	 VCB should be switched off. 		
	Resetting of this penalty brake is possible only after		
	180 seconds by bringing TE/BE throttle to 0 and		
.	acknowledge BPVR and press & release vigilance foot switch.		
		7. Check start/run in	7.
choixed o	• At low pressure of MR (< 5.6 Kg/cm ²).		
- MA	With park brake in applied condition.		
0	• With direct loco brake applied (BP< 4.75Kg/cm ²).		
6 cherren o	• With automatic train brake applied (BP<4.75Kg/cm ²).		
	• With emergency cock (BP < 4.75 Kg/cm ²).	-	0
9	Switch of the brake electronics. The	· Check traction int	8.
(cheeked on	Tractive /Braking effort should ramp down, VCB		
	should open and BP reduces rapidly.).
8	Bring the TE/BE throttle to BE side. Loco speed	Check regenerativ	7.
pe Recked as	should start reducing.	braking.	0.
ă l	In the event of failure of one BUR, rest of the two	CHECK TOT BUR	J.
	BURs can take the load of all the auxiliaries. For this	redundancy test at	
perecedor	switch off one BUR.	ventilation level 1	
	Auxiliaries should be catered by rest of two BURs.	loco operation	
	Switch off the 2 BURs; loco should trip in this case.		
0	Croata disturbance:	creek the power	
(cheesee on	off the electronics. VCB should open and converter	converter	
yenewed ou	should get isolated and traction is possible with	isolation test	
	another power converter.		

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41659

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	04	UK (7
2	Marker Red	OK	OK	
3	Marker White	ou	OK	
4	Cab Lights	on	OK	
5	Dr Spot Light	on	OK	
6	Asst Dr Spot Light	Ou	0 K	20.
7	Flasher Light	Ou	OK	Cheked works
3	Instrument Lights	OK	Orc.	
)	Corridor Light	DK.	DK.	
0	Cab Fans	on	DK	1
1	Cab Heater/Blowers .	ov.	OK	
2	All Cab Signal Lamps Panel 'A'	Du	OK	. 19

(28)

LOCO NO: 41659

Status of RDSO modifications

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	OK/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Ok/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Ok/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 'Rev.'0'	Modification of terminal connection of heater cum blower assembly.	OK/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	OK/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	OK/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
16.	RDSO/2013/EL/MS/0428 -Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Ok/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	*Ok/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	ØR/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	ØK/Not Ok

Signature of JE/SSE/TRS



Page 1 of 4

PLW/PATIALA

Loco No.: 41659

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	Parameters	D.C		-
1.0	Auxiliary Air supply system (Pantograph & VCB)	Reference	Value	Result
1.1	Ensure, Air is completely vented from pantograph			
	Reservoir (Ensure Pantograph gauge reading is Zero)		0	0
1.2	Turn On BL Key. Now MCPA starts.			
	Record pressure Build up time (8.5kg/cm2)		60 sec. (Max.)	52 Sec _
1.3	Auxiliary compressor safety Valve 23F setting			32 360
	safety valve 23F setting	CLW's check sheet	8.5±0.25kg/cm2	8.5 Kg/cm2
		no. F60.812 Versio	n -	8.5 Kg/CIIIZ
1.4	Check VCB Pressure Switch Setting	2		
	Sheek Veb Hessure Switch Setting	CLW's check sheet	Opens 4.5±0.15	1 F V=/- 2
		no. F60.812 Version	kg/cm2	4.5 Kg/cm2
		2	closes 5.5±0.15	F F / -
1.5	Set pantagraph Salva			5.5 kg/cm2
1.6	Set pantograph Selector Switch is in Auto, Open pan-1&2 Set Cab-1 Pan UP in Panel A.	Isolating Cocks & KABA	Cock by Key (KABA Koy)	
1.0	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	
1.7	Class P. Oil		Rises.	OK
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	
1.8	Open Pan -2 isolating Cock		Panto-2 Rises	OK
L.9	Record Pantograph Rise time		06 to 10 seconds	
10	Record Pantograph Lowering Time		06 to 10 seconds	7 Sec
10	Pantograph line air leakage			7 Sec
			0.7 kg/cm2 in 5 Min.	0.1 kg/cm2
.0	Main Air Supply System		IVIIII.	in 5 Min.
.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and the	calculation and test		
	crosed drain cocks. MR air pressure build up time by each	performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor	Manways.		
	ii) with 1450 LPM compressor		i) 7 Min. Max.	6 Min. 30
			ii) 8.5 Min. Max.	sec
2 [Drain air below MR 8 kg/cm2 to start both the			
(compressors.		Check Starting of	ok
3 [Orain air from main reservoir up to 7 kg/cm2. Start		both compressors	
0	ompressors, Check pressure build time of individual		30 Sec. (Max)	CP1-25 Sec
C	ompressor from 8 kg/cm2 to 9 kg/cm2			The state of the s
C	Check Low MR Pressure Switch Setting (37)	DOM		CP2-24 Sec
300		D&M test spec.	Closes at 6.40±0.15	6.4 Kg/cm2
			kg/cm2	
		MM3946	Opens at	
			5.60±0.15kg/cm2	5.6 Kg/cm2



PLW/PATIALA

Loco No.: 41659

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

2.5		D&M test spec. MM3882 & MM3946	Closes at 10±0.20 kg/cm2 Opens at 8±0.20 kg/cm2	10 Kg/cm2 8 Kg/cm2
	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3min. 15 sec.
2.6	Run both the compressors need		12 500	10 sec
	ention time		Approx. 12 Sec.	
2.7	Check unloader valve operation time		Operates when	
2.8	Check Auto Drain Valve functioning (124 & 87)	D&M test spec.	Compressor starts 11.50±0.35kg/cm2	11.5 Kg/cm2
2.9	Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP.	MM3882 & MM3946	11.50±0.35kg/cm2	11.5 Kg/cm2
2.10	Check CP-2 delivery safety valve setting (10/2). Kuri Cr	D&M test spec. MM3882 & MM3946	11.3020	
2.11	direct by BLCP Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 12 kg/cm2 less than opening	D&M test spec. MM3882 & MM3946		
2.12	pressure. BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, and	CLW's check sheet no. F60.812 Version 2	5.0±0.10kg/cm2	5.0 Kg/cm2
	check setting pressure of Duplex Check valve 32.1	CLW's check sheet	6.0±0.20kg/cm2	6.0 Kg/cm2
2.13	Fit Test Gauge in Test point 10/F FPTP. Open solute of 136F. Check pressure in Gauge.	no. F60.812 Version 2		
3.0	- Overation			
3.1	Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change.		Tower to change i) Every minute (FTIL & SIL) ii)ever two minute (KBIL	OK
	a change			
3.:	Check Purge Air Stops from Air Dryer at Compressor stops		Blue	Blue
3.	3 Check condition of humidity indicator			
4.	0 Main Reservoir Leakage Test			0.35
	.1 Put Auto Brake (A-9) in full service, Check MR Pressure a leakage from both cabs.	ir D&M test spec. MM3882 & MM39	minutes	Kg/cm2 in 15 minute
4	Check BP Air leakage (isolate BP charging cock-70)	D&M test spec. MM3882 & MM39	0.15 kg/cm2 in minutes	5 0.1 Kg/cm in 5 minutes



Page 3 of 4

PLW/PATIALA

Loco No.: 41659

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

5.0 5.1	Pacard Part	Automatic Brake c				
5.1	Kecord Brake	Pipe & Brake Cylinde	er pressure at Each	Step		
	Check proport	tionality of Auto Brak	(A system			
		, service Brui	c system	CLW's c	heck sheet no. F60.8	812 Version 2
	Auto controlle	r position				
				BC (WAG-9 & WAG-7)Kg	g/cm2
		BP Pressure kg,	/cm2	Value		Result .
	Run	5±0.1	5.0 Kg/cm2	0.00		
	Initial	4.60±0.1	4.6 Kg/cm2	0.40±0.1		0.00 Kg/ cm2
	Full service	3.35±0.2	3.5 Kg/cm2	2.50±0.1		0.40Kg/ cm2
	Emergency	Less than 0.3	0.2 /~/~~ 2			2.5Kg/ cm2
5.2	Record time to E	3P pressure drop to 3	5 kg/cm2 Enguine	2.50±0.1		2.5Kg/ cm2
5.3	Automatic Brake (Controller handle is Ful	Service from Run	D&M test spec. MM3882 & MM3946	8±2 sec.	7 Sec
0.3	Operate Asst. Dr	iver Emergency Cock	ζ,	D&M.test spec.	BP pressure falls	
				MM3882 & MM3946	to Below 2.5	ОК
.4	Check brake Pipe	Pressure Switch 69	Oporates		kg/cm2	
		2 2 2 (2)	obelate?	CLW's check sheet no.	Closes at BP	4.2 Kg/cm2
				F60.812 Version 2	4.05- 4.35	
					kg/cm2	
1					Opens at BP	3.0 Kg/cm2
_					2.85- 3.15	
5	Move Auto Brake	Controller handle fr	om Running to	D&M test spec.	kg/cm2	
	Emergency. BC fill	ling time from 0.4 kg	/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC develope	ed.		3002 & WIWI3340		
\	WAP7 - BC 2.50 ±	0.1 kg/cm2				
V	WAG9 - BC 2.50 ±	0.1 kg/cm2			7.5±1.5 sec.	
-			V		21±3 sec.	21 Sec



Page 4 of 4

PLW/PATIALA

Loco No.: 41659

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

5.6	Move Auto Brake Controller handle to full service and BP	pres	sure 3.5	D&M	test			
	kg/cm2. Move Brake controller to Running position BC Re	spec.						
	BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC develop	MM38	882 &					
	BC release Time	BC release Time				17.5±25		
	WAP7					sec.		
	WAP9					52±7.5 s	ec.	48 Sec
5.7	Move Auto Brake Controller handle to Release, Check BP	Pres	sure Steady	CLW's	check	60 to 80		73 Sec
	at 5.5 kg/cm2 time.					Sec.		
				F60.83	12			
				Versio	n 2			
5.8	Auto Brake capacity test : The capacity of the A9 valve in	relea	sed condition	RDSO		BP		
	must confirm to certain limit in order to ensure compensation for air				е	pressure	5	
	leakage in the train without interfering with the automat	ic fur	nctioning of	powe	r	should r	ot	
	brake.			Direct	orate	fall belo	W	4.65
	* Allow The MR pressure to build up to maximum stipula	ited li	imit.	repor	t no.	4.0 kg/c	m2	Kg/cm2
	* Close brake pipe angle cock and charge brake pipe to 5			MP G	uide	with in 6	50	
	(Automatic brake controlling) at run position.			No. 1	1 July,	Sec.		
	* Couple 7.5mm diameter leak hole to the brake hose pi	pe of	locomotive.	1999	Rev.1			
	Open the angle cock for brake pipe.							
	The test shall be carried out with all the compressors in v	worki	ng condition.					
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Dr	iver E	nd paddle			BC come	es	0
	Switch (PVEF)					to '0'		
6.0	Direct Brake (SA-9)							
6.1	Apply Direct Brake in Full. Check BC pressure		CLW's check s	sheet				
	WAG9/WAP7		no. F60.812 V	'ersion	0.20 kg/cr	n2	3.5Kg/cm2	
			2					
6.2	Apply Direct Brake, Record Brake Cylinder charging time		D&M test spe	c.	8 se	c. (Max.)		7 Sec
			MM3882 & N	1M3946				
6.3	Check Direct Brake Pressure switch 59 (F)		M test spec.		0.2.±0.1	kg/cm2	0.2	2 kg/cm2
	MM3882 & MM39						-	
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2				10 -15 \$	Sec.	12	Sec
7.0	Sanding Equipment	,	4					
7.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)				Sand or	n Rail	OI	
7.2	Test Vigilance equipment : As per D&M test specification						OI	<

Signature of loco testing staff

Signature of SE/Shop

पी.एल.डब्ल्यू P. L. W Issue No.: 04

Effective Date: 24.02.2022

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco) Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

S. No	O NO: 41659 Rly: NR ITEM TO BE CHECKED		Shed:	LDH	
4.4		Specified Value	- (Observed	Value
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	-OK	_ —		
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2.	OK		- NA	
1.3	The world and the second secon			15	
1.4	Check proper of Fitment of oil cooling unit (OCU).	ОК		OK	
1.5	Check proper Fitment of HB 1 & 2 and its respected lower part on its	ОК		OR	
1.6	Check proper Fitment of FB panel on its position	OK		010	
	Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2.	OK		0	
1.7	Check proper Fitment of Auxiliary converter 1 2 & 3-(BUD 1 2 8 2)			65	
1.8	check proper ritment of Traction converter 1 & 2 (CD 1 & 2)	OK		OK	
1.10	check proper fitment, torquing & Locking of Main transferment.	OK		Ot	
1.12	check proper fittilefit of compressor both side with the compressor as	OK		OX	
1.40	······································	ок		OR	
1.13	Proper setting of the dampers as required.	ОК			
1.14	Check proper position of Secondary Helical Springs between Pogic & Chall			06	
1.15	Check proper fitment of Body Bogie Safety Chains fitted properly.	OK		08	
1.16	Check proper fitment of Cow catcher.	OK		OK	
1.17	Check coolant level in SR 1 & 2 Expansion Tank	OK		OK	
.18	Check Transform - O'll - A - A - A - A - A - A - A - A - A -	OK		Ole	
	Check Transformer Oil Level in both conservators Tank (Breather Tank).	ОК		0.5	
.19	Check proper fitment of both battery box.	OK	+		
.20	Check proper fitment of Push Pull rod its bolt torquing and safety slings.	OK	+	OK	
.21	Buffer height: Range (1090, +15,-5) Drg No IB031-02002.			or	
	, -, -, -, -, -, -, -, -, -, -, -, -, -,	1090-1105		L/S	R/
		mm	FRONT	1095	109
22	Buffer Length: Range (641 mm + 2 to 10 mm + 2 to 10 mm)		REAR	1095	109
	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-SK.DL-3430 .	641 mm		L/S	R/S
			FRONT		
22	YY			644	64
23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5	REAR	645	64
		mm,-12 mm	TD O.L.	L/S	R/S
		,-12 IIIII	FRONT	110	108
24	CBC Height: Range (1085 mm to 1105 mm) Drg No- IB031-02002 .	1007	REAR	109	114
		1085-1105	FRONT:	1100	
	248	mm	REAR:	1105	

(Signature of SSE/Elect. Loco)

NAME BHUPINDER SINGY

(Signature of JE/Elect Loco)

NAME TAMBISH PRASAD

PATIALA LOCOMOTIVE WORKS, PATIALA LOCO NO -:41659 Under frame component S.N. Descrition of component PL No. Make Warranty Mfg. date & Serial no. covered 1 Shell 29171064 EC BLADES & TOOLS PVT. LTD. upto 2 Main Transformer 165, 07/22 29731008 ABB 3 ABB-65-07-22-2XYT000000-ACE-003 ,2022 Conservator Tank BREATHER 29731057 YOGYA ENTERPRISES 4 Compressor both side 22-2823 & 22-3529 29511008 | ELGI 5 Battery Box both side EUBS928368 (05/22), EUBS928370 (05/22) 29680013 | CHANDRA (both) Traction Bar Cab-1 6 PO condition 44 (07/22) , 45 (07/22) 29100069 TEW Traction Bar Cab-2 4234 (06/22) 29100069 TEW 8 Side Buffer Assly Both Side 4246 (06/22) 11803587 KM, FASP, KM, KM Oil Cooling Pump both Side 9 645-11/21 ,499 ,548-11/21 , 214-03/22 29530027 FLOWWELL Transformer oil Steel pipes 22070501 (07/22), 22070508 (07/22) 29230044 RANSAL per Soft Draft Gear (CBC) 29130037 RIL, FASP Secondry Helical Spring on Bogie 03/22 ,01/22 29045034 GB SPRING PVT LTD 13 ELASTIC RING (Center pivot Ring) 29100010 AVADH 14 | Center Pivot Housing 29100057 TEW A4457 (07/22) ,A4445 (07/22) Machine room Component cab 1 TM-Blower AIR CONTROL AND CHEMICAL ENGG 06/2022, AC-49467, CGLVEAM3120 29440075 TM- Scavenging Blower Motor 29440117 SAMAL HARAND PVT LTD Axillary Control Cubical (HB-1) 05.22 & CF 30/D6007 29171180 C. G. L 4 Filter Cubical (FB-1) 06/2022, CGHB1G2260249 29480140 C. G. L Complete Control Cubicle SB-1 06/2022, CGFB2260130 29171209 C. G. L Vehicle Control Unit (VCU) 6 CG/SB1/22060327 29741075 C. G. L 7 Aux. Converter (BUR) 1 per PO condition 07/2022, T2207797-P350 29741075 C. G. L 8 OIL COOLING BLOWER(OCB) 07/2022 & CGA1001227728-P352 29470043 AIR CONTROL AND CHEMICAL ENGG OIL COOLING RADIATOR (OCR) 9 05/2022 &AC-46690, LHP1001198708 29470031 STANDARD RADIATORS 10 M/C Room Blower 05/2022, 160SRPL 29440105 G. T. R CO (P) LTD 11 M/C Room Scavenging Blower 29440129 G. T. R CO (P) LTD 05/22, MF-22. 06. 255 12 | Traction Convertor 29741075 C. G. L 03/ 2022, SM-22. 03.838 Head Light Housing 13 07/2022, CGP12270838-P352 4s 29610953 PATRA AND CHANDA 14 | Ballast Assembly 29170163 GFRE Transformer oil pressure Sensor 15 29250047 TOP GRIP INSTRUMENTS LTD 16 Transformer oil Temperature Sensor 02/2022, TGIC/DMW/086 & 075 29250035 FLORICAN 02/2022, 57619 MACHINE ROOM COMPONENT Cab-2 TM-Blower 29440075 IC ELECTRICAL CO(P) LTD TM- Scavenging Blower Motor 29440117 SAMAL HARAND PVT LTD 22/05, ICTMB220525 Axillary Control Cubical HB-2 29171192 KAYSON ELECTRICAL PVT LTD 05/2022, CF30/D5977 Complete Control Cubicle SB-2 29171210 TROLEX INDIA PVT LTD 06/2022, & KSEL/HB2/260 vehicle Control Unit (VCU) 05/2022, 221098 29741075 C. G. L Aux. Converter (BUR) 2&3 07/2022 & T2207802-P352 29741075 C. G. L PO condition OIL COOLING BLOWER(OCB) 29470043 AIR CONTROL AND CHEMICAL ENGG 07/22, CGA1002227727-P351 OIL COOLING RADIATOR (OCR) 29470031 STANDARD RADIATORS 03/2022, AC-46671, CGLVLAM2887 9 M/C Room blower 29440105 G. T. R CO (P) LTD 05/2022, 157SRPL M/C Room Scav. blower 29440129 G. T. R CO (P) LTD 04/22, MF -22. 06.265 11 Traction Convertor 29741075 C. G. L SM-22. 03.801 , 03/22 per 12 | Head Light Housing 29610953 PATRA AND CHANDA 07/22, CGP12270837-P352 13 | Ballast Assembly 29170163 , FAS 14 Transformer oil pressure Sensor 29250047 TOP GRIP INSTRUMENTS LTD 44653 15 Transformer oil Temperature Sensor 29250035 FLORICAN 02/2022, TGIC/DMW/070

Driver Cabin

29140050 Modif. Mechwell com.fitt

29811028 KKI POWER DRIVE LTD

29170011 TOP GRIP

EEF

29470080 SHIVAM

29171131

NAME BHUPLANDER STAICH

Hand Brake

Cab Heater

Driver Seats

Crew Fans

3

4

5

Air Conditioner

SIGN..... NAMES ATISH TUMAK JE/LAS

As per PO condition

02/2022& 57571

694, 777, 699, 655

KKI/HVAC/CLW/1174, 1168

075/21-138, 110, 107, 118

13389

654, 705

(3)

Warranty	As per IRS/PO conditions
8.2 8.2 3r. no. 17244-1772,05/22, 11387-06/22 11387-06/22 03/21,03/21	3073-03-22 2002-N,635855 AALN/07/2022/061/VCBA/241 04/22,04/22 448222/7 ES-22-00065 9851917 9851918 LD2-04-7126-22 BUIS-105052 MAR- 22-07- WAG9-1958 D 22-052A,C 22-047B
A165 APL /Nos Supplier Supplie	
S.No. Description 1 Pantograph 2 Servo motor 3 Air Intake filter Assly 4 Insulator Panto Mtg.	11 Surge Arrester 12 Auxillary Compresssor 13 Air Dryer 14 Auxillary Compresssor 15 Air Brake Panel 16 Contoller 17 Breakup Valve 18 wiper motor

SSE

SSE/TESTING



7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION	NO NO	1	2	3	4	5	6
S.T.	MAKE	KM	KM	KM	KM	KPE	KM
G.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KM	KM	KM	KM
BACKLASH (0.254 – 0.458mm)	0.300	0.290	0.310	0.300	0.320	0.310

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	16.32	18.03	15.86	19.00	15.98	16.16
LEFT SIDE	16.66	17.16	19.00	16.10	16.70	18.00

11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	PLW	-	PLW-1324
2	PLW	-	PLW-1301
3	PLW		PLW-1321
4	PLW	-	PLW-1325
5	PLW		PLW-1313
6	PLW		PLW-1319

SSE/ Bogie Shop





PATIALA LOCOMOTIVE WORKS, PATIALA

Loco No. 41659

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	DI NI		
FRONT			PL No.	PO No. & dt.	Warranty Period
	SL-14	SIMPLEX	0010-	102884	As per PO/IRS
REAR	SL-1628	ACPL	29105146	102883	conditions

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: ESCORT

3. AXLES:

AXLE POSITION NO	1	2	2			
MAKE		2	3	4	5	6
MAKE/	DMW	DMW	DMW	DMW	DMW	DMW
S.NO	22840	22798	22841	22711	22456	
Ultrasonic Testing	OK	OK		22111	22436	22829
- Tooting	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	0			
	0110/00		3	4	5	6
GEAR END	CNC/22- 1484	CNC/22- 1501	CNC/22- 1486	CNC/22- 374	CNC/22-	CNC/22
Ultrasonic Testing	OK	OK	OK	OK	555	692
EDEE END	CNC/22-	CNC/22-			OK	OK
FREE END	1473	1492	CNC/22- 1475	CNC/22- 421	CNC/22- 539	CNC/22-
Ultrasonic Testing	OK	OK	OK			662
		OIL	UN	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

A)	XLE POSITION NO	1	2					
Carr	NANCE	1		3	4	5	6	
Gear End	MAKE	NBC	NBC	NBC	NBC	SKF	NBC	
Liid	PO NO. & dt	01616	01616	01616	01616			
Free End	MAKE	NIDO			01010	771678	01616 NBC 01616	
		NBC	NBC	NBC	NBC	SKF		
	PO NO. & dt	01616	01616	01616	01616	771678		

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	0					
			3	4	5	6	
BULL GEAR END	868	84 T	966	952	83 T		
FREE END	862	07 T	400-	002	03	924	
		87 T	1005	979	86 T	857	

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41659 LIST OF ITEMS FITTED BY ECS

RLY: NR

SHED: LDH

PROPULSION SYSTEM: CGL

S	N DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO CAB-1/CAB-2	CAB-1/CAB-2	MAKE/SUPPLIFE	IdO	Warranty Covered
-	Head Light Lamp	29610023	07/2021	07/2021	M/s PCF	No.	
7	Led based FL Light	25984962	2548	2428	M/s Power Tech	02 set	
က	Led Marker Light	25984860	2441,2320	2228.2327	M/s FFIC	04 set	
4	Driver Cab Light	29610461	7884,7786	7887,7960	M/s EIC	04 No's	
2	Cab Heater	29170011	705	654	M/s Top Grip	02 ser	
ဖ	Crew fan	29470080	699,655	777,694	M/s Shivam	04 No's	
^	Master controller	29860015	4541	4661	M/s Woama	02 No's	
ω	Complete Panel A, C,D	29178204	KT-435	KT-442	M/s KONTACT	02 set	AS PER IRS/PO
თ	Complete Cubicle- F Panel	29178162	AALN/05/2022/CFP/ AALN/05/2022/CFP 013 /018	AALN/05/2022/CFP /018	M/s AUTOMETER	02 No's	
9	10 Heater rotary switch	29700012			M/s ReCOM	02 No's	
=	11 DIFFERENCIAL AMPLIFIER	29500059	5589	5590	M/s BAUMER	02 No's	
12	SPEED IND & REC. SYSTEM	29200040	4175	4847	M/s MEDHA	01 set	
13	13 Battery (Ni- Cd)	29680025	Battery set No. 360 (Along with maintenance Kit)	t No. 360 Intenance Kit)	M/s AMCO	01 set	
4	14 Harnessed Cable Complete	29600418	PPS PLW	MTc	PPS PLW	01 set	

SSE/ECS



As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018. As per clause no.9 of CLW Specn. CLW/ES/3/0459. [18 months after commissioning or 24 months from details of supply for multi core]
COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-SUPPLY OR 24 MONTHS FROM THE DATE OF WHICHEVER IS EARLIER. 8 WHICHEVER IS EARLIER.
MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF SPECN NO.CLW/ES/3/0660/C COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW

-	7	-	o	U	
	29942007		29480140	29180016	
	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.		COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	
	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the (5) years after commissioning. Any equipment/part which by the manufacturer. The replaced components shallfurther be and should the replaced components proveunsatisfactory in components by they shall be replaced to modified and improved components by they shall be replaced by modified and improved components by the supplier free of cost.	



SIN

				4	
12	11	10	9		∞
29171180	29171209	29171210	29171192		29105146
COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.		Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil
AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FRON THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FRONTHE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FRONTHE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FRON THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]