भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41814

TYPE: WAG9HC

RAILWAY SHED: CR/BSL

PROPULSION SYSTEM: BTIL

DATE OF DISPATCH: 27.07.2023

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41814

RAILWAY/SHED: CR/BSL

DOD: July-2023

INDEX

SN	PARA	ACTIVITIES	PAGE NO.
		Testing & Commissioning (ECS)	
1.	1.0	Continuity Test of the cables	
	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5.0
	2.2	Check Points	5-6
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	11-10
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.8	Verification of Converter Protection Circuits (Hardware limits)	
	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5.4	Auxiliary circuit 415/110	
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
	5.8	Test Harmonic Filter	
	5.9	Test important components of the locomotive	05.00
6. 7.	6.0	Running Trial of the locomotive	25-26 27
	7.0	Final Check List to be verified at the time of Loco dispatch Status of RDSO modifications	
8.	8.0		28
9.	1-10	Pneumatic Test Parameters	29 - 32
10.		Loco Check Sheet(LAS)	33
11.	-	Component History (LAS,ECS,ABS)	34-36
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13	-	Warranty Conditions as per Tenders	39 -41

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	GK	100 ΜΩ	700 MA
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	oK	100 ΜΩ	GOO MI
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	800 MA
Earthing Choke	Earth Return Brushes	0K	100 ΜΩ	400 MM
Transformer	Power Converter 1	οK	100 ΜΩ	800 MV
Transformer	Power Converter 2	οK	100 ΜΩ	700 MM
Power Converter 1	TM1, TM2, TM3	QK	100 ΜΩ	600 MM.
Power Converter 2	TM4, TM5, TM6	OK	100 ΜΩ	700 MM
Earth	Power Converter 1	ok	100 ΜΩ	800 MM
Earth	Power Converter 2	ok	100 ΜΩ	too Mr

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

(Ref: WI/ECS/10)

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

PATIALA LOCOMOTIVE WORKS, PATIALA

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OL	100 MΩ	5000
Transformer	BUR2	ore	100 MΩ	2000
Transformer	BUR3	no	100 MΩ	2000
Earth	BUR1	80c	100 MΩ	2000
Earth	BUR2	20	100 MΩ	2000
Earth	BUR3	ne	100 MΩ	2000
BUR1	HB1	or	100 MΩ	2000
BUR2	HB2 :	00	100 MΩ	2000
HB1	HB2	20	100 MΩ	2000
HB1	TM Blower 1	OV.	100 MΩ	100
HB1	TM Scavenge Blower 1	20	100 MΩ	200
HB1	Oil Cooling Unit 1	M	100 MΩ	200
HB1	Compressor 1	2V	100 ΜΩ	100
HB1	TFP Oil Pump 1	ne	100 MΩ	200
HB1	Converter Coolant Pump 1	DX.	100 ΜΩ	700
HB1	MR Blower 1	202	100 MΩ	200
HB1	MR Scavenge Blower 1	20	100 ΜΩ	200
HB1	Cab1	200	100 MΩ	too
Cab1	Cab Heater 1	201	100 MΩ	100
HB2	TM Blower 2	ne	100 MΩ	200
HB2	TM Scavenge Blower 2	804	100 MΩ	200.
HB2	Oil Cooling Unit 2	ne	100 MΩ	200
HB2	Compressor 2	202	100 MΩ	200
HB2	TFP Oil Pump 2	DL	100 MΩ	200
HB2	Converter Coolant Pump 2	no	100 MΩ	200
HB2	MR Blower 2	de	100 MΩ	200
HB2	MR Scavenge Blower 2	ne	100 MΩ	200
HB2	Cab2	20	100 ΜΩ	200
Cab2	Cab Heater 2	ne	100 MΩ	100

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	OK
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.X7-3		OK

Prescribed value	Measured
> 0.5 MΩ	Value 6MΩ
Prescribed value:	Measured
> 50 MΩ	Value 65_ MΩ
	> 0.5 MΩ Prescribed value:

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	· OK
Memotel circuit of cab1 &2	10A	2K
Memotel speed sensor	10A	oK .
Primary voltage detection	01A, 12A	04
Brake controller cab-1 & 2	06F, 06G	OF

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	ðK.
TE/BE meter bogie-1 & 2	08E, 08F	OK.
Terminal fault indication cab-1 & 2	09F	OK.
Brake pipe pressure actual BE electric	06H	OK
Primary current sensors	12B, 12F	ok
Harmonic filter current sensors	12B, 12F	oK
Auxiliary current sensors	12B, 12F	OK .
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK .
Fraction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Fraction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OK
Fraction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OK
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= 10ΚΩ± ± 10%)	13A	OK
UIC line	13B	OK
Connection FLG1-Box TB	13A	OK

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page : 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.942
Resister to maximum current relay.	1Ω ± 10%	1.52
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.32
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.28
Between wire 6 & 7	0.2 Ω	0.212
Between wire 5 & 7	0.4 Ω	0.45
For train bus, line U13A to earthing.	10 k Ω ± 10%	10.0KM
For train bus, line U13B to earthing.	10 k Ω ± 10%	10.012
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	3 00MJ
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.32
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.285
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0:287
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.31
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 k Ω± 10%	2.2KM
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.759
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9KM
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.8KL
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	39051
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	MA
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	1052

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 418 14

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	choused as
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	charted or

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	checked on
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK.
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	D/L
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	9K
Pretest speedometer	Sheets of Group 10	oK.
Pretest vigilance control and fire system	Sheets of Group 11	OK
Power supply train bus	Sheets of Group 13	, or

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 418/4
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yey
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yej
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.0.5.1
Traction converter-2 software version:	1.0.5.)
Auxiliary converter-1 software version:	1.0.0.6
Auxiliary converter-2 software version:	2.0.0.6
Auxiliary converter-3 software version:	3.0.0.6
Vehicle control unit -1 software version:	6.0.0.2
Vehicle control unit -2 software version:	6.0.0.5

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	10%,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1004
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	257.

ge

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1004
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	44.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741,
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	32°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	32.5°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	32° (
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	33°€
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	3201
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	32°C

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/4

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	cheered on
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	cferred of
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	chaetador
Converter and filter contacto operation with both Powe Converters during Shut Down.		- etackalon

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

		•
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco. • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open.	eRoccedor
Test earth fault detection battery circuit positive & negative	By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault	o cfolked &
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.	Rooted on
Time, date & loco number	Ensure correct date time and Loco number	OK

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/14

Type of Locomotive: WAP-7/WAG-9HC

4.0 Sensor Test and Converter Test

Page: 11 of 27

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.041	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.041	OK
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.0549	00
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	0.0200	26
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.978	OK
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	6.444 pms	OK

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.	41.5V2MS)	OK
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	12.211	OK
		11.04000	

Be

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25KV	250%
SLG2 G 87-XUPrim	25 kV	250%	2874	2501,

Decrease the supply voltage below $140 \, V_{RMS}$. VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	17kV	170%	12KN	1701
SLG2 G 87-XUPrim	17 kV	170%	1744	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV:	300%	30KV	300%
SLG2 G 87-XUPrim	30 kV	300%	30×V	300%

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 418/4

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjus	
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	(Yes/No)
Try to activate the cab in driving mode:	L (Yes/No)
Contactor 218 do not close; the control	
electronics is not be working.	
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V _{RMS} through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V _{RMS} through variac to wire no. 1501 & 1502; Decrease the supply voltage below	(Yes/No)
140V _{RMS} ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (Pos. 78)

4.5 Maximum current relay (Fos. 76)	
Disconnect wire 1521 & 1522 of primary current trans &1522 (including the resistor at Pos. 6.11); Put loco in sim on contact 136.3; Close VCB; supply 3.6A _{RMS} at the opmaximum current relay Pos. 78 for correct over current variables.	nulation for driving mode; Open $R_3 - R_4$ ben wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact R ₃ – R ₄ of 136.3 closed; Close VCB; Tune the	resistor 78.1 for the current of 7.0A _{RMS}
/9.9A _p at the open wire 1521;	The state of the s
VCB opens with Priority 1 fault message on display.	_(Yes/No)

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		1
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		299mB
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA _{DC} to the test winding of		
	sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)	_	336 mig
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		_
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)	_	347mB
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8 8(-)	1 411	MA
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	MA	NA

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OIL
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close			Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
	Open		The state of the same of the same of		Close	-	The same of the sa		Close

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/14

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	elose	open	clos	opes	clos	open	clos	clos	open
BUR1 off	clos	open	clos.	clos	open	clos	opey	ope,	clos
BUR2 off	open	Open	clos	clos-	clis	clos	open	spey	clos
BUR3 off	open	closs	open	clos	closs	clos-	open	open	clos

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yey
No rubbish in machine room, on the roof, under the loco.	(b)
All the electronic Sub-D and connectors connected	No.
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Te,
All the bogie body connection and earthing connection done correctly.	New,
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	10
KABA key interlocking system.	709

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/4

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cherical of
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheekodou
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	chartedon
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	c Rocked on
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	efacted of
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	charact on
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	choked or
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		chelkedse

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4814

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.5	10.8
Oil pump transformer 2	9.8 amps	9.2	10.5
Coolant pump converter 1	19.6 amps	5.2	6.9
Coolant pump converter 2	19.6 amps	5.5	7.5
Oil cooling blower unit 1	40.0 amps	34.8	56.9
Oil cooling blower unit 2	40.0 amps	39.0	72.0
Traction motor blower 1	34.0 amps	28.6	135.0
Traction motor blower 2	34.0 amps	32.0	118.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.3	18.5
Sc. Blower to Traction motor blower 1	6.0 amps	4.7	15.1
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	24.2	96.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	26.6	122.3

Effective Date: Feb 2022

Doc.No.F/ECS/01

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 418/4

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10081	Yes
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	616 V	Yes
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Ash	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1010	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	6374	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amb	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Anap	You
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12/19/10	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1100	My

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10121	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637V	ley
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amb	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21 Amb	Yey
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	1) Amp	Yey
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1104	Yes

Readings are dependent upon charging condition of the battery.

7

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4)814

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

checkeda

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery of charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each ixiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	3.5	13.8
Machine room blower 2	15.0 amps*	3.2	16.5
Sc. Blower to MR blower 1	1.3 amps	1.8	2.4
Sc. Blower to MR blower 2	1.3 amps	1.5	2.7
Ventilator cab heater 1	1.1 amps	1.)	1.3
Ventilator cab heater 2	1.1 amps	1.1	1.3
Cab heater 1	4.8 amps	4.0	4.1
Cab heater 2	4.8 amps	4.0	4.1

^{*} For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/4

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choeral on
Measurement of discharging of DC Lin of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choired or
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charged or
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeted on
Earth fault detection on a part of the traction circuit of Converter 1	declare the successful operation and demonstrate the same to the PLW supervisor.	c-Recked ac
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choesed &
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choexad sa

Effective Date: Feb 2022

Doc.No.F/ECS/01

22 (Ref: WI/ECS/10) PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheekad an
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked on
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	excepted an
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	cheerood de
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chalked on
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	creeked on
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted ve

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears	efored or
Management of	Disturbance in Converter 1	
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shurdown. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	excepted on

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41874

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop	e Rocked be
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	offered or
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	OK

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	chocked ok
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	charted on
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	charked so
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	cheeked ou
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	charred ou

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	choekad in
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cheekedon
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	choralm
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	choradon choradon
Illuminated Push button	All illuminated push buttons should glow during the operation	choired on
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Kontoor
	Loco charging	loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	cheepel
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	chordy
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	Koerela
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Read or

gs

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41814

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

	Check vigilance	Set the speed more than 1.5 kmph and ensure that	9
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .	
	locomotive	For 60 seconds do not press vigilance foot switch or	
1		sanding foots switch or TE/BE throttle or BPVG	
		switch then	
		Buzzer should start buzzing.	
		 LSVW should glow continuously. 	ehooka
		Do not acknowledge the alarm through BPVG or	CAR
		vigilance foot switch further for 8 seconds then:-	
		Emergency brake should be applied	
		automatically.	
		VCB should be switched off.	
		Resetting of this penalty brake is possible only after	
		180 seconds by bringing TE/BE throttle to 0 and	
		acknowledge BPVR and press & release vigilance	
		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).	Rockala
		With park brake in applied condition.	HA
		• With direct loco brake applied (BP< 4.75Kg/cm ²).	9
		With automatic train brake applied (BP<4.75Kg/cm²).	(choet of s
-]			
		With emergency cock (BP < 4.75 Kg/cm²). The control of the c	<u>al</u> ,
8.	Check traction interlock	Switch of the brake electronics. The	cheek ach
,		Tractive /Braking effort should ramp down, VCB	6
		should open and BP reduces rapidly.	
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	Excepto
*	braking.	should start reducing.	7
10.	Check for BUR	In the event of failure of one BUR, rest of the two	7
	redundancy test at	BURs can take the load of all the auxiliaries. For this	Rocked
	ventilation level 1 & 3 of		Л
	loco operation	Auxiliaries should be catered by rest of two BURs.	
		Switch off the 2 BURs; loco should trip in this case.	
11.	Check the power	Create disturbance in power converter 27	tour
	converter	off the electronics. VCB should open and converter	Course
	isolation test	should get isolated and traction is possible with	
		another power converter.	

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/4

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OK	92 (2
2	Marker Red	OK	OR	
3	Marker White	36	26	
4	Cab Lights	OK	OK	
5	Dr Spot Light	. 00	a.	
6	Asst Dr Spot Light	or	De.	choused working
7	Flasher Light	عاد	OK	
8	Instrument Lights	26	ek.	
9	Corridor Light	04	DK	
10	Cab Fans	04_	OK	
11	Cab Heater/Blowers	04	OR	
12	All Cab Signal Lamps Panel 'A'	OL	on	

Status of RDSO modifications

LOCO NO: 41814

Sn	Modification No.	Description	Remarks	
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.		
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok	
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Øk/Not Ok	
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Øk/Not Ok	
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok	
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Øk/Not Ok	
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Not Ok	
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Oke Not Ok	
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok	
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	contactors of three phase locomotives to improve reliability.	Ok/Not Ok	
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12		QK/Not Ok	
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	QK/Not Ok	
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	6k/Not 0k	
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Øk/Not Ok	
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok	
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	harmonic filter and hotel load along with its resistors in three phase electric locomotives.	OK/NOT OK	
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.		
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	OK/Not OK	
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.		
20			Ok/Not Ok	

Signature of JE/SSE/TRS

Loco No.: 41814

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

- 1	Parameters	Referenc	0		
1.	All supply system (Pantograph & VCD)	Kererenc	е	Value	Result
1.1	Linsure, Air is completely vented from pantograph				
	Reservoir (Ensure Panto gauge reading is Zoro)	The treat of the page			0
1.2	Turn On BL Key. Now MCPA starts				
	Record pressure Build up time (8.0 kg/cm2)		(00 sec. (Max.)	59
1.3	Auxiliary compressor safety Valve 23F setting				
	, turk. 231 setting	Faiveley Doc. N	0. 8	.5±0.25kg/cm	2 8.5
		DMTS-014-1, 8			
		CLW's check she			
		no. F60.812 Ver	sion		
1.4	Check VCB Pressure Switch Setting	2			
	and setting	CLW's check she	et o	pens 4.5±0.15	4.55 Kg/cm2
		no. F60.812 Vers		g/cm2, closes	4.33 kg/cm/
	Set pantograph Selector Switzsh :	2	5.	5±0.15 kg/cm	5 5 C V - /
	Set pantograph Selector Switch is in Auto, Open pan-1&2 Set Cab 1 Pan UP in Panel A.	Isolating Cocks & KAI	3A cock l	OV KOV (KARA V	5.55 Kg/cm2
	tran or m ranet A.			served Pan 2	
	Close Pan 2 induiting		Rise		ОК
	Close Pan 2 isolating Cock Open Pan 2 isolating Cock			to 2 Falls Dow	
8	Record Bank			to 2 Rises	n OK
9	Record Pantograph Rise time		1		
10	Record Pantograph Lowering Time			o 10 seconds	8 Sec
1.1.7	Panto line air leakage			o 10 seconds	9 Sec
11				g/cm2 in 5	0.6 kg/cm2
	High Reach Panto emergency test and reset.		Min.		in 5 Min.
	Main Air Supply System				ok .
	Ensure, Air is completely vented from locomotive. Drain	Theoretical			
	and the reservoirs by opening the drain cocks and the	calculation and			
	crosed drain cocks. MR air pressure build un time by each	1			
	compressor from 0 to 10 kg/cm2.	test performed by			
	i) with 1750 LPM compressor	Railways.			
	ii) with 1450 LPM compressor		i) 7 m	ins Max.	6 mm. & 40
		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	ii) 8.5	mins Max.	sec.
	Drain air below MR 8 kg/cm2 to start both the				
	compressors		Check	Starting of	ok
1	Drain air from main reservoir up to 7 kg/cm2. Start			ompressors	
	compressors, Check pressure build time of individual		7	. (Max)	CP1 29 Sec
	ompressor from 8 kg/cm2 to 9 kg/cm2				
(heck Low MR Pressure Switch Setting (37)				CP2 26 Sec
	Street Setting (37)	D&M test spec.	Closes	at 6.40±0.15	6.5 Kg/cm2
		MM3882 &		2 Opens at	-57 (1112
	heck compressor Pressure Switch RGCP setting (35)	MM3946		.15kg/cm2	5.5 Kg/cm2
	Switch RGCP setting (35)	D&M test spec.		at 10±0.20	10 Kg/cm2
		MM3882 &	kg/cm2		10 08\ CH5
		MM3946			8 Kg/cm2
	un both the compressors Record Pressure build up time		W - C - W		

WIS

Loco No.: 41814

. 7	Check unloader valv	ve operation time				Approx. 12 Sec.	10 sec
2.7	Check Auto Drain V	alve functioning (124	& 87)		No. of London	Operates when	
					The same	Compressor	
				DOMALOS		starts	11.55
2.9		safety valve setting (10/1). Run CP	D&M test MM3882 &		kg/cm2	Kg/cm2
	Direct by BLCP.	· cafety valve setting	(10/2) Run CP	D&M test		11.50±0.35	11.5 Kg/cm2
10	Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP		MM3882 &	MM3946	kg/cm2		
.11	Switch 'OFF' the co valve to reset at pr	Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 12 kg/cm2 less than opening		D&M test MM3882 &			
.12	BP Pressure: Switch	pressure. BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.		CLW's check : F60.812 Vers		.5.0±0.10kg/cm2	5.0 Kg/cm2
1.7	EP pressure:	sure of Duplex Check	Varve 52.1	.CLW's check	sheet no.	6.0±0.20kg/cm2	6.05
.13	Fit Test Gauge in T	est point 107F FPTP.	Open isolate cock	F60.812 Vers	ion 2		Kg/cm2
	136F. Check pressu						
3.0	Air Dryer Operat	tion				T La change	ok
3.1	Open Drain Cock 9 open for Test Chec	0 of 2 nd MR to start C ck Air Dryer Towers to	ompressor, leave change			i) Every minute (FTIL & SIL) ii) every two minute (KBIL)	OK.
			C			minute (Nove)	
3.2	Check Purge Air St	tops from Air Dryer at	Compressor stops	-		Blue	Blue
3.3	Check condition o	f humidity indicator					
4:0	Put Auto Brake (A	9) in full service, Che	eck MR Pressure air	D&M te		Should be less	0.7 Kg/cm2
	leakage from both	n cabs.		MM3882 8	k MM3946	than 1 kg/cm2 in 15 minutes	in 15 minutes
				Dente	et enoc	0.15 kg/cm2 in 5	0.08
4.2	Check BP Air leak	age (isolate BP chargi	ng cock-70)	D&M test spec. MM3882 & MM3946		minutes	Kg/cm2 in minutes
5.0	Brake Test (Aut	omatic Brake oper	ation)				
5.1	Record Brake Pipe & Brake Cylinder pressure at Each Step						
	Check proportionality of Auto Brake system		CLW's check sheet no. F60.812 Version 2				
	Auto controller position		BC (WAG 9 Kg/cm2	& WAG 7)	BC (WAP-5) Kg/cm2		
					Desult	Value	Result
		BP Pressure kg/cr	n2	Value	Result	value	
	Run	5±0.1	5.05 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/cm2	0.75±0.15	
			3.5 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	
	Full service	3.35±0.2	0.2 M/III 266	2.50±0.1		5.15±0.30	
	Emergency	Less than 0.3	^{0.2} भा.एता.डब	٧ - 2.30.0.1	2.5Kg/ cm2	1	1

5.	2 Record time to BP program		Loco No.	: 41814
	pressure grop to 3.5 kg/cm2 Encure	D&M test spec.	8±2 sec.	130
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946	0-2 360.	7 Sec
	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	H. min
		MM3882 & MM3946	to Below 25 kg/cm2	ОК
	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no	67	
		F60.812 Version 2		4.15
		7.7.12 (7.3.011.2	4.05 4.35	Kg/cm
			kg/cm2	
			Opens at BP	
			2.85-3.15	3.0
	oracle Controller handle from Running to	D&M test spec.	kg/cm2	Kg/cm2
	timergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	iviax. BC developed	77773662 & WIWI3946	- 2	
	WAP5 – BC 5.15 \pm 0.3 kg/cm2 apply time			34.000
	WAP7 BC 2.50 ± 0.1 kg/cm2		4±1 sec.	-
	WAG9 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
	Move Auto Brake Controller handle to full service and	D&M test spec.	21±3 sec.	22 sec
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure up	WIN 3002 & WIN 3946		
	to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7			
	WAG9		17.5±25 sec.	
5.7	Move Auto Brake Controller handle to Release, Check	CIVA' I I	52±7.5 sec.	54 sec.
	BP Pressure Steady at 5.5 0.2 kg/cm2 time.	CLW's check sheet no.	60 to 80 Sec.	79 Sec
	Auto Brake capacity test. The capacity of the A9 valve	F60.812 Version 2	1	
	in released condition must conform to certain limit in	RDSO Motive power	BP pressure	
	order to ensure compensation for air leakage in the	Directorate report no.	should not fall	
	train without interfering with the automatic	MP Guide No. 11 July,	below 4.0	
	functioning of brake.	1999 Rev.1	kg/cm2 with in	4.6
	* Allow The MR pressure to build up to maximum		60 Sec.	Kg/cm2
	stipulated limit.		2	
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A (Automatic brake controlling) at run			
	position.			
	· Couple 7.5 dia leak hole to the brake host pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors in		-	
	working condition.			
	Keep Auto Brake Controller (A 9) in Full Service. Press			
	Driver End paddle Switch (PVEF)		BC comes to '0'	0
0	Direct Brake (SA-9)			
1	Apply Direct Brake in Full Check BC pressure	1		
	WAGGINARY	//		
	WADS	CLW's sheek sheet no.	3.5±0.20 kg/cm2 3	.5
,	Apply Duract Books, B	F60.812 Version 2		g/cm2
		D&M test spec.		Sec
	Time	MM3882 & MM3946		

Loco No.: 41814

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.2 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)			
-7.1	Bail-off de-activated during emergency by any means			
	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	RDSO letter no. EL/3.2.19/3-phase (CCB), dtd 14.06.2022		
73	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.	- 100 miles		
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

Signature of Loco testing staff

Signature of SSE/Shop

Issue No.: 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO: 41814

ELECTRIC LOCO CHECK SHEET

<u>CR</u> Sho

Shed: BS1

1.1 Ch 1.2 Ch TM 1.3 Ch 1.4 Ch po 1.5 Ch 1.6 Ch 1.7 Ch 1.8 Ch 1.9 Ch 1.10 Ch saf 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.15 Ch 1.16 Ch 1.16 Ch 1.16 Ch 1.16 Ch 1.11	neck proper Fitment of Hotel Load Converter & its output contactor. The proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, MR Blower 1 & 2, MR Scavenging Blower 1 & 2, MR Blower 1 & 2, MR Scavenging Blower 1 & 2. The proper of Fitment of oil cooling unit (OCU). The proper Fitment of HB 1 & 2 and its respected lower part on its sosition. The proper Fitment of FB panel on its position. The proper Fitment of assembled SB1 & SB2 panel. The proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). The proper Fitment of Traction converter 1 & 2 (SR-1 & 2). The proper Fitment of Main compressor both side with the compressor fety wire rope. The proper Fitment of Bogie Body Safety Chains. The proper Fitment of Cow catcher. The proper Fitment of R1 & 2 Expansion Tank. The proper Fitment of Cow catcher for the proper fitment and maintain required gaps from Loco Shell Body of	Specified Value OK	Ol		1/C 1/C 1/C 1/C 1/C 1/C 1/C 1/C 1/C 1/C	lue
1.2 Ch TM 1.3 Ch 1.4 Ch po 1.5 Ch 1.6 Ch 1.7 Ch 1.8 Ch 1.9 Ch 1.10 Ch saf 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.15 Ch 1.16 Ch 1.16 Ch 1.16 Ch 1.11	neck proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, M Blower 1 & 2, TMB Scavenging Blower 1 & 2. neck proper of Fitment of oil cooling unit (OCU). neck proper Fitment of HB 1 & 2 and its respected lower part on its sition. neck proper Fitment of FB panel on its position. neck proper Fitment of assembled SB1 & SB2 panel. neck proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). neck proper Fitment of Traction converter 1 & 2 (SR-1 & 2). neck proper fitment, torquing & Locking of Main Transformer bolt. neck proper fitment of Main compressor both side with the compressor fety wire rope. neck proper resting of Secondary Helical Springs between Bogie & Shell body. neck proper fitment of Bogie Body Safety Chains. neck proper fitment of Cow catcher. neck coolant level in SR 1 & 2 Expansion Tank. neck Transformer Oil Level in both conservators Tank (Breather Tank). neck proper fitment and maintain required gaps from Loco Shell Body of	OK O			DIC DIK DIC DIC DIC DIC DIC DIC	
1.3 Ch 1.4 Ch 1.5 Ch 1.6 Ch 1.7 Ch 1.8 Ch 1.9 Ch 1.10 Ch 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.15 Ch 1.16 Ch 1.16 Ch	M Blower 1 & 2, TMB Scavenging Blower 1 & 2. Meck proper of Fitment of oil cooling unit (OCU). Meck proper Fitment of HB 1 & 2 and its respected lower part on its sition. Meck proper Fitment of FB panel on its position. Meck proper Fitment of assembled SB1 & SB2 panel. Meck proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). Meck proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Meck proper fitment, torquing & Locking of Main Transformer bolt. Meck proper fitment of Main compressor both side with the compressor fety wire rope. Meck proper resting of Secondary Helical Springs between Bogie & Shell body. Meck proper fitment of Bogie Body Safety Chains. Meck proper fitment of Cow catcher. Meck coolant level in SR 1 & 2 Expansion Tank. Meck Transformer Oil Level in both conservators Tank (Breather Tank). Meck proper fitment and maintain required gaps from Loco Shell Body of	OK OK OK OK OK OK OK OK			DIC DIK DIC DIC DIC DIC DIC DIC	
1.4 Ch po 1.5 Ch 1.6 Ch 1.7 Ch 1.8 Ch 1.9 Ch 1.10 Ch saf 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.16 Ch all	neck proper Fitment of HB 1 & 2 and its respected lower part on its osition. neck proper Fitment of FB panel on its position. neck proper Fitment of assembled SB1 & SB2 panel. neck proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). neck proper Fitment of Traction converter 1 & 2 (SR-1 & 2). neck proper fitment, torquing & Locking of Main Transformer bolt. neck proper fitment of Main compressor both side with the compressor fety wire rope. neck proper resting of Secondary Helical Springs between Bogie & Shell body. neck proper fitment of Bogie Body Safety Chains. neck proper fitment of Cow catcher. neck coolant level in SR 1 & 2 Expansion Tank. neck Transformer Oil Level in both conservators Tank (Breather Tank). neck proper fitment and maintain required gaps from Loco Shell Body of	OK			DIC DIK DIC DIC DIC DIC DIC DIC	
1.4 Ch po 1.5 Ch 1.6 Ch 1.7 Ch 1.8 Ch 1.9 Ch 1.10 Ch saf 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.16 Ch all	neck proper Fitment of HB 1 & 2 and its respected lower part on its osition. neck proper Fitment of FB panel on its position. neck proper Fitment of assembled SB1 & SB2 panel. neck proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). neck proper Fitment of Traction converter 1 & 2 (SR-1 & 2). neck proper fitment, torquing & Locking of Main Transformer bolt. neck proper fitment of Main compressor both side with the compressor fety wire rope. neck proper resting of Secondary Helical Springs between Bogie & Shell body. neck proper fitment of Bogie Body Safety Chains. neck proper fitment of Cow catcher. neck coolant level in SR 1 & 2 Expansion Tank. neck Transformer Oil Level in both conservators Tank (Breather Tank). neck proper fitment and maintain required gaps from Loco Shell Body of	OK			UK JK JK JK JK JK JK JK JK JK J	
1.6 Ch 1.7 Ch 1.8 Ch 1.9 Ch 1.10 Ch saf 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.16 Ch all	neck proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). Neck proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Neck proper fitment, torquing & Locking of Main Transformer bolt. Neck proper fitment of Main compressor both side with the compressor fety wire rope. Neck proper resting of Secondary Helical Springs between Bogie & Shell body. Neck proper fitment of Bogie Body Safety Chains. Neck proper fitment of Cow catcher. Neck coolant level in SR 1 & 2 Expansion Tank. Neck Transformer Oil Level in both conservators Tank (Breather Tank). Neck proper fitment and maintain required gaps from Loco Shell Body of	OK OK OK OK OK OK OK			sk Sk Sk Sk Sk Sk Sk Sk Sk Sk Sk Sk Sk Sk	
1.6 Ch 1.7 Ch 1.8 Ch 1.9 Ch 1.10 Ch saf 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.16 Ch all	neck proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). Neck proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Neck proper fitment, torquing & Locking of Main Transformer bolt. Neck proper fitment of Main compressor both side with the compressor fety wire rope. Neck proper resting of Secondary Helical Springs between Bogie & Shell body. Neck proper fitment of Bogie Body Safety Chains. Neck proper fitment of Cow catcher. Neck coolant level in SR 1 & 2 Expansion Tank. Neck Transformer Oil Level in both conservators Tank (Breather Tank). Neck proper fitment and maintain required gaps from Loco Shell Body of	OK OK OK OK OK OK OK			sk Sk Sk Sk Sk Sk Sk Sk Sk Sk Sk Sk Sk Sk	
1.7 Ch 1.8 Ch 1.9 Ch 1.10 Ch saf 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.16 Ch all	neck proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3). neck proper Fitment of Traction converter 1 & 2 (SR-1 & 2). neck proper fitment, torquing & Locking of Main Transformer bolt. neck proper fitment of Main compressor both side with the compressor fety wire rope. neck proper resting of Secondary Helical Springs between Bogie & Shell body. neck proper fitment of Bogie Body Safety Chains. neck proper fitment of Cow catcher. neck coolant level in SR 1 & 2 Expansion Tank. neck Transformer Oil Level in both conservators Tank (Breather Tank). neck proper fitment and maintain required gaps from Loco Shell Body of	OK OK OK OK OK OK OK			1/C 1/C 1/C 1/C 1/C 1/C 1/C 1/C 1/C 1/C	
1.8 Ch 1.9 Ch 1.10 Ch saf 1.11 Ch 1.12 Ch 1.13 Ch 1.14 Ch 1.15 Ch 1.16 Ch all	neck proper Fitment of Traction converter 1 & 2 (SR-1 & 2). Neck proper fitment, torquing & Locking of Main Transformer bolt. Neck proper fitment of Main compressor both side with the compressor fety wire rope. Neck proper resting of Secondary Helical Springs between Bogie & Shell body. Neck proper fitment of Bogie Body Safety Chains. Neck proper fitment of Cow catcher. Neck coolant level in SR 1 & 2 Expansion Tank. Neck Transformer Oil Level in both conservators Tank (Breather Tank). Neck proper fitment and maintain required gaps from Loco Shell Body of	OK OK OK OK OK OK		(2/C 2/C 2/C 2/C 2/C 2/C 2/C	
1.9 Chorsel 1.10 Chorsel 1.11 Chorsel 1.12 Chorsel 1.13 Chorsel 1.14 Chorsel 1.15 Chorsel 1.16 C	neck proper fitment, torquing & Locking of Main Transformer bolt. Neck proper fitment of Main compressor both side with the compressor fety wire rope. Neck proper resting of Secondary Helical Springs between Bogie & Shell body. Neck proper fitment of Bogie Body Safety Chains. Neck proper fitment of Cow catcher. Neck coolant level in SR 1 & 2 Expansion Tank. Neck Transformer Oil Level in both conservators Tank (Breather Tank). Neck proper fitment and maintain required gaps from Loco Shell Body of	OK OK OK OK OK OK		(ac ac ac	
1.10 Che saf 1.11 Che 1.12 Che 1.13 Che 1.14 Che 1.15 Che 1.16 Che all	neck proper fitment of Main compressor both side with the compressor fety wire rope. neck proper resting of Secondary Helical Springs between Bogie & Shell body. neck proper fitment of Bogie Body Safety Chains. neck proper fitment of Cow catcher. neck coolant level in SR 1 & 2 Expansion Tank. neck Transformer Oil Level in both conservators Tank (Breather Tank). neck proper fitment and maintain required gaps from Loco Shell Body of	OK OK OK OK		(01C 31C 31C	
1.12 Che 1.13 Che 1.14 Che 1.15 Che 1.16 Che all	neck proper fitment of Bogie Body Safety Chains. Heck proper fitment of Cow catcher. Heck coolant level in SR 1 & 2 Expansion Tank. Heck Transformer Oil Level in both conservators Tank (Breather Tank). Heck proper fitment and maintain required gaps from Loco Shell Body of	ОК ОК ОК		(2K 2K	
1.13 Che 1.14 Che 1.15 Che 1.16 Che all	leck proper fitment of Cow catcher. leck coolant level in SR 1 & 2 Expansion Tank. leck Transformer Oil Level in both conservators Tank (Breather Tank). leck proper fitment and maintain required gaps from Loco Shell Body of	ок ок ок		(2K 2K	
1.13 Che 1.14 Che 1.15 Che 1.16 Che all	leck proper fitment of Cow catcher. leck coolant level in SR 1 & 2 Expansion Tank. leck Transformer Oil Level in both conservators Tank (Breather Tank). leck proper fitment and maintain required gaps from Loco Shell Body of	OK OK		()/L	
1.14 Cho 1.15 Cho 1.16 Cho all	eck coolant level in SR 1 & 2 Expansion Tank. eck Transformer Oil Level in both conservators Tank (Breather Tank). eck proper fitment and maintain required gaps from Loco Shell Body of	OK OK		(U/C	
1.15 Che 1.16 Che all	eck Transformer Oil Level in both conservators Tank (Breather Tank). eck proper fitment and maintain required gaps from Loco Shell Body of	ОК		2 100 100	CHICAGO CONTRACTOR	
1.16 Che all	eck proper fitment and maintain required gaps from Loco Shell Body of					
' all		- OK)/(
Loc	metallic pipes to avoid any damage during online working of comotives.			C	x	
1.17 Che	eck proper fitment of both battery box.	OK		()K	
1.18 Che	eck for any gap between Main Transformer mounting base & Loco Shell.	OK			DIC	
1.19 Che	eck proper fitment of Push Pull rod its bolt torquing and fitment of fixing ble. As per Drg No 1209-01-113-001	ОК		A Comment	2/5	
1.20 Loc	condary Vertical and Lateral Clearance on leveled track at the time of co Dispatch. RS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std :35- 60 mm	LP CAI	ALP	C.	AB-2
		Lateral Std- 45- 50 mm	46	48	RS	70
Dut	ffer height: Range (1090, +15,-5)	1005 1105	-10	1 1/	10	1-7-
	g No IB031-02002.	1085-1105		L/	State Section 1	R/S
Di	g NO 10031-02002.	mm	FRONT	109		1091
121			REAR	109	2	109
	ffer Length: Range (641 mm + 3 to 10 mm with buffer face) rg No-SK.DL-3430.	641 mm	FRONT	L/	S`	R/S
			REAR	64	-	648
Hoi	ight of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5	Kunk	L/		64E
	per RDSO Pamphlet Important Bogie Clearances of Electric	mm,-12 mm	EDONO	-		R/S
Loc	comotives.	mm,-12 mm	FRONT	112	-	114
	C Height: Range (1090, +15,-5)	1090, +15	FRONT	: 109	5	
Drg	g No- IB031-02002.	-5 mm	REAR:	116	-	

(Signature of SSE/Elect. Loco (UF))

(Signature of SSE/JE/Elect Loco)

(Signature of JE/UF)

NAME 37 184 (VMA)

DATE 27/07/23

DATE 27/07/23

		TATIALA	OCOMOTIVE WO		"大大大"的	A STATE OF THE STATE OF	
		PL No.		ment Serial No.		Make	
5.No.	Equipment Complete Shell Assembly with piping	29171027		41/44 , 06/2023	CHAND	ORA UDYOG	
2	Side Buffer Assly Both Side Cab I		221-04/23	281-04/23	км	KM	
3	Side Buffer Assly Both Side Cab II	29130050	253-04/23	172-04/23	KM	KM	
4	CBC Cab I & II	29130037	04/23	04/23	. FASP	FASP	
	Hand Brake			/23- 15556	MODIFIE	D MECHWELL	
6	Set of Secondry Helical Spring	29045034		X 100 100 100 100 100 100 100 100 100 10	GB SPRI	NGS PVT LTD	
7	Battery Boxes (both side)	29041041 29680013	95-06/23	SR NO NOT VSBL	BHARTIA BRIGHT	BRITE METALLOGY	
8	Traction Bar Bogie I		4	779- 04/23		TEW	
9	Traction Bar Bogie II		4	792-04/23		TEW	
10	Centre Pivot Housing in Shell Bogie I side		1	331- 05/23		TEW	
11	Centre Pivot Housing in Shell Bogie II side	29100057	. 1	333-05/23	49 7 1	TEW	
12	Elastic Ring in Front in Shell Bogie I side	F 52 20 30 30 30 50 50 50 50 50 50 50 50 50 50 50 50 50		320-03/23		SSPL	
13	Elastic Ring in Front in Shell Bogie II side	29100010		19- 03/23		SSPL	
14	Main Transformer	29731008 for WAG	CG/65/06/23	3/BHL11389/18 , 2023	CGL		
15	Oil Cooling Radiator I		06/23 & F-23-18		BANCO PRO	DUCTS INDIA LTD	
16	Oil Cooling Radiator II	29470031	F-2	3-13. , 06/23	BANCO PRO	DUCTS INDIA LTD	
17	Main Compressor I with Motor		BA1189- 01/23		ANE	ST IWATA	
18	Main Compressor II with Motor	29511008	BC01779- 03/23		ANE	ST IWATA	
19	Transformer Oil Cooling Pump I		2303D4794 , 2023		FLO	OWWOIL	
20	Transformer Oil Cooling Pump II		2303	3D4783, 2023	FLOWWOIL		
21	Oil Cooling Blower OCB I		PDS2305	039 , 1001309121	PD STEELS		
22	Oil Cooling Blower OCB II	29470043	PDS23050101	, 1001358008, 05/23	PD STEELS		
23	TM Blower I		05/23 &. AC-5	4278, CGLWCAM23032	ACCEL		
24	TM Blower II	29440075	05/23 &. AC-5	4285 , CGLWCAM23099		ACCEL	
25	Machine Room Blower I		04/23 & AC-5	1460 , CGLWBAM11101		ACCEL	
26	Machine Room Blower II	29440105	04/23 &. AC-5	4434 , CGLWAAM13027		ACCEL	
27	Machine Room Scavenging Blower I			i-5837, , CF25/D6198	SAMAL H	ARAND PVT LTD	
28	Machine Room Scavenging Blower II	29440129	D25-5842	CF25/D6203 , 05/23	SAMAL HA	ARAND PVT LTD	
		·	05/23	& ST-23.05.111	G.T.R	CO PVT LTD	
29	TM Scavenging Blower Motor I	29440117		& ST-23.05.104	G.T.R	CO PVT LTD	
30				/23/PROPULSIONA/2900			
31	Traction Convertor I			/24/PROPULSIONA/2901	1		
32	Traction Convertor II	1		3/18/PROPULSIONA/2977			
33	Vehicle Control Unit I	29741075		3/18/PROPULSIONA/2978		BTIL	
34	Vehicle Control Unit II	+		BD/18/10190/10A/0603			
35	Aux. Converter Box I (BUR 1)	-		023D/10333/8B/0599	+		
36	Aux. Converter Box 2 (BUR 2 + 3)	2047-1-20				C.G.L	
37	Axillary Control Cubical HB-1	29171180 29171192	. CGHB1G2360558, 06/23 05/23 &. AALN/05/2023/13/HB2G9/033		. COMBIGEOCOSO CO CO		
38	Axillary Control Cubical HB-2	,	A Comment of the second	023/F/0655/914		HIND RECTIFIERS LTD	
39	Complete Control Cubicle SB-1	29171209 29171210		023/D/0655/723		ECTIFIERS LTD	
40	Complete Control Cubicle SB-2		302/2	2205055	TROLEY INDIA BUT LTD		

2305855

03/23-583, 381, 343, 359

29480140

29171131

Filter Cubical (FB) (COMPLETE FILTER

41

42

CUBICLES)

Driver Seats

NAME SHURHAM THARMA

JE/LAS

TROLEX INDIA PVT LTD

				41814		*
	r-	RO	OF COMPO	NENT CAB 1 & 2	3	Warranty
S.No.	Description	PL NO.	QPL /Nos	Supplier	Sr. no.	
	Pantograph	29880014(HR),	2			
1		29880026		FAIVELEY, GENERAL STORES	E23-0945,MAY-23,3130-03/23	
2	Servo motor	29880026	2	GENERAL STORES	3114-03/23	
	Air Intake filter Assly		2	PARKER	O/C990P/B/RH/01,O/C986P/B/R	
3 .		29480103			H/02	
4 ;	Insulator Panto Mtg.	29810127	8	IEC	02/23,03/23	
		MI	IDDLE ROO	F COMPONENT		
5	High Voltage Bushing	29731021	1	EIPL	EIPL-4263-03/23	
6	Voltage Transformer	2965028	1	SADTEM	2023-N, 652651	
7	Vacuum Circuit Breaker	25712202	1	AUTOMETER ALLIANCE	AALN/05/2023/103/VCBA/176	
8	Insulator Roof line	29810139	9	BHEL	06/20,12/22	
9	Harmonic Filter	29650033	1	TELEMA	TEPL/RHF/009/2023/255	AS Per PO/IRS Conditions
10	Earth Switch	29700073	Ε	PATRA & CHANDA	PCE/186/11-2022	
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	51587-2023,51592-2023	
			Air Bral	ke Components		
12	Air Compressor	29511008	2	ANEST	BGO179-03-23A,BA189-11-23B	
13	Air Dryer	29162051	1	TRIDENT	LD2-06-8783-23	
14	Auxillary Compresssor	25513000	1	ELGI	BWLS-106721	
15	Air Brake Panel	29180016	1	FAIVELEY	FEB-23-22-WAG9-2529	
16	Contoller	29180016	2	FAIVELEY	D23-123A,D23-135B	
17	Breakup Valve	29180016	2	FAIVELEY		
18	wiper motor	29162026	4	ELGI		

SSE/JESTING

\$8E/ABS

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41814 LIST OF ITEMS FITTED BY ECS

RLY: CR

SHED: BSL

PROPULSION SYSTEM: BTIL

. .

SN	TEST TION OF THE IN	ITEM PL NO	. ITEM SR. N	O CAB-1/CAB-2	MAKE/SUPPLIER	
1	LED Based Flasher Light Cab I & II	40	25634	25658	MATSUSHI P.T.	
2	Led Marker Light Cab I & II	29612925		96/726/747	BALIN & CO.	
3	Cab Heater Cab I & II	29170011	393	413	ELCOS	
4	Crew Fan Cab I & II	29470080	4	3/3537/3433		
5	Master Controller Cab I	100	5235370		SHIVAM	
6	Master Controller Cab II	29860015	186 307 AM	35367	SAITRONIX	
7	Complete Panel A Cab I & II	29178265	336A	336B	27 Sa 387 SS	
8	Complete Panel C Cab I & II	29170539	1 1		HIND =	
9	Complete Panel D Cab I & II	29178265	336A	336B	HIND E	
0	Complete Cubicle- F Panel Cab I & II	29178162	CUF/638	CUF/642	KAYSON	
1	Speed Ind.& Rec. System	29200040	4192/4864		MEDHA	
2	Battery (Ni- Cd)	29680025	- Wi-	369	SAFT URJA	
3	Set of Harnessed Cable Complete	29600420			PPS INTERNATIONAL	
4	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	4 /	03/23 & 22/3080	02/23 & 22/2923		
5	Transformer Oil Pressure Sensor (Cab-2)	29500047	03/23 & 22/3105	01/23 & 22/3054	TROLEX	
6	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)		BG/TFP/4548-FEB-23		The state of the s	
7	Transformer Oil Temperature Sensor (Cab-2)	29500035	BG/TFP/4358-FEB-23		BG INDUSTRIES	
8 1	Roof mounted Air Conditioner I	- 1		62184		
9 1	Roof mounted Air Conditioner II	29811028		0 KKI	INTEC/KKI	





PATIALA LOCOMOTIVE WORKS, PATIALA

Loco No. 41814

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-1600	ECBT	20105146	100189	As per PO/IRS conditions
REAR	SL-1589	ECBT	29105146	100189	Conditions

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: KNORR

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	24649	24749	24611	24751	24762	24776
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/23- 1986	CNC/23- 1914	CNC/23- 2032	CNC/23- 1944	CNC/23- 2026	CNC/23- 2062
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/23- 1954	CNC/23- 1916	CNC/23- 2048	CNC/23- 1945	CNC/23- 2024	CNC/23- 2064
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (Warranty: As per PO/IRS conditions)

AXLE POSITION NO		1	2	3	4	5	6
Gear	MAKE	FAG	NBC	FAG	FAG	FAG	FAG
End	PO NO. & dt	00091	02875	00091	00091	00091	00091
Free	MAKE	FAG	NBC	FAG	FAG	FAG	FAG
End	PO NO. & dt	00091	02875	00091	00091	00091	00091

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	927	882	832	101T	917	991
FREE END	975	986	887	98T	924	915

Loco No. 41814

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.4	1092.4	1092.3	1092.3	1092.4	1092.4
DIA IN mm FE	1092.4	1092.4	1092.3	1092.3	1092.4	1092.4
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T.	MAKE	SIMPLEX	KPE	PITTI	SIMPLEX	PITTI	PITTI
G.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KP	KM	KP	KM	KP
BACKLASH (0.254 – 0.458mm)	0.310	0.360	0.300	0.310	0.340	0.310

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	16.88	17.06	15.70	16.23	18.04	15.06
LEFT SIDE	16.72	15.00	17.62	17.41	15.89	17.76

11. TRACTION MOTOR: (Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	PLW	-	PLW-2143
2	PLW	-	PLW-2063
3	PLW	-	PLW-2132
4	PLW	-	PLW-2149
5	PLW	-	PLW-2144
6	PLW	-	PLW-2150

SSE/ Bogie Shop

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.