भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41818

TYPE: WAG9HC

RAILWAY SHED: WR/VTA(D)

PROPULSION SYSTEM: MEDHA

DATE OF DISPATCH: 12.08.2023

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41818

RAILWAY/SHED: WR/VTA(D)

DOD: Aug-2023

INDEX

SN	PARA	ACTIVITIES	PAGE NO.	
Testing & Commissioning (ECS)				
1.	1.0	Continuity Test of the cables		
	1.1	Continuity Test of Traction Circuit Cables		
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4	
	1.3	Continuity Test of Battery Circuit Cables		
	1.4	Continuity Test of Screened Control Circuit Cables		
2.	2.0	Low Tension test		
	2.1	Measurement of resistor in OHMS (Ω)	F. C	
	2.2	Check Points	5-6	
	2.3	Low Tension Test Battery Circuits (without control electronics)		
3	3.0	Downloading of Software		
	3.1	Check Points		
	3.2	Download Software	7-10	
	3.3	Analogue Signal Checking		
	3.4	Functional test in simulation mode		
4	4.0	Sensor test & convertor test		
	4.1	Test wiring Transformer Circuits – Polarity Test		
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)		
	4.3	Primary Voltage Transformer		
	4.4	Minimum voltage relay (Pos. 86)	11-16	
	4.5	Maximum current relay (Pos. 78)	11-10	
	4.6	Test current sensors		
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)		
	4.8	Verification of Converter Protection Circuits (Hardware limits)		
	4.9	Sequence of BUR contactors		
5.	5.0	Commissioning with High Voltage		
	5.1	Check List		
	5.2	Safety test main circuit breaker		
	5.3	Auxiliary Converter Commissioning		
	5.3.1	Running test of 3 ph. auxiliary equipments		
	5.3.2	Performance of Auxiliary Converters		
	5.3.3	Performance of BURs when one BUR goes out	16-25	
	5.4	Auxiliary circuit 415/110		
	5.5	Hotel Load Circuit		
	5.6	Traction Converter Commissioning		
	5.7	Test protective shutdown SR		
	5.8	Test Harmonic Filter		
	5.9	Test important components of the locomotive		
6.	6.0	Running Trial of the locomotive	25-26	
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27	
8.	8.0	Status of RDSO modifications	28	
9.	1-10	Pneumatic Test Parameters	29 - 32	
10.		Loco Check Sheet(LAS)	33	
11.	-	Component History (LAS,ECS,ABS)	34-36	
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38	
13	-	Warranty Conditions as per Tenders	39 -41	

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ok	100 ΜΩ	800 ma
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	700 m/
Filter Cubicle	Earthing Choke	OK	100 ΜΩ	800 mA.
Earthing Choke	Earth Return Brushes	OK	100 ΜΩ	700 ma
Transformer	Power Converter 1	ok	100 ΜΩ	800 m/2
Transformer	Power Converter 2	ok	100 ΜΩ	800 ma
Power Converter 1	TM1, TM2, TM3	OK	100 ΜΩ	700 ms
Power Converter 2	TM4, TM5, TM6	OK	100 ΜΩ	800 MC
Earth	Power Converter 1	OK	100 ΜΩ	700 m/L
Earth	Power Converter 2	OK	100 ΜΩ	800 MC

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	04	100 MΩ	2000
Transformer	BUR2	OL	100 MΩ	2000
Transformer	BUR3	nc	100 M Ω	2000
Earth	BUR1	De	100 MΩ	1500
Earth	BUR2	OK-	100 M Ω	1500
Earth	BUR3	OK	100 MΩ	1500
BUR1	HB1	or_	100 MΩ	1500
BUR2	HB2	OK	100 MΩ	100
HB1	HB2	DV.	100 MΩ	1500
HB1	TM Blower 1	ne	100 MΩ	160
HB1	TM Scavenge Blower 1	or_	100 MΩ	150
HB1	Oil Cooling Unit 1	DV.	100 MΩ	200
HB1	Compressor 1	DV.	100 MΩ	200
HB1	TFP Oil Pump 1	OK	100 MΩ	160
HB1	Converter Coolant Pump 1	ne	100 MΩ	150
HB1	MR Blower 1	DR	100 MΩ	200
HB1	MR Scavenge Blower 1	200	100 M Ω	200
HB1	Cab1	DX	100 MΩ	200
Cab1	Cab Heater 1	De	100 MΩ	200
HB2	TM Blower 2	De	100 MΩ	200
HB2	TM Scavenge Blower 2	no	100 MΩ	260
HB2	Oil Cooling Unit 2	'ne	100 MΩ	200
HB2	Compressor 2	nc	100 MΩ	200
HB2	TFP Oil Pump 2	OK.	100 MΩ	200
HB2	Converter Coolant Pump 2	DK	100 MΩ	200
HB2	MR Blower 2	DK	100 MΩ	200
HB2	MR Scavenge Blower 2	OK	100 MΩ	200
HB2	Cab2	OK	100 MΩ	200
Cab2	Cab Heater 2	ac	100 MΩ	200

Effective Date: Feb 2022

Doc.No.F/ECS/01

22 (Ref: WI/ECS/10) PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	ak
Battery (Wire no. 2052)	Connector 50.X7-2		OK.
SB2 (Wire no 2050)	Connector 50.X7-3		°K

Prescribed value	Measured
> 0.5 MΩ	Value MΩ
Prescribed value:	Measured
> 50 MΩ	Value MΩ
	$> 0.5 \ M\Omega$ Prescribed value:

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	AK.
Memotel speed sensor	10A	OK.
Primary voltage detection	01A, 12A	ok ok
Brake controller cab-1 & 2	06F, 06G	92

18

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/8/8

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	OK,
Terminal fault indication cab-1 & 2	09F	OK,
Brake pipe pressure actual BE electric	06H	OK
Primary current sensors	12B, 12F	DK
Harmonic filter current sensors	12B, 12F	76
Auxiliary current sensors	12B, 12F	ok.
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	°K
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	· OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	°K
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	QL.
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	ac
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing	13A	OK.
resistance= 10K Ω ± ± 10%)		
UIC line	13B	92
Connection FLG1-Box TB	13A	ac

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/8

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.0 Low rension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.9 KS
Resister to maximum current relay.	1Ω ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.3.5
Resistance harmonic filter (Pos 8.3). Variation allowed ± 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.252
Between wire 6 & 7	0.2 Ω	0.25
Between wire 5 & 7	0.4 Ω	.0.452
For train bus, line U13A to earthing.	10 kΩ± 10%	10.0KI
For train bus, line U13B to earthing.	10 k Ω ± 10%	998K2
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	400MS2
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.285
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0,281
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ ± 10%	2.2Kr
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.769
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	*3.9kn
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.8KU
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	3901
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	MA
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	105

Lo

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/8

Type of Locomotive: WAP-7/WAG-9HC

Vote:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cfocked on
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	eflited on

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	Charled an
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	· OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	OK
Test control Pneumatic devices	Sheets of Group 06	9K
Test lighting control	Sheets of Group 07	DK.
Pretest speedometer	Sheets of Group 10	°K
Pretest vigilance control and fire system	Sheets of Group 11	DIK.
Power supply train bus	Sheets of Group 13	OK

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

3.0 Downloading of Software

Page: 7 of 27

Yes/No
Yes
Yes
Yey
Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	Version-2	
Traction converter-2 software version:	version. 2	
Auxiliary converter-1 software version:	version.2	
Auxiliary converter-2 software version:	version 2	
Auxiliary converter-3 software version:	Version 2	
Vehicle control unit -1 software version:	Version 2	
Vehicle control unit -2 software version:	version 2	

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	ac.
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	11 4,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1014.
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	257

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	447,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	744
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	3900
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	4000
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	39.5°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	40°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	39°C
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending of the second	39°C

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result ohrained
Emergency shutdown through	VCB must open.	checked an
emergency stop switch 244	Panto must lower.	Crector
Shut Down through cab activation	VCB must open.	2000012
switch to OFF position	Panto must lower.	cfelked on
Converter and filter contactor	FB contactor 8.41 is closed.	1
operation with both Power	By moving reverser handle:	
Converters during Start Up.	Converter pre-charging contactor	
	12.3 must close after few seconds.	claredon
	• Converter contactor 12.4 must close.	b Carre
	 Converter re-charging contactor 	1
	12.3 must opens.	
	By increasing TE/BE throttle:	
	FB contactor 8.41 must open.	
	 FB contactor 8.2 must close. 	
	• FB contactor 8.1 must close.	
Converter and filter contactor	Bring TE/BE to O .	9
	Bring the cab activation key to "O"	#
Converters during Shut Down.	 VCB must open. Panto must lower. 	
	• Converter contactor 12.4 must open.	o chested on
	• FB contactor 8.1 must open.	
	• FB contactors 8.41 must close.	
	• FB contactor 8.2 must remain closed.	
	To contactor 0.2 mast remain closes.	

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based JCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco. • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes.	octoexed in
Test earth fault detection battery circuit positive & negative	 FB contactor 8.2 remains open. By connecting wire 2050 to earth, create earth fault negative potential. message for earth fault By connecting wire 2095 to earth, create earth fault positive potential. message for earth fault 	charted ou
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.	o clarked on
Time, date & loco number	Ensure correct date time and Loco number	OK.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

4.0 Sensor Test and Converter Test

Page: 11 of 27

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.0400	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.0420	OK
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.05 VP	ax.
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.047	OK
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.94P 5.5Veros	er.
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.11×P 6.44×2008)	on

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.	58.6V1 41.5Vams	O V
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.5VP	OL.

D.c.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/8

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply 250V_{eff}/350V_p by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored lue in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25KV	250/
SLG2_G 87-XUPrim	25 kV	250%	25KV	250%

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

	Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
t	SLG1_G 87-XUPrim	17kV	170%	17KV	170-1
ľ	SLG2 G 87-XUPrim	17 kV	170%	1744	1704

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	BOKV	3007-
SLG2 G 87-XUPrim	30 kV	300%	30KV	300+

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/8

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjusted	d to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	(Yes/No)
Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.	L(Yes/No)
Turn off the variac : Contactor 218 closes; the control electronics is be working	(Yes/No)
Test Under Voltage Protection;	
Activate the cab in cooling mode; Raise panto; Supply 200V _{RMS} through variac to wire no. 1501 & 1502; Close the VCB; Interrupt the supply voltage The VCB goes off after 2 second time delay.	(Yes/No)
Again supply 200V _{RMS} through variac to wire no. 1501 & 1502; Decrease the supply voltage below 140V _{RMS} ± 4V; Fine tune the minimum voltage relay so that VCB opens.	(Yes/No)

4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current tran &1522 (including the resistor at Pos. 6.11); Put loco in si	nsformer; Connect variac to wire 1521 mulation for driving mode: Open R ₃ – R ₄
on contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB; supply 3.6A _{RMS} at the contact 136.3; Close VCB;	open wire 1521: Tune the drum of the
maximum current relay Pos. 78 for correct over current	value;
VCB opens with Priority 1 fault message on	(Yes/No)
display.	4,55,55
Keep contact R ₃ - R ₄ of 136.3 closed; Close VCB; Tune th	e resistor 78.1 for the current of 7.0A _{RMS}
/9.9A _p at the open wire 1521;	
VCB opens with Priority 1 fault message on	(Yes/No)
display.	

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%))
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-))
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)	_	299mB
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		337mB
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		-
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)	- !	348ma
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8 8(-)	NA	NA
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	MA

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18. 1 = For 8.2/2 = For 18.2/3 = For 18.4/4 = For 18.5/1 = For 18.5/2 = For 18.5/3 =
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	DK

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

fr

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	close	open	closs	open	closs	open	close	close	opes
BUR1 off	close	open	clos	close	open	clos	open	spen	cl081
BUR2 off	open	opero	close	closs	clos-	closs	open	open	clos
BUR3 off	open	close	open	close	close	close	Open	open	close

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yey
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Mes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Pes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	1 /63
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	res
KABA key interlocking system.	Yes.

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	crocked on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheekda
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	cfoekeel ou
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	cheetedon
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	charred on
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	cformed on
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Checked &
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		Cheeked on

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/8

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.8	10.7
Oil pump transformer 2	9.8 amps	9.2	10.5
Coolant pump converter 1	19.6 amps	3.5	4.5
Coolant pump converter 2	19.6 amps	3.5	4.5
Oil cooling blower unit 1	40.0 amps	37.0	170.0
Oil cooling blower unit 2	40.0 amps	25.0	130,3
Traction motor blower 1	34.0 amps	27.0	145.0
Traction motor blower 2	34.0 amps	28.0	175.0
Sc. Blower to Traction motor blower 1	6.0 amps	3.6	18.0
Sc. Blower to Traction motor blower 1	6.0 amps	3.7	16.0
Compressor 1	25 amps at 0 kg/cm ² 40 amps at 10 kg/cm ²	28.0	150.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.0	147.0

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/8

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10054	709
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	6374	Yes
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Amp	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10084	Yes
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yey
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amb	Yos
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	heece	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12Amj	Yey .
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110	Tes

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10100	Yes
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637 V	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Bmp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21Amp	Tes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	11 Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	Yes

^{*} Readings are dependent upon charging condition of the battery.

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8/8

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

cheeredon

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	3.7	22.0
Machine room blower 2	15.0 amps*	3.8	23.0
Sc. Blower to MR blower 1	1.3 amps	1.0	4.5
Sc. Blower to MR blower 2	1.3 amps	1.0	4.0
Ventilator cab heater 1	1.1 amps	1.3	1.6
Ventilator cab heater 2	1.1 amps	1.3	1.6
Cab heater 1	4.8 amps	5.1	5.2
Cab heater 2	4.8 amps	5.1	52

^{*} For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charged on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	eforced on
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted on
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheexed on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked a
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chocked a
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	* Checked on

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheeked on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	clocked by
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheeped on
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	checked on
Earth fault detection on AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Clarked a
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Charted UK
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheerbedae

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU	chaeked on
	appears Disturbance in Converter 1	
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	o checked on

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained	
currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	checked on	

Effective Date: Feb 2022

Doc.No.F/ECS/01

22 (Ref: WI/ECS/10) PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop	o cheeked on
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	o cheeked on
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	OK .

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	choired on	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheeked a	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	Checked a	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Chocked on	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	cfooted in	

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	charked on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Cheekalon
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheeped on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	cheesed in
Illuminated Push button	All illuminated push buttons should glow during the operation	. Charteel va
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m ³ /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks		
1	Cab activation in driving mode No fault message should appear on the diagnostic panel of the loco.				
	Loco charging	loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	Looked		
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Roccela		
4.	Check function of BPCS.	TE/BE throttle, by dropping BP below 4.75 Kg/cm ² , by pressing BPCS again.	roekeel ac		
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	peted a		

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based V3U

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

			_
6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .	,
	locomotive	For 60 seconds do not press vigilance foot switch or	
		sanding foots switch or TE/BE throttle or BPVG	
		switch then	
		Buzzer should start buzzing.	
		LSVW should glow continuously.	
		LSVW should glow continuously. Do not acknowledge the alarm through BPVG or Close Clo	T est
		vigilance foot switch further for 8 seconds then:-	
		Emergency brake should be applied	
		automatically.	
		VCB should be switched off.	
		Resetting of this penalty brake is possible only after	
		180 seconds by bringing TE/BE throttle to 0 ar	
		acknowledge BPVR and press & release vigilance	
		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).	ed o
		With park brake in applied condition.	
		• With direct loco brake applied (BP< 4.75Kg/cm ²).	
		With automatic train brake applied (BP<4.75Kg/cm²).	geel
		• With emergency cock (BP < 4.75 Kg/cm ²).	
8.	Check traction interlock	Switch of the brake electronics. The	a
		Tractive /Braking effort should ramp down, VCB	
		should open and BP reduces rapidly.	
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	en
	braking.	should start reducing.	
10.	Check for BUR	In the event of failure of one BUR, rest of the two	
	redundancy test at	BURs can take the load of all the auxiliaries. For this	esti
	ventilation level 1 & 3 of	SWITCH OIL ONE BOX.	
	loco operation	Auxiliaries should be catered by rest of two BURs.	
		Switch off the 2 BURs; loco should trip in this ase.	
11.	Check the power	Create disturbance in power converter by switching	al
	converter	off the electronics. VCB should open and converter	
	isolation test	should get isolated and traction is possible with	
		another power converter.	

Effective Date: Feb 2022

22

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41818

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	04	ore 6	
2	Marker Red	OL	on	
3	Marker White	OK	OR	
4	Cab Lights	OK	OK.	
5	Dr Spot Light	00_	ac	cheered worken
6	Asst Dr Spot Light	OK	OK	
7	Flasher Light	UK	OR	1
8	Instrument Lights	OK	on	
9	Corridor Light	de	ac	
10	Cab Fans	OK	OK	
11	Cab Heater/Blowers	ac	OK	
12	All Cab Signal Lamps Panel 'A'	8rc	Ou	

Status of RDSO modifications

LOCO NO: 41818

Sn	Modification No.	odification No. Description			
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08				
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	ØK/Not Ok		
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Ok/Not Ok		
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	9k/Not Ok		
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok		
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Øk/Not Ok		
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Not Ok		
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Ok/Not Ok		
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok		
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Ok/Not Ok		
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12		Ok/Not Ok		
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13		Ok/Not Ok		
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13		9k/Not Ok		
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok		
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok		
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok		
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Ok/Not Ok		
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok		
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Ok/Not Ok		
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Øk/Not Ok		

Signature of JE/SSE/TRS

Loco No.: 41818

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	57
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.4
		DMTS-014-1, 8	-	
		CLW's check sheet		
		no. F60.812 Version		
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.50 Kg/cm2
		no. F60.812 Version	kg/cm2, closes	
		2	5.5±0.15 kg/cm2	5.50 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Iso	olating Cocks & KABA co	ock by Key (KABA Key)
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.4 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 40
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-29 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.4 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.6 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	8±0.20 kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.5 minute

PLW/PATIALA

Loco No.: 41818

2.8 Check Auto Drain Valve functioning (124 & 87)	2.7	Check unloader	valve operation time				Approx. 12 Sec.	10 sec
Check CP-I delivery safety valve setting (10/1). Run CP D&M test spec. MM3882 & MM3946 Rg/cm2	2.8		•	.24 & 87)			• •	
2.9 Check CP-I delivery safety valve setting (10/1). Run CP DBM test spec. MM3882 & MM3946 kg/cm2 11.50±0.35 11.6 Kg/cm/cm2 11.50±0.35 11.5 Kg/cm/cm/cm/cm/cm/cm/cm/cm/cm/cm/cm/cm/cm/				•			-	
Direct by BLCP							=	
Direct by BLCP	2.9	Check CP-I delive	ery safety valve settin	g (10/1). Run CP	D&M t	est spec.	11.50±0.35	11.6 Kg/cm2
2.10 Check CP-2 delivery safety valve setting (10/2). Run CP D&M test spec. M3882 & MM3946 kg/cm2 kg/cm2 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 12 kg/cm2 less than opening pressure. Clw's check sheet no. Clw's check sheet no. Fob.812 Version 2 Tower to change Oka/material sheet no. Fob.812 Version 2 Oka/material sheet no. Oka/material sheet							kg/cm2	<i>O</i> ,
2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure: 12 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, theck setting pressure of Duplex Check Valve 92r. 2.13 FP pressure: FP pressure: 15 Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2" MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Fark (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 Tower to change in Tower to change in Every Involved in 15 minutes Tower to change in Every minute (KBIL) Towe	2.10		ery safety valve settir	ng (10/2). Run CP	D&M t	est spec.		11.55
valve to reset at pressure 12 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2"d MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (As) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 CW's check sheet no. F60.812 Version 2 Tower to change in Every two minute (KBIL) Tower to change in Every two minute in Every two minute (KBIL) Tower to change in Every two minute in Every two minute in Every two minute (KBIL) Tower to change in Every two minute in		direct by BLCP			MM3882	& MM3946	kg/cm2	Kg/cm2
valve to reset at pressure 12 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2"d MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (As) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 CW's check sheet no. F60.812 Version 2 Tower to change in Every two minute (KBIL) Tower to change in Every two minute in Every two minute (KBIL) Tower to change in Every two minute in Every two minute in Every two minute (KBIL) Tower to change in Every two minute in	2.11	Switch 'OFF' the	compressors and ens	ure that the safety	D&M t	est spec.		
2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. CLW's check sheet no. F60.812 Version 2					MM3882	& MM3946		
by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops open for Test Check Air Dryer Towers to change. 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (Isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto controller position BC (WAP-9 & WAP-7) Kg/cm2 Result Value Result Value Result Value Result Full service 3.35±0.2 3.5 Kg/cm2 0.00 0.00 Kg/cm2 0.75±0.15 Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5 kg/cm2 5.15±0.30 - Test Start Start Start Start Start Compressor, leave in the following pressure at Each Step Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5 kg/cm2 5.15±0.30 - Test Start Start Start Start Compressor, leave in the following pressure at Each Step Clay in the following pressure at Each Step CLW's check sheet no. F60.812 Version 2 Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - 0.00 Cg/cm2 Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5 kg/cm2 5.15±0.30 - 0.00 Cg/cm2 5.15±0.30 - 0.00 C		pressure.						
Check setting pressure of Duplex Check Valve 92F. CLW's check sheet no. 6.0±0.20kg/cm2 FP pressure: FF test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. G.05	2.12	BP Pressure: Swi	tch 'OFF' compressor	, Drain MR Pressure	CLW's ched	ck sheet no.	5.0±0.10kg/cm2	5.0 Kg/cm2
2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.		by drain cock of	1" Main Reservoir, St	art Compressor,	F60.812 Ve	ersion 2		
Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system Check proportionality of Auto Brake system BC (WAG-9 & WAP-7) Kg/cm2 Result Run 5±0.1 5.0 Kg/cm2 Run 5±0.1 5.0 Kg/cm2 Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 CLW's check sheet no. F60.812 Version 2 Result Value Result Value Result Value Result Value Result Fit 10.00 - Intial 4.60±0.1 4.6 Kg/cm2 3.5 Kg/cm2 5.55±0.30 - Full service 5.65±0.20 - Full service 5.65±0.20 - Full service 5.65±0.20 - Full service 5.75±0.30 - Full service 6.75±0.30 Full service 6.75±0.30 Full service 6.75±0.30 Full ser		check setting pre	essure of Duplex Chec	ck Valve 92F.				
3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system BC (WAG-9 & WAP-7) Kg/cm2 Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 BP Pressure kg/cm2 Value Result Value Result Value Result Value Result Full service 3.35±0.2 3.5 Kg/cm2 3.5 Kg/cm	2.13	FP pressure:			CLW's ched	ck sheet no.	6.0±0.20kg/cm2	6.05
3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system Check proportionality of Auto Brake system Check proportionality of Auto Brake system BC (WAG-9 & WAP-7) Kg/cm2 Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 BP Pressure kg/cm2 Value Result Value Result Value Result Value Result Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30 - 5.515±0.30		Fit Test Gauge in	Test point 107F FPTF	P. Open isolate cock	F60.812 Ve	ersion 2		Kg/cm2
3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system Check proportionality of Auto Brake system Check proportionality of Auto Brake system BP Pressure kg/cm2 BP Pressure kg/cm2 Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 BP Pressure kg/cm2 Auto Auto Controller Auto Brake System CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto Controller position BC (WAG-9 & WAP-7) Kg/cm2 BC (WAP-5) Kg/cm2 Auto Controller Auto Brake System CLW's check sheet no. F60.812 Version 2 Auto Controller Auto Brake System CLW's check sheet no. F60.812 Version 2 Auto Controller Auto Brake System CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no.		136F. Check pres	ssure in Gauge.					_
3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system Check proportionality of Auto Brake system Check proportionality of Auto Brake system BP Pressure kg/cm2 BP Pressure kg/cm2 Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 BP Pressure kg/cm2 Auto Auto Controller Auto Brake System CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto Controller position BC (WAG-9 & WAP-7) Kg/cm2 BC (WAP-5) Kg/cm2 Auto Controller Auto Brake System CLW's check sheet no. F60.812 Version 2 Auto Controller Auto Brake System CLW's check sheet no. F60.812 Version 2 Auto Controller Auto Brake System CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 Auto Controller Position BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no. F60.812 Version 2 BC (WAP-5) Kg/cm2 Auto Controller Position CLW's check sheet no.	3.0							
open for Test Check Air Dryer Towers to change. i) Every minute (FTIL & St.L)		· · ·		Compressor, leave			Tower to change	ok
Check Purge Air Stops from Air Dryer at Compressor stops 3.2 Check condition of humidity indicator Blue Blue 4.0 Main Reservoir Leakage Test Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. D&M test spec. MM3882 & MM3946 Stan 1 kg/cm2 in 15 minutes 4.2 Check BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 Stan 1 kg/cm2 in 15 minutes 5.0 Brake Test (Automatic Brake operation) Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 BP Pressure kg/cm2 Value Result Value Result Run		· ·		•			_	
3.2 Check Purge Air Stops from Air Dryer at Compressor stops			•	· ·				
3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator Blue Blue								
3.2 Check Purge Air Stops from Air Dryer at Compressor stops								
3.3 Check condition of humidity indicator Blue Blue Blue A.0 Main Reservoir Leakage Test	3.2	Check Purge Air	Stops from Air Dryer	at Compressor stops			,	
4.0 Main Reservoir Leakage Test	3.3						Blue	Blue
Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. D&M test spec. MM3882 & MM3946 Should be less than 1 kg/cm2 in 15 minutes 15 minutes 15 minutes 0.07 kg/cm2 0.15 kg/cm2 in 15 minutes 0.07 kg/cm2 0.15 kg/cm2 in 15 minutes 0.07 kg/cm2 0.15 kg/cm2 in 15 minutes 0.07 kg/cm2 in 15	4.0		·					
leakage from both cabs.	4.1					est spec.	Should be less	0.7 Kg/cm2
15 minutes m		-	•		1			_
MM3882 & MM3946 minutes Kg/cm2 in 5 minutes								minutes
S.0 Brake Test (Automatic Brake operation)	4.2	Check BP Air leal	kage (isolate BP charg	ging cock-70)	D&M t	est spec.	0.15 kg/cm2 in 5	0.07
S.0 Brake Test (Automatic Brake operation)					·		minutes	Kg/cm2 in 5
Check proportionality of Auto Brake system								minutes
Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 Auto controller position BC (WAG-9 & WAP-7)	5.0	Brake Test (Au	tomatic Brake oper	ration)				
Auto controller position BC (WAG-9 & WAP-7) BC (WAP-5) Kg/cm2 Kg/cm2 Kg/cm2 Kg/cm2 Result Value Result Value Result Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 - Interpretation 1.50 kg/cm2 0.25 Kg/cm2 0.25 kg/cm2 0.50 kg/cm2 0.5	5.1							
Auto controller position BC (WAG-9 & WAP-7) BC (WAP-5) Kg/cm2 Kg/cm2 Kg/cm2 Kg/cm2 Result Value Result Value Result Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 - Interpretation 1.50 kg/cm2 0.25 Kg/cm2 0.25 kg/cm2 0.50 kg/cm2 0.5				•				
Auto controller position BC (WAG-9 & WAP-7) BC (WAP-5) Kg/cm2 Kg/cm2 Kg/cm2 Kg/cm2 Result Value Result Value Result Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 - Interpretation 1.50 kg/cm2 0.25 Kg/cm2 0.25 kg/cm2 0.50 kg/cm2 0.5								
Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 BP Pressure kg/cm2 Value Result Value Result Value Result Value Result Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -		Check proportion	nality of Auto Brake s	ystem				
Kg/cm2 Kg/cm2 Kg/cm2 BP Pressure kg/cm2 Value Result Value Result Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -					F60.812	Version 2		
Kg/cm2 Kg/cm2 Kg/cm2 BP Pressure kg/cm2 Value Result Value Result Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -								
Kg/cm2 Kg/cm2 Kg/cm2 BP Pressure kg/cm2 Value Result Value Result Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -		A	•,•		DC ()4(4C)) (0) (4 (0 7)	DC (MAD 5)	
Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 -		Auto controller position			9 & WAP-/)	` '		
Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -					Kg/cm2		Kg/cm2	
Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -								
Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 _{0.40Kg/cm2} 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 _{2.5Kg/cm2} 5.15±0.30 -			BP Pressure kg/cn	n2	Value	Result	Value	Result
Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 _{0.40Kg/cm2} 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 _{2.5Kg/cm2} 5.15±0.30 -								
Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 _{0.40Kg/cm2} 0.75±0.15 - Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 _{2.5Kg/cm2} 5.15±0.30 -		Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/cm3	0.00	-
Full service 3.35±0.2 3.5 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -						U.UU Kg/ CM2		
Francisco Locathon 0.2 0.25 Market 2 2.50(0.1) 5.45 (0.20)		Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
Francisco Locathon 0.2 0.25 Market 2 2.50(0.1) 5.45 (0.20)		Full service	3.35±0.2	3.5 Kg/cm2	2.50±0.1	2 EVa/ cm2	5.15±0.30	-
Emergency Less than 0.3						2.5Ng/ CMZ		
		Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-

PLW/PATIALA

Loco No.: 41818

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	9 Sec
J.∠	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946	012 SEC.	J 3EL
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	
5.5	Operate Asst. Driver Emergency Cock,	MM3882 & MM3946	to Below 25 kg/cm2	OK
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.2 Kg/cm2
		F60.812 Version 2	4.05- 4.35	
			kg/cm2	
			Opens at BP	3.05
			2.85- 3.15	Kg/cm2
		D0000	kg/cm2	
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed	MM3882 & MM3946		
	WAP5 – BC 5.15 \pm 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
	WAG9 - BC 2.50 ± 0.1 kg/cm2		21±3 sec.	22 SEC
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure			
	up to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±25 sec.	
	WAG9		52±7.5 sec.	54 sec.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	79 Sec
5.8	BP Pressure Steady at 5.5 0.2 kg/cm2 time. Auto Brake capacity test: The capacity of the A9 valve	F60.812 Version 2	DD proceure	
5.8	in released condition must conform to certain limit in	RDSO Motive power Directorate report no.	BP pressure should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.7
	functioning of brake.		60 Sec.	Kg/cm2
	* Allow The MR pressure to build up to maximum			,
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors			
5.9	in working condition. Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
5.9	Driver End paddle Switch (PVEF)		BC COITIES TO U	
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure			
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.5Kg/cm2
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 Sec
	time	MM3882 & MM3946		

PLW/PATIALA

Loco No.: 41818

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	11 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 14.06.2022		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO: 41818

Rly: WR

Shed: VTA(D)

S. No.	ITEM TO BE CHECKED	Specified Value	Ob	serve	l Valu	ıe
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		-1	1/-	T. Autori
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.	ок		d		
1.3	Check proper of Fitment of oil cooling unit (OCU).	ОК		d	4	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its	OK		0/	(3) (A) (A) (A)	
1.5	position. Check proper Fitment of FB panel on its position.	ок		01	<	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		U		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	ОК		01		
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK ·		O		
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		0		
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK			IC	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	ОК	all parties	0	10	
1.12	Check proper fitment of Bogie Body Safety Chains.	ОК		d		
1.13	Check proper fitment of Cow catcher.	ок		a		
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	ОК		Y	-	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	ОК	O'			
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.		O/C			
1.17	Check proper fitment of both battery box.	ОК		0	15	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	ОК		0	K	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	ОК		. 0	k	
	Secondary Vertical and Lateral Clearance on leveled track at the time of		CAI	3-1	CA	B-2
1.20	Loco Dispatch. ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std :35- 60 mm	LP	ALP	LP	ALF
		Lateral Std- 45-	50	51	51	56
		50 mm	53	60	44	34
	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	3	R/S
	Drg No IB031-02002.	mm	FRONT	109	3 1	094
			REAR	109		09
1 71	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/3		R/S
1.22	Drg No-SK.DL-3430.		FRONT	64	y	641
			REAR	647	_	547
	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/3	-	R/S
1.23	As per RDSO Pamphlet Important Bogie Clearances of Electric	mm,-12 mm	FRONT	114	-	119
	Locomotives.		REAR	1112		116
	CBC Height: Range (1090, +15,-5)	1090, +15	FRONT	: 10	12	,, ,
	Drg No- IB031-02002.	-5 mm	REAR:	110	10	

(Signature of SSE/Lect. Loco (UF))

(Signature of SSE/JE/Elect Loco)

NAME SKOBHAN SHI AMA DATE 12/08/2023 (Signature of JE/UF)

NAME 7 ANDISH PRASA

See Figure Fig			PATIALA	LOCOMOTIVE WOR			
Complete Shell Assembly with piping 2911027 Sino Part Herman Shell And Divors Change of the Part Assiy Both Side Cab II 29130050 274, 04/23 105, 02/23 KM KM KM	S.No.	Fauinment	DI No.	LOCO NO-41818			
2 Side Buffer Assiy Both Side Cab I 29100307 274, 04/23 156, 02/23 KM KM KM KM CBC Cab II 2910037 (04/23 155-02/23 KM KM KM KM CBC Cab II 2910037 (04/23 155-02/23 KM KM KM KM CBC Cab II 2910037 (04/23 155-02/23 KM KM KM KM KM CBC Cab II CBC Cab II 2910037 (04/23 155-02/23 KM KM KM KM KM CBC Cab II CBC		-qa-p-rons					
3 Side Buffer Assky Both Side Cab i 29190037 212, 04/23 155- 02/23 KM KM KM	2		231/102/				DRA UDYOG
Complete Control Unit Control Cooling Blower OCB Control Cooling Blo	3		29130050				KM
Secondary Helical Spring 29040014 29040014 29040014 29040014 29040014 29040014 29040014 29040014 29040014 29040014 29040014 29040014 29040014 29040014 29040015 29040014 29040015 29040014 29040015 29040014 29040005 29040014 29040015 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 29040016 2904			20120027				KM
Set of Secondry Helical Spring 29040034 29680013 95-06/23 94-06/23 8HARTIA BRIGHT	5		29130037				
Section Sectionary Herical Spring 29041041 September 90051	_	C-1-(C-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1	29045034	04/2.	3- 13333	MODIFIED	O MECHWELL
Startion Bay Bogle 1						, GB SPRII	NGS PVT LTD
Traction Bar Bogle	-		29680013	95- 06/23	94- 06/23	BHART	TA BRIGHT
10 Centre Pivot Housing in Shell Bogie I side 11 Centre Pivot Housing in Shell Bogie I side 12 Elastic Ring in Front in Shell Bogie I side 29100010 SR NOT VSEL AVADH AVADH 13 Elastic Ring in Front in Shell Bogie I side 29100010 SR NOT VSEL AVADH AVADH 14 Main Transformer 29731008 for WAG 9 29731008 for WAG 9 29731057 for WAP-7 BHEL-65-09-22-2055266 , 2022 BHEL 29470031 F-23-12, 06/23 & F-23-08 BANCO PRODUCTS INDIA LTD 16 Oli Cooling Radiator II 29470031 F-23-12, 06/23 BANCO PRODUCTS INDIA LTD 29470031 F-23-12, 06/23 BANCO PRODUCTS INDIA LTD 29470031 F-23-12, 06/23 & F-23-08 BANCO PRODUCTS INDIA LTD 29470031 F-23-12, 06/23 BANCO PRODUCTS INDIA LTD 294805200348 , 04/23 ELGI 294805200348 , 04/23 PDS3205055 200364507 PD STEELS 2948005 03/23, FMT/22-2373 PD STEELS 29480075 06/23 & 21M64AF341, 21M64341 SAINI ELECTRICAL PVT LTD 04/23 & 21M64AF341, 21M64341 SAINI ELECTRICAL PVT LTD 04/23, 34/28 SAINI PVT LTD	_			4887	, 04/23		TEW
11 Centre Pivot Housing in Shell Bogie II side 29100057 5994, 05/23 TEW	9	Traction Bar Bogie II		4784	, 04/23		ΓEW
11 Centre Pivot Housing in Shell Bogie II side Sepat, 05/23 TEW	10	Centre Pivot Housing in Shell Bogie I side	20100057	5995	, 05/23		ΓEW
2910010 2910010 38 NOT 958. AVADH	11	Centre Pivot Housing in Shell Bogie II side	.29100057	5994	, 05/23	1	ΓEW
Seatic Ring in Front in Shell Bogie II side 29731008 for WAGP 29731008 for WAGP 29731008 for WAGP 301 Cooling Radiator I 29470031 29470031 606/23 & F-23-08 8ANCO PRODUCTS INDIA LTD F-23-12, 06/23 8ANCO PRODUCTS INDIA LTD F-23-12, 06/23 8ANCO PRODUCTS INDIA LTD 8ANCO PRODUCTS INDIA LTD F-23-12, 06/23 F-23-08 BANCO PRODUCTS INDIA LTD F-23-12, 06/23 F-23-08 BANCO PRODUCTS INDIA LTD F-23-12, 06/23 F-23-08 BANCO PRODUCTS INDIA LTD F-23-12, 06/23 F-23-08, 123-023 F-23-08, 123-023 F-23-023 F-23-0	12	Elastic Ring in Front in Shell Bogie I side	2040004	SR NO	OT VSBL	A	/ADH
Machine Room Blower 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075 29440075	13	Elastic Ring in Front in Shell Bogie II side	29100010	628	, 03/23	A	/ADH
16 Oil Cooling Radiator I	14	Main Transformer		BHEL-65-09-22	-2055266 , 2022	В	HEL
16 Oil Cooling Radiator	15	Oil Cooling Radiator I	29470031	06/23 8	& F-23-08	BANCO PRODUCTS INDIA I TO	
18	16	Oil Cooling Radiator II	29470031	F-23-12	2, 06/23		
Main Compressor with Motor EWAS920348	17	Main Compressor I with Motor	30511009	EWKS920	028 , 02/23	E	ELGI
20 Transformer Oil Cooling Pump II 2303D4741 , 2023 FLOWWOIL	18	Main Compressor II with Motor	29311008	EWAS9203	348 , 04/23	E	LGI
20 Oil Cooling Blower OCB 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 29470045 2	19	Transformer Oil Cooling Pump I		2303D47	785 , 2023	FLOV	WWOIL
29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29470043 29480140 29470043 29480140 29470043 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140	20	Transformer Oil Cooling Pump II		2303D47	741,2023	FLOV	WWOIL
Discooling Blower OCB PDS2305065 1001364507 PD STELLS	21	Oil Cooling Blower OCB I	29470042	03/23, FMT/22-23/739 P		PD S	STEELS
24 TM Blower II	22	Oil Cooling Blower OCB II	29470043	PDS2305065	1001364507	PD STEELS	
24 TM Blower II	23	TM Blower I	29440075	06/23 & 21M64A	F341, 21M64341	SAINI ELECTRICAL PVT LTD	
Machine Room Blower II 29440105 06/23 & AC-54503, CGLWBAM11787 ACCEL	24	TM Blower II	25440075	04/23 &. 21M64A	F321, 21M64321	SAINI ELECTI	RICAL PVT LTD
26 Machine Room Blower II 06/23 & AC-54503, CGLWBAM11787 ACCEL 27 Machine Room Scavenging Blower II 29440129 05/23, SM-23.05.36 G.T.R CO PVT LTD 28 Machine Room Scavenging Blower III 29440129 05/23, SM-23.05.05 G.T.R CO PVT LTD 29 TM Scavenging Blower Motor II 29440117 05/23 & ST-23.05.132 G.T.R CO PVT LTD 30 TM Scavenging Blower Motor II 05/23 & ST-23.05.145 G.T.R CO PVT LTD 31 Traction Convertor I 06/23, 4735 G.T.R CO PVT LTD 32 Traction Convertor III 06/23, 4736 MEDHA 33 Vehicle Control Unit II 06/23, 3428 MEDHA 34 Vehicle Control Unit II 06/23, 3427 MEDHA 35 Aux. Converter Box 2 (BUR 2 + 3) 06/23, 3444 MEDHA 36 Aux. Converter Box 2 (BUR 2 + 3) 06/23, HB1/526/06/2023 KAYSONS ELECTRICAL PVT LTD 38 Axillary Control Cubical HB-1 29171180 29171192 04/23, HB2/472/04/2023 KAYSONS ELECTRICAL PVT LTD 39 Complete Control Cubical SB-1 29171209 SB1/2023/D/0656/906 HIND RECTIFIERS LTD 40 Complete Control Cubical (FB) (COMPLETE FILTER 29480140 06/23, FB/429/06/2023	25	Machine Room Blower I	29440105	06/23 & AC-54494	, CGLWAAM15269	AC	CCEL
29440129 29440129 29440129 29440129 29440129 29440129 29440129 29440129 29440129 29440129 29440129 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440117 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140 29440140	26	Machine Room Blower II	23440103	06/23 &. AC-54503	, CGLWBAM11787	AC	CCEL
Machine Room Scavenging Blower II	27	Machine Room Scavenging Blower I	29440129	05/23, SN	И-23.05.36	G.T.R CC) PVT LTD
29440117 29440117 29440117 33/23 & ST-23.05.145 G.T.R CO PVT LTD	28 1	Machine Room Scavenging Blower II	23440123	05/23, SN	M-23.05.05	G.T.R CC	PVT LTD
30 TM Scavenging Blower Motor II 05/23 & ST-23.05.145 G.T.R CO PVT LTD	29 1	M Scavenging Blower Motor I	29440117	05/23 & ST	-23.05.132	G.T.R CC	PVT LTD
32 Traction Convertor II 29741075 06/23, 4736 05/23, 3428 05/23, 3428 05/23, 3428 06/23, 3428 06/23, 3427 06/23, 3427 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06/23, 3444 06	30 1	M Scavenging Blower Motor II	23440117	05/23 & ST	-23.05.145	G.T.R CC	PVT LTD
33 Vehicle Control Unit 29741075 05/23, 3428 MEDHA 34 Vehicle Control Unit 05/23, 3428 06/23, 3427 35 Aux. Converter Box I (BUR 1) 06/23, 3444 37 Axillary Control Cubical HB-1 29171180 06/23, HB1/526/06/2023 KAYSONS ELECTRICAL PVT LTD 38 Axillary Control Cubical HB-2 29171192 04/23, HB2/472/04/2023 KAYSONS ELECTRICAL PVT LTD 39 Complete Control Cubicle SB-1 29171209 SB1/2023/D/0656/906 HIND RECTIFIERS LTD 40 Complete Control Cubicle SB-2 29171210 231295, 02/23 TROLEX INDIA PVT LTD 41 Filter Cubical (FB) (COMPLETE FILTER 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD 42 Driver Seats 29171210 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD 42 Driver Seats 29171210 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD 42 Driver Seats 29171210 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 29480140 2	31 T	raction Convertor I		06/23,	4735		
34 Vehicle Control Unit II 29741075 05/23, 3428 MEDHA 35 Aux. Converter Box I (BUR 1) 06/23, 3427 06/23, 3444 37 Axillary Control Cubical HB-1 29171180 29171192 06/23, HB1/526/06/2023 KAYSONS ELECTRICAL PVT LTD 38 Axillary Control Cubical HB-2 29171192 04/23, HB2/472/04/2023 KAYSONS ELECTRICAL PVT LTD 39 Complete Control Cubicle SB-1 29171209 SB1/2023/D/0656/906 HIND RECTIFIERS LTD 40 Complete Control Cubicle SB-2 29171210 231295, 02/23 TROLEX INDIA PVT LTD 41 Filter Cubical (FB) (COMPLETE FILTER 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD 42 Driver Seater 20171121 29480140 20171121 29480140 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 20171121 2017	32 T	raction Convertor II		06/23	, 4736		
34 Vehicle Control Unit II 35 Aux. Converter Box I (BUR 1) 36 Aux. Converter Box 2 (BUR 2 + 3) 37 Axillary Control Cubical HB-1 38 Axillary Control Cubical HB-2 39 Complete Control Cubicle SB-1 40 Complete Control Cubicle SB-2 41 Filter Cubical (FB) (COMPLETE FILTER CUBICLES) 42 Oriver Seats 43 Aux. Converter Box 2 (BUR 2 + 3) 44 Oriver Seats 45 Aux. Converter Box 2 (BUR 2 + 3) 46 Of (23, 3427 66/23, 3444 66/23, HB1/526/06/2023 66/23, HB1/526/06/2023 66/23, HB2/472/04/2023 66/23, HB2/472/04/2023 67/20 SB1/2023/D/0656/906 67/20 SB1/2023/D/0656/906 67/20 SB1/2023/D/0656/906 67/20 SB1/2023/D/06/2023 67/20 SB1/2023/	33 V	/ehicle Control Unit I	29741075	05/23,	, 3428		
36 Aux. Converter Box 2 (BUR 2 + 3) 37 Axillary Control Cubical HB-1 38 Axillary Control Cubical HB-2 39 Complete Control Cubicle SB-1 40 Complete Control Cubicle SB-2 41 Filter Cubical (FB) (COMPLETE FILTER CUBICLES) 42 Oriver Seats 43 Axillary Control Cubicle SB-1 44 Oriver Seats 45 Of 23, 3444 66/23, HB1/526/06/2023 66/23, HB1/526/06/2023 66/23, HB1/526/06/2023 66/23, HB1/526/06/2023 66/23, HB1/526/06/2023 67/20/20/20/20/20/20/20/20/20/20/20/20/20/	34 V	/ehicle Control Unit II	23741073	05/23,	3428	ME	DHA
37 Axillary Control Cubical HB-1 29171180 06/23, HB1/526/06/2023 KAYSONS ELECTRICAL PVT LTD 38 Axillary Control Cubical HB-2 29171192 04/23, HB2/472/04/2023 KAYSONS ELECTRICAL PVT LTD 39 Complete Control Cubicle SB-1 29171209 SB1/2023/D/0656/906 HIND RECTIFIERS LTD 40 Complete Control Cubicle SB-2 29171210 231295, 02/23 TROLEX INDIA PVT LTD 41 Filter Cubical (FB) (COMPLETE FILTER CUBICLES) 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD	35 A	ux. Converter Box I (BUR 1)		06/23,	3427		
38 Axillary Control Cubical HB-2 29171192 04/23, HB2/472/04/2023 KAYSONS ELECTRICAL PVT LTD 39 Complete Control Cubicle SB-1 29171209 SB1/2023/D/0656/906 HIND RECTIFIERS LTD 40 Complete Control Cubicle SB-2 29171210 231295, 02/23 TROLEX INDIA PVT LTD 41 Filter Cubical (FB) (COMPLETE FILTER CUBICLES) 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD	36 A	ux. Converter Box 2 (BUR 2 + 3)		06/23,	3444		
38 Axillary Control Cubical HB-2 29171192 04/23, HB2/472/04/2023 KAYSONS ELECTRICAL PVT LTD 39 Complete Control Cubicle SB-1 29171209 SB1/2023/D/0656/906 HIND RECTIFIERS LTD 40 Complete Control Cubicle SB-2 29171210 231295, 02/23 TROLEX INDIA PVT LTD 41 Filter Cubical (FB) (COMPLETE FILTER CUBICLES) 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD	37 A	xillary Control Cubical HB-1	29171180	06/23, HB1/5	526/06/2023	KAYSONS ELECT	TRICAL PVT LTD
39 Complete Control Cubicle SB-1 29171209 SB1/2023/D/0656/906 HIND RECTIFIERS LTD 40 Complete Control Cubicle SB-2 29171210 231295, 02/23 TROLEX INDIA PVT LTD 41 Filter Cubical (FB) (COMPLETE FILTER CUBICLES) 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD	38 A	xillary Control Cubical HB-2	29171192	04/23, HB2/4	172/04/2023		
40 Complete Control Cubicle SB-2 29171210 231295, 02/23 TROLEX INDIA PVT LTD 41 Filter Cubical (FB) (COMPLETE FILTER CUBICLES) 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD 42 Driver Seats 20171121 20171121 20171121	39 C	omplete Control Cubicle SB-1	29171209	SB1/2023/D	/0656/906		
Filter Cubical (FB) (COMPLETE FILTER CUBICLES) 29480140 06/23, FB/429/06/2023 KAYSONS ELECTRICAL PVT LTD	_		29171210	231295,	02/23	TROLEX IND	DIA PVT LTD
42 Driver Seats 29171131 04/23- 179, 02/22- 02, 39, 28 TARUDEEP	41		29480140	06/23, FB/42	29/06/2023		
	42 D	river Seats	29171131	04/23- 179, 02/	22- 02, 39, 28	TARU	DEEP

NAME SATISH JUMBR SSE/LAS

NAME SMOO MAM SMAKE

				41818		
		RO	ог сомро	NENT CAB 1 & 2	G 3 N 15 1	Warranty
.No.	Description	PL NO.	QPL /Nos	Supplier	Sr. no.	
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, GENERAL STORES	E23-0949,MAY-23,3118-03/23	
2	Servo motor	29880026	2	GENERAL STORES	3307-06/23	
3	Air Intake filter Assly	29480103	2	TRIDENT	VFO/F/298/03/2023,VFO/F/298/ 03/2023	
4	Insulator Panto Mtg.	29810127	8	IEC	03/23,03/23	
		М	IDDLE ROO	F COMPONENT		
5	High Voltage Bushing	29731021	1	EIPL	EIPL-4253-03/23	
6	Voltage Transformer	2965028	1	SADTEM	2023-N, 652623	
7	Vacuum Circuit Breaker	25712202	1	AUTOMETER ALLIANCE	AALN/05/2023/109/VCBA/182	
8	Insulator Roof line	29810139	9	IEC	12-22,11-22	AS Per PO/IRS Condition
9	Harmonic Filter	29650033	1	TELEMA	TEPL/RHF/009/2023/266	AS Per PO/IKS Condition
10	Earth Switch	29700073	E	RIVER ENGINEER	ES/23/06/0054	
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	52319-2023,52320-2023	
100	1		Air Bra	ke Components		
12	Air Compressor	29511008	2	ELGI	EWAS 920348 A,EWKS 920028B	
13	Air Dryer	29162051	1	TRIDENT	LD2-06-8781-23	
14	Auxillary Compresssor	25513000	1	ELGI	BVHS-106293	
15	Air Brake Panel	29180016	1	FAIVELEY	APR-23-47-WAG9-2762	
16	Contoller	29180016	2	FAIVELEY	D23-127A,D23-142B	· · · · · · · · · · · · · · · · · · ·
17	Breakup Valve	29180016	2	FAIVELEY		
18	+	29162026	4	ELGI	e.	. 1

SSE/TESTING

SSE/ABS

PLW/PTA

. .

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41818 LIST OF ITEMS FITTED BY ECS

. .

RLY: WR

SHED: VTA(D)

PROPULSION SYSTEM: MEDHA

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER	
1	LED Based Flasher Light Cab I & II		25667	25605	MATSUSHI P.T.	
2	Led Marker Light Cab I & II	29612925	18452/18318	/18365/18321	ALTOS	
	Cab Heater Cab I & II	29170011	349	399	ELCOS	
4	Crew Fan Cab I & II	29470080	3456/3454	/3469/3651	SHIVAM	
5	Master Controller Cab I		5235	5394	SAITRONIX	
6	Master Controller Cab II	29860015	5235	5395	OATT CONTA	
	Complete Panel A Cab I & II	29178265	333A	333B		
	Complete Panel C Cab I & II	29170539			HIND	
	Complete Panel D Cab I & II	29178265	333A	333B		
	Complete Cubicle- F Panel Cab I & II	29178162	CUF/610/05/2023	CUF/596/05/2023	KAYSONS	
	Speed Ind.& Rec. System	29200040	4184	/4866	MEDHA	
	Battery (Ni- Cd)	29680025	57	75	SAFT URJA	
	Set of Harnessed Cable Complete	29600420			PPS INTERNATIONAL	
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)		03/23 & 22/3145	03/23 & 22/3160	TROLEX	
15	Transformer Oil Pressure Sensor (Cab-2)	29500047	03/23 & 22/3081	03/23 & 22/3127		
	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)		BG/TFP/4556-FEB-23		BG INDUSTRIES	
	Transformer Oil Temperature Sensor (Cab-2)	29500035	BG/TFP/4580-FEB-23			
	Roof mounted Air Conditioner I		23F:	23F2192		
	Roof mounted Air Conditioner II	29811028	23F	2216	INTEC	





PATIALA LOCOMOTIVE WORKS, PATIALA

Loco No. 41818

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-1570	ECBT	20405440	100189	As per PO/IRS
REAR	SL-257	SIMPLEX	29105146	100190	conditions

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: KNORR /Escort

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	23745	24639	24740	24650	24657	24336A
Ultrasonic Testing	OK	OK	OK	OK	OK	ОК

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/23- 1872	CNC/23- 1992	CNC/23- 1805	CNC/23- 2009	CNC/23- 2010	CNC/23- 2004
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/23- 1882	CNC/23- 1988	CNC/23- 1820	CNC/23- 2011	CNC/23- 2012	CNC/23- 2008
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (Warranty: As per PO/IRS conditions)

A	XLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	NBC	FAG	FAG	FAG
End	PO NO. & dt	00091	00091	02875	00091	00091	00091
Free	MAKE	FAG	FAG	NBC	FAG	FAG	FAG
End	PO NO. & dt	00091	00091	02875	00091	00091	00091

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	938	966	852	912	853	912
FREE END	927	989	853	935	996	922

Loco No. 41818

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.3	1092.4	1002.4	1000.4	1002.2	1000.0
DIA IN mm FE			1092.4	1092.4	1092.3	1092.3
WHEEL PROFILE GAUGE (1596±0.5mm)	ОК	ОК	ОК	ОК	ОК	ок

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION	NO	1	2	3	4	5	6
S.T.	MAKE	KPE	PITTI	KPE	PITTI	SIMPLEX	PITTI
G.E. BEARING	MAKE	NBC	FAG	NBC	FAG	FAG	FAG
F.E. BEARING	MAKE	NBC	FAG	NBC	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KM	KM	KM	KM
BACKLASH (0.254 – 0.458mm)	0.300	0.330	0.320	0.300	0.320	0.305

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	15.01	18.29	18.02	18.78	17.28	17.04
LEFT SIDE	15.81	16.92	15.14	15.08	15.02	15.94

11. TRACTION MOTOR: (Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	BHARAT	566661	L-2213037
2	BHARAT	566661	L-2214325
3	BHARAT	566661	J-2200058
4	BHARAT	566661	J-2200060
5	BHARAT	566661	J-2300012
6	BHARAT	566661	J-2200073

SSE/ Bogie Shop

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- 8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.