भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41823

TYPE: WAG9HC

RAILWAY SHED: WCR/TKD

PROPULSION SYSTEM: SIEMENS

DATE OF DISPATCH: 26.08.2023

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41823

RAILWAY/SHED: WCR/TKD

DOD: Aug-2023

INDEX

SN	PARA	ACTIVITIES	PAGE NO.		
	Testing & Commissioning (ECS)				
1.	1.0	Continuity Test of the cables			
	1.1	Continuity Test of Traction Circuit Cables			
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4		
	1.3	Continuity Test of Battery Circuit Cables			
	1.4	Continuity Test of Screened Control Circuit Cables			
2.	2.0	Low Tension test			
	2.1	Measurement of resistor in OHMS (Ω)	F. C		
	2.2	Check Points	5-6		
	2.3	Low Tension Test Battery Circuits (without control electronics)			
3	3.0	Downloading of Software			
	3.1	Check Points			
	3.2	Download Software	7-10		
	3.3	Analogue Signal Checking			
	3.4	Functional test in simulation mode			
4	4.0	Sensor test & convertor test			
	4.1	Test wiring Transformer Circuits – Polarity Test			
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)			
	4.3	Primary Voltage Transformer			
	4.4	Minimum voltage relay (Pos. 86)	11-16		
	4.5	Maximum current relay (Pos. 78)	11-10		
	4.6	Test current sensors			
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)			
	4.8	Verification of Converter Protection Circuits (Hardware limits)			
	4.9	Sequence of BUR contactors			
5.	5.0	Commissioning with High Voltage			
	5.1	Check List			
	5.2	Safety test main circuit breaker			
	5.3	Auxiliary Converter Commissioning			
	5.3.1	Running test of 3 ph. auxiliary equipments			
	5.3.2	Performance of Auxiliary Converters			
	5.3.3	Performance of BURs when one BUR goes out	16-25		
	5.4	Auxiliary circuit 415/110			
	5.5	Hotel Load Circuit			
	5.6	Traction Converter Commissioning			
	5.7	Test protective shutdown SR			
	5.8	Test Harmonic Filter			
	5.9	Test important components of the locomotive			
6.	6.0	Running Trial of the locomotive	25-26		
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27		
8.	8.0	Status of RDSO modifications	28		
9.	1-10	Pneumatic Test Parameters	29 - 32		
10.		Loco Check Sheet(LAS)	33		
11.	-	Component History (LAS,ECS,ABS)	34-36		
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38		
13	-	Warranty Conditions as per Tenders	39 -41		

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ.	700 ma
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	ok	100 ΜΩ	800 mN
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	700 m/L
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	800 m/L
Transformer	Power Converter 1	ok	100 ΜΩ	800 m(L
Transformer	Power Converter 2	ok	100 ΜΩ	700 ma
Power Converter 1	TM1, TM2, TM3	ok	100 ΜΩ	900 ma
Power Converter 2	TM4, TM5, TM6	OK	100 ΜΩ	800 ma
Earth	Power Converter 1	ok	100 ΜΩ	800 ma
Earth	Power Converter 2	ok	100 ΜΩ	700 MR

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

Loxesy.

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.:

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 MΩ	1000
Transformer	BUR2	Ols	100 MΩ	100
Transformer	BUR3	OR	100 MΩ	1000
Earth	BUR1	a K	100 MΩ	. 1000
Earth	BUR2	ok	100 MΩ	1000
Earth	BUR3	ok	100 MΩ	1000
BUR1	HB1	ok	100 MΩ	1600
BUR2	HB2	oK	100 MΩ	1600
HB1	HB2	DIS	100 MΩ	1000
, HB1	TM Blower 1	D/C	100 MΩ	200
HB1	TM Scavenge Blower 1	OK	100 MΩ	150
HB1	Oil Cooling Unit 1	OK	100 MΩ	100
HB1	Compressor 1	OK .	100 MΩ	100
HB1	TFP Oil Pump 1	210	100 ΜΩ	200
HB1	Converter Coolant Pump 1	OK	100 ΜΩ	150
HB1	MR Blower 1	OK	100 MΩ	100
HB1	MR Scavenge Blower 1	ok	100 ΜΩ	200
HB1	Cab1	2/6	100 MΩ	100
Cab1	Cab Heater 1	ok	100 MΩ	200
HB2	TM Blower 2	ok	100 ΜΩ	150
HB2	TM Scavenge Blower 2	ok.	100 MΩ	150
HB2	Oil Cooling Unit 2	òΚ	100 MΩ	100
HB2	Compressor 2	ric	100 ΜΩ	200
HB2	TFP Oil Pump 2	ok	100 MΩ	100
HB2	Converter Coolant Pump 2	ole	100 MΩ	100
HB2	MR Blower 2	OK	100 MΩ	100
HB2	MR Scavenge Blower 2	ok	100 MΩ	100
HB2	Cab2	OK	100 ΜΩ	200
Cab2	Cab Heater 2	oŁ	100 MΩ	100

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	ak
Battery (Wire no. 2052)	Connector 50.X7-2		OK.
SB2 (Wire no 2050)	Connector 50.X7-3		ac.

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u></u> <u>Υ</u> ΜΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value 7oMΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	OK.
Memotel speed sensor	10A	·······································
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	002

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/823

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	OK.
Terminal fault indication cab-1 & 2	09F	ok .
Brake pipe pressure actual BE electric	06H	DK.
Primary current sensors	12B, 12F	· OK
Harmonic filter current sensors	12B, 12F	٥K
Auxiliary current sensors	12B, 12F	OK.
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	.12D	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	ac ac
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	- OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	9K
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= 10ΚΩ± ± 10%)	13A	OL
UIC line	13B	OK
Connection FLG1-Box TB	13A	OK.

Effective Date: Feb 2022

Doc.No.F/ECS/01
eb 2022 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based YCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page : 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document

no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9 K $\Omega \pm 10\%$	3.9 ×52
Resister to maximum current relay.	1Ω ± 10%	12
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.32
Resistance harmonic filter (Pos 8.3). Variation allowed ± 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.252
Between wire 6 & 7	0.2 Ω	0.252
Between wire 5 & 7	0.4 Ω	0452
For train bus, line U13A to earthing.	10 kΩ± 10%	10.040
For train bus, line U13B to earthing.	10 k Ω ± 10%	333 kg
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	300MN
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	6.28 L
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.3052
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ ± 10%	2.241
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.7151
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9 KD
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.82
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	2002
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	105

fo

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/823

Type of Locomotive: WAP-7/WAG-9HC

lete:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cheeted on
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cfooteel ac

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	cheeked ou
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	ok
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	98
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	OK
Pretest speedometer	Sheets of Group 10	DK
Pretest vigilance control and fire system	Sheets of Group 11	ak
Power supply train bus	Sheets of Group 13	OK

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

-000	mouve ito
3.0	Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Tes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	2.22
Traction converter-2 software version:	2.22
Auxiliary converter-1 software version:	2,04
Auxiliary converter-2 software version:	2.04
Auxiliary converter-3 software version:	2.04
Vehicle control unit -1 software version:	2.02
Vehicle control unit -2 software version:	2.02

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	101,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100/
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	24.1.

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001.
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	241,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	44.1.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	4000
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	yooc
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	39°c
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	39.5℃
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	39°6
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	39°C

fe

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	cheeked as
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	Actional on
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	ockeeted ac
Converter and filter contactor operation with both Power Converters during Shut Down.	Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed.	cfeeted on

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie (cut out switch. Wait for self-test of	
	the loco.	
	Check that FB contactor 8.1 is open.	
	 Check that FB contactor 8.2 is open. 	ocheered on
	After raising panto, closing VCB, and setting TE/BE	
	FB contactor 8.1 closes.	
	• FB contactor 8.2 remains open.	
Test earth fault detection battery circuit positive & negative	By connecting wire 2050 to earth, create earth fault	7
· ·	negative potential.	
	message for earth fault	
	By connecting wire 2095	o cheeted an
	to earth, create earth	V
	fault positive potential.	
	message for earth fault	
Test fire system. Create a smoke in	When smoke sensor-1 gets	1
the machine room near the FDU.	activated then	1
Watch for activation of alarm.	Alarm triggers and fault	
	message priority 2 appears on screen.	
	When both smoke sensor	
	1+2 gets activated then	cheered on
	A fault message priority	
	1 appears on screen and	
	lamp LSF1 glow.	
	Start/Running interlock occurs and	
	TE/BE becomes to 0.	
Time, date & loco number	Ensure correct date time and Loco number	Ð _K

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

4.0 Sensor Test and Converter Test

Page: 11 of 27

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.0540	OR
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.0420.	OK
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.0400	ok
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.0420	DK
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.98P 5=6VEMS)	- OK
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.12VP 6.44×EMS	OK

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203-1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.	58-64P 41.54RMS	OK
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.54	OK

11.0 URMS

88

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply 250V_{eff}/350V_p by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

•	Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
	SLG1_G 87-XUPrim	25kV	250%	25KV	250%
	SLG2_G 87-XUPrim	25 kV	250%	25 HJ	2501.

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	1744	170%
SLG2_G 87-XUPrim	17 kV	170%	1740	1704.

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30 KV	3004
SLG2_G 87-XUPrim	30 kV	300%	30KV	300-1

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

Doc.No.F/ECS/01

22 Ref: WI/ECS/10) PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Tunctionancy desti	1. 600/
Minimum voltage relay (Pos. 86) must be adjuste	d to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	L(Yés/No)
Try to activate the cab in driving mode:	, (Yes/No)
Contactor 218 do not close; the control electronics is not be working.	
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be working	
Test Under Voltage Protection;	
Activate the cab in cooling mode; Raise panto;	(Kes/No)
Supply 200V _{RMS} through variac to wire no. 1501	Cres/NO)
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V _{RMS} through variac to wire no.	(Yes/No)
1501 & 1502; Decrease the supply voltage below	
140V _{RMS} ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current tr			
&1522 (including the resistor at Pos. 6.11); Put loco in simulation for driving mode; Open $R_3 - R_4$ on contact 136.3; Close VCB; supply 3.6A _{RMS} at the open wire 1521; Tune the drum of the maximum current relay Pos. 78 for correct over current value;			
VCB opens with Priority 1 fault message on display.	(Yes/No)		
Keep contact R ₃ – R ₄ of 136.3 closed; Close VCB; Tune the resistor 78.1 for the current of 7.0A _{RMS}			
/9.9A _p at the open wire 1521;			
VCB opens with Priority 1 fault message on display.	(Yes/No)		

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	_
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)	_	
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298ms
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)	_	1
	Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)	· .	338ma
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		-
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		347 ma
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	MA	NA
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	MA

Effective Date: Feb 2022

·)oc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close.	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

38

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	close	open	close	open	close	open	close	close	open
BUR1 off	close	open	close	clos	open	clos	open	open	close
BUR2 off	9en	open	008	close	class	close	open	open	clos
BUR3 off	open	close	open	close	close	clase	open	open	clos

Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yey
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yey
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes Yes
Fixing, connection and earthing in the surge arrestor done correctly.	100
Connection in all the traction motors done correctly.	You
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Tos

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locc-notive.

Effective Date: Feb 2022

· Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheeked me
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	checkedou
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	checkad ou
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Cheeked 41
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	cheeped &
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cheered on
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open	cfeered as
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Charled in

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/823

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	10.8	13.5
Oil pump transformer 2	9.8 amps	10.9	14.7
Coolant pump converter 1	19.6 amps	4.4	10.5
Coolant pump converter 2	19.6 amps	4,3	10.6
Oil cooling blower unit 1	40.0 amps	22,0	83.0
Oil cooling blower unit 2	40.0 amps	22.9	64.0
Traction motor blower 1	34.0 amps	29.5	92.0
Traction motor blower 2	34.0 amps	29.5	88.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.0	1015
Sc. Blower to Traction motor blower 1	6.0 amps	4.3	10.9
Compressor 1 25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²		27.0	177'3
Compressor 2	25 amps at 0 kg/cm ² 40 amps at 10 kg/cm ²	25.0	134.0

Sp

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10054	Yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636 V	Yey
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Amp	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1008v	Yes
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	6374	Yes.
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amh	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	·3% (10%=100A)*	22 Army	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12 Amp	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110~	Yes

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Description of the signal	Prescribed set value by the firm	Monitored value	Value under
Input voltage to BUR3	75% (10%=125V	1010~	Yes
DC link voltage of BUR3	60% (10%=100V)	637V	yes
DC link current of BUR3	1% (10%=50A)*	7 Amp	Yes
Current battery charger of BUR 3	3% (10%=100A)*	21 Amp	Yes
Current battery of BUR 3	1.5%(10%=100A)*	11 Amp	Yes
Voltage battery of BUR 3	110%(10%=10V)	110 ∾	Yes
	the signal Input voltage to BUR3 DC link voltage of BUR3 DC link current of BUR3 Current battery charger of BUR 3 Current battery of BUR 3 Voltage battery	the signal Input voltage to BUR3 DC link voltage of BUR3 DC link current of BUR3 Current battery charger of BUR 3 Current battery of BUR 3 Voltage battery Value by the firm 75% (10%=125V 60% (10%=100V) 1% (10%=50A)* 3% (10%=100A)* 1.5%(10%=100A)*	the signal value by the firm value Input voltage to BUR3 DC link voltage of BUR3 DC link current of BUR3 Current battery charger of BUR 3 Current battery of BUR 3 Current battery of BUR 3 Voltage battery Value 75% (10%=125V 1 010√ (10%=100V) (37√ 7 Amb 7 Amb 1.5%(10%=100A)* 2.1 Amb 1.5%(10%=100A)* 1.1 Amb

^{*} Readings are dependent upon charging condition of the battery.

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC Page : 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting curren

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.2	21.2
Machine room blower 2	15.0 amps*	4.0	20.0
Sc. Blower to MR blower 1	1.3 amps	1.0	5.2
Sc. Blower to MR blower 2	1.3 amps	0.9	4:5
Ventilator cab heater 1	1.1 amps	1. 9	1.6
Ventilator cab heater 2	1.1 amps	1.4	1.6
Cab heater 1	4.8 amps	4.7	4.8
Cab heater 2	4.8 amps	4.7	. 4.8

^{*} For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests. "

For Converter 1

Test Function	Results desired	Result obtained		
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Locked or		
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked an		
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeteela		
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	clocked &		
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cLosted W		
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	e foresol as		
Pulsing of drive converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chaered re		

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeted on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheetedou
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted on
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	efected on
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	closted ou
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeted a
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	CACKED &

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the grange.	
fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU	elocked as
Disturbance in Converter 1)
Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears	cfeeked as
	converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears Disturbance in Converter 1 Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained	
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	cheered an	

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB	e cheeked on
	FB contactor 8.1must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop	
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	o cheted on
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	OV.

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	chaered M	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	charked on	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	chercol as	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	clospool of	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	clarked an	

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	cheeked of
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Chercala
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheepoolou
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	cheekedou
Illuminated Push button	All illuminated push buttons should glow during the operation	efected on
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m ³ /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run		
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	Lorde
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	- fooker
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	Lockada
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	eneredon

Str

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: W↑P-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .
	locomotive	For 60 seconds do not press vigilance foot switch or
		sanding foots switch or TE/BE throttle or BPVG
		switch then
		Buzzer should start buzzing. Cheecel
		LSVW should glow continuously.
		Do not acknowledge the alarm through BPVG or
		vigilance foot switch further for 8 seconds then:-
		Emergency brake should be applied automatically.
		VCB should be switched off.
		Resetting of this penalty brake is possible only after
		180 seconds by bringing TE/BE throttle to 0 and
		acknowledge BPVR and press & release vigilance
		foot switch.
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).
		With park brake in applied condition.
		With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). Local
		With automatic train brake applied (BP<4.75Kg/cm²).
		• With emergency cock (BP < 4.75 Kg/cm ²).
8.	Check traction interlock	Switch of the brake electronics. The
		Tractive / Braking effort should ramp down, VCB (Level on
		should open and BP reduces rapidly.
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed 2 feeted of
10	braking.	should start reducing.
10.	Check for BUR	In the event of failure of one BUR, rest of the two
	redundancy test at	BURS can take the load of all the auxiliaries. For this
	ventilation level 1 & 3 of	switch off one BUR.
	loco operation	Auxiliaries should be catered by rest of two BURs.
11		Switch off the 2 BURs; loco should trip in this case.
11.	Check the power	Create disturbance in power converter by switching off the electronics. VCB should open and converter
	converter	The state of the s
	isolation test	should get isolated and traction is possible with
		another power converter.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41823

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	06_	or (
2	Marker Red	OF.	OR	
3	Marker White	OK	20	
4	Cab Lights	OK -	DK.	
5	Dr Spot Light	OK	OK	cheeked worker
6	Asst Dr Spot Light	OK	ac	
7	Flasher Light	ok	OK	
8	Instrument Lights	a.	ox	
9	Corridor Light	OK	DK.	
10	Cab Fans	OL	De	
11	Cab Heater/Blowers	de-	OK	
12	All Cab Signal Lamps Panel 'A'	OK	DIE	

Status of RDSO modifications

LOCO NO: 41823

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08 Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.		OK/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Øk/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Øk/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	OK/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Qk/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Øk/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Qk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Qk/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Øk/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Øk/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	QK/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Øk/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Qk/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Øk/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Øk/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Øk/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Øk/Not Ok

Signature of JE/SSE/TRS

Loco No.: 41823

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	59
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.65
		DMTS-014-1, 8	-	
		CLW's check sheet		
		no. F60.812 Version		
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.50 Kg/cm2
		no. F60.812 Version	kg/cm2, closes	
		2	5.5±0.15 kg/cm2	5.50 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Iso	lating Cocks & KABA co	ock by Key (KABA Key)
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.45 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 40
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-28 Sec
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-26 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.5 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.5 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10.05
		MM3882 &	kg/cm2 Opens at	Kg/cm2
		MM3946	8±0.20 kg/cm2	
				8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.45 minute

PLW/PATIALA

Loco No.: 41823

2.7 Check unloader valve operation time 2.8 Check Auto Drain Valve functioning (124 & 87) 2.9 Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP. 2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP. 2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 12 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 4.2 Check Purge Air Stops from Air Dryer at Compressor stops leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake Operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 Tower to change i) Every minute FTTIL & SIL) ii) every two minute (KBIL) D&M test spec. MM3882 & MM3946 FOWN to the change of the change o
Direct by BLCP. 2.10 Check CP-2 delivery safety valve setting (10/2). Run CP D&M test spec. MM3882 & MM3946 kg/cm2 2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 12 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation Air Dryer Operation 3.1 Open Drain Cock 90 of 2nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. 5.0 F60.812 Version 2 6.0 ±0.20kg/cm2 5.0 ±0.010kg/cm2 5.0 ±0.020kg/cm2 5.0 ±0.020kg/cm2 6.0 ±0
direct by BLCP Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 12 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. F60.812 Version 2 Tower to change ok i) Every minute (FTIL & SIL) ii) every two minute (KBIL) 3.1 Open Drain Cock 90 of 2nd MR to start Compressor stops 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D.15 kg/cm2 in 5 minutes Should be less than 1 kg/cm2 in 5 minutes 15 minutes Should be less than 1 kg/cm2 in 5 minutes 15 minutes CLW's check sheet no.
valve to reset at pressure 12 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.0 Kg/cm CLW's check sheet no. F60.812 Version 2 South Table T
by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test leakage from both cabs. 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no. 6.0±0.20kg/cm2 6.0.0±0.20kg/cm2 6.
Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system F60.812 Version 2 F60.812 Version 2 F60.812 Version 2 F60.812 Version 2 Tower to change i) Every minute (KBIL) Blue Blue Blue Blue D&M test spec. MM3882 & MM3946 0.15 kg/cm2 in 15 minute 15 minutes Skg/cm2 in 15 minutes CLW's check sheet no.
3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system Tower to change i) Every minute (FTIL & SIL) iii)every two minute (KBIL) Blue Blue Blue Blue Should be less than 1 kg/cm2 in 15 minutes 15 minutes 0.65 Kg/cm2 in 15 minutes NM3882 & MM3946 D&M test spec. MM3882 & MM3946 O.15 kg/cm2 in 5 minutes Kg/cm2 in minutes CLW's check sheet no.
open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. D&M test spec. MM3882 & MM3946 MM3882 & MM3946 D&M test spec. Should be less than 1 kg/cm2 in 15 minutes 15 minutes 15 minutes MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 Check BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 D.15 kg/cm2 in 5 minutes Solution of the Minutes of the Minut
3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.0 Brake Test (Automatic Brake operation) Check proportionality of Auto Brake system Blue Blue Blue Blue Blue Blue Blue Blue D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D.15 kg/cm2 in 5 minutes C.15 kg/cm2 in 5 minutes C.15 kg/cm2 in minu
4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system D&M test spec. MM3882 & MM3946 D&M test spec. O.15 kg/cm2 in 5 minutes MM3882 & MM3946 MM3882 & MM3946 CLW's check sheet no.
4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage (isolate BP charging cock-70) Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system D&M test spec. MM3882 & MM3946 D&M test spec. D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D&M test spec. D.15 kg/cm2 in Sminutes MM3882 & MM3946 Check proportionality of Auto Brake system CLW's check sheet no.
leakage from both cabs. MM3882 & MM3946 than 1 kg/cm2 in 15 minutes 0.05 kg/cm2 in 5 minutes 0.15 kg/cm2 in 5 minutes 0.05 kg/cm2 in 5 minutes 15 minutes 0.05 kg/cm2 in 5 minutes 15 minutes 0.05 kg/cm2 in 5 minutes 15 minutes 0.05 kg/cm2 in 15 minutes 0.05 kg/cm2
MM3882 & MM3946 minutes Kg/cm2 ir minutes 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.
5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.
Check proportionality of Auto Brake system CLW's check sheet no.
Auto controller position BC (WAG-9 & WAP-7) Kg/cm2 BC (WAP-5) Kg/cm2
BP Pressure kg/cm2 Value Result Value Result
Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 -
Initial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 _{0.40Kg/cm2} 0.75±0.15 -
Full service 3.35±0.2 3.3 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -
2.5ng/ till2

PLW/PATIALA

Loco No.: 41823

	T		1	T = -
5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	7 Sec
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	ОК
		MM3882 & MM3946	to Below 25 kg/cm2	
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.15 Kg/cm2
		F60.812 Version 2	4.05- 4.35	
			kg/cm2	2.05
			Opens at BP 2.85- 3.15	3.05
				Kg/cm2
5.5	Move Auto Brake Controller handle from Running to	DOM tost spec	kg/cm2	
5.5	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	D&M test spec. MM3882 & MM3946		
	Max. BC developed	IVIIVI3002 & IVIIVI3940		
	WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 3.13 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
	WAG9 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	20 SEC
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
3.0	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure	111113332 Q 1111133 13		
	up to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	
	WAG9		52±7.5 sec.	54 sec.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	79 Sec
	BP Pressure Steady at 5.5 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test : The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.7 Kg/cm2
	functioning of brake.		60 Sec.	
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe			
	to 5 kg/cm2 by A (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors			
F 0	in working condition.		DC 1 /2/	
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
6.0	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure	CIM's shock shoot no	2 5+0 20 kg/cm2	2 EEVa/am2
	WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.55Kg/cm2
6.2				7 Sec
0.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec. MM3882 & MM3946	8 sec. (Max.)	7 386
	time	IVIIVISOOZ & IVIIVIS946		

PLW/PATIALA

Loco No.: 41823

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	11 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 14.06.2022		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

CHANDER Digitally signed by CHANDERVEER SINGH Date: 2023.09.06 10:51:20 +05'30'

Signature of Loco testing staff

Signature of SSE/Shop

Effective Date: July-2023

LOCO NO: 41823

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco) Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA

RIY: W(R

TKD Shed:

		9				
S. No.	ITEM TO BE CHECKED	Specified Value	Ob	serve	d Valu	e
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		- ^	11	_
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.	ок		c)K	
1.3	Check proper of Fitment of oil cooling unit (OCU).	ОК		0	2	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	ок		0	K	
1.5	Check proper Fitment of FB panel on its position.	OK		C	1	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	ОК		0	K	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	ОК		C	10	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK			xc	
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	ОК		(YC	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		C	VIC .	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		C	VC	
1.12	Check proper fitment of Bogie Body Safety Chains.	ОК		C	K	
1.13	Check proper fitment of Cow catcher.	OK			X	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	ОК		-	YC	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	ОК		THE RESERVE OF THE PARTY OF THE	1/2	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK			ok	
1.17	Check proper fitment of both battery box.	ОК		1	1/2	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	ОК			C)C	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK			ok.	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch. ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std :35- 60 mm Lateral Std- 45- 50 mm	LP 60	GO	LP	B-2 AL
	Buffer height: Range (1090, +15,-5)	1085-1105	51	72 L/S	54	R/S
	Drg No IB031-02002.	mm	FRONT	-		7
				110	-	102
121			REAR	109		103
	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/5	5	R/S
1.22	Drg No-SK.DL-3430.		FRONT	641	5 6	, 4:
			REAR	64		54
	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/:		R/S
1.23	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	118	3 1	16
	CBC Height: Range (1090, +15,-5) Drg No- IBQ31-02002.	1090, +15 -5 mm	FRONT REAR:	: 109		0
	DIE IN IDUOT.	-5 mm	MEAR.	109	3	

(Signature of SSE/Elect. Loco (UF))

(Signature of SSETE/Elect Loco)

NAME SHUBHAM SHARMA

(Signature of JE/UF)

NAME JAWDIM PRAJAD

DATE 26/08/2023

		l	OCO NO-41823				
.No.	Equipment	PL No.	Equipmen	Equipment Serial No. Make		ake	
	Complete Shell Assembly with piping	29171027	Sr no - 03/29 , 06/2023		Tric	dent	
	Side Buffer Assly Both Side Cab I		104- 05/23	57- 05/23	FASP	FASP	
_	Side Buffer Assly Both Side Cab II	29130050	63- 05/23	140- 05/23	FASP	FASP	
-	CBC Cab I & II	29130037	0051, 02/23			KM	
5	Hand Brake		04/2	3- 213	RISING ENGINEE	RING CONCERN	
		29045034			ABOK	3-1-10°	
6	Set of Secondry Helical Spring	29041041			Brite metallogy	Brite metallogy	
7	Battery Boxes (both side)	29680013	Sr no not vsbl	Sr no not vsbl		EW	
8	Traction Bar Bogie I	-		04/23		EW	
9	Traction Bar Bogie II			- 04/23			
10	Centre Pivot Housing in Shell Bogie I side	20100057	5985	- 05/23	1	EW	
11	Centre Pivot Housing in Shell Bogie II side	29100057	5983	- 05/23	Т	EW	
			606	03/23	AV	/ADH	
12	Elastic Ring in Front in Shell Bogie I side	29100010			AV	/ADH	
13	Elastic Ring in Front in Shell Bogie II side		632	- 03/23	100000		
7	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	BHEL-65-03-23	3-2055270 , 2023	В	HEL	
15		29/3103/101 WAF-/	07/23, FG4150	02/M2/23-24/029	APPOLO IND	USTRIAL CORPS	
15	Oil Cooling Radiator I Oil Cooling Radiator II	29470031	07/23, FG4150	02/M2/23-24/036	APPOLO IND	USTRIAL CORPS	
16	Main Compressor I with Motor		EWBS840	0121,05/23	E	LGi	
17	Main Compressor II with Motor	29511008	EWAS840	0119 , 04/23	E	LGi	
18			D4587, 06/23		SAMAL	HARAND	
19	Transformer Oil Cooling Pump I			6,05/23	SAMAL	HARAND	
20	Transformer Oil Cooling Pump II			7, 1001358493	PD ST	EELS LTD	
21	Oil Cooling Blower OCB I	29470043		1, 1001364506	PD STEELS LTD		
22	Oil Cooling Blower OCB II			AF327, 21M64327	SAINI ELECT	RICAL PVT LTD	
23	TM Blower I	29440075		AF323, 21M64323	SAINI ELECT	TRICAL PVT LTD	
24	TM Blower II			7, CGLWBAM13724		CCEL	
25	Machine Room Blower I	29440105	,	32, CGLVLAM13561		CCEL	
26	Machine Room Blower II			SM-23.05.15		CO(P) LTD	
27	Machine Room Scavenging Blower I	29440129		SM-23.05.29		CO(P) LTD	
8	Machine Room Scavenging Blower II			4AF28, 22M14/28		TRICAL PVT LTD	
29		29440117		4AF27, 22M14/27		TRICAL PVT LTD	
30				214-6K-TCC1	-		
31	Traction Convertor I			5-6K-TCC2	-		
32	Traction Convertor II						
33		29741075		J1-6K-23-097	SI	EMENS	
34				J2-6K-23-097	+		
35				11/02 STRAIDOZAE CV ACIA		-	
36	Aux. Converter Box 2 (BUR 2 + 3)				VAVCONG ELI	ECTRICAL PVT LTD	
37	Axillary Control Cubical HB-1	29171180		33/06/2023		ECTRICAL PVT LTD	
38	Axillary Control Cubical HB-2	29171192		04/2023, 04/23		SALIT LTD	
39	Complete Control Cubicle SB-1	29171209		2305288 ,05/23			
40	Complete Control Cubicle SB-2	29171210	06/23, SE	32/387/06/2023		ECTRICAL PVT LTD	
41	Filter Cubical (FB) (COMPLETE FILTER	29480140	FB/202	3/E/0206/512	HIND RI	ECTIFIERS LTD	
42	CUBICLES)	29171131	05/23- Batch No.	272 & 02/23- 310, 278	AB INDU	JSTRIES & EEE	

PATIALA LOCOMOTIVE WORKS, PATIALA

NAMESATISH KUDOR

NAME SHUN HAM SMARA

				41823		
		RO	OOF COMP	ONENT CAB 1 & 2		Warranty
S.No.	Description	PL NO.	QPL /Nos	Supplier	Sr. no.	
	Pantograph	29880014(HR),	2	FAIVELEY, GENERAL		
1		29880026		STORES	G23-1253,JULY-23,3300-06/23	
2	Servo motor	29880026	2	GENERAL STORES	3303-06/23	
	Air Intake filter Assly		2	TRIDENT	VFO/F/293/03/2023,VFO/F/312/05	
3		29480103			/2023	
4	Insulator Panto Mtg.	29810127	8	IEC	03/23,03/23	
		N	/IIDDLE RO	OF COMPONENT		
5	High Voltage Bushing	29731021	1	EIPL	EIPL-4249-03/23	
6	Voltage Transformer	2965028	1	SADTEM	2023-N, 652630	
7	Vacuum Circuit Breaker	25712202	1	AUTOMETER ALLIANCE	AALN/06/2023/086/VCBA/283	
8	Insulator Roof line	29810139	9	IEC	11-22,09-22	
9	Harmonic Filter	29650033	1	TELEMA	TEPL/RHF/009/2023/256	AS Per PO/IRS Conditions
10	Earth Switch	29700073	Е	AUTOMETER ALLIANCE	AALN/02/2023/037/ES/412	
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	52346-2023,52347-2023	
			Air Br	ake Components		
12	Air Compressor	29511008	2	ELGI	EWVS 840119A,EWVS 840121B	
13	Air Dryer	29162051	1	TRIDENT	LD2-06-8766-23	
14	Auxillary Compresssor	25513000	1	ELGI	BWJS-106476	
15	Air Brake Panel	29180016	1	FAIVELEY	APR-23-58-WAG9-2692	
16	Contoller	29180016	2	FAIVELEY	E23-005A,E23-040BB	
17	Breakup Valve	29180016	2	FAIVELEY		
18	wiper motor	29162026	4	ELGI		

CHANDER Digitally signed by CHANDERVEER SINGH Date: 2023.09.13 15:30:42 +05'30' SSE/ABS

SSE/TESTING

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41823 RLY: WCR LIST OF ITEMS FITTED BY ECS

SHED: TKD

PROPULSION SYSTEM: SIEMENS

2023 3092 3092	S	DESCRIPTION OF ITEM	ITEM PL NO.		ITEM SR. NO CAB-1/CAB-2	MAKE/SUPPLIER
Led Marker Light Cab I & II 29612925 2301EM18395/18459/18387/18406 Cab Heater Cab I & II 29170011 90 76 Crew Fan Cab I & II 29470080 3570/3648/3485/3466 Master Controller Cab I 29860015 5709 Master Controller Cab I 29178265 3332 3152 Complete Panel A Cab I & II 29178265 3381 3383 Complete Panel Cab I & II 29178265 3381 3383 Complete Panel Cab I & II 29178265 3381 3383 Complete Panel Cab I & II 29178265 3381 3383 Complete Panel Cab I & II 29178265 3381 3383 Complete Panel Cab I & II 29178265 3381 3383 Complete Panel Cab I & II 29178265 3381 3383 Speed Ind. & Rec. System Battery (Ni- Cd) 29600420 4357/5029 Set of Harnessed Cable Complete 29600420 3723 & 22/3161 3723 & 22/301 Transformer Oil Temperature Sensor (Cab-1) 103/23 & 22/3151 03/23 & 22/302 103/23 & 22/300	-	LED Based Flasher Light Cab I &		25655	25629	MATSUSHI P.T.
Cab Heater Cab I & II 29170011 90 76 Crew Fan Cab I & II 29470080 3570/3648/3485/3466 76 Master Controller Cab I I 29860015 29860015 5699 Master Controller Cab I II 29178265 3332 3152 Complete Panel Cab I & II 29178265 3381 3152 Complete Panel Cab I & II 29178265 3381 3152 Complete Panel Cab I & II 29178265 3381 3152 Complete Panel Cab I & II 29178265 3381 3152 Complete Panel Cab I & II 29178265 3381 3152 Complete Panel Cab I & II 29178265 3381 3152 Speed Ind. & Rec. System 29200040 4357/5029 4357/5029 Battery (Ni- Cd) Set of Harnessed Cable Complete 29600420 29600420 3723 & 22/3121 03/23 & 22/3101 Transformer Oil Pressure Sensor (Cab-1) Cab-1 Recomplete Cabical Cab-1 Associated Cabical Cab-1 Associated Cabical Cab-1 Associated Cabical Cab-1 Transformer Oil Temperature Sensor (Cab-2) 29500047 <td>7</td> <td>$\overline{}$</td> <td>29612925</td> <td>2301EM18395/18</td> <td>8459/18387/18406</td> <td>ALTOS</td>	7	$\overline{}$	29612925	2301EM18395/18	8459/18387/18406	ALTOS
Crew Fan Cab I & II 29470080 3570/3648/3466 Master Controller Cab I 29860015 5709 Master Controller Cab II 29178265 3332 3152 Complete Panel A Cab I & II 29178265 3381 3152 Complete Panel C Cab I & II 29178265 3381 3383 Complete Panel C Cab I & II 29178265 3381 3383 Complete Panel C Cab I & II 29178265 3381 3383 Complete Panel C Cab I & II 29178162 CUF/643/06/2023 CUF/640/05/2023 Speed Ind. & Rec. System 29200040 4357/5029 CUF/601/05/2023 Battery (Ni- Cd) 29600420 29600420 A357/5029 Sersor Oil Circuit Transformer Oil Pressure Sensor (Cab-1) (Pressure 29600420 03/23 & 22/3121 03/23 & 22/3101 Transformer Oil Temperature Sensor (Cab-1) Transformer Oil Temperature Sensor (Cab-1) R6/TFP/5300-APR-23 Roof mounted Air Conditioner I 29811028 KKI/CLW/2187	က	$\overline{}$	29170011	06	76	ESCORTS
Master Controller Cab I 29860015 5709 Master Controller Cab III 29178265 3332 3152 Complete Panel A Cab I & II 29178265 3381 3152 Complete Panel C Cab I & II 29178265 3381 3383 Complete Panel C Cab I & II 29178162 CUF/643/06/2023 CUF/601/05/2023 Speed Ind. & Rec. System 29200040 4357/5029 CUF/601/05/2023 Speed Ind. & Rec. System 29600420 29600420 585 Set of Harnessed Cable Complete 29600420 37/23 & 22/3101 Transformer Oil Pressure Sensor (Cab-1) (Pressure 29500047 03/23 & 22/3151 03/23 & 22/3101 Transformer Oil Temperature Sensor (Cab-1) Transformer Oil Temperature Sensor (Cab-1) RKI/CLM/12182 KKI/CLM/12182 Roof mounted Air Conditioner I 29811028 KKI/CLM/12187 KKI/CLM/12187	4		29470080	3570/3648	1/3485/3466	SHIVAM
Master Controller Cab I II 29860015 5699 Complete Panel A Cab I & II 29170539 3152 Complete Panel C Cab I & II 29170539 3381 Complete Panel C Cab I & II 29170539 3381 Complete Panel C Cab I & II 29170539 CUF/643/06/2023 Complete Panel C Cab I & II 29178265 3381 Complete Panel C Cab I & II 29178265 3381 Complete Panel C Cab I & II 29178265 3381 Complete Panel C Cab I & II 29178265 CUF/643/06/2023 Speed Ind. & Rec. System 29200040 4357/5029 Battery (Ni- Cd) 585 Set of Harnessed Cable Complete 29600420 585 Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor (Cab-1) (Pressure Sensor (Cab-1)) 29500047 03/23 & 22/3151 03/23 & 22/3001 Transformer Oil Temperature Sensor (Cab-2) 29500035 BG/TFP/5325-APR-23 RKI/ICLW/I2187 Roof mounted Air Conditioner I 29811028 KKI/ICLW/I2187 KKI/ICLW/I2187	2			25	602	
Complete Panel A Cab I & II 29178265 3332 3152 Complete Panel C Cab I & II 29178265 3381 3152 Complete Panel C Cab I & II 29178265 3381 3383 Complete Cubicle - F Panel Cab I & II 29178162 CUF/643/06/2023 CUF/601/05/2023 Speed Ind. & Rec. System 29200040 4357/5029 CUF/601/05/2023 Battery (Ni- Cd) Set of Harnessed Cable Complete 29680025 585 Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer) 29500047 03/23 & 22/3151 03/23 & 22/3101 Transformer Oil Temperature Sensor (Cab-1) Recomplete Cable Conditioner I RKI/CLW//2182 RKI/CLW//2187	9	_	29860015	26	668	WOAMA
Complete Panel C Cab I & II 29170539 3381 3383 Complete Panel D Cab I & II 29178265 3381 3383 Complete Panel D Cab I & II 29178162 CUF/643/06/2023 CUF/601/05/2023 Speed Ind. & Rec. System 29200040 4357/5029 CUF/601/05/2023 Battery (Ni- Cd) 29680025 585 CUF/601/05/2023 Set of Harnessed Cable Complete 29600420 4357/5029 CUF/601/05/2029 Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer) 29500047 03/23 & 22/3151 03/23 & 22/3101 Transformer Oil Temperature Sensor (Cab-1) RKI/CLW/2325-APR-23 RKI/CLW/2182 RKI/CLW/2187 Roof mounted Air Conditioner I 29811028 KKI/CLW/2187 KKI/CLW/2187	_	Complete Panel A Cab I & II	29178265	3332	3152	
Complete Panel D Cab I & II 29178265 3381 3383 Complete Cubicle - F Panel Cab I & II 29178162 CUF/643/06/2023 CUF/601/05/2023 Speed Ind. & Rec. System 29200040 4357/5029 Battery (Ni- Cd) 585 Set of Harnessed Cable Complete 29600420 585 Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor (Cab-2) 29500047 03/23 & 22/3151 Transformer Oil Temperature Sensor (Cab-1) RG/TFP/5300-APR-23 Transformer Oil Temperature Sensor (Cab-1) BG/TFP/5325-APR-23 Roof mounted Air Conditioner I 29811028 Roof mounted Air Conditioner II 29811028	ω	Complete Panel C Cab I & II	29170539			KEPCO
Complete Cubicle - F Panel Cab I & II 29178162 CUF/643/06/2023 CUF/601/05/2023 Speed Ind. & Rec. System 29200040 4357/5029 Battery (Ni- Cd) 29680025 585 Set of Harnessed Cable Complete 29600420 585 Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer) 29500047 03/23 & 22/3151 03/23 & 22/3101 Transformer Oil Temperature Sensor (Cab-2) 29500047 03/23 & 22/3121 03/23 & 22/3092 Transformer Oil Temperature Sensor (Cab-1) RG/TFP/5300-APR-23 BG/TFP/5305-APR-23 Roof mounted Air Conditioner II 29811028 KKI/CLW//2187	တ	Complete Panel D Cab I & II	29178265	3381	3383	
Speed Ind. & Rec. System 29200040 4357/5029 Battery (Ni- Cd) 29680025 585 Set of Harnessed Cable Complete 29600420 30/23 & 22/3151 Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor (Cab-1) (Pressure Sensor (Cab-2) 29500047 03/23 & 22/3121 Transformer Oil Pressure Sensor (Cab-2) 29500047 03/23 & 22/3121 03/23 & 22/302 Transformer Oil Temperature Sensor (Cab-2) BG/TFP/5300-APR-23 Transformer Oil Temperature Sensor (Cab-2) 29500035 BG/TFP/5325-APR-23 Roof mounted Air Conditioner I 29811028 KKI/CLW//2187	9	Complete Cubicle- F Panel Cab I & II	29178162	CUF/643/06/2023	CUF/601/05/2023	KAYSONS
Battery (Ni- Cd) 29680025 585 Set of Harnessed Cable Complete 29600420 29600420 Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor (Cab-2) 29500047 03/23 & 22/3151 03/23 & 22/3101 Transformer Oil Temperature Sensor (Cab-1) Transformer Oil Temperature Sensor (Cab-1) BG/TFP/5300-APR-23 BG/TFP/5300-APR-23 Transformer Oil Temperature Sensor (Cab-2) 29500035 BG/TFP/5325-APR-23 Roof mounted Air Conditioner II 29811028 KKI/CLW/2187	=	Speed Ind.& Rec. System	29200040	4357	/5029	MEDHA
Set of Harnessed Cable Complete 29600420 29600420 29600420 37/23 & 22/3151 03/23 & 22/3101 Transformer Oil Pressure Sensor (Cab-1) Transformer Oil Temperature Sensor (Cab-1) 29500047 03/23 & 22/3121 03/23 & 22/3101 Transformer Oil Temperature Sensor (Cab-1) RG/TFP/5300-APR-23 BG/TFP/5325-APR-23 Roof mounted Air Conditioner I Roof mounted Air Conditioner II 29811028 KKI/CLW/2187	12		29680025	56	85	SAFT URJA
Transformer Oil Pressure Sensor (Cab-1) (Pressure Cab-1) (Pressure Cab-1) (Pressure Cab-1) (Pressure Cab-1) (Pressure Cab-1) (Sensor Oil Circuit Transformer) Cab-1) (Cab-1) (Cab-1) (Camperature Sensor (Cab-1) (Camperature Sensor Oil Circuit Transformer) Cab-1) (Cab-1) (Cab-1) (Cab-1) (Cab-1) (Camperature Sensor (Cab-2) (Cab-1) (Cab-2) (Cab-1) (Cab-2)	13	Set of Harnessed Cable Complete	29600420			PPS
Transformer Oil Pressure Sensor (Cab-2) 29500047 03/23 & 22/3121 03/23 & 22/3092 Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer) BG/TFP/5300-APR-23 Transformer Oil Temperature Sensor (Cab-2) 29500035 BG/TFP/5325-APR-23 Roof mounted Air Conditioner II 29811028 KKI/CLW//2187	4	Transformer Oil Pressure Sensor (Cab-1) (Pressur Sensor Oil Circuit Transformer)		03/23 & 22/3151	03/23 & 22/3101	TBOILEY
Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer) Transformer Oil Temperature Sensor (Cab-2) Roof mounted Air Conditioner I Roof mounted Air Conditioner II Transformer Oil Temperature Sensor (Cab-2) Sensor Cab-2) RKI/CLW//2182	15		29500047	03/23 & 22/3121	03/23 & 22/3092	INOLEA
ensor (Cab-2) 29500035 BG/TFP/5325-APR-23 KKI/CLW/2182 29811028 KKI/CLW/2187	16			BG/TFP/53	00-APR-23	BG INDI ISTBIES
29811028 KKI/CLW/2187	17		29500035	BG/TFP/53	25-APR-23	
29811028 KKI/CLW/2187	18	Roof mounted Air Conditioner I		KKI/CL/	W/2182	
	19	Roof mounted Air Conditioner II	29811028	KKI/CL/	M/2187	KKI



PATIALA LOCOMOTIVE WORKS, PATIALA

Loco No. 41823

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-256	SIMPLEX	20405440	100190	As per PO/IRS
REAR	SL-217	SIMPLEX	29105146	101629	conditions

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: Escort/GB

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	24944	24940	24821	24912	24972	24666
Ultrasonic Testing	OK	OK	OK	ОК	ОК	ОК

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/23- 2272	CNC/23- 2311	CNC/23- 2207	CNC/23- 2369	CNC/23- 2270	CNC/23- 2225
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/23- 2251	CNC/23- 2312	CNC/23- 2206	CNC/23- 1600	CNC/23- 2326	CNC/23- 2067
Ultrasonic Testing	OK	OK	OK	OK	ОК	OK

5. AXLE ROLLER BEARING (CRU) (Warranty: As per PO/IRS conditions)

A	XLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	SKF	SKF	SKF
End	PO NO. & dt	00091	00091	00091	02898	02898	02898
Free	MAKE	FAG	FAG	FAG	SKF	SKF	SKF
End	PO NO. & dt	00091	00091	00091	02898	02898	02898

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	890	940	869	966	956	900
FREE END	866	966	875	913	938	958

Loco No. 41823

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1000.4	1000.0	1000 1			
DIA IN mm FE	1092.4	1092.3	1092.4	1092.3	1092.4	1092.3
WHEEL PROFILE GAUGE (1596±0.5mm)	ОК	ОК	ОК	OK	ОК	ОК

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION	ON	1	2	3	4	5	6
S.T.	MAKE	IN	IN	KPE	KPE	KPE	KPE
G.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	EEE	EEE	EEE	EEE	KM	EEE
BACKLASH (0.254 – 0.458mm)	0.340	0.350	0.320	0.320	0.320	0.310

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	19.00	18.90	16.95	16.52	16.71	16.22
LEFT SIDE	15.02	18.38	19.00	19.00	18.14	18.21

11. TRACTION MOTOR: (Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	BHARAT	566661	L-2307967
2	BHARAT	566661	J-2300127
3	BHARAT	566661	J-2300096
, 4	BHARAT	566661	J-2300143
5	BHARAT	566661	L-2308812
6	BHARAT	566661	L-2307966

SSE/ Bogie Shop

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.