भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41832

TYPE: WAG9HC

RAILWAY SHED: NR/LDH

PROPULSION SYSTEM: CGL

DATE OF DISPATCH: 28.09.2023

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41832

RAILWAY/SHED: NR/LDH

DOD: Sep-2023

INDEX

SN	PARA	ACTIVITIES	PAGE NO.
		Testing & Commissioning (ECS)	
1.	1.0	Continuity Test of the cables	
	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	3-0
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	17.70
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.8	Verification of Converter Protection Circuits (Hardware limits)	
_	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	10.05
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5. <i>4</i>	Auxiliary circuit 415/110	
	5.5	Hotel Load Circuit	
	5.6 5.7	Traction Converter Commissioning Test protective abutdown SP	
	5.7 5.9	Test protective shutdown SR	
	5.8 5.0	Test Harmonic Filter	
6	5.9 6.0	Test important components of the locomotive Running Trial of the locomotive	25-26
6. 7.	7.0	Final Check List to be verified at the time of Loco dispatch	25-26
8.	8.0	Status of RDSO modifications	28
9.	1-10	Pneumatic Test Parameters	29 - 32
10.	, , , ,	Loco Check Sheet(LAS)	33
11.	-	Component History (LAS,ECS,ABS)	34-36
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13	-	Warranty Conditions as per Tenders	39 -41

41832 (CGL)

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

WAG94C

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

1.0 Continuity Test of the cables

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	0K	100 ΜΩ	800 ma
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	700 M/L
Filter Cubicle	Earthing Choke	0/0	100 ΜΩ	ROOMA.
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	900 m/l
Transformer	Power Converter 1	. 0/2	100 ΜΩ	Booma
Transformer	Power Converter 2	olc	100 ΜΩ	900 ma
Power Converter 1	TM1, TM2, TM3	OK	100 ΜΩ	800 ma
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	gooma
Earth	Power Converter 1	olc	100 MΩ	800 ml
Earth	Power Converter 2	ok	100 ΜΩ	900 m/

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

Doc.No.F/ECS/01

(Ref: WI/ECS/10) PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Fransformer	BUR1	OL	100 MΩ	1500
Transformer	BUR2	ne	100 MΩ	1500
Transformer	BUR3	ne	100 MΩ	1500
Earth	BUR1	or	100 MΩ	1200
Earth	BUR2	ne	100 MΩ	1500
Earth	BUR3	2r	100 MΩ	1500
BUR1	HB1	or	100 MΩ	1500
BUR2	HB2	ne	100 MΩ	1500
HB1	HB2	or	100 ΜΩ	1500
HB1	TM Blower 1	De	100 ΜΩ	200
HB1	TM Scavenge Blower 1	or	100 ΜΩ	200
HB1	Oil Cooling Unit 1	20	100 MΩ	200
HB1	Compressor 1	or	100 MΩ	200
HB1	TFP Oil Pump 1	OR_	100 ΜΩ	200
HB1	Converter Coolant Pump 1	DL	100 ΜΩ	200
HB1	MR Blower 1	m.	100 ΜΩ	200
HB1	MR Scavenge Blower 1	872	100 MΩ	200
HB1	Cab1	or	100 MΩ	200
Cab1	Cab Heater 1	De	100 MΩ	200
HB2	TM Blower 2	00	100 ΜΩ	200
HB2	TM Scavenge Blower 2	00	100 ΜΩ	200
HB2	Oil Cooling Unit 2	De	100 MΩ	20
	Compressor 2	OR	100 MΩ	200
HB2	TFP Oil Pump 2	no	100 MΩ	200
HB2	Converter Coolant Pump 2	4	100 ΜΩ	200
HB2	MR Blower 2	NO.	100 ΜΩ	200
HB2	MR Scavenge Blower 2	OK	100 ΜΩ	200
HB2	Cab2	N	100 ΜΩ	200
Cab2	Cab Heater 2	ac	100 MΩ	200



Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	OK,
Battery (Wire no. 2052)	Connector 50.X7-2		oK.
SB2 (Wire no 2050)	Connector 50.X7-3		2K

Prescribed value $> 0.5 \text{ M}\Omega$	Measured Value 6 MΩ
Prescribed value:	Measured
> 50 MΩ	Value 65 MΩ
	> 0.5 MΩ Prescribed value:

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	ak.
Memotel speed sensor	10A	DK.
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	DK

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	DK.
Terminal fault indication cab-1 & 2	09F	ak
Brake pipe pressure actual BE electric	06H	OK.
Primary current sensors	12B, 12F	ox.
Harmonic filter current sensors	12B, 12F	OK .
Auxiliary current sensors	12B, 12F	2K
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	DK.
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	CK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	3K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	ax
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= 10ΚΩ± ± 10%)	13A	OK.
UIC line	13B	9K
Connection FLG1-Box TB	13A	OK.

Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.9KM
Resister to maximum current relay.	1Ω ± 10%	12
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.31
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.252
Between wire 6 & 7	0.2 Ω	0.252
Between wire 5 & 7	0.4 Ω	0.452
For train bus, line U13A to earthing.	10 kΩ± 10%	10.0KJ
For train bus, line U13B to earthing.	10 kΩ ± 10%	10.00
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	400 MS?
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.285
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0,295
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0,301
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.2KJ
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.75
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9KR
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.8Kr
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	390 R
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	102



Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Note:

Make sure that the earthing brush device don't make direct contact with the axle housing,

earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cheeked on
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	choered se

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04r and other linked sheets	cheered of
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked
Test control main apparatus	Sheets of Group 05.	ak.
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	OK
Test control Pneumatic devices	Sheets of Group 06	ac
Test lighting control	Sheets of Group 07	ak.
Pretest speedometer	Sheets of Group 10	DK.
Pretest vigilance control and fire system	Sheets of Group 11	OK.
Power supply train bus	Sheets of Group 13) DIK



Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832 3.0 Downloading of Software Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	79
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Tes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

propulsion equipment to be ensured and notes.	101010 00 0
Traction converter-1 software version:	versump 8
Traction converter-2 software version:	versaen 28
Auxiliary converter-1 software version:	1.0.0.6
Auxiliary converter-2 software version:	2,0,0.6
Auxiliary converter-3 software version:	3.0.0.6
Vehicle control unit -1 software version:	2A00
Vehicle control unit -2 software version:	2A 00

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK.
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB 0101- Xang Trans	Between 9% and 11 %	104,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans	Between 99 % and 101 %	100-1.
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	2-4-4





Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	04
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	QL.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	ÓK.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	OK.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	36°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	35.5℃
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	32°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	35°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	34.500
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	35°C



Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	cheeted as
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	cheeted as
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	· Alexadou
	 Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed. 	p cheesed an

Ooc.No.F/ECS/01 (Ref: WI/ECS/10)

Effective Date: Feb 2022 PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC Page : 10 of 27

Time, date & loco number	Ensure correct date time and Loco number	OK.
	lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.	
	 A fault message priority 1 appears on screen and 	
	1+2 gets activated then	
	When both smoke sensor	1
	appears on screen.	p chered a
water for activation of diarm.	message priority 2	
Watch for activation of alarm.	Alarm triggers and fault	
Test fire system. Create a smoke in the machine room near the FDU.	When smoke sensor-1 gets activated then	1
		-
	message for earth fault	
	fault positive potential.	
	By connecting wire 2095 to earth, create earth	P. C. P. C.
	message for earth fault and a series 2005	cheeted &
	negative potential.	
circuit positive & negative	earth, create earth fault	/
Test earth fault detection battery	By connecting wire 2050 to	7)
	• FB contactor 8.2 remains open.	
	• FB contactor 8.1 closes.	
	After raising panto, closing VCB, and	1
	Check that FB contactor 8.2 is open.	o chaeradae
	 Check that FB contactor 8.1 is open. 	
isolating any bosic	the loco.	1
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of	1

Doc.No.F/ECS/01

22 (Ref: WI/ECS/10) PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.0479	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.04.09	OK
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.0400	OK
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.0500	4K
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.84P SSUAMS	ak
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.11VR 6.44Vens	OK

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Prescribed Output Voltage & Polarity with input supply.	output	Measured polarity
58.7V _p , 41.5V _{RMS} and opposite polarity.	58.6 VI 41.5 VRMS/	DK
	15.541	DK
	58.7V _p , 41.5V _{RMS} and opposite polarity.	with input supply. 58.7V _p , 41.5V _{RMS} and opposite polarity. 58.6 V _A 41.5V _A 15.5V _p , 11.0V _{RMS} and opposite polarity.

- Ar

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no $1501\,\mathrm{cnd}$ 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	25kV	250%	25KV	250/,
SLG2 G 87-XUPrim	25 kV	250%	28KV	250/,

Decrease the supply voltage below 140 V_{RMS}. VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	17kV	170%	ITKU	170%
SLG2 G 87-XUPrim	17 kV	170%	1714	170/1

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV	300%	30KV	300%
SLG2 G 87-XUPrim	30 kV	300%	BOKU	300%

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

18

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjuste	ed to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	L(Xes/No)
Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.	(Yes/No)
Turn off the variac : Contactor 218 closes; the control electronics is be working	(Yes/No)
Test Under Voltage Protection;	
Activate the cab in cooling mode; Raise panto; Supply 200V _{RMS} through variac to wire no. 1501 & 1502; Close the VCB; Interrupt the supply voltage The VCB goes off after 2 second time delay.	(Yes/No)
Again supply 200V _{RMS} through variac to wire no. 1501 & 1502; Decrease the supply voltage below 140V _{RMS} ± 4V; Fine tune the minimum voltage relay so that VCB opens.	L(Yes/No)

4.5 Maximum current relay (Pos. 78)

4.5 Waximum current relay (7 03.70)	
Disconnect wire 1521 & 1522 of primary current transform & 1522 (including the resistor at Pos. 6.11); Put loco in simula on contact 136.3; Close VCB; supply 3.6A _{RMS} at the open maximum current relay Pos. 78 for correct over current value	tion for driving mode; Open $R_3 - R_4$ wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on	(Yes/No)
display.	
Keep contact R ₃ - R ₄ of 136.3 closed; Close VCB; Tune the res	sistor 78.1 for the current of 7.0A _{RMS}
/9.9A _p at the open wire 1521;	
VCB opens with Priority 1 fault message on display.	(Yes/No)

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)	-	
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298mB
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1		338mn
	or 2 pin no. 7(+) & 8(-)		
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		-
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		348mA
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	MA	HA
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	HA	NA

Poc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OL.
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close



Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	close	open	clos	open	088	open	close	close	open
BUR1 off	class	open	clos	clos	open	close	open	open	clos
BUR2 off	open	open	closs	clos	cliss	closs	open	open	clos
BUR3 off	open	clos	open	close	close	close	open	open	cliss

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Ney
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	tes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	700
Connection in all the traction motors done correctly.	Tes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yey
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Yes

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the firs' time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.



Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	choexad in
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheekeelon
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	chaereelas
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	chekalin
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	cheekalu
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cheeked on
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	cheeted on
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		cheeted on

Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01

22 (Ref: WI/ECS/10) PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	7.8	10.5
Oil pump transformer 2	9.8 amps	7.0	9.0
Coolant pump converter 1	19.6 amps	5.0	5.8
Coolant pump converter 2	19.6 amps	500	5.7
Oil cooling blower unit 1	40.0 amps	39.0	119.0
Oil cooling blower unit 2	40.0 amps	39.0	107.0
Traction motor blower 1	34.0 amps	28.5	145.0
Traction motor blower 2	34.0 amps	26,2	140,0
Sc. Blower to Traction motor blower 1	6.0 amps	2,8	16.2
Sc. Blower to Traction motor blower 1	6.0 amps	2.9	18,0
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	26,0	95.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	25.0	111.0

Le



Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	998 V	Yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636V	Yes
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Arap	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1002√	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	6374	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	JAMP	109
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	21 Amp	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	11 Amp	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110~	Yes

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10040	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	6374	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	22 Amp	Xes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12 Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	76s

^{*} Readings are dependent upon charging condition of the battery.



Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/83>

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3	
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery C charger and TM Scavenger blower 1&2	
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	cheerd
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.		

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	3.6	13.0
Machine room blower 2	15.0 amps*	4.0	12.8
Sc. Blower to MR blower 1	1.3 amps	1.6	3.4
Sc. Blower to MR blower 2	1.3 amps	1.8	2.4
Ventilator cab heater 1	1.1 amps	1.3	2.0
Ventilator cab heater 2	1.1 amps	1.3	2,3
Cab heater 1	4.8 amps	5,0	5-1
Cab heater 2	4.8 amps	5.0	5.1

^{*} For indigenous MR blowers.

fe



Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832

Type of Locomotive: 'VAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Acked ox
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Aceked ac
Earth fault detection on positive potential of DC . Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeted on
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choeped u
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeted on
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chartedax
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cfoeked OK

Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charked on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charged on
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheered on
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	cheefed on
Earth fault detection on AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cherred &
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choesed on
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheered on

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU	o exception
*.	Disturbance in Converter 1	
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	o Recked on

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained	
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	o chooted an	



Issue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop 	
	Bring the TE/BE throttle to O Switch off the VCB • FB contactor 8.1must open. • FB discharging contactor 8.41 must close • Check the filter current in diagnostic laptop	o choexad on
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	o choeked on
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	Dr.L

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	charted an	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	choked &	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	c Looked &	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	charted on	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	choeted on	

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4832

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs		
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cheeralor	
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheered a	
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	charted ox	
Illuminated Push button	All illuminated push buttons should glow during the operation	cherred in	
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: 2 For contactor 8.2:	
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:	

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	during trail run				ing trail run	
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	follow &				
**	Loco charging	loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	Loctoel &				
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Lacked an				
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	Rolleda				
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Rolled.				

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/832

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .
	locomotive	For 60 seconds do not press vigilance foot switch or
	1000	sanding foots switch or TE/BE throttle or BPVG
		switch then
		Puzzor should start huzzing
		LSVW should glow continuously.
		Do not acknowledge the alarm through BPVG or
		vigilance foot switch further for 8 seconds then:-
		Emergency brake should be applied
		automatically.
		VCB should be switched off.
		Resetting of this penalty brake is possible only after
		180 seconds by bringing TE/BE throttle to 0 and
		acknowledge BPVR and press & release vigilance
		foot switch.
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).
		With park brake in applied condition.
		With direct loco brake applied (BP< 4.75Kg/cm²). Postpod Postpod Postpod Postpod Postpod Postpod
		With automatic train brake applied (BP<4.75Kg/cm²).
		• With emergency cock (BP < 4.75 Kg/cm ²).
8.	Check traction interlock	Switch of the brake electronics. The
		Tractive /Braking effort should ramp down, VCB
		should open and BP reduces rapidly.
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed
	braking.	should start reducing.
10.	Check for BUR	In the event of failure of one BUR, rest of the two
	redundancy test at	BURs can take the load of all the auxiliaries. For this
	ventilation level 1 & 3 of	switch off one BUR.
	loco operation	Auxiliaries should be catered by rest of two BURs.
		Switch off the 2 BURs; loco should trip in this case.
11.	Check the power	Create disturbance in power converter by switching off the electronics. VCB should open and converter
	converter	off the electronics. VCB should open and converter
	isolation test	should get isolated and traction is possible with
		another power converter.

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41832

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	01-	ox 9	
2	Marker Red	OX_	OK	
3	Marker White	04	ON	
4	Cab Lights	84	OR	
5	Dr Spot Light	04_	ax	
6	Asst Dr Spot Light	OK	an	cheeped worker
7	Flasher Light	04	OK	•
8	Instrument Lights	of	ax	
9	Corridor Light	04	OK	
10	Cab Fans	DL.	ac	
11	Cab Heater/Blowers	28	0K	
12	All Cab Signal Lamps Panel 'A'	26	UK.	

Status of RDSO modifications

LOCO NO: 41832

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Øk/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Ok/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Ok/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Ok/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Øk/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Øk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Øk/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	contactors of three phase locomotives to improve reliability.	-Ók/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Øk/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Øk/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Øk/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	/OIVITOR OIL
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Øk/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Chartot on
20	RDSO/2018/EL/MS/0475 Rev.'0'		Ok/Not Ok

Signature of JE/SSE/TRS

Loco No.: 41832

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	58
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.4
		DMTS-014-1, 8	-	
		CLW's check sheet		
		no. F60.812 Version		
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.50 Kg/cm2
		no. F60.812 Version	kg/cm2, closes	
		2	5.5±0.15 kg/cm2	5.55 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Isc	olating Cocks & KABA co		
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	OK
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.4 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.	1) 7	(0.55
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 55
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual		-	
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-28 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.5 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.5 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10.1 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	8±0.20 kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.45 minute

PLW/PATIALA

Loco No.: 41832

2.7	Check unloader va	lve operation time				Approx. 12 Sec.	10 sec
2.8		Valve functioning (12	24 & 87)			Operates when	
		3 (,			Compressor	
						starts	
2.9	Check CP-I deliver	y safety valve setting	g (10/1). Run CP	D&M t	est spec.	11.50±0.35	11.6 Kg/cm2
	Direct by BLCP.		,		& MM3946	kg/cm2	3
2.10		y safety valve settin	g (10/2). Run CP	D&M t	est spec.	11.50±0.35	11.45
	direct by BLCP	,	J. ,		& MM3946	kg/cm2	Kg/cm2
2.11		ompressors and ensi	ure that the safety	D&M t	est spec.	J	<u> </u>
	valve to reset at pressure 12 kg/cm2 less than opening				& MM3946		
	pressure.	1 3					
2.12		h 'OFF' compressor,	Drain MR Pressure	CLW's ched	ck sheet no.	5.0±0.10kg/cm2	5.0 Kg/cm2
		Main Reservoir, Sta		F60.812 Ve		J. 1. 1. 3. 1. 3. 1.	J. 1
		sure of Duplex Checl					
2.13	FP pressure:	<u> </u>		CLW's ched	ck sheet no.	6.0±0.20kg/cm2	6.0 Kg/cm2
	•	est point 107F FPTP	. Open isolate cock	F60.812 Ve		J. 1. 1. 3. 1. 3. 1.	J. 1
	136F. Check pressi		'				
3.0	Air Dryer Operat						
3.1		00 of 2 nd MR to start	Compressor leave			Tower to change	ok
0.1		ck Air Dryer Towers				i) Every minute	OK .
	openion rest ones	skrii bi jei 10weis	to charigo.			(FTIL & SIL)	
						ii)every two	
						minute (KBIL)	
3.2	Check Purge Air St	ops from Air Dryer a	nt Compressor stops				
3.3		f humidity indicator				Blue	Blue
4.0	Main Reservoir Le	<i>y</i>					
4.1		·9) in full service, Ch	eck MR Pressure air	D&M t	est spec.	Should be less	0.7 Kg/cm2
	leakage from both				& MM3946	than 1 kg/cm2 in	in 15
	J					15 minutes	minutes
4.2	Check BP Air leaka	ir leakage (isolate BP charging cock-70)		D&M t	est spec.	0.15 kg/cm2 in 5	0.05
		J. C. T. T. J	J ,		& MM3946	minutes	Kg/cm2 in 5
							minutes
5.0	Brake Test (Auto	matic Brake oper	ation)				
5.1	•	& Brake Cylinder pr					
	, , , , , , , , , , , , , , , , , , ,	э					
	Check proportiona	ility of Auto Brake sy	/stem		eck sheet no.		
				F60.812	Version 2		
	Auto controller po	sition		,	% WAG-7)	BC (WAP-5)	
				Kg/cm2		Kg/cm2	
		BP Pressure kg/cm	12	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	_
					0.40Ng/ CITIZ		
	Full service	3.35±0.2	3.35 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	J J		- J		2.5Kg/ CITIZ		

PLW/PATIALA

Loco No.: 41832

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	9 Sec
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		7 300
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 25 kg/cm2	OK
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2 Opens at BP 2.85- 3.15	4.25 Kg/cm2
			kg/cm2	Kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2 WAG9 - BC 2.50 ± 0.1 kg/cm2	D&M test spec. MM3882 & MM3946	4±1 sec. 7.5±1.5 sec. 21±3 sec.	20 sec
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAP7	D&M test spec. MM3882 & MM3946	17.5±25 sec.	
	WAG9		52±7.5 sec.	54 sec.
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	75 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake. * Allow The MR pressure to build up to maximum stipulated limit. * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A (Automatic brake controlling) at run position. * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe. The test shall be carried out with all the compressors in	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.7 Kg/cm2
5.9	working condition. Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
J.7	Driver End paddle Switch (PVEF)		סס פטווופט נט ט	
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.55
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	Kg/cm2

PLW/PATIALA

Loco No.: 41831

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	11 Sec
7.0	Modified System Software (only for CCB)		-NA-	-NA-
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 14.06.2022		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

		ELECROMAX	4	29162026	wiper motor	18
		FAIVELEY	2	29180016	Breakup Valve	17
	F23-151A, F23-129B	FAIVELEY	2	29180016	Contoller	16
	MAR-23-23-WAG9-2587	FAIVELEY	1	29180016	Air Brake Panel	15
- According to	BWJS-106491	ELGI	1	25513000	Auxillary Compresssor	14
	LD2-04-8491-23	TRIDENT	Ь	29162051	Air Dryer	13
Section 1	вн0058-08-23,вн0080-08-23	ANEST	2	29511008	Air Compressor	12
		Air Brake Components	Air B			
	×					
2	52334-2023,52335-2023	CG POWER & INDUSTRIAL	2	29750052	Surge Arrester	11
	ES/23/06/0042	RIVER ENG	ш	29700073	Earth Switch	10
AS Per PO/IRS conditions	TEPL/RHF/009/2023/281	TELEMA	1	29650033	Harmonic Filter	9
	11-22,11-22	IEC	9	29810139	Insulator Roof line	œ
	AALN/08/2023/114/VCBA/542	AUTOMETER ALLIANCE	1	25712202	Vacuum Circuit Breaker	7
	2023-N, 652802	SADTEM	13	2965028	Voltage Transformer	6
	EIPL-4580-05/23	EIPL	1	29731021	High Voltage Bushing	ъ
		MIDDLE ROOF COMPONENT	AIDDLE RO	7		
	03/23,02/23	IEC	8	29810127	Insulator Panto Mtg.	4
	2023			29480103		ω
	VFO/F/329/06/2023,VFO/F/330/06/	TRIDENT	2	*	Air Intake filter Assly	8:18
	12983-06/23	CONTRANSYS	2	29880026	Servo motor	2
	H23-1374,AUG-23,12985-06/23	FAIVELEY, CONTANSYS		29880026		ъ
			2	29880014(HR),	Pantograph	A A
ī	Sr. no.	Supplier	QPL /Nos	PL NO.	Description	S.No.
Warranty		ROOF COMPONENT CAB 1 & 2	OF COMP	RC		
		41832				
, .						

SSE/TESTING

SE/ABS

C NI-	F		OCO NO-41832/NR			
S.No.	Equipment	PL No.		nent Serial No.	Ma	
1	Complete Shell Assembly with piping	29171027		16/44 , 08/23	EC	ВТ
2	Side Buffer Assly Both Side Cab I	29130050	12-07/23	49-07/23	FASP	FASP
3	Side Buffer Assly Both Side Cab II		197- 06/23	188-05/23	FASP	FASP
4	CBC Cab I & II	29130037	06-23	06-23	FASP	FASP
5	Hand Brake		05/	23- 15615	Modified	Mechwel
6	Set of Secondry Helical Spring	29045034 29041041			AB	ОК
7	Battery Boxes (both side)	29680013	18-06/23	15-06/23	DR STEEL	DR STEE
8	Traction Bar Bogie I		854	49 -05/23	KI	M
9	Traction Bar Bogie II		850	68- 05/23	KI	M
10	Centre Pivot Housing in Shell Bogie I side	29100057	624	40- 07/23	TE	W
11	Centre Pivot Housing in Shell Bogie II side	29100057	623	39- 07/23	TE	W
12	Elastic Ring in Front in Shell Bogie I side		2	5-05/23	SSI	PL
13	Elastic Ring in Front in Shell Bogie II side	29100010	8	1-05/23	SSI	PL
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	HVE-65-09	9-23-3107 , 2023	HIGH	VOLT
15	Oil Cooling Radiator I	29470021	07/23, 1	P0623RC1241	FINE AUTON	MOTIVE LTD
16	Oil Cooling Radiator II	29470031	07/23, 1	P0523RC1071	FINE AUTON	MOTIVE LTD
17	Main Compressor I with Motor	20511000	ВНОС	080 , 08/23	ANEST	WATA
18	Main Compressor II with Motor	29511008	внос	058 , 08/23	ANEST	WATA
19	Transformer Oil Cooling Pump I		D45	75 , 06/23	SAMAL H	IARAND
20	Transformer Oil Cooling Pump II		D45	76 , 06/23	SAMAL H	IARAND
21	Oil Cooling Blower OCB I		PDS2308053,	1001382205, 05/23	PD STEE	LS LTD
22	Oil Cooling Blower OCB II	29470043	PDS2307015,	1001359212 , 07/23	PD STEE	LS LTD
23	TM Blower I		06/23, AC-5429	99 , CGLWCAM23238	ACC	EL
24	TM Blower II	29440075	06/23, AC-5429	98, CGLWCAM23237	ACC	EL
25	Machine Room Blower I		06/23, AC-5448	36, CGLWAAM13022	ACC	EL
26	Machine Room Blower II	29440105	06/23, AC-544	169, CGLVJAM13232	ACC	
27	Machine Room Scavenging Blower I		07/23, D25-6	5025, CF25/D6386	SAMAL HARA	
28	Machine Room Scavenging Blower II	29440129	07/23, D25-6	5020, CF25/D6381	SAMAL HARA	
29	TM Scavenging Blower Motor I		07/23 , D30-	6827, CF30/D7101	SAMAL HARA	
	TM Scavenging Blower Motor II	29440117		6820, CF30/D7094	SAMAL HARA	
	Traction Convertor I			P12371223-P549		
	Traction Convertor II			P12371224-P549		
-	Vehicle Control Unit I			2307195-P549		
	Vehicle Control Unit II	29741075		2307196-P549	C.G	.L
	Aux. Converter Box I (BUR 1)			1001237938-P549		
	Aux. Converter Box 2 (BUR 2 + 3)			1002237938-P549		
	Axillary Control Cubical HB-1	20171190		GHB1G2380564	C.G	İ
-	Axillary Control Cubical HB-2	29171180 29171192		PL/HB2-21001	KAPATRONIC	
	Complete Control Cubicle SB-1			1/360/06/2023		
-	Complete Control Cubicle SB-1	29171209 29171210		3/F/0655/865	KAYSONS ELEGT	
	Filter Cubical (FB) (COMPLETE FILTER	29480140		3/F/0655/865	TROLEX INDI	
41	CUBICLES)	23400140				

NAME SATISH TUMAR SSE/LAS

NAME SHUR HAM SHARMA

NAME Amit KA: JE/LAS/UF



Issue No.: 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)
Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

Rly: NR

LOCO NO: 418.32

Shed: LDH

S. No.	ITEM TO BE CHECKED	Specified Value		rved V	arue	
4 4	Check proper Fitment of Hotel Load Converter & its output contactor.	OK	-	dA-		_
1.1	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.	ок		OK		
	Check proper of Fitment of oil cooling unit (OCU).	OK		OK		
1.3	Check proper Fitment of HB 1 & 2 and its respected lower part on its	OK		OK		
-	position. Check proper Fitment of FB panel on its position.	OK		OK		
1.5	Check proper Fitment of assembled SB1 & SB2 panel.	OK		OK		
1.6	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BJR-1, 2 & 3).	OK		OK		-
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 5 (SR-1 & 2).	OK	T 8	OK.		
1.8	Check proper fitment of Traction Converter T & 2 (5) R 15 Cyr. Check proper fitment, torquing & Locking of Main Transformer bolt.	OK	16	OK		
1.9	Check proper fitment of Main compressor both side with the compressor	OK		ok	-	
111	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		OK		
1.11	Check proper fitment of Bogie Body Safety Chains.	OK		OK		- 1
1.12	Check proper fitment of Bogie Body Catcher.	OK	6	K		
1.13		ОК		K		
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	ОК		K		
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	ОК	PS JALA			
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		OK		
1 17	Check proper fitment of both battery box.	OK		6K		
1.17	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		ok		
1.18	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	ОК		or	. 4	
	Secondary Vertical and Lateral Clearance on leveled track at the time of		CAB		CA	_
4 20	Loco Dispatch.	Vertical-Std :35-	LP	ALP	LP	I
1.20	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	60 mm	_			T.
	ELINS/16/ 0002 (NEV 1) diagonal 27 see 12 2	Lateral Std- 45-	5.5	50	45	1
		50 mm	50	46	52	
			-		-	
secretary and	Buffer height: Range (1090, +15,-5)	1085-1105		L/S		R
	Drg No IB031-02002.	mm	FRONT	1095		0
			REAR	1091	2 1	0
121	2 to 10 mm with buffer (ace)	641 mm		L/S		R
	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)		FRONT	6	2	0
1.22	Drg No-SK.DL-3430.			648		0
			REAR	648	-	6
	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S		R
1.23	As per RDSO Pamphlet Important Bogie Clearances of Electric	mm,-12 mm	FRONT	114		1
1.43	Locomotives.		REAR	114		1
		1090, +15	FRONT	103		
	CBC Height: Range (1090, +15,-5)	-5 mm	REAR:	110		
	Drg No- IB031 ₇ 02002.	J 111111		Purt 3		_

(Signature of SSE/Elect. Loco (UF))

NAME STATISTIC OMPL

(Signature of SSETE/Elect Loco)

NAME SHUBHAM SHARM

DATE 28/09/23

(Signature of JE/UF)

NAME AMH KUMON

DATE 28/19/23

पी.एल.डब्ल्यू

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41832 LIST OF ITEMS FITTED BY ECS RLY: NR

SHED: LDH

PROPULSION SYSTEM: CGL

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER
-	LED Based Flasher Light Cab I & II		25705	25683	MATSUSHI P.T.
	Led Marker Light Cab I & II	29612925	18391/18417/	18481/18454	ALTOS
	Cab Heater Cab I & II	29170011	1346	1278	TOPGRIP
	Crew Fan Cab I & II	29470080	4165/4161/	4155/4163	SHIVAM
_	Master Controller Cab I	2011000	56	82	WOAMA
6	Master Controller Cab II	29860015	56		
_	Complete Panel A Cab I & II	29178265	360A	360B	
_	Complete Panel C Cab I & II	29170539			HIND
	Complete Panel D Cab I & II	29178265	364A	364B	
	Complete Cubicle- F Panel Cab I & II	29178162	CG/CF/23041651	CG/CF/23041684	CG
_	Speed Ind.& Rec. System	29200040	MTELS-2306121/	MTELS-2306121/MTELM-2306121	
	Battery (Ni- Cd)	29680025	59	99	SAFT URJA
	Set of Harnessed Cable Complete	29600420			PPS INTERNATIONAL
	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)		TGIC/CLW/1095/APRIL-23	TGIC/CLW/1099/APRIL-23	TOPGRIP INSTRUMENT
	Transformer Oil Pressure Sensor (Cab-2)	29500047	TGIC/CLW/1055/APRIL-23	TGIC/CLW/1089/APRIL-23	COMPANY
	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)		BG/TFP/4	494-FEB-23	BG INDUSTRIES
	Transformer Oil Temperature Sensor (Cab-2)	29500035	BG/TFP/4	578-FEB-23	
	Roof mounted Air Conditioner I		23F	2931	SIDWAL
_	Roof mounted Air Conditioner II	29811028	23F	2914	*

SSE/ECS

Denation h

PATIALA LOCOMOTIVE WORKS, PATIALA

Loco No. 41832

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-263	SIMPLEX	20105146	101629	As per PO/IRS
REAR	SL-1062	ANUP	29105146	102883	conditions

2. Hydraulic Dampers PL No. 29040012, Make: GB

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	25070	25206	25075	25071	24850	24811
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/23- 2593	CNC/23- 2578	CNC/23- 2592	CNC/23- 2557	CNC/23- 2574	CNC/23- 2605
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/23- 2588	CNC/23- 2563	CNC/23- 2558	CNC/23- 2554	CNC/23- 2580	CNC/23- 2606
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear End	MAKE	SKF	SKF	SKF	SKF	SKF	SKF
	PO NO. & dt	02898	02898	02898	02898	02898	02898
Free	MAKE	SKF	SKF	SKF	SKF	SKF	SKF
End	PO NO. & dt	02898	02898	02898	02898	02898	02898

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	887	936	868	885	920	922
FREE END	894	988	830	971	910	853

Loco No. 41832

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.3	1092.4	1092.4	1092.3	1092.4	1092.4
DIA IN mm FE	1092.3	1092.4	1092.4	1092.3	1092.4	1092.4
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION	1	2	3	4	5	6	
S.T. (PL 29100288)	MAKE	KPE	KPE	KPE	KPE	KPE	KPE
G.E. BRG PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BRG PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KP	KP	KP	KP	KP	KP
BACKLASH (0.254 – 0.458mm)	0.350	0.320	0.330	0.320	0.340	0.330

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	18.42	17.98	18.32	18.42	18.43	17.35
LEFT SIDE	17.04	16.47	16.04	18.91	18.95	18.90

11. TRACTION MOTOR: (PL No. 29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	TWL	101687	6FRA22011
2	TWL	101687	6FRA23001
3	TWL	101687	6FRA22012
4	TWL	101687	6FRA22010
5	TWL	101687	6FRA23003
6	TWL	101687	6FRA23002

JE/ Bogie Shop

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- 8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.