# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

## PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41833

TYPE: WAG9HC

RAILWAY SHED: WCR/TKD

PROPULSION SYSTEM: SIEMENS

**DATE OF DISPATCH:** 30.09.2023

लोको निर्माण रिकार्ड



## पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41833

**RAILWAY/SHED: WCR/TKD** 

DOD: Sep-2023

#### **INDEX**

SN	PARA	ACTIVITIES	PAGE NO.
•		Testing & Commissioning (ECS)	<u>.</u>
1.	1.0	Continuity Test of the cables	
	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	5-6
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	11-10
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.8	Verification of Converter Protection Circuits (Hardware limits)	
	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5. <i>4</i>	Auxiliary circuit 415/110	
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
	5.8 5.0	Test Harmonic Filter	
	5.9	Test important components of the locomotive	25.20
6. 7.	6.0 7.0	Running Trial of the locomotive	25-26 27
		Final Check List to be verified at the time of Loco dispatch  Status of RDSO modifications	
8.	8.0		28
9.	1-10	Pneumatic Test Parameters	29 - 32 33
10.		Loco Check Sheet(LAS)	34-36
11.	-	Component History (LAS,ECS,ABS)	
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13	-	Warranty Conditions as per Tenders	39 -41

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/8 33

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ok	100 ΜΩ	800 m (
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	· 6k	100 ΜΩ	700 m/l
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	900 ma
Earthing Choke	Earth Return Brushes	ole	100 ΜΩ	800 m/L
Transformer	Power Converter 1	OK	100 ΜΩ	700 M/L
Transformer	Power Converter 2	OK	100 ΜΩ	800 m/L
Power Converter 1	TM1, TM2, TM3	· 6K	100 ΜΩ	900m()
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	800 m/l
Earth	Power Converter 1	OK	100 ΜΩ	900m()
Earth	Power Converter 2	OIC	100 ΜΩ	800m/L

#### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 MΩ	1500
Transformer	BUR2	ne	100 MΩ	1500
Transformer	BUR3	De	100 MΩ	1500
Earth	BUR1	De	100 MΩ	1500
Earth	BUR2	OK	100 MΩ	1500
Earth	BUR3	OK	100 MΩ	1500
BUR1	HB1	or	100 MΩ	1500
BUR2	HB2	OK	100 MΩ	1500
HB1	HB2	OK	100 MΩ	1200
HB1	TM Blower 1	OK	100 MΩ	200
HB1	TM Scavenge Blower 1	" OK	100 MΩ	200
HB1	Oil Cooling Unit 1	OK-	100 MΩ	200
HB1	Compressor 1	De	100 MΩ	200
. HB1	TFP Oil Pump 1	ok_	100 MΩ	200
HB1	Converter Coolant Pump 1	or	100 ΜΩ	200
HB1	MR Blower 1	OK.	100 MΩ	200
HB1	MR Scavenge Blower 1	De	100 MΩ	200
HB1	Cab1	DK.	100 MΩ	200
Cab1	Cab Heater 1	OK	100 MΩ	200
HB2	TM Blower 2	OK	100 MΩ	200
HB2	TM Scavenge Blower 2	Ne	100 MΩ	200
HB2	Oil Cooling Unit 2	ne	100 MΩ	200
HB2	Compressor 2	De	100 MΩ	200
HB2	TFP Oil Pump 2	· or	100 MΩ	200
HB2	Converter Coolant Pump 2	OK	100 MΩ	200
HB2	MR Blower 2	· N	100 MΩ	200
HB2	MR Scavenge Blower 2	OK_	100 MΩ	200
HB2	Cab2	ov-	100 MΩ	200
. Cab2	Cab Heater 2	OK	100 ΜΩ	200

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	OK.
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.¾7-3		2K

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>&amp;</u> MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured .
2050	> 50 MΩ	Value <u>65</u> MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

#### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	⊃K.
Memotel speed sensor	10A	oK.
Primary voltage detection	01A, 12A	°K
Brake controller cab-1 & 2	06F, 06G	OK.

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	oK.
Terminal fault indication cab-1 & 2	09F	214
Brake pipe pressure actual BE electric	06H	DK.
Primary current sensors	12B, 12F	24,
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	UK
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	»K
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	DK.
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	2K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	ok,
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	ðΚ
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	ek .
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= 10ΚΩ± ± 10%)	13A	OK
UIC line	13B	ac
Connection FLG1-Box TB	13A	Du_

£8

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/833

Type of Locomotive: WAP-7/WAG-9HC

Pa

Page: 5 of 27

#### 2.0 Low Tension test

2.1 Measurement of resistor in OHMS  $(\Omega)$ 

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	$3.9$ K $\Omega \pm 10\%$	3.9KQ
Resister to maximum current relay.	. 1Ω ± 10%	1-2
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3.252
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.25
Between wire 6 & 7	0.2 Ω	0.252
Between wire 5 & 7	0.4 Ω	0.452
For train bus, line U13A to earthing.	10 kΩ± 10%	10.0KM
For train bus, line U13B to earthing.	10 kΩ ± 10%	999EN
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	4001952
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.352
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.261
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.28.52
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0,285
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	<b>2.2 kΩ</b> ± 10%	2.2kg
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k <b>Ω</b> ± 10%	2.750
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3,910
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.800
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	3905
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 kΩ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	•10Ω ± 10%	1056.

Doc.No.F/ECS/01
(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/833

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks	
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	charted or	
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheeped on	

#### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	cheered on
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked
Test traction control	Sheets of Group 08.	٩K
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	°K
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	ok.
Test control Pneumatic devices	Sheets of Group 06	QK.
Test lighting control	Sheets of Group 07	· · · · ·
Pretest speedometer	Sheets of Group 10	OK OK
Pretest vigilance control and fire system	Sheets of Group 11	OK
Power supply train bus	Sheets of Group 13	OK

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: φ/833
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	2.27
Traction converter-2 software version:	2:22
Auxiliary converter-1 software version:	2.04
Auxiliary converter-2 software version:	2.04
Auxiliary converter-3 software version:	2.04
Vehicle control unit -1 software version:	2:02
Vehicle control unit -2 software version:	2.02

#### 3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	ox
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK.
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	114,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1014-
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	259,

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001,
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	24%
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	744,
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	3400
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	34.5°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	35°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	32°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	34°C
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	34500

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

#### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through	VCB must open.	cheered on
emergency stop switch 244	Panto must lower.	creeter at
Shut Down through cab activation	VCB must open.	cheeredoe
switch to OFF position	Panto must lower.	cheiter
Converter and filter contactor	FB contactor 8.41 is closed.	h
operation with both Power	By moving reverser handle:	V
Converters during Start Up.	Converter pre-charging contactor     12.3 must close after few seconds.	1
	• Converter contactor 12.4 must close.	cheeteel on
	Converter re-charging contactor	
	12.3 must opens.	
	By increasing TE/BE throttle:	
	• FB contactor 8.41 must open.	
	FB contactor 8.2 must close.	1
	• FB contactor 8.1 must close.	
Converter and filter contacto operation with both Powe	r Bring TE/BE to O . r Bring the cab activation key to "O"	1
Converters during Shut Down.	VCB must open.	1
	Panto must lower.	
	• Converter contactor 12.4 must open.	ochoerd on
	FB contactor 8.1 must open.	10,000
	<ul> <li>FB contactors 8.41 must close.</li> </ul>	
	• FB contactor 8.2 must remain closed.	
		T)

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/833

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

Time, date & loco number	Ensure correct date time and Loco number	ox
the machine room near the FDU. Watch for activation of alarm.	<ul> <li>activated then</li> <li>Alarm triggers and fault message priority 2 appears on screen.</li> <li>When both smoke sensor 1+2 gets activated then</li> <li>A fault message priority 1 appears on screen and lamp LSF1 glow.</li> <li>Start/Running interlock occurs and TE/BE becomes to 0.</li> </ul>	o footed as
Test earth fault detection battery circuit positive & negative  Test fire system. Create a smoke in	<ul> <li>FB contactor 8.1 closes.</li> <li>FB contactor 8.2 remains open.</li> <li>By connecting wire 2050 to earth, create earth fault negative potential.</li> <li>message for earth fault</li> <li>By connecting wire 2095 to earth, create earth fault positive potential.</li> <li>message for earth fault</li> </ul> When smoke sensor-1 gets	charteel a
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.  • Check that FB contactor 8.1 is open.  • Check that FB contactor 8.2 is open.  After raising panto, closing VCB, and setting TE/BE	choetal ac

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/833

Type of Locomotive: WAP-7/WAG-9HC

4.0 Sensor Test and Converter Test

Page: 11 of 27

#### 4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.054	OK
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.0500	DV_
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.0510	OK.
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0400	OK
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.9VP 5-6 Vpms	OK
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.12 Vp 6.44 Vpms	DIL

### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V <sub>p</sub> , 41.5V <sub>RMS</sub> and opposite polarity.	58.7~P) 41.5VRMS)	
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15:541	Qc.

L

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

#### 4.3 Primary Voltage Transformer

Apply  $250V_{eff}/350V_p$  by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25FJ	250%
SLG2_G 87-XUPrim	25 kV	250%	25KV	250-1,

Decrease the supply voltage below 140  $V_{RMS}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	170%
SLG2 G 87-XUPrim	17 kV	170%	17KV	1737,

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac, VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KV	3001
SLG2_G 87-XUPrim	30 kV	300%	30KV	300%

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Sk

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

#### 4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adju	usted to approv COO/
Activate less in earlier world Cl.   B	
Activate loco in cooling mode. Check Power supply of 48V to	L(Yes/No)
minimum voltage relay. Disconnect primary voltage	
transformer (wire no. 1511 and 1512) from load resistor (Pos.	
74.2) and connect variac to wire no. 1501 and 1502. Supply	
200V <sub>RMS</sub> through variac. In this case; Minimum voltage relay	
(Pos. 86) picks up	
Try to activate the cab in driving mode:	(Yes/No)
Contactor 218 do not close; the control	
electronics is not be working.	
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	)·
	<u>, , , , , , , , , , , , , , , , , , , </u>
Activate the cab in cooling mode; Raise panto;	L(Yes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501	p(1.55).15)
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no.	L(Yes/No)
1501 & 1502; Decrease the supply voltage below	
140V <sub>RMS</sub> ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transformation (including the resistor at Pos. 6.11); Put loco in simulation contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the opermaximum current relay Pos. 78 for correct over current values.	lation for driving mode; Open R <sub>3</sub> – R <sub>4</sub> n wire 1521: Tune the drum of the
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact $R_3$ – $R_4$ of 136.3 closed; Close VCB; Tune the respectively $/9.9A_p$ at the open wire 1521;	esistor 78.1 for the current of 7.0A <sub>RMS</sub>
VCB opens with Priority 1 fault message on display.	(Yes/No)

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

#### 4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	-
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		)
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298m
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)	-	_
	Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		335mA
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		ŗ
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		347ma
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	MA	MA
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	MA



(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

#### 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

should take place		
Increase the current guickly in	For 18.2/1=	1
sensor.		
	For 18.5/2=	
	For 18.5/3=	
		_
Increase the current quickly in	For 18.2/1=	7
the test winding of the current	For 8.2/2=	(
sensors, VCB will off at 2.52A	For 18.2/3=	
with priority 1 fault for each	For 18.4/4=	
sensor.	For 18.5/1=	
	For 18.5/2=	
	For 18.5/3=	
Remove one of the orange		_
	ο.	
converter. VCB should trip	OK.	
Domesia and of the		
	34	
converter. VCB should trip	-	
	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.  Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.  Remove one of the orange fibre optic plugs on traction	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.  Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensors.  For 18.2/3= For 18.5/1= For 18.5/2= For 18.5/2= For 18.2/3= For 18.2/1= For 18.2/3= For 18.5/3=  Remove one of the orange fibre optic plugs on traction converter. VCB should trip

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK						Open			
						Close			
						Close			
						Close			

k

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

#### Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	closs	open	close		close		,*-	close	
BUR1 off	closs	open	clos	-		-	Open	oben	class
BUR2 off	open	open	close		closs		open	. /	clo89
BUR3 off	open	close		close			oper	open	class

#### 5.0 Commissioning with High Voltage

#### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Ye,
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	185
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	709
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Yes

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

SI

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	charted on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheroda
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	cheered as
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	cheeped se
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	cheepeda
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cfacted on
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	c-Regarder
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	cheepedse

of

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41853

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

#### 5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.7	11.5
Oil pump transformer 2	9.8 amps	9.7	11.2
Coolant pump converter 1	19.6 amps	4.5	5.5
Coolant pump converter 2	19.6 amps	4.5	5.5
Oil cooling blower unit 1	40.0 amps	42.0	180.0
Oil cooling blower unit 2	40.0 amps	42.0	198.0
Traction motor blower 1	34.0 amps	33.0	180.0
Traction motor blower 2	34.0 amps	33.0	195.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.2	18.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.2	20,3
Compressor 1	25 amps at 0 kg/cm <sup>2</sup> 40 amps at 10 kg/cm <sup>2</sup>	28.0	155.0
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	28.0	15010



(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

#### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10050	Yay
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636 V	Yes.
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Amt	70)

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1008V	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	duy.	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Bm/g	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12 Amp	149
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1100	75

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BNR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10090	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637V	Ky
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	JAMP	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21Amb	To
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	11 Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	76y

<sup>\*</sup> Readings are dependent upon charging condition of the battery.



#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: VAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery of charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

#### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.2	22.0
Machine room blower 2	15.0 amps*	4.2	23.0
Sc. Blower to MR blower 1	1.3 amps	2.4	4.5
Sc. Blower to MR blower 2	1.3 amps	1.6	6.0
Ventilator cab heater 1	1.1 amps	1.2	1.6
Ventilator cab heater 2	1.1 amps *	1,2	1.6
Cab heater 1	4.8 amps	4.8	4.9
Cab heater 2	4.8 amps	4.8	4.9

<sup>\*</sup> For indigenous MR blowers.

of

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

#### 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### 5.6 Traction Converter Commissioning

#### This test is carried out in association with Firm

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	ofceted on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chered on
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked on
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted as
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chlekedal
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cherced an
Pulsing of drive converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chocked on

\$8

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Formation 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/833

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

#### For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Rocked W
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choired on
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checal on
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	charcel on
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chercel as
of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeted of
converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheereson

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/833

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the Gonverter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on DDU	cheeted ac
	appears  Disturbance in Converter 1	
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on diagnostic display appears	o clocked on
•	Disturbance in Converter 2	

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	o cheeked ac

J&

Signature of the JF 3SE/Loco Test

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	• FB contactor 8.2 must close.	and the same of th
	<ul> <li>FB contactor 8.1 must close</li> </ul>	
	Check the filter current in diagnostic laptop	
	Bring the TE/BE throttle to O	
	Switch off the VCB	1 2 /4
	• FB contactor 8.1must open.	- cheeseed on
	FB discharging contactor 8.41 must close	
	Check the filter current in diagnostic laptop	
Test earth fault	Make a connection between wire	<u></u>
detection harmonic	no. 12 and vehicle body. Start up	V
filter circuit.	the loco. Close VCB.	
	• Earth fault relay 89.6 must pick up.	o cheetal on
	<ul> <li>Diagnostic message comes that -</li> </ul>	P C - C - C
	Earth fault in harmonic filter circuit	
Test traction motor	Traction converter manufacturer	
speed sensors for	to declare the successful operation	8x
both bogie in both cabs	and demonstrate the same to the supervisor/ PLW	

#### 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	charged so	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	choekal a	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	chalted on	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	cheepedon	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	cheekeel on	

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	cheefeed on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cheefeel ac
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheered on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	cheered in
Illuminated Push button	All illuminated push buttons should glow during the operation	cheeted of
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m <sup>3</sup> /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### 6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Leepesto
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	Lactedon
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Locker
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm<sup>2</sup>, by pressing BPCS again.</li> </ul>	Betal
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to dran the DD	betel

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .
	locomotive	For 60 seconds do not press vigilance foot switch or
		sanding foots switch or TE/BE throttle or BPVG
		switch then
		Buzzer should start buzzing.
		LSVW should glow continuously.
		Do not acknowledge the alarm through BPVG or
		vigilance foot switch further for 8 seconds then:-
		Emergency brake should be applied
		automatically.
		VCB should be switched off.
		Resetting of this penalty brake is possible only after
,		180 seconds by bringing TE/BE throttle to 0 and
		acknowledge BPVR and press & release vigilance
		foot switch.
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).
		• With park brake in applied condition.
		2. 9
		With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).  With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).
		• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).
8.	Check traction interlock	Switch of the brake electronics. The
	Check traction interiock	// /
9.	Check regenerative	should open and BP reduces rapidly.
	braking.	Bring the TE/BE throttle to BE side. Loco speed 2 Poetrol should start reducing.
10.	Check for BUR	In the event of failure of our BUD to Sub.
	redundancy test at	
	ventilation level 1 & 3 of	BURs can take the load of all the auxiliaries. For this switch of one BUR.
	loco operation	Auxiliaries should be catered by rest of two BURs.
		Switch off the 2 BURs; loco should trip in this case.
11.	Check the power	Create disturbance in power convertor by switching
	converter	off the electronics. VCB should open and converter
	isolation test	should get isolated and traction is possible with
- 1		another power converter.

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41833

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

## 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OV	Dec (	
2	Marker Red	OK	ac	
3	Marker White	aL	DK.	
4	Cab Lights	OK	UX	
5	Dr Spot Light	8×	OK	
6	Asst Dr Spot Light	Dr.	4R	of and age
7	Flasher Light	00	SK.	efected worker
8	Instrument Lights	O.	X.	
9	Corridor Light	OK_	OK	
10	Cab Fans	OL	OK	
11	Cab Heater/Blowers	O/L	QK	
12	All Cab Signal Lamps Panel 'A'	O/L	DR	

## Status of RDSO modifications

LOCO NO: \_ W833

Sn	Modification No. Description		
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	locomotives.	ØK/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	three phase locomotives to improve reliability	OK/NOT OK
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	OK/NOT OK
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	OK/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Qk/Not Ok
7	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives	OK/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Ok/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interiocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Qk/Not Ok
2.	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
3	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
4	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok
5	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
6	1101.0 Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
7	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Øk/Not Ok
	Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	QK/Not Ok
	7.60. 0 Bt 07.12.17	The state of the s	Ok/Not Ok
	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) reseting scheme of 3 phase electric locomotives.	Ok/Not Ok

Signature of JE/SSE/ECS

Loco No.: 41833

#### PLW/PATIALA

#### PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.	For Faivelay	60 sec. (Max.)	
	Record pressure Build up time (8.0 kg/cm2)	For Knorr	120 sec (Max)	115 sec
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.60
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.50 Kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.50 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA c	ock by Key (KABA Key	)
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	OK
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.45 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 40
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-28 Sec
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-26 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.5 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.5 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10.05
		MM3882 &	kg/cm2 Opens at	Kg/cm2
		MM3946	8±0.20 kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.45 minute

#### PLW/PATIALA

Loco No.: 41833

2.7	Check unloader v	alve operation time				Approx. 12 Sec.	10 sec
2.8		Valve functioning (	124 & 87)			Operates when	
						Compressor	
						starts	
2.9		ry safety valve settir	ng (10/1). Run CP		test spec.	11.50±0.35	11.6 Kg/cm2
	Direct by BLCP.				& MM3946	kg/cm2	
2.10		ery safety valve setti	ng (10/2). Run CP		est spec.	11.50±0.35	11.5 Kg/cm2
	direct by BLCP				& MM3946	kg/cm2	
2.11		compressors and en	3		test spec.		
		pressure 12 kg/cm2	less than opening	MM3882	& MM3946		
0.10	pressure.	L (OFF)	D. '. MD.D.	OLVA/C I	.1	F 0 0 10L / 0	F 0 K 1 0
2.12		•	r, Drain MR Pressure		ck sheet no.	5.0±0.10kg/cm2	5.0 Kg/cm2
		I" Main Reservoir, St		F60.812 Ve	ersion 2		
2.13	FP pressure:	ssure of Duplex Che	LK Valve 92F.	CLW/s cho	ck sheet no.	6.0±0.20kg/cm2	6.0 Kg/cm2
2.13		Test point 107F FPTI	P. Onon isolato cock	F60.812 Ve		0.0±0.20kg/cm2	0.0 kg/cm2
	136F. Check pres		r. Open isolate cock	100.012 V	5131011 2		
3.0	Air Dryer Opera						
3.1		90 of 2 <sup>nd</sup> MR to star	t Compressor Jeave			Tower to change	ok
3.1		eck Air Dryer Towers				i) Every minute	OK .
	openior rest on	Solv All Digor Towors	to onarige.			(FTIL & SIL)	
						ii)every two	
						minute (KBIL)	
3.2	Check Purge Air S	at Compressor stops					
3.3		of humidity indicator				Blue	Blue
4.0	Main Reservoir L						
4.1	,	,	neck MR Pressure air	D&M test spec. MM3882 & MM3946		Should be less	0.65
	leakage from bot	h cabs.				than 1 kg/cm2 in	Kg/cm2 in
						15 minutes	15 minutes
4.2	Check BP Air leak	age		D&M test spec.		0.15 kg/cm2 in 5	0.05
				MM3882 & MM3946		minutes	Kg/cm2 in 5
F 0	Dualis Test (A.d	lamatia Dualea ana	\				minutes
5.0	•	tomatic Brake ope	•				
5.1	Record Brake Pip	e & Brake Cylinder p	ressure at Each Step				
	Check proportion	nality of Auto Brake s	evstem	CLW's check sheet no. F60.812 Version 2 BC (WAG-9 & WAP-7)			
	orical proportion	idility of Auto Brake s	ystem				
	Auto controller p	osition				BC (WAP-5)	
	Auto controller p	Osition		Kg/cm2	O WAI -1)	Kg/cm2	
		T		Rg/ CITIZ	T	Ng/ CITIZ	
	DD D 1 / . 0		Value	Do14	V-l	Docult	
		BP Pressure kg/cr	IIZ	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Initial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40 Kg/ cm2	0.75±0.15	-
	Full service	3.35±0.2	3.3 Kg/cm2	2.50±0.1	_	5.15±0.30	-
					2.5 Kg/ cm2		
	Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1	2.5 Kg/ cm2	5.15±0.30	-
1	1			1		1	

#### PLW/PATIALA

Loco No.: 41833

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure Automatic Brake Controller handle is Full Service from Run	D&M test spec.	8±2 sec.	7 Sec
5.3	Operate Asst. Driver Emergency Cock,	MM3882 & MM3946 D&M test spec. MM3882 & MM3946	BP pressure falls to Below 25 kg/cm2	OK
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2	4.15 Kg/cm2
			Opens at BP 2.85- 3.15 kg/cm2	3.05 Kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed	D&M test spec. MM3882 & MM3946		
	WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2 WAG9 - BC 2.50 ± 0.1 kg/cm2		4±1 sec. 7.5±1.5 sec. <b>21±3 sec</b> .	20 sec
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time	D&M test spec. MM3882 & MM3946		
	WAP7 WAG9		17.5±2.5 sec. <b>52±7.5 sec</b> .	54 sec.
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	79 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake.  * Allow The MR pressure to build up to maximum stipulated limit.  * Close brake pipe angle cock and charge brake pipe	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.7 Kg/cm2
	to 5 kg/cm2 by A (Automatic brake controlling) at run position.  * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe.  The test shall be carried out with all the compressors in working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.55 Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (Max.)	7 Sec

#### PLW/PATIALA

Loco No.: 41833

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	11 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now De- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is 12 kg/sq cm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 14.06.2022		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			61 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

		ELECROMAX	4	29162026	wiper motor	18
	·	KNORR	2	29180016	Breakup Valve	17
-EO-2942	23-05-EO-2936A,23-05-EO-2942	KNORR	2	29180016	Contoller	16
	23-03-CO-2891	KNORR	1	29180016	Air Brake Panel	15 /
	BWJS-106490	ELGI	1	25513000	Auxillary Compresssor	14 /
	LD2-04-8509-23	TRIDENT	1	29162051	Air Dryer	13 /
EWLS 920275B	EWLS 920264A, EWLS	ELGI	2	29511008	Air Compressor	12
		Air Brake Components	Air Br			
	e e					
,	52333-2023,52338-2023	CG POWER & INDUSTRIAL	2	29750052	Surge Arrester	11
	ES/23/06/0046	RIVER ENG	Е	29700073	Earth Switch	10
	TEPL/RHF/009/2023/295	TELEMA	1	29650033	Harmonic Filter	9
	08-22,10-22	IEC	9	29810139	Insulator Roof line	000
A/539	AALN/08/2023/111/VCBA/539	AUTOMETER ALLIANCE	1	25712202	Vacuum Circuit Breaker	7
	2023-N, 652808	SADTEM	1	2965028	Voltage Transformer	6
	EIPL-4492-05/23	EIPL	1	29731021	High Voltage Bushing	5
	e e e e e e e e e e e e e e e e e e e	MIDDLE ROOF COMPONENT	IDDLE RO	M		
	03/23,11/22	IEC	8	29810127	Insulator Panto Mtg.	4
	2023			29480103		ω
/F/329/06/	VFO/F/334/06/2023.VFO/F/329/06/	TRIDENT	2		Air Intake filter Assly	
	12994-06/23	CONTRANSYS	2	29880026	Servo.motor	2
9-09/23	H23-1375,AUG-23,11789-09/23	FAIVELEY, CONTANSYS		29880026		1
			2	29880014(HR),	Pantograph	
	Sr. no.	Supplier	QPL /Nos	PL NO.	Description	S.No.
		<b>ROOF COMPONENT CAB 1 &amp; 2</b>	OF COME	RC		
ŝ		41833				

SSE/TESTING

SE/ABS

		LO	CO NO-41833/WCR/TKD	
.No.	Equipment	PL No.	Equipment Serial No.	Make
1	Complete Shell Assembly with piping	29171027	SR NO - 17/44 , 08/23	ECBT
2	Side Buffer Assly Both Side Cab I	29130050	LP= 16 <sub>2</sub> 7- 06/23 , ALP=187-06/23	FASP (BOTH)
3	Side Buffer Assly Both Side Cab II	29130030	LP=161-06/23 , ALP= 195 ,06/23	FASP (BOTH)
4	CBC Cab I & II	29130037	045-03/23 , F37- 06/23	RIL ( BOTH)
5	Hand Brake		03/23- 15606	Modified Mechwel
6	Set of Secondry Helical Spring	29045034 29041041		GBD
7	Battery Boxes (both side)	29680013	08-03/23 , 16-05/23	DR STEEL ( BOTH)
8	Traction Bar Bogie I		8548-05/23	KM
9	Traction Bar Bogie II		8571 - 05/23	KM
10	Centre Pivot Housing in Shell Bogie I side	20100057	6251- 07/23	TEW
11	Centre Pivot Housing in Shell Bogie II	29100057	6229- 07/23	TEW
12	Elastic Ring in Front in Shell Bogie I side		601- 03/23	AVADH
13	Elastic Ring in Front in Shell Bogie II side	29100010	597- 03/23	AVADH
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	HVE-65-09-23-3108 , 2023	HIGH VOLT
15	Oil Cooling Radiator I	29470031	07/23, P0623RC1259	FINE AUTOMOTIVE LTD
16	Oil Cooling Radiator II	254/0031	07/23, P0623RC1237	FINE AUTOMOTIVE LTD
17	Main Compressor I with Motor	20511009	EWLS920275 , 03/23	ELGI
18	Main Compressor II with Motor	29511008	EWLS920264, 03/23	ELGI
19	Transformer Oil Cooling Pump I	,	D4503, 05/23	SAMAL HARAND
20	Transformer Oil Cooling Pump II		D4529, 05/23	SAMAL HARAND
21	Oil Cooling Blower OCB I		PDS2307031, LHP1001360470	PD STEELS LTD
22	Oil Cooling Blower OCB II	29470043	PDS2308055 , LHP1001390914	PD STEELS LTD
23	TM Blower I		06/23 , AC-54308, CGLWCAM23270	ACCEL
24	TM Blower II	29440075	06/23 , AC-54314 , CGLWDAM2998	ACCEL
25	Machine Room Blower I		06/23, AC-54470, CGLVJAM13239	ACCEL
26	Machine Room Blower II	29440105	06/23, AC-54495, CGLWAAM15283	ACCEL
27	Machine Room Scavenging Blower I	. ,	D25-6007, CF25/D6368, 07/23	SAMAL HARAND PVT LTD
28	Machine Room Scavenging Blower II	29440129	D25-6005 , CF25/D6366, 07/23	SAMAL HARAND PVT LTD
29	TM Scavenging Blower Motor I		ST-23.07.284, 07/23	G.T.R CO(P) LTD
	TM Scavenging Blower Motor II	29440117	ST-23.07.236, 07/23	G.T.R CO(P) LTD
30	Traction Convertor I		STB9P0202-6KTCC1	
31			STB9P0203-6KTCC2	
32	Traction Convertor II		05/23, MO-VCU1-6K-23-083	
33	Vehicle Control Unit I	29741075	05/23, MO-VCU2-6K-23-083	SIEMENS
34	Vehicle Control Unit II		09/22, STB9P0202-ACU1	
35	Aux. Converter Box I (BUR 1)		09/22, STB9P0203-ACU2	
36	Aux. Converter Box 2 (BUR 2 + 3)		08/23, CGHB1G2380569	C.G.L
37	Axillary Control Cubical HB-1	29171180		C.G.L
38	Axillary Control Cubical HB-2	29171192	06/23, CGHB2G2360035	KAYSONS ELECTRICAL PVT LT
39	Complete Control Cubicle SB-1	29171209	06/23, SB1/357/06/2023	HIND RECTIFIERS LTD
40	Complete Control Cubicle SB-2	29171210	SB2/2023/F/0655/850	HIND RECTIFIERS LID
41	Filter Cubical (FB) (COMPLETE FILTER CUBICLES)	29480140	FB/2023/H/0590/518	HIND RECTIFIERS LTD
42	Driver Seats	29171131	02/23- 234, 03/23- 482, 470, 500	EEE
43	Transformer oil steel pipes	29230044	VEW - VIKRANT ENG. WORKS	
44	Conservator Tank Breather	29731057	23-4582, 23-4580	YOGYA ENTERPRISES LTD
45	Ballast Assembly ( only for WAG-9)	29170163	07,06,07,01	AKM
46	Head Light		6,99,680	ESBEE CORP
47	Ducting Assembly	29470067		TARGET
48	Filter Frame Assly.	29480103	VFM/P/336/06/2023, VFM/P/337/06/2023	TRIDENT

NAME STATISH KUMAR

NAME SHUBHAM SHARM

NAME Amil LA



Issue No.: 05 Effective Date: July-2023

LOCO NO: 41833

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

#### पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

Rly: WCR

TKD Shed:

. No.	ITEM TO BE CHECKED	Specified Value	Obs	erved		1e
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		OK	5	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.	ок		UK		
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		OK		
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		OK	_	
1.5	Check proper Fitment of FB panel on its position.	OK		OK		
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		OK		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BJR-1, 2 & 3).	OK		OK		
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		OK.		
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK	19	OK		
.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		OK	- 1	1
.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		OK		46
.12	Check proper fitment of Bogie Body Safety Chains.	OK		OK		
.13	Check proper fitment of Cow catcher.	OK		OK		
.14	Check coolant level in SR 1 & 2 Expansion Tank.	ОК		OK		
.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		OK	A months	
.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		OK		
1.17	Check proper fitment of both battery box.	OK		OK		
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		OK		
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK		OK		
	Secondary Vertical and Lateral Clearance on leveled track at the time of		CAB		-	AB-2
1.20	Loco Dispatch.	Vertical-Std :35-	LP	ALP	LP	A
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	60 mm	576	56	51	5
		50 mm	54	44	54	1 3
	Buffer height: Range (1090, +15,-5)	1085-1105		L/	S	R/
	Drg No IB031-02002.	mm	FRONT	109	4	100
	DIG NO IDOUT OROUN		REAR	000		10
121	24.42	641 mm	1	L/		R/
	Buffer Length: Range (641 mm + 3 to 10 mm with buffer race)	04 J. IIIIII		of participation of		
.22	Drg No-SK.DL-3430.		FRONT	64		64
			REAR	64		64
	12	114 mm + 5		L/	'S	R/
	Height of Rail Guard. (114 mm + 5 mm,-12 mm).			1 4 4		
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).  As per RDSO Pamphlet Important Bogie Clearances of Electric	mm,-12 mm	FRONT	11	2	
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).  As per RDSO Pamphlet Important Bogie Clearances of Electric  Locomotives.	mm,-12 mm	FRONT	110	2	11 5
1.23	As per RDSO Pamphlet Important Bogie Clearances of Electric	mm,-12 mm		110	2 96	115

(Signature of SSE/Elect. Loco (UF))

(Signature of SSEPE/Elect Loco)

NAMESHUBHAM SHARMA

DATE 30/09/23

(Signature of JE/UF)

NAME Amit Cumas

#### PLW/PTA

### ELECTRIC LOCO HISTORY SHEET (ECS)

**ELECTRIC LOCO NO: 41833** LIST OF ITEMS FITTED BY ECS

RLY: WCR

SHED: TKD

PROPULSION SYSTEM: SIEMENS

SN		ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER
1	LED Based Flasher Light Cab I & II	1881.88	25622	25618	
2	Led Marker Light Cab I & II	29612925	2 1 10 10 E 10 E 10 E 10 E 10 E	3/18477/18420	MATSUSHI P.T. ALTOS
3	Cab Heater Cab I & II	29170011	1290	1282	200
4	Crew Fan Cab I & II	29470080	1	9/3633/3343	TOPGRIP
5	Master Controller Cab I	201,0000		687	SHIVAM
6	Master Controller Cab II	29860015		581	WOAMA
7	Complete Panel A Cab I & II	29178265	368A	368B	
8	Complete Panel C Cab I & II	29170539	3007	3000	HIND
9	Complete Panel D Cab I & II	29178265	356A	356B	חוואט
10	Complete Cubicle- F Panel Cab I & II	29178162	CF-2023G0590-597B	CF-2023G0590-597A	A S S
11	Speed Ind.& Rec. System	29200040	11 2 1 2	/4360	HIND
12	Battery (Ni- Cd)	29680025	The state of the s	01	LAXVEN
	Set of Harnessed Cable Complete	29600420			SAFT URJA PPS
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	29500047	TGIC/CLW/1093/APRIL-23	TGIC/CLW/1096/APRIL-23	INTERNATIONAL TOPGRIP
15	Transformer Oil Pressure Sensor (Cab-2)	29300047	TGIC/CLW/1094/APRIL-23	TGIC/CLW/1088/APRIL-23	INSTRUMENT
1	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)	29500035	BG/TFP/44	10 NeA	
	Transformer Oil Temperature Sensor (Cab-2)	29300033	BG/TFP/44	168-FFR-23	BG INDUSTRIFS
	Roof mounted Air Conditioner I		23F2	12.	
9 1	Roof mounted Air Conditioner II	298,11028	23F2		SIDWAL

SSE/ECS

JE/ECS

### PATIALA LOCOMOTIVE WORKS, PATIALA

#### **Loco No.** 41833

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-266	SIMPLEX	20105146	101629	As per PO/IRS
REAR	SL-269	SIMPLEX	29105146	101629	conditions

#### 2. Hydraulic Dampers PL No. 29040012, Make: GB

#### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	24682	24867	24675	24679	25108	25092
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/23- 2126	CNC/23- 2316	CNC/23- 2125	CNC/23- 2136	CNC/23- 2614	CNC/23- 2615
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/23- 2118	CNC/23- 2317	CNC/23- 2122	CNC/23- 2140	CNC/23- 2374	CNC/23- 2595
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	SKF	FAG	FAG	SKF	SKF
End	PO NO. & dt	00091	02898	00091	00091	02898	02898
Free	MAKE	FAG	SKF	FAG	FAG	SKF	SKF
End	PO NO. & dt	00091	02898	00091	00091	02898	02898

#### 6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	866	946	905	956	806	784
FREE END	871	882	873	897	818	893

#### **Loco No.** 41833

#### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.3	1092.3	1092.4	1092.3	1092.4	1092.4
DIA IN mm FE	1092.3	1092.3	1092.4	1092.3	1092.4	1092.4
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

#### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. (PL 29100288)	MAKE	SIMPLEX	KPE	KM	KM	KPE	KPE
G.E. BRG PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BRG PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

#### 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KP	KP	KP	KP	KP	KP
BACKLASH (0.254 – 0.458mm)	0.380	0.305	0.370	0.370	0.300	0.310

#### 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	16.03	18.34	18.15	18.09	17.16	16.52
LEFT SIDE	17.01	16.93	15.75	18.06	16.92	17.63

#### 11. TRACTION MOTOR: (PL No. 29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	HIRECT	600780	2102010685/011
2	HIRECT	600780	2102010685/012
3	HIRECT	600780	2102010685/015
4	HIRECT	600780	2102010685/009
5	HIRECT	600780	2102010685/028
6	HIRECT	600780	2102010685/027

JE/ Bogie Shop

#### TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- 8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646  ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.