भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41843

TYPE: WAG9HC

RAILWAY SHED: WR/VTA

PROPULSION SYSTEM: MEDHA

DATE OF DISPATCH: 29.11.2023

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41843

RAILWAY/SHED: WR/VTA

DOD: Nov-2023

INDEX

SN	PARA	ACTIVITIES	PAGE NO.		
	Testing & Commissioning (ECS)				
1.	1.0	Continuity Test of the cables			
	1.1	Continuity Test of Traction Circuit Cables			
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4		
	1.3	Continuity Test of Battery Circuit Cables			
	1.4	Continuity Test of Screened Control Circuit Cables			
2.	2.0	Low Tension test			
	2.1	Measurement of resistor in OHMS (Ω)	5-6		
	2.2	Check Points	3-0		
	2.3	Low Tension Test Battery Circuits (without control electronics)			
3	3.0	Downloading of Software			
	3.1	Check Points			
	3.2	Download Software	7-10		
	3.3	Analogue Signal Checking			
	3.4	Functional test in simulation mode			
4	4.0	Sensor test & convertor test			
	4.1	Test wiring Transformer Circuits – Polarity Test			
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)			
	4.3	Primary Voltage Transformer			
	4.4	Minimum voltage relay (Pos. 86)	11-16		
	4.5	Maximum current relay (Pos. 78)	11-10		
	4.6	Test current sensors			
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)			
	4.8	Verification of Converter Protection Circuits (Hardware limits)			
	4.9	Sequence of BUR contactors			
5.	5.0	Commissioning with High Voltage			
	5.1	Check List			
	5.2	Safety test main circuit breaker			
	5.3	Auxiliary Converter Commissioning			
	5.3.1	Running test of 3 ph. auxiliary equipments			
	5.3.2	Performance of Auxiliary Converters			
	5.3.3	Performance of BURs when one BUR goes out	16-25		
	5.4	Auxiliary circuit 415/110			
	5.5	Hotel Load Circuit			
	5.6	Traction Converter Commissioning			
	5.7	Test protective shutdown SR			
	5.8	Test Harmonic Filter			
	5.9	Test important components of the locomotive			
6.	6.0	Running Trial of the locomotive	25-26		
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27		
8.	8.0	Status of RDSO modifications	28		
9.	1-10	Pneumatic Test Parameters	29 - 32		
10.		Loco Check Sheet(LAS)	33		
11. 12.	-	Component History (LAS,ECS,ABS)	34-36		
12.	-	Component History & Testing Parameter (Bogie Shop) Warranty Conditions as per Tenders	37 - 38 39 -41		
13	<u>-</u>	warranty Conditions as per renders	39 -4 1		

133ue NO.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843
1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	800 M/
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	ok	100 ΜΩ	Fooma
Filter Cubicle	Earthing Choke	OK	100 ΜΩ	800MA
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	Gooma
Transformer	Power Converter 1	ok	100 ΜΩ	800 ma
Transformer	Power Converter 2	OK	100 ΜΩ	900mN
Power Converter 1	TM1, TM2, TM3	OK	$100~{ m M}\Omega$	800 m(1
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	900 m/l
Earth	Power Converter 1	OK	100 MΩ	800 m()
Earth	Power Converter 2	OK	100 ΜΩ	800 m

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/	Prescribed	Mossing
		Not OK)	Megger Value (min)	Measured Megger Value
Transformer	BUR1	6)2		MA
Transformer	BUR2	62	100 MΩ 100 MΩ	2000
Transformer	BUR3	ne	100 ΜΩ	2000
Earth	BUR1	8/2	100 ΜΩ	1500
Earth	BUR2	DL	100 ΜΩ	1500
Earth	BUR3	800	100 ΜΩ	1500
BUR1	HB1	0/	100 ΜΩ	1500
BUR2	HB2	00	100 ΜΩ	1500
HB1	HB2	De	100 ΜΩ	1500
HB1	TM Blower 1	De	100 ΜΩ	200
HB1	TM Scavenge Blower 1	De.	100 ΜΩ	150
HB1	Oil Cooling Unit 1	DI	100 ΜΩ	200
HB1	Compressor 1	ore	100 ΜΩ	200
HB1	TFP Oil Pump 1	ae	100 MΩ	200
HB1	Converter Coolant Pump 1	or_	100 ΜΩ	200
HB1	MR Blower 1	De	100 ΜΩ	200
HB1	MR Scavenge Blower 1	or or	100 ΜΩ	200
HB1	Cab1	De	100 MΩ	200
Cab1	Cab Heater 1	2	100 ΜΩ	200
HB2	TM Blower 2	ne	100 ΜΩ	260
HB2	TM Scavenge Blower 2	na	100 ΜΩ	200
HB2	Oil Cooling Unit 2	24	100 ΜΩ	200
HB2	Compressor 2	OL	100 ΜΩ	200
HB2	TFP Oil Pump 2	De	100 ΜΩ	200
HB2	Converter Coolant Pump 2	OL.	100 ΜΩ	100
HB2	MR Blower 2	De	100 ΜΩ	100
HB2	MR Scavenge Blower 2	OK	100 ΜΩ	200
HB2	Cab2	00	100 ΜΩ	150
Cab2	Cab Heater 2	o le	100 ΜΩ	150

SSUE NO.UZ

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/843

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	OK
Battery (Wire no. 2052)	Connector 50.X7-2		ok,
SB2 (Wire no 2050)	Connector 50.X7-3		2K

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value &_ MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value 65 MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	∂K,
Memotel circuit of cab1 &2	10A	24
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	OK.
Brake controller cab-1 & 2	06F, 06G	Ou

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC Page : 4 of 27

Master controller cab-1 &2	08C, 08D	014
TE/BE meter bogie-1 & 2	08E, 08F	°K,
Terminal fault indication cab-1 & 2	09F	eK.
Brake pipe pressure actual BE electric	06H	
Primary current sensors	12B, 12F	9 K
Harmonic filter current sensors	12B, 12F	ەلا ا
Auxiliary current sensors	12B, 12F	OK
the state of the s		≥K
Oil circuit transformer bogie 1	12E, 12I	ak .
Magnetization current	12C, 12G	9K
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	ગ્
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	Q _K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	٥K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	٥K
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	QK.
10K Ω ± ± 10%) UIC line	13B	OK
Connection FLG1-Box TB	13A	ok_

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3947
Resister to maximum current relay.	1 Ω ± 10%	12
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.3.72
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.25
Between wire 6 & 7	0.2 Ω	0.25
Between wire 5 & 7	0.4 Ω	0.55
For train bus, line U13A to earthing.	10 k Ω ± 10%	10.0KJZ
For train bus, line U13B to earthing.	10 k Ω ± 10%	10.0KS
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	20070
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0,281
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.265
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.2952
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.285
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ ± 10%	2.2KN
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.69KM
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.8KV
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1-8KU
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	3905
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	MA
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	10,5

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41863 Note:

Type of Locomotive: WAP-7/WAG-9HC

Page : 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cheeped on
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	charted on

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	chalped ox
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	OK.
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	°K
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	9K
Test control Pneumatic devices	Sheets of Group 06	a _K
Test lighting control	Sheets of Group 07	٥K
Pretest speedometer	Sheets of Group 10	વ
Pretest vigilance control and fire system	Sheets of Group 11	OK
Power supply train bus	Sheets of Group 13	OK

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.0 Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	16y
Check that all the fibre optic cables are correctly connected to the bus stations.	765
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yey
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	res

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	velston.2
Traction converter-2 software version:	velson.2
Auxiliary converter-1 software version:	Velston 2
Auxiliary converter-2 software version:	vession 2
Auxiliary converter-3 software version:	version 2
Vehicle control unit -1 software version:	velscon a
Vehicle control unit -2 software version:	volscon 2

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	or
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	10-7,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100-1
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	244.

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41813

Type of Locomotive: WAP-7/WAG-9HC

Page : 8 of 27

TE/DE (DE	I Dr. Cd	· · · · · · · · · · · · · · · · · · ·	
TE/BE at 'BE maximal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	100-1-
TE/BE at 'BE Minimal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257,
TE/BE at '1/3' position in TE and BE mode in both cab.	LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	74.1.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0° C to 40° C	20°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	19°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	19°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature of the 40°C	20°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	20.5 %
	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	2000

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through	VCB must open.	cheeredou
emergency stop switch 244	Panto must lower.	
Shut Down through cab activation	VCB must open.	
switch to OFF position	Panto must lower.	cheeredon
Converter and filter contactor	FB contactor 8.41 is closed.	
operation with both Power	By moving reverser handle:	
Converters during Start Up.	 Converter pre-charging contactor 	
	12.3 must close after few seconds.	\
	• Converter contactor 12.4 must close.	charkedon
	Converter re-charging contactor	P
	12.3 must opens.	
	By increasing TE/BE throttle:	·
	• FB contactor 8.41 must open.	
	FB contactor 8.2 must close.	
	• FB contactor 8.1 must close.	
Converter and filter contactor		
operation with both Power Converters during Shut Down.	, and the desired in the second	
converters during shut Down.	VCB must open. Panto must lower.	
	• Converter contactor 12.4 must open.	
	• FB contactor 8.1 must open.	o charked on
	• FB contactors 8.41 must close.	
	• FB contactor 8.2 must remain closed.	
	de la constant de la	

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC Page : 10 of 27

Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco. • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE	choetodus
	FB contactor 8.1 closes.FB contactor 8.2 remains open.	
Test fire system. Create a smaller in	By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault	ochaexed vu
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.	o charted up
Time, date & loco number	Ensure correct date time and Loco number	che

ISSUE NO.UZ

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/843

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.0470	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.0400	OK.
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.0570	ملا
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.0518	ek e
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.90P 5-60 Rms	°K.
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	$9.12V_{p}$, $6.45V_{RMS}$ and same polarity.	9.12VP 6.44VRMS	Q.

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141 V_p$ / $100 V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$, $41.5V_{RMS}$ and opposite polarity.	58-7VP] 41.4VR19S	OK
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	1548	OK

11. Overes

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25XV	2504-
SLG2_G 87-XUPrim	25 kV	250%	2874	250.11

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	MKV	1701/
SLG2 G 87-XUPrim	17 kV	170%	1712V	17041

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KV	3001
SLG2_G 87-XUPrim	30 kV	300%	30KV	3004

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

55ue NO.UZ

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adju	stod to some COO
Activate loco in cooling mode. Check Power supply of 48V to	The state of the s
minimum voltage relay. Disconnect primary voltage	(Yes/No)
transformer (wire no. 1511 and 1512) from load resistor (Pos	
/4.2) and connect variac to wire no. 1501 and 1502 Supply	
200 v _{RMS} through variac. In this case; Minimum voltage relay	ĺ
(Pos. 86) picks up	
Try to activate the cab in driving mode:	(Yes/No)
Contactor 218 do not close; the control	
electronics is not be working.	
Turn off the variac :	, (Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	,
	-
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V _{RMS} through variac to wire no. 1501	[[[[]
& 1502; Close the VCB; Interrupt the supply	
voltage	·
The VCB goes off after 2 second time delay.	
Again supply 200V _{RMS} through variac to wire no.	1 (250/10)
1501 & 1502; Decrease the supply voltage below	L (Ye s/No)
140V _{RMS} ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (Pos. 78)

4.5 Waximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transformation (including the resistor at Pos. 6.11); Put loco in simulation contact 136.3; Close VCB; supply 3.6A _{RMS} at the open maximum current relay Pos. 78 for correct over current values.	lation for driving mode; Open $R_3 - R_4$
VCB opens with Priority 1 fault message on display.	L(Yes/No)
Keep contact R_3 – R_4 of 136.3 closed; Close VCB; Tune the re/9.9 A_p at the open wire 1521;	esistor 78.1 for the current of 7.0A _{RMS}
VCB opens with Priority 1 fault message on display.	((Yes/No)

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	I B	
	Jescription of the test	Prescribed value	Set/Measured
Primary return current	Activate cab in driving mode supply		value
sensor (Test-1,Pos.6.2/1	10A. Measure the current through	(Variation allowed	
& 6.2/2)	diagnostic tool or measuring print.	is	
	magnostic toor or measuring print.	± 10%)	
	Supply 90mA _{DC} to the test winding of		
	sensor through connector 415.AA/1or		$\widehat{}$
	2 pin no. 7(+) & 8(-)		
Primary return current			
sensor (Test-2, Pos.6.2/1	Supply 207m A + 11 + 1 + 1		
& 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or	. —	298mB
	2 pin no. 7(+) & 8(-)		~70 mb
	π		
		,	
Auxiliary winding	Supply 90mA _{DC} to the test winding of		
current sensor (Pos. 42.3/1 & 42.3/2)	sensor through connector 415.AC/1or		-
42.3/1 & 42.3/2)	2 pin no. 7(+) & 8(-)		
	Supply 333mA _{DC} to the test winding of		
	sensor through connector 415.AC/1		336mA
	or 2 pin no. 7(+) & 8(-)		230 MH
Harmonic filter	Supply 90mA _{DC} to the test winding of		
current sensors	sensor through connector 415.AE/1or		-
(Pos.8.5/1 &8.5/2)	2 pin no. 7(+) & 8(-)		
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or		_
,	2 pin no. 7(+) & 8(-)		347mm
	= pin no. / (/ \alpha \dol \dol \)		
	Switch on hotel load. Supply 90mA _{DC}	012	
	to the test winding of sensor through	MA	MA
Hotel load current	connector 415.AG/1or 2 pin no. 7(+) &		
sensors (Pos. 33/1 &	8(-)		·
33/2)	Supply 1242mA _{DC} to the test winding		
	of sensor through connector	NA	NA
	415.AG/1or 2 pin no. 7(+) & 8(-)		

Ssue No.UZ

Effective Date: March 2021

Doc.No.F/TRS/01

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

(Ref: WI/TRS/10)

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	on
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	o.k

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	open	clos	open	closs	open	, -	Ouse	
BUR1 off	close	open	108		open	1	Sper		a per
BUR2 off	eber	nhen	F	LUZ.	clos	Closs	Open	open	LOSP
BUR3 off	open	close					<u> </u>	-	closs closs
BUR3 off	open	close	open	close	Class	close	open	open	

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	70,
No rubbish in machine room, on the roof, under the loco.	Yey
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Ky
Roof to roof earthing and roof to cab earthing done) X
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Per
All the bogie body connection and earthing connection done correctly.	Yes .
Pulse generator (Pos. 94.1) connection done correctly.	K
All the oil cocks of the gate valve of the transformer in open condition.) Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	/cx

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Parform the fallowing safety test of main circuit breaker through both the cabs of the lacomotive:

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41863

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Name of the test	Description of the tool		T
	Description of the test	Expected result	Monitored result
Emergency stop	Raise panto in cooling mode. Put	VCB must open. Panto	1.0
in cooling mode	the brake controller into RUN position. Close the VCB.	must lower. Emergency	cheered on
	Push emergency stop button 244.	brake will be applied.	
Emergency stop	Raise panto in driving	VCB must open.	0 10
in driving mode	mode in. Put the brake	Panto must	Choeked on
	controller into RUN	lower.	
	position. Close the VCB.	Emergency	
	Push emergency stop	brake will be	
	button 244.	applied.	
Under voltage	Raise panto in cooling	VCB must open.	0 (.
protection in	mode. Close the VCB.		cheeredor
cooling mode	Switch off the supply of		
	catenary by isolator		
Under voltage	Raise panto in driving	VCB must open with	2 \$ 00 5 -1 00
protection in	mode. Close the VCB.	diagnostic message that	cheeredou
driving mode	Switch off the supply of	catenary voltage out of limits	
	catenary by isolator	IIIIIII	
Shut down in	Raise panto in cooling mode.	VCB must open.	chargedon
cooling mode.	Close the VCB. Bring the BL- key in O position.	Panto must	Chiefeston
		lower.	
Shutdown in	Raise panto in driving mode. Close	VCB must open.	cheered on
driving mode	the VCB. Bring the BL- key in O position.	Panto must	
arrying mode	position.	lower.	
nterlocking	Paiso panto in ecalina	1/65	
oantograph-	Raise panto in cooling mode. Close the VCB.	VCB must open.	cheekedur
/CB in cooling	Lower the pantograph		·
node	by ZPT		
nterlocking	Raise panto in driving mode. Close	VCB must open.	Chaltegue
oantograph-	the VCB. Lower the pantograph by ZPT	•	Churched of
VCB in driving	<u></u>		
mode			÷

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	8.1	11.0
Oil pump transformer 2	9.8 amps	9.1	12.3
Coolant pump converter 1	19.6 amps	3.4	5-6
Coolant pump converter 2	19.6 amps	3.3	5-4
Oil cooling blower unit 1	40.0 amps	26.0	125.0
Oil cooling blower unit 2	40.0 amps	25.0	ه مدا
Traction motor blower 1	34.0 amps	29.0	169.0
Traction motor blower 2	34.0 amps	29.3	160.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.8	200
Sc. Blower to Traction motor blower 1	6.0 amps	5.0	20.0
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	27.3	128.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.0	125.0

350e NO.02

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/843

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	1008V	705
	DC link voltage of BUR1	60% (10%=100V)	636V	Yen
BURI 7303 XUIZI	DC link current of BUR1	0% (10%=50A)	1 Bout	400

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10101	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637 V	Yty .
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amp	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Pomp	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	1200	Hey
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110V	709

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10124	Yes
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637V	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Ye,
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21 Amp	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	11 Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1102	Yes

* Readings are dependent upon charging condition of the battery.

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery C charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4,2	18.0
Machine room blower 2	15.0 amps*	4:5	21.0
Sc. Blower to MR blower 1	1.3 amps	1.1	2-6
Sc. Blower to MR blower 2	1.3 amps	1.2	2.7
Ventilator cab heater 1	1.1 amps	1.2	1.5
Ventilator cab heater 2	1.1 amps	1.0	1.5
Cab heater 1	4.8 amps	4.9	5.0
Cab heater 2 * For indigenous MR blowers	4.8 amps	4.9	2.3

" For indigenous MR blowers.

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Convertor Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function		<u> </u>
lest Function	Results desired	Result obtained
Measurement of charging and charging of DC Link of Converter 1 Measurement of	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	charted ou
discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	choeked ve
Earth fault detection on positive potential of DC Link of Converter 1 Earth fault detection on	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Cherod &
negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	charged on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Chletost in
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Cheekad on
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	CRILKED VR

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained			
		Result obtained			
Measurement of	Traction converter manufacturer to declare the successful operation and	chalted of			
charging and charging of DC Link of Converter	demonstrate the same to the DMW supervisor.				
2					
Measurement of discharging of DC Link	Traction converter manufacturer to declare the successful operation and	CROCKEROK			
of Converter 2	demonstrate the same to the DMW supervisor.				
Earth fault detection on	Traction converter manufacturer to				
	declare the successful operation and demonstrate the same to the DMW	Chlexeel u			
	supervisor.				
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the	cheeked on			
	supervisor/v				
Earth fault detection on AC part of the traction	Traction converter manufacturer to declare the successful operation and	cheepedux			
circuit of Converter 2.	demonstrate the same to the DMW supervisor.				
	Traction converter manufacturer to declare the successful operation and	Chocked on			
	demonstrate the same to the DMW supervisor.				
converter of	Traction converter manufacturer to declare the successful operation	Chercolox			
	and demonstrate the same to the DMW supervisor.				

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears Disturbance in Converter 1	, chercel or
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	o cheesed on

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	choered on

issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop 	e Clarked or
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	elocked on
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	ac

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark				
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	choeped on				
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	choeted ox				
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	cheeted on				
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Chelled on				
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	Chelked &				

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

		raye: 25 or 27
Marker light	Both front and tail marker light should glow from both the cabs	cherolax
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cheral or
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheked &
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Cheeked of
Illuminated Push button	All illuminated push buttons should glow during the operation	Chelted up
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria:	For contactor 8.1: For contactor 8.2:
	The minimum contact pressure is 54 to 66 Newton.	
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Loger
	Loco charging	loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	chourd on
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	fortal on
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	Rolfed
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Olkad Ou

issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41843

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

Set the speed more than 1.5 kmph and ensure that brakes are released i.e. BC < 1 kg/cm². For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock 4 k1 low pressure of MR (< 5.6 Kg/cm²). With park brake in applied (BP<4.75 Kg/cm²). With automatic train brake applied (BP<4.75 Kg/cm²). With automatic train brake applied (BP<4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. P. Check regenerative braking. Check for BUR Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Auxiliaries should be catered by rest of two BURs. Switch off one BUR. Switch off one BUR. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with another power converter.	6.	Chock vigilance	
locomotive For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. The check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR, Auxiliaries should be catered by rest of two BURs. Switch off one BUR, Auxiliaries should open and converter should get isolated and traction is possible with		Check vigilance	Set the speed more than 1.5 kmph and ensure that
sanding foots switch or TE/BE throttle or BPVG switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. The check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With direct loco brake applied (BP< 4.75 Kg/cm²). With automatic train brake applied (BP< 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With automatic train brake applied (BP< 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Wit			
switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		locomotive	
Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. P. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			
LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With off the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			
Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP<4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. 9. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter isolation test			
vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75 Kg/cm²). • With automatic train brake applied (BP< 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With emergency cock (BP < 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • With automatic train brake applied (BP< 1.75 Kg/cm²). • Roekfold auto			
Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP<4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4			bo not acknowledge the alarm through BPVG or
automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP<4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter isolation test Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			
• VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75 Kg/cm²). • With automatic train brake applied (BP< 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	,		
Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP<4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter isolation test Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			
180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			VCB should be switched off.
acknowledge BPVR and press & release vigilance foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75 Kg/cm²). • With automatic train brake applied (BP< 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Auxiliaries should be catered by rest of two BURs. Switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter isolation test Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			
foot switch. 7. Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). 8. Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			
Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Preduction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should start reducing. In the event of failure of one BUR, rest of the two PURs and the event of failure of one BUR, rest of the two Switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. The Check the power Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			acknowledge BPVR and press & release vigilance
With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Predundancy test at ventilation level 1 & 3 of loco operation Burs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			foot switch.
With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Switch off the 2 BURs; loco should trip in this case. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch off the brake electronics. The Tractive /Braking effort should ramp down, VCB should ramp down, VCB should open and converter should get isolated and traction is possible with	7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).
With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Switch off the 2 BURs; loco should trip in this case. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch off the brake electronics. The Tractive /Braking effort should ramp down, VCB should ramp down, VCB should open and converter should get isolated and traction is possible with			• With park brake in applied condition.
With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. Possible of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. Possible of the telectronics of the two braking.			
8. Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. Should start reducing. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Check the power converter isolation test Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB side of the two BUR in the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter isolation test Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			• With automatic train brake applied (BP<4.75Kg/cm²).
Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. 9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 11. Check the power converter isolation test 12. Check the power should get isolated and traction is possible with 13. Check the power should get isolated and traction is possible with 14. Check the power check of the brake electronics. The Tractive / Braking effort should ramp down, VCB should ramp down,			
should open and BP reduces rapidly. 9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 11. Check the power converter isolation test 12. Check the power should get isolated and traction is possible with 13. Should open and BP reduces rapidly. 14. Bring the TE/BE throttle to BE side. Loco speed should the auxiliaries. For the two BURs, rest of the two BURs, redundancy test at ventilation level 1 & 3 of loco operation 14. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	8.	Check traction interlock	I = I = I
9. Check regenerative braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 11. Check the power converter isolation test 2. Check the generative should start reducing. 12. Check the power converter isolation test 3. Check the power should start reducing. 13. Check the generative should start reducing. 14. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		·	Transit of Braining errore should rathly down, VCB
braking. 10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Check the power converter isolation test Should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			should open and BP reduces rapidly.
10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation 11. Check the power converter isolation test Should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	9.		Bring the TE/BE throttle to BE side. Loco speed 9 Pankalog
redundancy test at ventilation level 1 & 3 of loco operation Check the power converter isolation test The event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	40		should start reducing.
ventilation level 1 & 3 of loco operation Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with	10.		
ventilation level 1 & 3 of loco operation Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		*	BURs can take the load of all the auxiliaries. For this
Switch off the 2 BURs; loco should trip in this case. 11. Check the power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with			
Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	.]	loco operation	Auxiliaries should be catered by rest of two BURs.
converter off the electronics. VCB should open and converter should get isolated and traction is possible with			Switch off the 2 BURs; loco should trip in this case.
converter off the electronics. VCB should open and converter should get isolated and traction is possible with	11.	Check the power	Create disturbance in power converter by switching
should get isolated and traction is possible with			off the electronics. VCB should open and converter
another power converter.		isolation test	should get isolated and traction is possible with
			another power converter.

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4(863

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	<i>ک</i> لات	OK	
2	Marker Red	UK	ck	
3	Marker White	OK	OK	
4	Cab Lights	ov_	OR	
5	Dr Spot Light	OK	de	
6	Asst Dr Spot Light	OK	UK	at con l
7	Flasher Light	OK.	UK	choesed workery o
8	Instrument Lights	OK	OK	
9	Corridor Light	OK	υ _ζ	
10	Cab Fans	OV	Z)K	
11	Cab Heater/Blowers	OK.	OK	
12	All Cab Signal Lamps Panel 'A'	OK	0K	

Status of RDSO modifications

LOCO NO: 41843

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357	Modification in control circuit of Flasher Light and Head	
	Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	three phase locomotives to improve reliability.	OK/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Øk/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6. 	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Øk/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives	OK/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	9K/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Øk/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	OK/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Øk/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	QK/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Øk/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Øk/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Øk/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Øk/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Øk/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Ok/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Øk/Not Ok
21	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09.19	Implementation of push pull scheme.	wk/Not Ok

Signature of JE/SSE/TRS

किंद्र हा। भि

18	17	16	15	14	13	12			11	10	9	∞	7	6	5		4	ω		2	1		S.No.		
wiper motor	Breakup Valve	Contoller	Air Brake Panel	Auxillary Compresssor	Air Dryer	Air Compressor			Surge Arrester	Earth Switch	Harmonic Filter	Insulator Roof line	Vacuum Circuit Breaker	Voltage Transformer	High Voltage Bushing		Insulator Panto Mtg.		Air Intake filter Assly	Servo motor		Pantograph	Description		
29162026	29180016	29180016	29180016	25513000	29162051	29511008			29750052	29700073	29650033	29810139	25712202	2965028	29731021		29810127	29480103		29880026	29880026	29880014(HR),	PL NO.	R	
4	2	2	1	1	1	2	Air I		2	т	1	9	1	1	1	MIDDLE RO	8		2	2		2	QPL /Nos	OOF COME	
ELGI	KNOR	KNOR	KNOR	ELGI	PRAG	ELGI	Air Brake Components		CG POWER & INDUSTRIAL	PPS INTERNATIONAL	DAULAT RAM	MODREN	AUTOMETER ALLIANCE	SADTEM	EIPL	MIDDLE ROOF COMPONENT	IEC		AFI	CONTRANSYS	FAIVELEY, CONTANSYS		Supplier	ROOF COMPONENT CAB 1 & 2	41843
		23-07-FO-2971 A, 23-06-FO-2971 B	23-03-CO-2830	BWJS-106554	3290-04-23	EWAS 920379 A,EWAS 920370 B		Λ.	53053-2023,53057-2023	ES/03/23/00730	23E/RHFG/06/417,05-23	03-23, 03-23	AALN/07/2023/097/VCBN/414	2023-N,652799	4790-07-23		05/23,05/23	AFI/OC/282B/10/2023	AFI/OC/279B/10/23,	11783-09/22	H23-1380,AUG-23,12973-06/23		Sr. no.		
											As Per Po/IRS Collaidolls	Ac no politicas												Warranty	

SSE/TESTING

SSEABS

Loco No.: 41843

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result		
1.0	Auxiliary Air supply system (Pantograph & VCB)					
1.1	Ensure, Air is completely vented from pantograph			0		
	Reservoir (Ensure Panto gauge reading is Zero)					
1.2	Turn On BL Key. Now MCPA starts.	For Faivelay	60 sec. (Max.)			
	Record pressure Build up time (8.0 kg/cm2)	For Knorr	120 sec (Max)	115 sec		
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.60		
		DMTS-014-1, 8 CLW's	-			
		check sheet no.				
		F60.812 Version 2				
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.50 Kg/cm2		
		no. F60.812 Version 2	kg/cm2, closes			
			5.5±0.15 kg/cm2	5.50 Kg/cm2		
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	olating Cocks & KABA co	ock by Key (KABA Key)		
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	OK		
			Rises.			
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK		
	Open Pan -2 isolating Cock		Panto-2 Rises			
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec		
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec		
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.45 kg/cm2		
			Min.	in 5 Min.		
1.11	High Reach Panto emergency test and reset.			ok		
2.0	Main Air Supply System					
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical				
	out all the reservoirs by opening the drain cocks and then	calculation and				
	closed drain cocks. MR air pressure build up time by each	test performed by				
	compressor from 0 to 10 kg/cm2.	Railways.				
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 40		
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.		
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok		
	compressors		both compressors			
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-28 Sec		
	compressors, Check pressure build time of individual					
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-26 Sec		
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.5 Kg/cm2		
		MM3882 &	kg/cm2 Opens at			
		MM3946	5.60±0.15kg/cm2	5.5 Kg/cm2		
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10.05		
		MM3882 &	kg/cm2 Opens at	Kg/cm2		
		MM3946	8±0.20 kg/cm2	8 Kg/cm2		
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.45 minute		

PLW/PATIALA

Loco No.: 41843

2.7	Check unloader va	lve operation time				Approx. 12 Sec.	10 sec
2.8		Valve functioning (1	24 & 87)			Operates when Compressor starts	
2.9	Direct by BLCP.	y safety valve setting		MM3882	est spec. & MM3946	11.50±0.35 kg/cm2	11.6 Kg/cm2
2.10	direct by BLCP	y safety valve settir		MM3882	est spec. & MM3946	11.50±0.35 kg/cm2	11.5 Kg/cm2
2.11	valve to reset at pr pressure.	ompressors and ens ressure 12 kg/cm2 k	ess than opening	MM3882	est spec. & MM3946		
2.12	by drain cock of 1"	BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, sheck setting pressure of Duplex Check Valve 92F.		CLW's check sheet no. F60.812 Version 2		5.0±0.10kg/cm2	5.0 Kg/cm2
2.13	FP pressure: Fit Test Gauge in T 136F. Check pressu	est point 107F FPTP ure in Gauge.	P. Open isolate cock	CLW's chec F60.812 Ve	ck sheet no. ersion 2	6.0±0.20kg/cm2	6.0 Kg/cm2
3.0	Air Dryer Operat	tion					
3.1						Tower to change i) Every minute (FTIL & SIL) ii)every two minute (KBIL)	ok
3.2		eck Purge Air Stops from Air Dryer at Compressor stops					
3.3		of humidity indicator				Blue	Blue
4.0	Main Reservoir Le						
4.1	Put Auto Brake (A- leakage from both	•	eck MR Pressure air	D&M test spec. MM3882 & MM3946		Should be less than 1 kg/cm2 in 15 minutes	0.65 Kg/cm2 in 15 minutes
4.2	Check BP Air leaka	ge		D&M test spec. MM3882 & MM3946		0.15 kg/cm2 in 5 minutes	0.05 Kg/cm2 in 5 minutes
5.0	Brake Test (Auto	matic Brake oper	ation)				
5.1	Record Brake Pipe	& Brake Cylinder pr	ressure at Each Step				
		llity of Auto Brake sy	ystem		ck sheet no. Version 2		
	Auto controller po	sition		BC (WAG-9 Kg/cm2	% WAP-7)	BC (WAP-5) Kg/cm2	
		BP Pressure kg/cm	12	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Initial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40 Kg/ cm2	0.75±0.15	-
	Full service	3.35±0.2	3.3 Kg/cm2	2.50±0.1	2.5 Kg/ cm2	5.15±0.30	-
	Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1	2.5 Kg/ cm2	5.15±0.30	-

PLW/PATIALA

Loco No.: 41843

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure Automatic Brake Controller handle is Full Service from Run	D&M test spec.	8±2 sec.	7 Sec
5.3	Operate Asst. Driver Emergency Cock,	MM3882 & MM3946 D&M test spec. MM3882 & MM3946	BP pressure falls to Below 25 kg/cm2	OK
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2	4.15 Kg/cm2
			Opens at BP 2.85- 3.15 kg/cm2	3.05 Kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed	D&M test spec. MM3882 & MM3946		
	WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2 WAG9 - BC 2.50 ± 0.1 kg/cm2		4±1 sec. 7.5±1.5 sec. 21±3 sec .	20 sec
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time	D&M test spec. MM3882 & MM3946		
	WAP7 WAG9		17.5±2.5 sec. 52±7.5 sec .	54 sec.
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	79 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake. * Allow The MR pressure to build up to maximum stipulated limit. * Close brake pipe angle cock and charge brake pipe	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.7 Kg/cm2
	to 5 kg/cm2 by A (Automatic brake controlling) at run position. * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe. The test shall be carried out with all the compressors in working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.55 Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (Max.)	7 Sec

PLW/PATIALA

Loco No.: 41843

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	11 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now De- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Dragomthy
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is 12 kg/sq cm Causing mismatching with standard Pr Setting	Presently not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 14.06.2022		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			61 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41843

RLY: WR

SHED: VTA

PROPULSION SYSTEM: MEDHA

Med And Line	· · ·	41 - MD - 10 - 1		
LIST	OF	ITEMS	FITTED	BY ECS

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER	
1	LED Based Flasher Light Cab I & II		133	127	KAYSONS	
2	Led Marker Light Cab I & II	29612925	141767/141742/	141745/141631	MATSUSHI P. TECH.	
3	Cab Heater Cab I & II	29170011	1301	1356	TOPGRIP	
4	Crew Fan Cab I & II	29470080	3477/3436/	3520/3366	SARIA	
5	Master Controller Cab I	29860015	5831		- WOAMA	
6	Master Controller Cab II	29000013	58	57	V V O/ (IVI) (
7	Complete Panel A Cab I & II	29178265	369A	369B		
8	Complete Panel C Cab I & II	29170539			HIND	
9	Complete Panel D Cab I & II	29178265	372A	372B		
10	Complete Cubicle- F Panel Cab I & II	29178162	CG/CF/23072135	CG/CF/23072138	CG	
11	Speed Ind.& Rec. System	29200040	M-4806/	/S-4806	AAL ·	
12	Battery (Ni- Cd)	29680025	63	32	SAFT URJA	
13	Set of Harnessed Cable Complete	29600420			PPS INTERNATIONAL	
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	29500047	06/23 & 23/0771	06/23 & 23/0795	TROLEX	
15	Transformer Oil Pressure Sensor (Cab-2)	·	03/23 & 23/3116	06/23 & 23/0802		
16	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)	29500035	BG/TFP/5213-APR-23		BG INDUSTRIES	
17	Transformer Oil Temperature Sensor (Cab-2)		BG/TFP/5206-APR-23			
18	Roof mounted Air Conditioner I	29811028	23H2	INTEC		
19	Roof mounted Air Conditioner II	23011020	23H2			





		PATIALA LOCO	MOTIVE WORKS, G-9HC/41843/WR	PATIALA /VTA(D)		
S.No.	Equipment	PL No.		nent Serial No.	T	1ake
1	Complete Shell Assembly with piping	29171027		313 , 10/2023		HILAI
2	Side Buffer Assly Both Side Cab I		203-06/23	118-05/23		
3	Side Buffer Assly Both Side Cab II	29130050	15-07/23	43-07/23	FASP	FASP
4	CBC Cab I & II	29130037		67/23	FASP	FASP
5	Hand Brake	23130037	05/23		FASP	FASP
		29045034	07,	/23-16046	Modified	d Mechwel
6	Set of Secondry Helical Spring	29043034			GiB. I)
7	Battery Boxes (both side)	29680013	15- 07/23	16-07/23		ISM (Rot
8	Traction Bar Bogie I			371-04/23		ISM (Both
9	Traction Bar Bogie II			313-04/23		EW
10	Centre Pivot Housing in Shell Bogie I side	20100057		45- 09/23		CU
11	Centre Pivot Housing in Shell Bogie II side	29100057		63- 09/23		CU
12	Elastic Ring in Front in Shell Bogie I side	20100010		09-06/23	-	SPL
13	Elastic Ring in Front in Shell Bogie II side	29100010		9-06/23		SPL
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	ABB-65-10-23-2XY	T000000-ACM-066, 2023		BB
15	Oil Cooling Radiator I		FG415002	2/M2/23-24/200	APOLLO INDI	JSTRIAL CORPS
16	Oil Cooling Radiator II	29470031		23RC1086		
7	Main Compressor I with Motor			20370 , 04/23		MOTIVE LTD
_	Main Compressor II with Motor	29511008			ELGI	
$\overline{}$	Transformer Oil Cooling Pump I			20379 , 04/23	ELGI	
_	Transformer Oil Cooling Pump II		23060842 , 06/23 23060770 , 06/23 PDS2308027, 1001381064 323022705, 32303AF2705		FLOWWELL	
					FLOWWELL	
	Oil Cooling Blower OCB I	29470043			PD STEELS LTD	
_	Oil Cooling Blower OCB II				SAINI ELEC	TRICAL LTD
-	TM Blower I	29440075	21M6447	6, 21M64AF476	SAINI ELEC	TRICAL LTD
-	TM Blower II	20,10075	21M6444	3, 21M64AF443	SAINI ELEC	TRICAL LTD
_	Machine Room Blower I	29440105	AC-54516,	CGLWIAM10021	AC	CEL
6	Machine Room Blower II	29440103	AC-54512,	CGLWIAM10007	AC	CEL
7	Machine Room Scavenging Blower I		CF25/E	06447, 09/23		AND PVT LTD
8 1	Machine Room Scavenging Blower II	29440129	CF25/E	06438, 09/23		AND PVT LTD
9	TM Scavenging Blower Motor I	20440447		7.271, 07/23		O(P) LTD
0	TM Scavenging Blower Motor II	29440117		7.259, 07/23		
1	Traction Convertor I			07, 10/23	G.I.R CC	D(P) LTD
	Traction Convertor II			08, 10/23		
	/ehicle Control Unit I	29741075		59, 09/23		
_	/ehicle Control Unit II	29/410/5		59, 09/23	MEI	DHA
	Aux. Converter Box I (BUR 1)		357	78, 10/23		
	Aux. Converter Box 2 (BUR 2 + 3)			78, 10/23		
_	Axillary Control Cubical HB-1	29171180		34/06/2023	KAYSONS LEECT	TRICAL PVT LTD
_	Axillary Control Cubical HB-2	29171192		2012360037	C.G. P	OWER
_	Complete Control Cubicle SB-1	29171209		55/06/2023	KAYSONS LEECT	
_	Complete Control Cubicle SB-2	29171210		79/06/2023	KAYSONS LEECT	TRICAL PVT LTD
	ilter Cubical (FB) (COMPLETE FILTER CUE	29480140		754, 02/23	TROLEX IND	IA PVT LTD
	Oriver Seats	29171131		Batch No. 272 & 3 93,352	Al	BI & EEE
	ransformer oil steel pipes	29230044	RAN	SAL PIPES		
	Conservator Tank Breather	29731057	23-462	24, 23-7079	YOGYA ENI	ETRPRISES
2000	allast Assembly (only for WAG-9)	29170163	332,33	3,334, 335	AK	М
	lead Light		112/4/202	23, 118/4/2023	PATRA AND	CHANDA
	oucting Assembly	29470067			TARG	SET
8 F	ilter Frame Assly.	29480103			TRID	ENT

NAME STATE YOMOR SSE/LAS

NAME STABHAM SUAPMA JE/LAS/UF NAME THUD IN PRAJAD

पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

Rly: WR

LOCO NO: 41843

Shed: NTA(D)

S. No.	ITEM TO BE CHECKED		-			E.
		Specified Value	01	bserve	d Va	lue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	-OK	1	IA -	_	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.	OK		OK		
1.3	Check proper of Fitment of oil cooling unit (OCU).	ОК	1	10		
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	ОК	1)K		
1.5	Check proper Fitment of FB panel on its position.	ОК	1	15		
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK	0	r		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK	1	20		
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		ir		
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	ОК	-	210		
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	ОК		OK		1
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK	1	DK .		
1.12	Check proper fitment of Bogie Body Safety Chains.	ОК		Dir		
1.13	Check proper fitment of Cow catcher.	ОК	-	OK	to the	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	ОК		OR	_	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	ОК	+	OK		
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	ОК		or		
1.17	Check proper fitment of both battery box.	ОК		OK		
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK	The second secon	OF		
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	ОК	1	ok	W	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.	Vertical-Std :35-	LP	3-1 ALP	C	AB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	60 mm	10			-
		Lateral Std- 45-	50	52	45	5 4
		50 mm	56	47	44	P 5
	Buffer height: Range (1090, +15,-5)	1005 1105		L/S	T	R/S
	builet height. Kange (1090, +15,-5)	1085-1105		1 -1-		
	Drg No IB031-02002.	1085-1105 mm	FRONT	Inar	1	100
			FRONT	1096		
1 21	Drg No IB031-02002.	mm	FRONT	1100		109
	Drg No IB031-02002. Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)					1 0 9 R/S
	Drg No IB031-02002.	mm		1100		1 0 9 R/S
	Drg No IB031-02002. Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	mm	REAR	1100 L/S		109 R/S
.22	Drg No IB031-02002. Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-SK.DL-3430. Height of Rail Guard. (114 mm + 5 mm,-12 mm).	mm	REAR	lico L/S	6	109 R/S 650 64
.22	Drg No IB031-02002. Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-SK.DL-3430.	mm 641 mm	FRONT REAR	1100 L/S 649 64 L/S	6	109 R/S 656 64° R/S
.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-SK.DL-3430. Height of Rail Guard. (114 mm + 5 mm,-12 mm). As per RDSO Pamphlet Important Bogie Clearances of Electric	641 mm 114 mm + 5	REAR FRONT REAR	1150 L/S 649 641 L/S 113	6	109 R/S 650 645 R/S 114

(Signature of SSE/Elect. Loco (UF))

NAME Arhall Yymen

DATE 29 11 23

(Signature of SSE/JE/Elect Loco)

NAMES D 1254 Y UMAR DATE 29 11 23

(Signature of JE/UF)

NAME JAUDIJA PRAJAP

DATE 29 11 23

PATIALA LOCOMOTIVE WORKS, PATIALA

Loco No. 41843

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-242	SIMPLEX	20105146	100190	As per PO/IRS conditions
REAR	SL-235	SIMPLEX	29105146	100190	Conditions

2. Hydraulic Dampers PL No. 29040012, Make: ESCORT

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	25363	25321	25327	25373	25375	25352
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/23- 3199	CNC/23- 3031	CNC/23- 3153	CNC/23- 3253	CNC/23- 3251	CNC/23- 3250
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/23- 3237	CNC/23- 3228	CNC/23- 3236	CNC/23- 2884	CNC/23- 3252	CNC/23- 3249
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	NBC	NBC	NBC	NBC	NBC	NBC
End	PO NO. & dt	02875	02875	02875	02875	02875	02875
Free	MAKE	NBC	NBC	NBC	NBC	NBC	NBC
End	PO NO. & dt	02875	02875	02875	02875	02875	02875

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	994	841	994	86T	97T	94T
FREE END	973	943	996	87T	91T	99T

Loco No. 41843

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.4	1092.4	1092.3	1092.4	1092.4	1092.3
DIA IN mm FE	1092.4					1092.3
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION	AXLE POSITION NO		2	3	4	5	6
S.T. (PL 29100288)	MAKE	KPE	KPE	KPE	KM	KM	KM
G.E. BRG PL 29030110	MAKE	NBC	NBC	NBC	NBC	NBC	NBC
F.E. BRG PL 29030110	MAKE	NBC	NBC	NBC	NBC	NBC	NBC

9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KP	KM	KP	KM	KM	KM
BACKLASH (0.254 – 0.458mm)	0.320	0.300	0.300	0.315	0.320	0.300

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	18.73	18.90	17.20	17.72	18.98	18.08
LEFT SIDE	15.04	17.68	17.71	16.98	17.10	15.10

11. TRACTION MOTOR: (PL No. 29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	PLW	-	PLW-2324
2	PLW	-	PLW-2329
3	PLW	-	PLW-2335
4	PLW	-	PLW-2325
5	PLW	-	PLW-2331
6	PLW	-	PLW-2360

Q

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- 8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.