भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41860

TYPE: WAG9HC

RAILWAY SHED: WCR/ET

PROPULSION SYSTEM: CGL

DATE OF DISPATCH: 26.04.2024

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41860

RAILWAY/SHED:WCR/ET

DOD: April-2024

INDEX

SN	PARA	ACTIVITIES	PAGE NO.		
	Testing & Commissioning (ECS)				
1.	1.0	Continuity Test of the cables			
	1.1	Continuity Test of Traction Circuit Cables			
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4		
	1.3	Continuity Test of Battery Circuit Cables			
	1.4	Continuity Test of Screened Control Circuit Cables			
2.	2.0	Low Tension test			
	2.1	Measurement of resistor in OHMS (Ω)	5-6		
	2.2	Check Points	3-0		
	2.3	Low Tension Test Battery Circuits (without control electronics)			
3	3.0	Downloading of Software			
	3.1	Check Points			
	3.2	Download Software	7-10		
	3.3	Analogue Signal Checking			
	3.4	Functional test in simulation mode			
4	4.0	Sensor test & convertor test			
	4.1	Test wiring Transformer Circuits – Polarity Test			
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)			
	4.3	Primary Voltage Transformer			
	4.4	Minimum voltage relay (Pos. 86)	11-16		
	4.5	Maximum current relay (Pos. 78)	77.78		
	4.6	Test current sensors			
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)			
	4.8	Verification of Converter Protection Circuits (Hardware limits)			
	4.9	Sequence of BUR contactors			
5.	5.0	Commissioning with High Voltage			
	5.1	Check List			
	5.2	Safety test main circuit breaker			
	5.3	Auxiliary Converter Commissioning			
	5.3.1	Running test of 3 ph. auxiliary equipments			
	5.3.2	Performance of Auxiliary Converters	10.05		
	5.3.3	Performance of BURs when one BUR goes out	16-25		
	5.4 5.5	Auxiliary circuit 415/110			
	5.5 5.6	Hotel Load Circuit Traction Convertor Commissioning			
	5.6 5.7	Traction Converter Commissioning Test protective shutdown SP			
	5.7 5.8	Test protective shutdown SR Test Harmonic Filter			
	5.8 5.9	Test important components of the locomotive			
6.	6.0	Running Trial of the locomotive	25-26		
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27		
8.	8.0	Status of RDSO modifications	28		
9.	1-10	Pneumatic Test Parameters	29 - 32		
10.		Loco Check Sheet(LAS)	33		
11.	-	Component History (LAS,ECS,ABS)	34-36		
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38		
13	-	Warranty Conditions as per Tenders	39 -41		

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/860 - CGL

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ok	100 ΜΩ	1000 m
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	/wom
Filter Cubicle	Earthing Choke	OK	100 ΜΩ	See nr
Earthing Choke	Earth Return Brushes	øK	100 ΜΩ	Jeen nr.
Transformer	Power Converter 1	OK	100 ΜΩ	I www.
Transformer	Power Converter 2	ok	100 ΜΩ	20 veren
Power Converter 1	TM1, TM2, TM3	OK	100 ΜΩ	9 com
Power Converter 2	TM4, TM5, TM6	OK	100 ΜΩ	Dow an
Earth	Power Converter 1	ok	100 ΜΩ	9 comi Das m 900 m
Earth	Power Converter 2	OK	100 ΜΩ	dum

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41860

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 MΩ	2010
Transformer	BUR2	OK	100 MΩ	2000
Transformer	BUR3	or	100 ΜΩ	2000
Earth	BUR1	O IC	100 MΩ	2500
Earth	BUR2	8K	100 MΩ	1000
Earth	BUR3	OF	100 ΜΩ	1000
BUR1	HB1	OK	100 MΩ	1000
BUR2	HB2	OK	100 MΩ	1000
HB1	HB2	010	100 MΩ	1 * *
HB1	TM Blower 1	OK	100 ΜΩ	100
HB1	TM Scavenge Blower 1	OIC	100 ΜΩ	(00
HB1	Oil Cooling Unit 1	OR	100 MΩ	150
HB1	Compressor 1	ek	100 MΩ	180
HB1	TFP Oil Pump 1	6 PC	100 MΩ	100
HB1	Converter Coolant Pump 1	OR	100 ΜΩ	(00
HB1	MR Blower 1	OK	100 ΜΩ	100
HB1	MR Scavenge Blower 1	010	100 ΜΩ	(00
HB1	Cab1	0/2	100 ΜΩ	10 °
Cab1	Cab Heater 1	Ole	100 ΜΩ	100
HB2	TM Blower 2	6 K2	100 ΜΩ	100
HB2	TM Scavenge Blower 2	OK	100 ΜΩ	1 60
HB2	Oil Cooling Unit 2	one	100 ΜΩ	100
HB2	Compressor 2	012	100 ΜΩ	100
HB2	TFP Oil Pump 2	OR	100 ΜΩ	100
HB2	Converter Coolant Pump 2	010	100 ΜΩ	100
HB2	MR Blower 2	olc	100 ΜΩ	100
HB2	MR Scavenge Blower 2	010	100 ΜΩ	100
HB2	Cab2	ole	100 ΜΩ	(UO
Cab2	Cab Heater 2	012	100 ΜΩ	100

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/860

1.3 Continuity Test of Battery Circuit Cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK,
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	DIK.
Battery (Wire no. 2052)	Connector 50.X7-2		ax.
SB2 (Wire no 2050)	Connector 50.X7-3		DK.

Close the MCB 112, 110, 112.1, and 310.4 and measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	Prescribed value > 0.5 MΩ	Measured Value 6 MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 & 2050	Prescribed value: > 50 MΩ	Measured Value

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	QK.
Memotel speed sensor	10A	ak,
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	٩٤

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	
Terminal fault indication cab-1 & 2	09F	OK.
Brake pipe pressure actual BE electric		92
	06Н	OK.
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	े ८
Oil circuit transformer bogie 1	12E, 12I	94
Magnetization current	12C, 12G	ox.
Traction motor speed sensors (2 nos.)	12D	ox.
and temperature sensors (1 no.) of TM-1		
Traction motor speed sensors (2nos)	12D	Ďχ
and temperature sensors (1 no.) of TM-2		
Traction motor speed sensors (2nos)	12D	2x
and temperature sensors (1 no.) of TM-3		
Traction motor speed sensors (2 nos.)	12H	ge
and temperature sensors (1 no.) of TM-4 Traction motor speed sensors (2nos)	4211	
and temperature sensors (1 no.) of TM-5	12H	e R
Traction motor speed sensors (2nos)	12H	
and temperature sensors (1 no.) of TM-6	120	9 K
Train Bus cab 1 & 2	·	
(Wire U13A& U13B to earthing	13A	
resistance=		9K
10 K Ω ± ± 10 %)		•
UIC line	13B	OK.
Connection FLG1-Box TB	13A	9k

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860
2.0 Low Tension test

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K Ω ± 10%	3.9 K2
Resister to maximum current relay.	1Ω ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3 352
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.21
Between wire 6 & 7	0.2 Ω	0.252
Between wire 5 & 7	0.4 Ω	0.452
For train bus, line U13A to earthing.	10 k Ω ± 10%	10.000
For train bus, line U13B to earthing.	10 k Ω ± 10%	10.02102
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	BOOMS
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.2812
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.291
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.301
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0,2952
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.2 KR
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.7 KM
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9Kr
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.8 KI
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	39052
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	MA
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	1052

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860 Note:

Type of Locomotive: WAP-7/WAG-9HC

Page : 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	chocked on
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheeted ox

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	charted on
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	ge
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	94
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	OK
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	ak .
Pretest speedometer	Sheets of Group 10	2
Pretest vigilance control and fire system	Sheets of Group 11	Ox
Power supply train bus	Sheets of Group 13	OK

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No · (0/960

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

LUC	Difficulty No.: 4/80
3.0	Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yey
Check that all the fibre optic cables are correctly connected to the bus stations.	Yey
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yey
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	28
Traction converter-2 software version:	28
Auxiliary converter-1 software version:	5.0
Auxiliary converter-2 software version:	4.0
Auxiliary converter-3 software version:	4.0
Vehicle control unit -1 software version:	1600
Vehicle control unit -2 software version:	. 1600

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of dia

Description	Signal name	Prescribed value	Measured
D. I	EL CO AL ALVE		Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	ox
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	92
TE/BE at 'o' position	FLG1; AMSB_0101- Xang Trans	Between 9% and 11 %	7. (
from both cab	FLG2; AMSB_0101- Xang Trans		11 / ₋
TE/BE at 'TE maximal'	FLG1; AMSB_0101- Xang Trans	Between 99 % and 101 %	100%
position from both cab	FLG2; AMSB_0101- Xang Trans		109,
TE/BE at 'TE minimal'	FLG1; AMSB_0101- Xang Trans	Between 20 % and 25 %	
position from both cab	FLG2; AMSB_0101- Xang Trans		257.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

position from both cab	FLG2; AMSB_0101- XangTrans	Between 99% and 101%	100%
TE/BE at 'BE Minimal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	241,
TE/BE at '1/3' position in TE and BE mode in both cab.	LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	731.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13°-
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1200
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1200
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1200
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0° C to 40° C	12.500
	Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13°C

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through	VCB must open.	Obtained
emergency stop switch 244	Panto must lower.	cheeted or
Shut Down through cab activation	VCB must open.	
switch to OFF position	Panto must lower.	chaeted on
Converter and filter contactor	FB contactor 8.41 is closed.	
operation with both Power	By moving reverser handle:	
Converters during Start Up.	Converter pre-charging contactor 12.3 must close after few seconds.	
	 Converter contactor 12.4 must close. 	. / 0.
	Converter re-charging contactor 12.3 must opens.	cheered an
	By increasing TE/BE throttle:	
	• FB contactor 8.41 must open.	
	• FB contactor 8.2 must close.	
	• FB contactor 8.1 must close.	
Converter and filter contactor operation with both Power	Bring TE/BE to O.	
Converters during Shut Down.	• VCB must open.	
	Panto must lower.	
	i I I	cheeseed
	• FB contactor 8.1 must open.	, - JK
	• FB contactors 8.41 must close.	
	• FB contactor 8.2 must remain closed.	_
		·

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41860

Type of Locomotive: WAP-7/WAG-9HC Page : 10 of 27

Contactor filter adaptation by isolating any bogie Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco. Check that FB contactor 8.1 is open. Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE FB contactor 8.1 closes. FB contactor 8.2 remains open. Test earth fault detection battery circuit positive & negative By connecting wire 2050 to earth, create earth fault negative potential. message for earth fault By connecting wire 2095 to earth, create earth fault fault positive potential.	<i>ઘ્લ</i> વ
Test earth fault detection battery circuit positive & negative Test earth fault detection battery circuit positive & negative Cut out switch. Wait for self-test of the loco. Check that FB contactor 8.1 is open. After raising panto, closing VCB, and setting TE/BE FB contactor 8.1 closes. FB contactor 8.2 remains open. By connecting wire 2050 to earth, create earth fault negative potential. message for earth fault By connecting wire 2095 to earth, create earth fault positive potential.	ecad a
 Check that FB contactor 8.1 is open. Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE FB contactor 8.1 closes. FB contactor 8.2 remains open. Test earth fault detection battery circuit positive & negative message for earth fault negative potential. message for earth fault By connecting wire 2095 to earth, create earth fault By connecting wire 2095 to earth, create earth fault 	ecad a
• Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open. Test earth fault detection battery circuit positive & negative By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	ecad à
• Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open. Test earth fault detection battery circuit positive & negative By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	ecad a
After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open. By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	ecad a
setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open. By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	
Test earth fault detection battery circuit positive & negative By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	
Test earth fault detection battery circuit positive & negative By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	·
Test earth fault detection battery circuit positive & negative By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	-
earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	
negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.	
 message for earth fault By connecting wire 2095 to earth, create earth fault positive potential. 	
By connecting wire 2095 to earth, create earth fault positive potential.	
fault positive potential.	ed ou
fault positive potential.	
 message for earth fault 	•
· · · · · · · · · · · · · · · · · · ·	
Test fire system. Create a smoke in When smoke sensor-1 gets	
the machine room near the FDU. activated then	
Watch for activation of alarm. • Alarm triggers and fault	
message priority 2	
appears on screen.	
1 3 4 7 1 1 1 1 1	/.
when both smoke sensor 1+2 gets activated then	ed of
A fault message priority	
1 appears on screen and	
lamp LSF1 glow.	
Start/Running interlock occurs and	
TE/BE becomes to 0.	
ime, date & loco number Ensure correct date time and Loco	
number &	

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.0429	OX.
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.054	9K
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.051	OK
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.044	94
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2	7.9V _p , 5.6V _{RMS} and same polarity.	7.9UP 5-6 VRMS)	OK
	between cable 1103- 1117 (in HB2)			
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.124 6.44NRM	1 ac

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.		9K
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.54	DK.

11. OURMS

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{\rm eff}/350V_{\rm p}$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25KV	- ~ /-
SLG2_G 87-XUPrim	25 kV	250%	25KV	2501

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	1744	170%
SLG2 G 87-XUPrim	17 kV	170%	1750	1707

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KU	3007,
SLG2_G 87-XUPrim	30 kV	300%	30KU	300/-

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Tssue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

Minimum voltage relay (Pos. 86) 4.4

Functionality test:

Minimum voltage relay (Pos. 86) must be adju	Isted to approx 68%
minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	(Yes/No)
Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.	(YES/No)
Turn off the variac : Contactor 218 closes; the control électronics is be working	(Yes/No)
Test Under Voltage Protection	;
Activate the cab in cooling mode; Raise panto; Supply 200V _{RMS} through variac to wire no. 1501 & 1502; Close the VCB; Interrupt the supply voltage The VCB goes off after 2 second time delay.	(Yes/No)
Again supply $200V_{RMS}$ through variac to wire no. 1501 & 1502; Decrease the supply voltage below $140V_{RMS}\pm4V$; Fine tune the minimum voltage relay so that VCB opens.	L(Yes/No)

4.5 Maximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transforme &1522 (including the resistor at Pos. 6.11); Put loco in simulatio on contact 136.3; Close VCB; supply 3.6A _{RMS} at the open will maximum current relay Pos. 78 for correct over current value;	n for driving mode: Open R P.
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact R_3 – R_4 of 136.3 closed; Close VCB; Tune the resist /9.9 A_p at the open wire 1521;	or 78.1 for the current of 7.0A _{RMS}
VCB opens with Priority 1 fault message on display.	L(Yes/No)
	I .

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page : 14 of 27

4.6 Test current sensors

Name of the sensor			_
	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current sensor (Test-2, Pos.6.2/1	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
& 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		299mg
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		
11	Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		338mA
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		346mg
Hotel load current sensors (Pos. 33/1 & 33/2)	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	714	MA
55 2	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NO	NA

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1 Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	ax.
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	ac

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52 4/2	52.5/1	E2 E/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Open
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	
					J.55C	CIOSE	Open	ohen	Close

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	F2/F	FO 4/4	Г <u></u> -		
AI BUR OK	close			 -	52/5	52.4/1	52.4/2	52.5/1	52.5/2
BUR1 off			closs	open	closs	open	close	close	oben
BUR2 off	close	open	cluss	Closs	open	close	oben	oper	clos
	open	open	eQu80	closs		Oess	open		
BUR3 off	opon	close	open	Closs.		loge	Speri		Class
,			<u> </u>	الاست		CLOSE	yen	open	Persol

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	-
	1 70)
No rubbish in machine room, on the roof, under the loco.	90
All the electronic Sub-D and connectors connected	1 19
	1 %
All the MCBs of the HB1 & HB2 open.	
All the three fuses 40/* of the auxiliary converters	المح المح
	100
The fuse of the 415/110V auxiliary circuit (in HB1) open.	
Roof to roof earthing and roof to cab earthing done	Yes
	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	
Connection in all the traction motors done correctly.	169
	Yes
All the bogie body connection and earthing connection done correctly.	
	1/25
Pulse generator (Pos. 94.1) connection done correctly.	7
All the oil cocks of the gate valve of the transformer in open condition.	Yes
	1/09
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
(ARA kovintorla di	199
KABA key interlocking system.	765

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheeted on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheesed on
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	choiredox
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Choerador
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	chaltedou
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Cheeredin
nterlocking pantograph- /CB in cooling node	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	choered on
nterlocking pantograph- /CB in driving node	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Cholled ac

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4)860

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	10.4	16.0
Oil pump transformer 2	9.8 amps	10.3	12.5
Coolant pump converter 1	19.6 amps	5.5	10:0
Coolant pump converter 2	19.6 amps	5.6	10.4
Oil cooling blower unit 1	40.0 amps	34.3	64.3
Oil cooling blower unit 2	40.0 amps	34.2	79.0
Traction motor blower 1	34.0 amps	23.6	86.0
Traction motor blower 2	34.0 amps	29.7	74.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.7	250
Sc. Blower to Traction motor blower 1	6.0 amps	4.7	26.5
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	25.2	113-0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.5	96.0

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
	Input voltage to BUR1	75% (10%=125V)	7008V	74
		60% (10%=100V)	636V	Yes
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 AMP	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1010	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amp	(c)
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	21 Amp	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	11Amb	Yes
BUR2 7303 -XUUB	0, 0. 20112	110%(10%=10V)	1105	Yos

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10000	709
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637V	Yey
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	TAMP	Yey
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	2-11mb	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	1) Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1100	Yes

Readings are dependent upon charging condition of the battery.

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41860

Type of Locomotive: WAP-7/WAG-9HC

Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation leve1 3 of the locomotive

BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK BUR 1 out	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 2 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
DON 3 OUL	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous cu

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	2.8	9.4
Machine room blower 2	15.0 amps*	3.0	9.1
Sc. Blower to MR blower 1	1.3 amps	1.3	2.7
Sc. Blower to MR blower 2	1.3 amps	1, 4	2.7
Ventilator cab heater 1	1.1 amps	1.2	1.4
Ventilator cab heater 2	1.1 amps	1.2	1.4
Cab heater 1	4.8 amps	4.9	5.0
* For indigenous MR blowers	4.8 amps	4.9	50

* For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

Page: 21 of 27

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to **Annexure-HLC**

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1 Measurement of	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chered on
discharging of DC Link of Converter 1 Earth fault detection on	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chaeted on
positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chared on
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted ac
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chefedox
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	c Reefeel in
Pulsing of drive converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheered on

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and precharging and charging of DC Link of Converter 2	demonstrate the same to the pure	charted on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeted on
Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	challed u
Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	Chalked ox
circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charged ac
of converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checkedon
Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chelfool of

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off	- charted an
Measurement of	 Priority 1 fault mesg. on DDU appears Disturbance in Converter 1 	
protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2	
	 electronics produces a protective shut down. VCB goes off Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2 	o chacked on

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained	
currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	cheeked un	

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41860

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	<u></u>	
Test earth fault	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop Make a connection between wire 	charted or
detection harmonic filter circuit.	no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	. Chalted de
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	OK

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	chelted or
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cholked on
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	chalted on
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Chelked al
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	Chelpedon

Effective Date: Feb 2022

PATIALA LOCOMOTIVE WORKS, PATIALA

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

		Page : 25 of 27
Marker light	Both front and tail marker light should glow from both the cabs	cfootped ou
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	efocked on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheexeel on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	chereolox chereolox chereolox
Illuminated Push button	All illuminated push buttons should glow during the operation	cheered
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66	For contactor 8.1:
Crew Fan	Newton. All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: C CFO COO Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	folled
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	facted
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Leorof
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	fored
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Poores

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

		Page: 26 of 27
6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that
	operation of the	brakes are released i.e. BC < 1 kg/cm ² .
	locomotive	For 60 seconds do not press vigilance foot switch or
		sanding foots switch or TE/BE throttle or BPVG
		switch then
		Buzzer should start buzzing.
		LSVW should glow continuously.
		LSVW should glow continuously. Do not acknowledge the alarm through BPVG or
•		vigilance foot switch further for 8 seconds then:-
		Emergency brake should be applied
		automatically.
		VCB should be switched off.
		Resetting of this penalty brake is possible only after
		180 seconds by bringing TE/BE throttle to 0 and
		acknowledge BPVR and press & release vigilance
		foot switch.
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).
		• With park brake in applied condition.
		• With direct loco brake applied (BP< 4.75Kg/cm ²).
-		With automatic train brake applied (BP<4.75Kg/cm ²). Close Love Lov
		With amorgans and (DD 14.75 Kg/cm).
8.	Check traction interlock	With emergency cock (BP < 4.75 Kg/cm ²). Switch of the broken land of the broken land.
		Switch of the brake electronics. The
. 1		Tractive /Braking effort should ramp down, VCB
9.	Check regenerative	Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should start reducing.
	braking.	Bring the TE/BE throttle to BE side. Loco speed Should start reducing.
10.	Check for BUR	
İ	redundancy test at	In the event of failure of one BUR, rest of the two
	ventilation level 1 & 3 of	BURs can take the load of all the auxiliaries. For this switch off one BUR.
	loco operation	Auxiliaries should be catered by rest of two BURs.
·		Switch off the 2 BURs; loco should trip in this case.
11.	Check the power	Create disturbance in nower converter by a situation
	converter	off the electronics. VCB should open and converter
	isolation test	should get isolated and traction is possible with
ŀ		another power converter.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/860

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OV_	ax (
2	Marker Red	ov_	OK	
3	Marker White	Ox_	OK	
4	Cab Lights	DK	OK	
5	Dr Spot Light	O/L	or 1	
6	Asst Dr Spot Light	2/	UK.	- charged worker
7	Flasher Light	OK	de	e chique is fi
8	Instrument Lights	ar	3K	
9	Corridor Light	SIK	clk	
LO	Cab Fans	DV_	CK	
1	Cab Heater/Blowers	OK	OK	
.2	All Cab Signal Lamps Panel 'A'	OK	dk	

Status of RDSO modifications

LOCO NO: 41860

Sr	Modification No.	D	
1.		Description	Remarks
	Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/037 Rev.'0' Dt 22.04.09	locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/039 Rev.'0' Dt 31.12.10	I STORY OF INCOLUCES OF FED CONTRACTOR AND INC.	
4.	RDSO/2011/EL/MS/039 Rev.'0' Dt 08.08.11	9 Removal of interlocks of control circuit contactors as 400	OK/NOT OK
5.	RDSO/2011/EL/MS/040 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber should be a simple of the same and provision of the same and provision of synthetic resin	OK/NOT OK
6. 7.	RDSO/2011/EL/MS/040 ^o Rev.'0' Dt 10.08.11 RDSO/2011/EL/MS/0403	three phase locomotives to avoid fire baranda	Ok/Not Ok
8.	Rev.'0' Dt 30.11.11 RDSO/2012/EL/MS/0408	draining of hatteries in three room/corridor lights to avoid	OK/Not Ok
9.	Rev.'0' RDSO/2012/EL/MS/0411		Ok/Not Ok
10	Rev.'1' dated 02.11.12 RDSO/2012/EL/MS/0413	locomotives.	Ok/Not Ok
11	Rev.'1' Dt 25.04.16 RDSO/2012/EL/MS/0419	contactors of three phase locomotives to improve reliability	Ok/Not Ok
12	Rev.'0' Dt 20.12.12 RDSO/2013/EL/MS/0420	Master Controller of three phase locomotives.	Ok/Not Ok
·	Rev.'0' Dt 23.01.13	arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Øk/Not Ok
15	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13 RDSO/2013/EL/MS/0427	phase electric locomotives.	Ok/Not Ok
	Rev.'0' Dt 23.10.13 RDSO/2013/EL/MS/0428		Øk/Not Ok
	Rev.'0' Dt 10.12.13	three phase electric locomotives.	Ok/Not Ok
$\dot{\perp}$	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives	Øk/Not Ok
	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Øk/Not Ok
	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17 RDSO/2018/EL/MS/0475		Ok/Not Ok
	Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Øk/Not Ok

Signature of JE/SSE/ECS

Loco No.: 41860

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: M/s Knorr			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	
	Record pressure Build up time (8.0 kg/cm2)		120 sec (knorr)	110 sec
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.5
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.5 Kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.55 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA c		
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	OK
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.2 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 40
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual		, ,	
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-26 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.5 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.5 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10.05
		MM3882 &	kg/cm2, Closes at	Kg/cm2
		MM3946	8±0.20 kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.30 minute

PLW/PATIALA

Loco No.: 41860

Direct by BLCP. 2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP 2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 rd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 5.0 Brake Test (Automatic Brake operation) MM3882 & MM3946 kg/cm2 D&M test spec. MM3882 & MM3946 CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 CLW's check sheet no. F60.812 Version 2 Tower to change every minute Tower to change every minute Ok Blue Check BP Air leakage D&M test spec. MM3882 & MM3946 MM3882 & MM3946 D.15 kg/cm2 in 15 minutes MM3882 & MM3946 D.26 kg/cm 2 in 15 minutes MM3882 & MM3946 Check proportionality of Auto Brake operation) FCLW's check sheet no.	2.8 C 2.9 C 2.10 C 2.11 S V p 2.12 B b c 2.13 F 1 3.0 A 3.1 C 3.2 C 3.3 C 4.0 N 4.1 P 6 5.0 B	Check Auto Drain Check CP-I deliver Direct by BLCP. Check CP-2 deliver direct by BLCP Switch 'OFF' the covalve to reset at pressure. BP Pressure: Switch by drain cock of 1 check setting pressure: Fit Test Gauge in 136F. Check press Air Dryer Opera Open Drain Cock open for Test Check Purge Air S Check condition of Main Reservoir Le Put Auto Brake (A leakage from both	ery safety valve settingery safety valve settingers and ensure sets of Duplex Check the cabs. Test point 107F FPTF issure in Gauge. ng (10/1). Run CP ng (10/2). Run CP sure that the safety less than opening r, Drain MR Pressure tart Compressor, ck Valve 92F. P. Open isolate cock t Compressor, leave to change. at Compressor stops	MM3882 D&M t MM3882 D&M t MM3882 CLW's chec F60.812 Ve	& MM3946 est spec. & MM3946 est spec. & MM3946 est spec. & MM3946 ek sheet no. ersion 2 ek sheet no. ersion 2	Operates when Compressor starts 11.50±0.35 kg/cm2 11.50±0.35 kg/cm2 5.0±0.10kg/cm2 Tower to change every minute Blue Should be less	11.5 Kg/cm2 11.4 Kg/cm2 5.0 Kg/cm2 6.0 Kg/cm2 ok ok Blue	
Direct by BLCP. 2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP. 2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: If Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 rd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step CLW's check sheet no. F60.812 Version 2 Tower to change every minute Ok 3.1 Dryer Operation 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test Ok MM3882 & MM3946 Dawn test spec. MM3882 & MM3946 MM3882 & MM3946 Dawn test spec. MM3882 & MM3946	2.10 C d d 2.11 S v p p 2.12 B b c c 2.13 F F 1 3.0 A 3.1 C o o 3.2 C 3.3 C 4.0 N 4.1 P k 6 5.0 E 5.1 R C C	Direct by BLCP. Check CP-2 delive direct by BLCP Switch 'OFF' the control valve to reset at puressure. BP Pressure: Switch by drain cock of 1 check setting pressure: Fit Test Gauge in 136F. Check pressure:	ery safety valve setting compressors and ensignessure 1.2 kg/cm2 letch 'OFF' compressor 1" Main Reservoir, Statessure of Duplex Check Test point 107F FPTF issure in Gauge. ation 90 of 2 nd MR to start eck Air Dryer Towers Stops from Air Dryer at of humidity indicator eakage Test A-9) in full service, Chath cabs.	ng (10/2). Run CP sure that the safety less than opening r, Drain MR Pressure tart Compressor, ck Valve 92F. P. Open isolate cock t Compressor, leave to change. at Compressor stops	MM3882 D&M t MM3882 D&M t MM3882 CLW's chec F60.812 Ve	& MM3946 est spec. & MM3946 est spec. & MM3946 est spec. & MM3946 ek sheet no. ersion 2 ek sheet no. ersion 2	kg/cm2 11.50±0.35 kg/cm2 5.0±0.10kg/cm2 6.0±0.20kg/cm2 Tower to change every minute Blue Should be less	11.4 Kg/cm2 5.0 Kg/cm2 6.0 Kg/cm2 ok ok Blue
direct by BLCP Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure. BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2" MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops oke condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. MM3882 & MM3946 D&M test spec. MM388	2.11 S V V P P 2.12 B b C C 2.13 F F 1 1 3.0 A 3.1 C C C C C C C C C C C C C C C C C C C	direct by BLCP Switch 'OFF' the covalve to reset at pressure. BP Pressure: Switch by drain cock of 1 check setting pressure: FIT Test Gauge in 136F. Check pressure: FIT Test Gauge in 136F. Check pressure: Check Purge Air Super Check Check Purge Air Super Check condition of Check Purge Air Super Check Che	compressors and ens pressure 1.2 kg/cm2 tch 'OFF' compressor 1" Main Reservoir, Sta essure of Duplex Chec Test point 107F FPTF isure in Gauge. ation 90 of 2 nd MR to start eck Air Dryer Towers Stops from Air Dryer a of humidity indicator eakage Test A-9) in full service, Ch th cabs.	sure that the safety less than opening r, Drain MR Pressure tart Compressor, ck Valve 92F. P. Open isolate cock t Compressor, leave to change. at Compressor stops	MM3882 D&M t MM3882 CLW's chec F60.812 Ve CLW's chec F60.812 Ve	& MM3946 est spec. & MM3946 ck sheet no. ersion 2 ck sheet no. ersion 2 est spec.	kg/cm2 5.0±0.10kg/cm2 6.0±0.20kg/cm2 Tower to change every minute Blue Should be less	5.0 Kg/cm2 6.0 Kg/cm2 ok ok Blue
valve to reset at pressure 1.2 kg/cm2 less than opening pressure. 2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 rd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test	2.12 B b c c 2.13 F F 1 3.0 A 3.1 C 0 0 3.2 C 3.3 C 4.0 N 4.1 P 6 5.0 E 5.1 R	valve to reset at p pressure. BP Pressure: Swite by drain cock of 1 check setting pres FP pressure: Fit Test Gauge in 136F. Check press Air Dryer Opera Open Drain Cock open for Test Che Check Purge Air S Check condition of Main Reservoir Le Put Auto Brake (A leakage from both	pressure 1.2 kg/cm2 tch 'OFF' compressor 1" Main Reservoir, Statessure of Duplex Check Test point 107F FPTP sure in Gauge. ation 90 of 2 nd MR to start eck Air Dryer Towers Stops from Air Dryer a of humidity indicator .eakage Test A-9) in full service, Check th cabs.	less than opening r, Drain MR Pressure tart Compressor, ck Valve 92F. P. Open isolate cock t Compressor, leave to change. at Compressor stops	MM3882 CLW's chec F60.812 Ve CLW's chec F60.812 Ve	& MM3946 ck sheet no. ersion 2 ck sheet no. ersion 2 ersion 2	6.0±0.20kg/cm2 Tower to change every minute Blue Should be less	6.0 Kg/cm2 ok ok Blue
by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F. 2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system 6.0 ±0.20kg/cm 6.0 ±	2.13 F F 1 3.0 A 3.1 C 3.2 C 3.3 C 4.0 N 4.1 P 6 5.0 B	by drain cock of 1 check setting pres FP pressure: Fit Test Gauge in 136F. Check press Air Dryer Opera Open Drain Cock open for Test Che Check Purge Air S Check condition o Main Reservoir Le Put Auto Brake (A leakage from both	1" Main Reservoir, Statessure of Duplex Checkersure of Duplex Checkersure in Gauge. ation 90 of 2 nd MR to start eck Air Dryer Towers Stops from Air Dryer a of humidity indicator eakage Test A-9) in full service, Checkersure of Stops.	eart Compressor, ck Valve 92F. P. Open isolate cock t Compressor, leave t to change. at Compressor stops	F60.812 Ve	ersion 2 ck sheet no. ersion 2 est spec.	6.0±0.20kg/cm2 Tower to change every minute Blue Should be less	6.0 Kg/cm2 ok ok Blue
Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge. 3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage D&M test spec. MM3882 & MM3946 Should be less than 1 kg/cm2 in 15 minutes minutes 0.15 kg/cm2 in 5 minutes 5.0 Brake Test (Automatic Brake operation) Check proportionality of Auto Brake system CLW's check sheet no.	3.0 A 3.1 C 0 3.2 C 3.3 C 4.0 N 4.1 P 6 5.0 B	Fit Test Gauge in 136F. Check press Air Dryer Opera Open Drain Cock open for Test Che Check Purge Air S Check condition o Main Reservoir Le Put Auto Brake (A leakage from both	ation 90 of 2 nd MR to start eck Air Dryer Towers Stops from Air Dryer a of humidity indicator eakage Test A-9) in full service, Ch	t Compressor, leave to change. at Compressor stops	F60.812 Ve	est spec.	Tower to change every minute Blue Should be less	ok ok Blue
3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 nd MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.	3.0 A 3.1 C 0 3.2 C 3.3 C 4.0 N 4.1 P 6 4.2 C 5.0 B	Air Dryer Opera Open Drain Cock open for Test Che Check Purge Air S Check condition o Main Reservoir Le Put Auto Brake (A leakage from both	ation 90 of 2 nd MR to start eck Air Dryer Towers Stops from Air Dryer a of humidity indicator Leakage Test A-9) in full service, Cheth cabs.	at Compressor stops			Blue Should be less	ok Blue
open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage 5.0 Brake Test (Automatic Brake operation) Blue Blue Blue Blue Blue D&M test spec. MM3882 & MM3946 D.Septimal Test (Automatic Brake operation) Check proportionality of Auto Brake system CLW's check sheet no.	3.2 CC 3.3 CC 4.0 N 4.1 P 6 4.2 CC 5.0 B	open for Test Che Check Purge Air S Check condition o Main Reservoir Le Put Auto Brake (A leakage from both	eck Air Dryer Towers Stops from Air Dryer a of humidity indicator Leakage Test A-9) in full service, Ch th cabs.	at Compressor stops			Blue Should be less	ok Blue
3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage 5.0 Brake Test (Automatic Brake operation) Blue Blue Blue Blue D&M test spec. MM3882 & MM3946 D.15 kg/cm2 in sinutes 0.03 kg/cm2 ir minutes MM3882 & MM3946 Check proportionality of Auto Brake system CLW's check sheet no.	3.3 C 4.0 N 4.1 P 16 4.2 C 5.0 B	Check condition o Main Reservoir Le Put Auto Brake (A leakage from both	of humidity indicator .eakage Test A-9) in full service, Ch th cabs.	ſ			Should be less	Blue
4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.	4.0 N 4.1 P le 4.2 C 5.0 B	Main Reservoir Le Put Auto Brake (A leakage from both	. eakage Test A-9) in full service, Ch th cabs.				Should be less	
4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs. 4.2 Check BP Air leakage 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system D&M test spec. MM3882 & MM3946 D.2 Kg/cm2 in 15 minutes 0.03 Kg/cm2 ir minutes CLW's check sheet no.	4.1 Pk 4.2 C 5.0 B 5.1 R	Put Auto Brake (A leakage from both	A-9) in full service, Ch th cabs.	neck MR Pressure air				0.2 Va/cm2
leakage from both cabs. MM3882 & MM3946 than 1 kg/cm2 in 15 minutes	4.2 C 5.0 B 5.1 R	leakage from both	th cabs.	neck MR Pressure air				0.2 Va/cm^2
MM3882 & MM3946 minutes Kg/cm2 ir minutes 5.0 Brake Test (Automatic Brake operation) 5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.	5.0 B 5.1 R	Check BP Air leaka	cage		MM3882 & MM3946			
5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step Check proportionality of Auto Brake system CLW's check sheet no.	5.1 R					•	•	0.03 Kg/cm2 in 5 minutes
Check proportionality of Auto Brake system CLW's check sheet no.	C	Brake Test (Aut	tomatic Brake oper	ration)				
		Record Brake Pipe	e & Brake Cylinder pi	ressure at Each Step				
F60.812 Version 2	Δ	Check proportionality of Auto Brake system		system	CLW's check sheet no. F60.812 Version 2			
Auto controller position BP Pressure kg/cm2 BC (WAG-9 & WAP-7) Kg/cm2 BC (WAP-5) Kg/cm2			BP Pressu	ure kg/cm2		% WAP-7)		
Value Result Value Result Value Result			Value	Result	Value	Result	Value	Result
Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 -	R	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
Initial 4.60±0.1 4.55 Kg/cm2 0.40±0.1 _{0.40Kg/cm2} 0.75±0.15 -	Ir	1.30.1			0.40+0.1			
Full service 3.35±0.2 3.4 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30 -	F	initial	4.60±0.1	4.55 Kg/cm2	0.10±0.1	0.40Kg/ cm2	0.75±0.15	-
	E							-

PLW/PATIALA

Loco No.: 41860

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	7 Sec
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 2.5 kg/cm2	OK
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2 Opens at BP 2.85- 3.15 kg/cm2	4.2 Kg/cm2 3.0 Kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2 WAG9 - BC 2.50 ± 0.1 kg/cm2	D&M test spec. MM3882 & MM3946	4±1 sec. 7.5±1.5 sec. 21±3 sec.	22 sec
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAP7 WAG9	D&M test spec. MM3882 & MM3946	17.5±2.5 sec. 52±7.5 sec .	54 sec.
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	75 sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake. * Allow The MR pressure to build up to maximum stipulated limit. * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A-9 (Automatic brake controlling) at run position. * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe. The test shall be carried out with all the compressors in working condition. Keep Auto Brake Controller (A-9) in Full Service. Press	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.6 Kg/cm2
	Driver End paddle Switch (PVEF)		BC comes to 'U'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.5 Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (Max.)	7 Sec

PLW/PATIALA

Loco No.: 41860

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now de- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is12 kg/sqcm Causing mismatching with standard Pr Setting	- not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			50 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

				41860		
		R	OOF COME	PONENT CAB 1 & 2		Warranty
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.	
	Pantograph	29880014(HR),	2		C24 2701 MAR 2024 2419 07/22	
1		29880026		FAIVELEY, GENERAL STORES	C24-2791,MAR-2024,3418-07/23	
2	Servo motor	29880026	2	GENERAL STORES	3428-08/2023	
	Air Intake filter Assly		2	PARKER	O/C1362P/B/LH/01,O/C	
3		29480103			1360P/B/LH/01 PLW-12/23	
4	Insulator Panto Mtg.	29810127	8	IEC	09/23,09/23	
			MIDDLE RO	OF COMPONENT		
5	High Voltage Bushing	29731021	1	EIPL	5279-12-23	
6	Voltage Transformer	2965028	1	SADTEM	2023-N-656486	
7	Vacuum Circuit Breaker	25712202	1	SCHNEIDER	2265/2065-24N2-20-03-2024	
8	Insulator Roof line	29810139	9	IEC	06-23, 06-23	
9	Harmonic Filter 29650033		1	SUNSHINE	1068-12/2023	AS Per PO/IRS Conditions
10	Earth Switch	29700073	E	PPS International	02-24-00847	
11	Surge Arrester 29750052 2 CG PO		CG POWER & INDUSTRIAL	55028-2023,55025-2023		
12	Air Compressor (A,B)	29511008	2	ELGI	EXJS 921927 -A, EXJS 921896 -B	
13	Air Dryer	29162051	1	TRIDENT	LD2-02-9725-24	
14	Babby compressor	25513000	1	CEC	7165-03-23	
15	Air Brake Panel	29180016	1	KNORR	24-03-CO-3384	
16	Contoller (A,B)	29180016	2	KNORR	24-01-FO-3305 A, 24-01-FO-3280 B	
17	Breakup Valve	29180016	2	KNORR		
18	wiper motor	29162026	4	ELGI		

SSE/ABS

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41860 LIST OF ITEMS FITTED BY ECS **RLY: WCR**

SHED: ET

PROPULSION SYSTEM: CGL

CNI	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO C	CAB-1/CAB-2	MAKE/SUPPLIER
SN	LED Based Flasher Light Cab I & II	29612937	22662	22664	ALTOS
1		29612925	2685/2572/2	2577/2464	KAYSONS
2	Led Marker Light Cab I & II	29170011	847	93	ELECOS
	Cab Heater Cab I & II	29470080	4814/4734/4	SARIA	
	Crew Fan Cab I & II	20170000	664		
5	Master Controller Cab I	29860015	664	WOAMA	
6	Master Controller Cab II	29178265	464A	464B	
7	Complete Panel A Cab I & II		404A	1012	HIND
8	Complete Panel C Cab I & II	29170539		4000	
9	Complete Panel D Cab I & II	29178265	460A	460B	KANCONC
	Complete Cubicle- F Panel Cab I & II	29178162	CUF/759/08/2023	CUF/764/08/2023	KAYSONS
	Speed Ind.& Rec. System	29200040	MTELM2308307/	AAL	
	Battery (Ni- Cd)	29680025	937-	962	SAFT URJA
13	Set of Harnessed Cable Complete	29600420	·		KAYSONS
14	Transformer Oil Pressure Sensor (Cab-1)	29500047		TGIC/CLW/2291-JAN2024	TOPGRIP
15	Transformer Oil Pressure Sensor (Cab-2)		TGIC/CLW/2292-JAN2024	TGIC/CLW/2293-JAN2024	
-	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)	29500035	BG/TFP/4534-FEB-23		BG INDUSTRIES
	Transformer Oil Temperature Sensor (Cab-2)		BG/TFP/44	42-FEB-23	
1	Roof mounted Air Conditioner I	29811028	23K2	489	INTEC
	Roof mounted Air Conditioner II	20011020	23B2	2732	

"Washing

JE/ECS

PATIALA LOCOMOTIVE WORKS, PATIALA LOCO NO-41860/WAG-9HC/WCR/FTE

		LOCO NO-4186	0/WAG-9HC/WC			
S.No.	Equipment	PL No.	Equipm	ent Serial No.	Ma	ke
1	Complete Shell Assembly with piping	29171027	SR- 33,	/44, 03/2024	ECI	ЗТ
2	Side Buffer Assly Both Side Cab I		101, 10/23	123, 10/23	FASP	FASP
	Side Buffer Assly Both Side Cab II	29130050	184, 01/14	01, 01/24	FASP	FASP
4	CBC Cab I & II	29130037	0273, 05/23	0191, 05/23	Kr	
5	Hand Brake		01/2	24 - 16586	Modified	Mechwel
		29045034				
6	Set of Secondry Helical Spring	29041041			GB	D
7	Battery Boxes (both side)	29680013	129, 09/23	115, 09/23		BRITE METALLO
8	Traction Bar Bogie I			1, 04/23	NII	
9	Traction Bar Bogie II			7, 04/23	NII	
10	Centre Pivot Housing in Shell Bogie I side	29100057		52, 03/24	TEW	
11	Centre Pivot Housing in Shell Bogie II side			70, 03/24	TEW	
	Elastic Ring in Front in Shell Bogie I side	29100010		16, 07/23	AVADH	
13	Elastic Ring in Front in Shell Bogie II side		185	53, 07/23	AVADH	
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	BHEL-65-03-24-2058673,2024		BHEL	
15	Oil Cooling Radiator I	20470024	02/24, 099SRPL		STANDARD RADIATORS	
16	Oil Cooling Radiator II	29470031	02/2	4, 088SRPL	STANDARD RADIATORS	
17	Main Compressor I with Motor	29511008	EXJS 92	21896, 01/24	ELO	Gi 🗼
18	Main Compressor II with Motor	29511008	EXJS 92	21927, 01/24	EL	3i
19	Transformer Oil Cooling Pump I		489	96, 09/23	SAMAL H	ARAND
20	Transformer Oil Cooling Pump II		493	19, 09/23	SAMAL H	ARAND
21	Oil Cooling Blower OCB I	The state of the s	PDS2312101, LF	HP1001440090, 12/23	PD STEE	LS LTD
22	Oil Cooling Blower OCB II	29470043	PDS2312102_LF	IP1001439270, 12/23	PD STEE	LS LTD
23	TM Blower I		03/24, AC-576	01, CGLWLAM23001	ACC	EL
	TM Blower II	29440075	03/24, AC-576	08, CGLWLAM23095	ACC	EL
25	Machine Room Blower I		03/24, AC-54604, CGLWLAM16410		ACC	EL
	Machine Room Blower II	29440105	03/24, AC-54588, CGLWLAM14629		ACC	EL
	Machine Room Scavenging Blower I			F25/D6520, 12/23	SAMAL HARA	
	Machine Room Scavenging Blower II	29440129		F25/D6534, 12/23	SAMAL HARAND PVT LTD\	
	TM Scavenging Blower Motor I			F30/D7424, 12/23		
29		29440117			SAMAL HARAND PVT LTD\ G.T.R CO(P) LTD	
30	TM Scavenging Blower Motor II			12,16, 12/23	G.I.R CC	(P) LID
31	Traction Convertor I			SP124395-P700 P12431526-P700		
32	Traction Convertor II Vehicle Control Unit I			7-P700, 03/24		
	Vehicle Control Unit II	29741075		8-P700, 03/24	C.G	.L
	Aux. Converter Box I (BUR 1)			0012431094-P700		
	Aux. Converter Box 2 (BUR 2 + 3)			0022431094-P700		
	Axillary Control Cubical HB-1	29171180	06/23, SLH	HB10022306191	STESAL	IT LTD
	Axillary Control Cubical HB-2	29171192	05/23, SLH	HB20022305076	STESAL	IT LTD
39	Complete Control Cubicle SB-1	29171209	02/23, SB1/	2023/F/0656/924	HIND RECT	FIERS LTD
40	Complete Control Cubicle SB-2	29171210	SB2/2024/C/	0655/1042, 02/23	HIND RECT	FIERS LTD
41	Filter Cubical (FB) (COMPLETE FILTER CUBICLES)	29480140	05/23, SLI	FB00012305069	STESAL	IT LTD
	Driver Seats	29171131	03/23 -	03, 08, 82, 90	Taruc	leep
_	Transformer oil steel pipes	29230044			RANSAL	PIPES
	Conservator Tank Breather	29731057	2	03, 204	PRESS N	FORCE
10000	Ballast Assembly (only for WAG-9)	29170163	29,	05,08,07	AK	M
	Head Light		7	16, 626	ALLIED EN	GINERING
47	Ducting Assembly	29470067			TARG	SET
ADDITION OF THE PARTY OF THE PA	Filter Frame Assly.	29480103			DAD	KER W

NAME FROST NUMBER

NAME STUBIANT STARMA JE/LAS/UF

NAME ANKIT OPAL JE/LAS

Issue No.: 05 Effective Date: July-2023

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco) Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला RIY: FTE/WCR PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO: 41860

Shed: ETE

S.	ITEM TO BE CHECKED	Specified Value	Observed Value		9	
No.	The second of th	OK	_	- N	4	
1.1	Check proper Fitment of Hotel Load Converter & its output contactor. Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2. TM scavenging blower 1 & 2 & Oil Cooling unit.	OK			K	
	Check proper of Fitment of oil cooling unit (OCU).	OK		0	1	
1.3	Check proper of Fitment of oil Cooling unit (CCC). Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK			IL	
1.4	Check proper Fitment of FB panel on its position.	OK			2/4	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK			K	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK			K	
	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK	OK			
1.8	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK			114	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		0	IK.	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		C	11/2	
1.12	Check proper fitment of Bogie Body Safety Chains.	OK	OK OK			
1.13	Check proper fitment of Cow catcher.	OK				
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK	OK			
1.15	Charly Transformer Oil Loyel in both conservators Tank (Breather Tank).	OK				
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK	OK			
1.17	Check proper fitment of both battery box.	OK				
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK	OK			
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable.	OK	OK			
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAB			AB-2
1.20	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP	LP	ALP
		:35-60 mm	471	12	48	43
		Lateral Std-	1	,	1-	41
		45-50 mm	G)	39	47	1
	- () () () () () () () () () (1085-1105		L/S		R/S
1.21	Buffer height: Range (1090, +15,-5) Drg No IB031-02002.	mm	FRONT	109	u	1100
	Drg No 1803 1-02002.		REAR	100	_	110
			INLAIN	L/S	,	R/S
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm	FRONT		_	650
	Drg No-SK.DL-3430.			64	_	
_			REAR	64		641
4.00	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	6	R/S
1.23	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	116	5	118
	As her upon a minimum minimum and a second a		REAR	118		119
		4000 ±45	FRONT:			111
1.24	CBC Height: Range (1090, +15,-5) Drg No- IB031-02002.	1090, +15 -5 mm		1098		

(Signature of SSE/Elect. Loco (UE))

NAME SATISH KUMBR

DATE 26/04/24

(Signature of SSE/JE/Elect Loco)

NAME SHUBHAM SHARMA

DATE 26/09/29

(Signature of JE/UF)

NAME ANKIT UPPAL

DATE 26/09/29

Loco No. 41860

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-0054	ECBT	29100677	100360	As per PO/IRS
REAR	SL-0051	ECBT	29100677	100360	conditions

2. Hydraulic Dampers PL No. 29040012, Make: KNORR

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	26371	25792	26367	26211	25875	26378
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	44941	DY29-191	DX92-132	DY18-116	DX92-045	DX92-162
Make	DP	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
FREE END	45003	DY29-013	DX93-056	DY18-001	DX92-070	DY18-183
Make	DP	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
Bull Gear No.	23-L-15	24-A-28	23-B-12	23-E-55	23-F-36	24-A-37
Bull Gear Make	LMS	LMS	LMS	LMS	LMS	LMS

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	FAG	NBC	FAG
End	PO NO. & dt	02312	02312	02312	02312	02312	02312
Free	MAKE	FAG	FAG	FAG	FAG	NBC	FAG
End	PO NO. & dt	02312	02312	02312	02312	02312	02312

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	927	873	1020	834	890	1005
FREE END	1010	806	1021	931	924	995

Loco No. 41860

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5 1092	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION	1	2	3	4	5	6	
S.T. (PL 29100288)	MAKE	KPE	KPE	KPE	KPE	KPE	KPE
G.E. BRG PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BRG PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KM	KM	KM	KM
BACKLASH (0.254 – 0.458mm)	0.320	0.300	0.330	0.300	0.310	0.310

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	15.86	15.76	16.34	17.26	18.41	15.32
LEFT SIDE	18.34	17.82	17.90	18.62	16.90	18.00

11. TRACTION MOTOR: (PL No. 29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	PLW	-	PLW-2600
2	PLW	-	PLW-2584
3	PLW	-	PLW-2580
4	BHEL	100509	201240942
5	BHEL	100509	201240920
6	BHEL	100509	201240941

SSE/ Bogie Shop



भारत सरकार GOVERNMENT OF INDIA रेल मंत्राल्य MINISTRY OF RAILWAYS

MINISTRY OF RAILWAYS पटियाला रेलइंजन कारखाना PATIALA LOCOMOTIVE WORKS Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244

फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310 पटियाला, 147003, भारत् PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: 21.05.2024

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Itarsi.

Email: srdeetrset@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 41860 WAG9-HC.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023. (ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 41860 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/ET/WCR on 26.04.2024. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

विस्तिवाण २.5-24 (निशांत बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

PCEE: for kind information please

CELE/WCR:- for kind information please

CEE/Loco & CEE/D&Q, CMM, CPLE:- for kind information please

Dy CME/Planning: for information & necessary action please

Dv CEE/Design: for information & necessary action please

Dy CME/Design: for information & necessary action please

AWM/LAS&ABS: for information & necessary action please

AWM/LFS: for information & necessary action please

AWM/ECS: to monitor & supply of rest of the items as mentioned above for Kavach to all the concerned Electric Loco Sheds and maintain the

record.

Secy. to PCAO for kind information of PCAO please.

Loco No. 41860

List of balance items of KAVACH pneumatic pipes & fitting yet to be supplied later on. These items are currently under procurement process at PLW. The same will be advised to the shed for collection of the material as soon as it will be received at PLW.

SN	PL No.	Description of Item	Qty.
		ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 nos.
2	29611994	FEMALE TEE 3/8" BSPP – BRASS	06 nos.
		HEX PLUG -3/8" BSPT – BRASS	02 nos.
		FEMALE TEE 1/2" BSPP – BRASS	04 nos.
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos.
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos.
	· -	HEX PLUG – 1/2" BSPT – BRASS	04 nos.
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos.
3	29170114	Copper Tube OD 9.52mm (3/8") X 1.245 Mm W.T X 6 Mtr	1.2 Mtr

AWM/ABS

SSEIGIABS

SN	PL No.	Description of item	
1.	29611945	Mounting bracket arrangement provided for DE A	Quantity 04 nos.
2.		the roof top of both driver cabs. Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both	04 1105.
		- with the fool top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	02 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
3.		WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.		One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
3.	_	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables	02 nos.
).		DIN Rail fitted inside the driver desk (LP Side)	02 nos.

fiève AWM/LFS

SSE/G/LFS

Annexure-C

SN	PL No.	Description of item	
1.	42310301	Flexible conduit pize 25 2	Quantity
		Flexible conduit size 25mm² provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 nos.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	
3.	20044000	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	50 nos.
J.	29611982	Wago terminal in Machine room at back side of SB-1.	
4.	´ <u>-</u>	Harness provided from KAYA ON BE	75 nos.
5.		Harness provided from KAVACH SB to SB-1	05 wires
J.	<u>-</u>	Harness provided from KAVACH SB to SB-2	
6.	-	Harness provided from KAVAQUI OF	05 wires
7.		Harness provided from KAVACH SB to Pneumatic Panel	12 wires
1.	-	Harness provided from KAVACH SB to CAB-1	
8.	_	Harness provided from KAYAGU an	24 wires
		Harness provided from KAVACH SB to CAB-2	16 wires

AWM/ECS

SSE/G/ECS

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.