भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41869

TYPE: WAG9HC

RAILWAY SHED: WR/YTAD

PROPULSION SYSTEM: CGL

DATE OF DISPATCH: 20.05.2024

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41869

RAILWAY/SHED:WR/VTAD

DOD: May-2024

INDEX

SN	PARA	ACTIVITIES	PAGE NO.
•		Testing & Commissioning (ECS)	<u>.</u>
1.	1.0	Continuity Test of the cables	
	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	5-6
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	11-10
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	<i>4</i> .8	Verification of Converter Protection Circuits (Hardware limits)	
	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5. <i>4</i>	Auxiliary circuit 415/110	
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
	5.8 5.0	Test Harmonic Filter	
	5.9	Test important components of the locomotive	25.20
<i>6. 7.</i>	6.0 7.0	Running Trial of the locomotive	25-26 27
		Final Check List to be verified at the time of Loco dispatch Status of RDSO modifications	
8.	8.0		28
9.	1-10	Pneumatic Test Parameters	29 - 32 33
10.		Loco Check Sheet(LAS)	34-36
11.	-	Component History (LAS,ECS,ABS)	
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13	-	Warranty Conditions as per Tenders	39 -41

Effective Date: Feb 2022

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869 - CGIPSL 1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

(Ref: WI/ECS/10)

1.1 Continuity Test of Traction Circuit Cables As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

00V megger.	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ok.	100 ΜΩ	1000
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OR	100 ΜΩ	1000
514 ou Cubiclo	Earthing Choke	ok	100 ΜΩ	1000.
Filter Cubicle Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	1500
Transformer	Power Converter 1	ok	100 ΜΩ	1500
	Power Converter 2	OK	100 ΜΩ	1500
Transformer Power Converter 1		ok	100 ΜΩ	1500
	T0.4C	oK	100 MΩ	1500
Power Converter 2	Power Converter		100 ΜΩ	1600
Earth	Power Converter 2		100 ΜΩ	1600

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
	DUD1	10 K	100 MΩ	2000
Transformer	BUR1 BUR2	0/-	100 MΩ	Javo
Transformer Transformer	BUR3	200	100 MΩ	2000
	BUR1	N/	100 M Ω	1500
Earth	BUR2	De.	100 MΩ	1500
Earth	BUR3	ne_	100 MΩ	1200
Earth		00	100 MΩ	1200
BUR1	HB1	De-	100 MΩ	1200
BUR2	HB2	DK.	100 ΜΩ	1500
HB1	HB2	ne	100 ΜΩ	121
HB1	TM Blower 1	OR	100 ΜΩ	200
HB1	TM Scavenge Blower 1		100 ΜΩ	190
HB1	Oil Cooling Unit 1	N/	100 ΜΩ	130
HB1	Compressor 1	ne	100 ΜΩ	146
HB1	TFP Oil Pump 1	DK		1.10
HB1	Converter Coolant Pump 1	ne	100 ΜΩ	178
HB1	MR Blower 1	ne	100 ΜΩ	182
HB1	MR Scavenge Blower 1	OK	100 MΩ	187
HB1	Cab1	04	100 ΜΩ	1.90
Cab1	Cab Heater 1	O.C.	100 ΜΩ	193
HB2	TM Blower 2	DR	100 MΩ	191
HB2	TM Scavenge Blower 2	ne	100 ΜΩ	200
HB2	Oil Cooling Unit 2	ne	100 ΜΩ	159
HB2	Compressor 2	00	100 MΩ	17-9
HB2	TFP Oil Pump 2	DK	100 MΩ	175
HB2	Converter Coolant Pump 2	Ole	100 MΩ	150
HB2	MR Blower 2	OK	100 ΜΩ	172
HB2	MR Scavenge Blower 2	OK	100 ΜΩ	165
HB2	Cab2	OK	100 ΜΩ	177
Cab2	Cab Heater 2	012	100 MΩ	(00

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

Condition	Continuity (OK/Not OK)
By opening and closing MCB 112	9k.
By opening and closing MCB 110	ak .
	or or
	By opening and closing MCB 112 By opening and

Close the MCB 112, 110, 112.1, and 310.4 and measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	Prescribed value $> 0.5~\text{M}\Omega$	Measured Value <u>6</u> ΜΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 & 2050	Prescribed value: > 50 MΩ	Measured Value 65 MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	24
Memotel circuit of cab1 &2	10A	95
Memotel speed sensor	10A	O/L
Primary voltage detection	01A, 12A	QK.
Brake controller cab-1 & 2	06F, 06G	%

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC Page: 4 of 27

tuallan cab 1 8.7	08C, 08D	014
Master controller cab-1 &2	08E, 08F	Du
TE/BE meter bogie-1 & 2		912,
Terminal fault indication cab-1 & 2	09F	94
Brake pipe pressure actual BE electric	06H	· OK
Primary current sensors	12B, 12F	٥٢,
Harmonic filter current sensors	12B, 12F	⊃K_
Auxiliary current sensors	12B, 12F	٩٢
Oil circuit transformer bogie 1	12E, 12I	°K
Magnetization current	12C, 12G	OK.
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK.
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OX.
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OK.
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	OK
10KΩ± ± 10%)	13B	- QL
UIC line	13B	ac
Connection FLG1-Box TB	13A	

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage	3.9K Ω ± 10%	3.952
transformer (Pos. 74.2).	1Ω ± 10%	152
Resister to maximum current relay.	3.3 Ω ± 10%	3.31
Load resistor for primary current transformer (Pos. 6.11).	J.J 11	
	WAP7	WAP7
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%		
	0.2 Ω	0.21
Between wire 5 & 6	0.2 Ω	0.20
Between wire 6 & 7	0.4 Ω	0.45
Between wire 5 & 7	10 kΩ± 10%	10.0KD
For train bus, line U13A to earthing.	10 kΩ± 10%	10.000
For train bus, line U13B to earthing.	200 ΜΩ	400192
Insulation resistance of High Voltage Cable from the top of the roof to the earth	200 10112	40011
(by1000 V megger). Resistance measurement earth return	≤0.3 Ω	0.28.2
brushes Pos. 10/1. Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.285
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.2952
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2,2KQ
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.7KM
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9 KS
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.8 F.S.
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	390.N
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	105 les

Effective Date: Feb 2022

(Ref: WI/ECS/10)

DOC.NO.F/ECS/U

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be	cholted sa
marked yellow & green Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	chefed a

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Para 3.6 of the document no. 3 EHX 6 Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	cheeped a
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	ac.
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	ISK.
Test earth fault detection battery circuit by making artificial earth faul to test the earth fault detection	Sheet 04C	9K
Test control Pneumatic devices	Sheets of Group 06	QC.
Test lighting control	Sheets of Group 07	92
Pretest speedometer	Sheets of Group 10	96
Pretest vigilance control and fire system	Sheets of Group 11	9K
Power supply train bus	Sheets of Group 13	92

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

	Yes/No
3.1 Check Points. Check that all the cards are physically present in the bus stations and all the plugs are	Yey
connected. Check that all the fibre optic cables are correctly connected to the bus stations.	Yey
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yey
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yas

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:	28
Traction converter-1 software version:	28
Traction converter-2 software version:	
Auxiliary converter, 1 software version:	<u> </u>
Auxiliary converter-2 software version:	4.0
Auxiliary converter-3 software version:	40
Vehicle control unit -1 software version:	1600
Vehicle control unit -2 software version:	1600

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	g analogue signals with the help of diag Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OX
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	٩٤
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	10-1
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans	Between 99 % and 101 %	1004
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans	Between 20 % and 25 %	2-57.

10.03

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

•	•	·	
TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	100-1-
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257/
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	Alery.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	<i>(S</i>
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	75.3
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14°C
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13°C

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	choesed as
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	chaeted as
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	chaeted or
Converter and filter contactor operation with both Power Converters during Shut Down.	Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed	

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

Contactor filter adaptation by isolating any bogie Test earth fault detection battery circuit positive & negative	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco. • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open. By connecting wire 2050 to earth, create earth fault	cheered ac
CITCUIT POSITIVE & HEGALIVE	negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault	Cheesedu
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow.	choeked a
Time, date & loco number	Start/Running interlock occurs and TE/BE becomes to 0. Ensure correct date time and Loco number	a

Effective Date: Feb 2022

DOC.NO.F/ECS/VI (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

the phase of the following of the transformers.

the phase of the	following of the transformers.		Measured	Measured
Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	output	polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.051	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.051	QL O
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.0400	°K
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B-814B	10.05V _p and same polarity	10.0448	OK.
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.8 UP CHEVRIMS	ů.
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.11Vl 6.44VRMS1	OX

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203-1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.	58-7 UP	OK
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	155V	DK

11. OURM

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

Primary Voltage Transformer 4.3

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	25kV	250%	25KV	2.50%
SLG2 G 87-XUPrim	25 kV	250%	258~	250%

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	17kV	170%	17KV	1701/
SLG2 G 87-XUPrim	17 kV	170%	1740	1201.

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 $V_{\mbox{\scriptsize RMS}}$ through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV	300%	300%	300KU
SLG2 G 87-XUPrim	30 kV	300%	300%	3008

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

PATIALA LOCOMOTIVE WORKS, PATIALA

(Ref: WI/ECS/10)

DOC.NO.F/ECS/VI

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

Minimum voltage relay (Pos. 86) 4.4

Minimum voltage relay (Pos. 86) must be adjus	ted to approx 68%
Activate loca in cooling mode. Check Power supply of 48V to	(Yes/No)
maining undergo relay Disconnect orthaty voltage	
transformer (wire no. 1511 and 1512) from todu resistor (FOS.	
74.3) and connect variac to wire no. 1501 and 1502. Supply	
200V _{RMS} through variac. In this case; <i>Minimum voltage relay</i>	l ·
(Pos. 86) picks up	
	·
	(Yes/No)
Try to activate the cab in driving mode:	(165/140)
Contactor 218 do not close; the control	
electronics is not be working.	
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	n;
Test situation and	
A Livete the each in cooling mode: Paice nanto:	(Yes/No)
Activate the cab in cooling mode; Raise panto;	
Supply 200V _{RMS} through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
Again supply 200V _{RMS} through variac to wire no.	L(Yes/No)
1501 & 1502; Decrease the supply voltage below	
140V _{RMS} ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current trans &1522 (including the resistor at Pos. 6.11); Put loco in sin on contact 136.3; Close VCB; supply 3.6A _{RMS} at the of maximum current relay Pos. 78 for correct over current v	nulation for driving mode; Open $R_3 - R_4$ pen wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on	(Yes/No)
display.	
Keep contact $R_3 - R_4$ of 136.3 closed; Close VCB; Tune the /9.9 A_p at the open wire 1521;	e resistor 78.1 for the current of 7.0A _{RMS}
VCB opens with Priority 1 fault message on display.	((Xes/No)

DOC:NO.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page : 14 of 27

4.6 Test current sensors		Prescribed value	Set/Measured
Name of the sensor	Description of the test	FIESCIENCE VAINE	value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298ma
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		
	Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		338mm
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1o 2 pin no. 7(+) & 8(-)	r	
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1012 pin no. 7(+) & 8(-)		346 mp
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DO} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8(-)		reA
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	reA

(Ref: WI/ECS/10)

DOC.NO.F/EUS/VI

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= C For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK_
Fibre optic failure in Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	ac

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

	F2/4	E2/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Status	52/1	52/2	 		closp	1	close	close	oper
AI BUR OK	close	appr		 				7	· 008
BUR1 off	close	open	closs		open	clos	open	Open	class
BUR2 off	open	open	loss	Loss		closs	open	Open	close
BUR3 off	oper	close	open	close	class	clase	open	Jeg.	CUB

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yey
No rubbish in machine room, on the roof, under the loco.	Yey
All the electronic Sub-D and connectors connected	Hos
All the MCBs of the HB1 & HB2 open.	1/6)
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Per
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Pos
All the bogie body connection and earthing connection done correctly.	Ye,
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	1965

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	choesed as
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Accepted on
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	Cholded ax
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	charted ar
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	checked ax
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	chapted on
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	choeked on
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		CROCKed &

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.8	10:3
Oil pump transformer 2	9.8 amps	9.9	10:3
Coolant pump converter 1	19.6 amps	4.5	5.5
Coolant pump converter 2	19.6 amps	4.5	5.5
Oil cooling blower unit 1	40.0 amps	39.0	1750
Oil cooling blower unit 2	40.0 amps	39.0	170,0
Traction motor blower 1	34.0 amps	29.0	160.0
Traction motor blower 2	34.0 amps	28,0	165.0
Sc. Blower to Traction motor blower 1	6.0 amps	2.9	17:0
Sc. Blower to Traction motor blower 1	6.0 amps	3 13	16.0
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.0	140.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.0	136.0

Effective Date: Feb 2022

Doc.No.F/ECS/07 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	998	Yey
2011	DC link voltage of BUR1	60% (10%=100V)	636V	79
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Bowl	Yes
Botta , ett		1		

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1002V	709
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	les
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amp	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Bry	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12 Amp	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1101	Yer

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10040	Yes
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637V	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Es.
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21 Amp	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	11 Amp	les
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	%

* Readings are dependent upon charging condition of the battery.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the

xiliaries at ventilation level 3 of the locomotive.

Condition of	Loads on BUR1	Loads in BUR2	Loads in BUR3
BURS All BURS OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery (charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.3	20,0
Machine room blower 2	15.0 amps*	4-0	20,0
Sc. Blower to MR blower 1	1.3 amps	1.5	5.2
Sc. Blower to MR blower 2	1.3 amps	1.7	5.2
Ventilator cab heater 1	1.1 amps	1-3	1.6
Ventilator cab heater 2	1.1 amps	, , 2	1.6
Cab heater 1	4.8 amps	50	5./
Cab heater 2	4.8 amps	5.0	51

* For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1 Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choosed or
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Charted &
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chored ac
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeped an
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	C-Rolfed &
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheered or
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	CRILLEN &

Effective Date: Feb 2022

Doc.No.F/ECS/UT (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

or Converter 2 Results desired in sequence Result obtained						
Test Function	Results desired in sequence	Result Obtained				
charging and pre- charging and charging	Fraction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	CROCKERD PR				
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Challed ac				
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Charted a				
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	chouped of				
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeped &				
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cholded in				
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked &				

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of	Start up the loco with both the	
protective shutdown	converter. Raise panto. Close VCB. Move Reverser handle to forward or	
by Converter 1 electronics.	reverse. Remove one of the orange	
electionics.	fibre optic feedback cable from	o choesed as
	converter 1Check that converter 1 electronics produces a protective shut	o CRIEBE
	down.	
	VCB goes off	
	Priority 1 fault mesg. on DDU	
	appears	1
	Disturbance in Converter 1	
Measurement of	Start up the loco with both the	4
protective shutdown	converter. Raise panto. Close VCB.	· ·
by Converter 2	Move Reverser handle to forward or.	
electronics.	reverse. Remove one of the orange	/\
	fibre optic feedback cable from	(
	converter 2. Check that converter 2	reflected on
	electronics produces a protective shu	γ -
	down.	
	• VCB goes off	
	• Priority 1 fault mesg. on diagnostic	
	display appears	l
	Disturbance in Converter 2	<u> </u>

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	CROCKER OR

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

Test earth fault	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop Make a connection between wire 	o chapted ac
detection harmonic filter circuit.	no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	CROCKED ON
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	O.L.

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	choefed a	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheefed of	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	choited &	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	checked a	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	Charted &	

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	Charled on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	charged on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	charged so
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Acetad W
Illuminated Push button	All illuminated push buttons should glow during the operation	chaered or
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Rocked &
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	poted
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Rolling

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41869

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

operation of the locomotive brakes are released i.e. BC < 1 Kg/cm². For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then • Buzzer should start buzzing. • LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. • Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75 Kg/cm²). • With automatic train brake applied (BP< 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP	5.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
locomotive For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then • Buzzer should start buzzing. • LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. • At low pressure of MR (< 5.6 Kg/cm²). • With direct loco brake applied (BP<4.75 Kg/cm²). • With automatic train brake applied (BP<4.75 Kg/cm²). • With automatic train brake applied (BP<4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With automatic train brake applied (BP<4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). •		-	brakes are released i.e. BC < 1 Kg/cm ² .	
sanding foots switch or TE/BE throttle or BPVG switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP<4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4		• •	For 60 seconds do not press vigilance foot switch or	
switch then Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Check the power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with				
Buzzer should start buzzing. LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Wi	.		· · · · · · · · · · · · · · · · · · ·	
LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. Check start/run interlock Mith park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.7			· II	
Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. • Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (a LEVAN should allow continuously	
vigilance foot switch further for 8 seconds then: • Emergency brake should be applied automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. • Check regenerative braking. • Bring the TE/BE throttle to BE side. Loco speed should start reducing. • Check for BUR redundancy test at ventilation level 1 & 3 of loco operation • Check the power converter by switching off the electronics. VCB should open and converter isolation test • Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			Do not acknowledge the alarm through BPVG or	e cea
Emergency brake should be applied automatically. VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. Check start/run interlock			vigilance foot switch further for 8 seconds then:-	
automatically. • VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. • Check start/run interlock • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed should start reducing. O. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test automatic relation of the too and acknowledge BPVR and press & release vigilance foot switch PLOTATE TO AND AUXILIARIES AND AUXILIARI		,		
VCB should be switched off. Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. Check start/run interlock			 	
Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. Check start/run interlock Mith park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75				
180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with				
acknowledge BPVR and press & release vigilance foot switch. Oheck start/run interlock With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). With electronics. The Tractive / Braking effort should ramp down, VCB should ramp down, VCB should ramp down, VCB should end of all the electronics. The Tractive / Braking effort should ramp down, VCB should end of all the electronics. The Tractive / Braking effort should ramp down, VCB should end electronics. The Tractive / Braking effort should ramp down, VCB should electronics. The Tractive / Braking effort should ramp down, VCB should electronics. The Tractive / Braking effort should ramp down, VCB should electronics. The Tractive / Braking effort should ramp down, VCB should electronics. The Tractive / Braking effort should ramp down, VCB should electronics. The Tractive / Braking effort should ramp down, VCB should electronics. The Tractive / Braking effort should electronics electr				
foot switch. Check start/run interlock At low pressure of MR (< 5.6 Kg/cm²). With park brake in applied condition. With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP< 4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). PROVED REQUEST: Reputation	Ì			
With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURS can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test Switch off stellar brake applied (BP< 4.75Kg/cm²). PROVIDED CREATED			fact switch	
With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURS can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test Switch off stelectronics. VCB should open and converter should get isolated and traction is possible with	7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).	reel o
With direct loco brake applied (BP< 4.75Kg/cm²). With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURS can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test Switch off stelectronics. VCB should open and converter should get isolated and traction is possible with			• With park brake in applied condition.	-
With automatic train brake applied (BP<4.75Kg/cm²). With emergency cock (BP < 4.75 Kg/cm²). Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			• With direct loco brake applied (BP< 4.75Kg/cm ²).	refred
• With emergency cock (BP < 4.75 Kg/cm²). Check traction interlock Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. In the event of failure of one BUR, rest of the two redundancy test at ventilation level 1 & 3 of loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test which off the electronics is possible with			• With automatic train brake applied (BP<4.75Kg/cm ²).	
Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly. D. Check regenerative braking. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Check the power converter isolation test Tractive /Braking effort should ramp down, VCB shoul				
braking. Should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Loco operation Check the power converter isolation test Should start reducing. In the event of failure of one BUR, rest of the two BURs and take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	8.	Check traction interlock	Switch of the brake electronics. The	rod (
braking. Should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Loco operation Check the power converter isolation test Should start reducing. In the event of failure of one BUR, rest of the two BURs and take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			Tractive /Braking effort should ramp down, VCB	
braking. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation Check the power converter isolation test Should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			should open and BP reduces rapidly.	
braking. Should start reducing. In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Loco operation Check the power converter isolation test Should start reducing. In the event of failure of one BUR, rest of the two BURs and take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed 2 Rec	red
redundancy test at ventilation level 1 & 3 of loco operation Check the power converter isolation test RURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		braking.	should start reducing.	
ventilation level 1 & 3 of loco operation Switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Check the power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with	10.	Check for BUR	In the event of failure of one BUR, rest of the two	
loco operation Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case. Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with		1,		Keel
Switch off the 2 BURs; loco should trip in this case. 1. Check the power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with				
1. Check the power Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		loco operation		
converter off the electronics. VCB should open and converter should get isolated and traction is possible with				\dashv
isolation test should get isolated and traction is possible with	11.	. *	Create disturbance in power converter by switching	ced &
		1		
another power converter.	-	isolation test		
			another power converter.	

Isşue No.03

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

L'ocomotive No.: 4/869

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	item	Cab-1	Cab-2	Remarks
1	Head lights	01	OL	
2	Marker Red	OK	dr	
3	Marker White	OL	OR	
4	Cab Lights	a_	ac	
5	Dr Spot Light	O/	OL	
6	Asst Dr Spot Light	O.	ck	or charact working or
7	Flasher Light	ar_	ac	
8	Instrument Lights	ar	ac	
9	Corridor Light	OK	ar	
10	Cab Fans	3/-	100	
11	Cab Heater/Blowers	84	OK	
12	All Cab Signal Lamps Panel 'A'	84_	OK	

Status of RDSO modifications

LOCO NO: 41869

	Modification No.	Description	Remarks
Sn	Modification No.	_	
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of	Ok/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 120	Øk/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKVV, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lewer portion of HB2 panel and provision of Synthetic resin	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401	bonded glass fiber sheet for three phase locomotives. Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Ok/Not Ok
7.	Rev.'0' Dt 10.08.11 RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower	ok/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12		6k/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	B Paralleling of interlocks of EP contactors and auxiliary	Ok/Not Ok
11		Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12		Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase	Ok/Not Ok
13	RDSO/2013/EL/MS/042 Rev.'0' Dt 22.05.13	5 Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	
14		6 Modification sheet of Bogie isolation rotary switch in three	
1		7 Modification sheet for MCP control in three phase electric	<u> </u>
1	6 RDSO/2013/EL/MS/042 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	OK/NOT OK
1	7 RDSO/2014/EL/MS/043 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	
1	8 RDSO/2017/EL/MS/046 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT	OR/NOT OR
1	9 RDSO/2017/EL/MS/046 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	
2	RDSO/2018/EL/MS/04 Rev.'0'		Ok/Not Ok
L	<u> </u>		

Signature of JE/SSE/ECS

Loco No.: 41869

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: M/s Knorr			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	
	Record pressure Build up time (8.0 kg/cm2)		120 sec (knorr)	119 sec
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.4
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.50 Kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.55 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co)
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	OK
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.3 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 35
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-28 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.5 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.5 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10.2 Kg/cm2
		MM3882 &	kg/cm2, Closes at	
		MM3946	8±0.20 kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.35 minute

PLW/PATIALA

Loco No.: 41869

2.7	Check unloader va	alve operation time				Approx. 12 Sec.	11 sec
2.8	Check Auto Drain	Valve functioning (12	24 & 87)			Operates when Compressor starts	ok
2.9	Check CP-I deliver Direct by BLCP.	ry safety valve setting	(10/1). Run CP		est spec. & MM3946	11.50±0.35 kg/cm2	11.2 Kg/cm2
2.10	Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP			est spec. & MM3946	11.50±0.35 kg/cm2	11.45 Kg/cm2	
2.11	Switch 'OFF' the c valve to reset at p pressure.		est spec. & MM3946				
2.12	by drain cock of 1	ch 'OFF' compressor, " Main Reservoir, Sta ssure of Duplex Check	rt Compressor,	CLW's chec F60.812 Ve	ck sheet no. ersion 2	5.0±0.10kg/cm2	5.0 Kg/cm2
2.13	136F. Check press		Open isolate cock	CLW's chec F60.812 Ve	ck sheet no. ersion 2	6.0±0.20kg/cm2	6.05 Kg/cm2
3.0	Air Dryer Opera						
3.1	open for Test Che	90 of 2 nd MR to start (eck Air Dryer Towers t	o change.			Tower to change every minute	ok
3.2		tops from Air Dryer a	t Compressor stops				
3.3	Check condition of			Blue	Blue		
4.0	Main Reservoir L	eakage Test					
4.1	Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.		D&M test spec. MM3882 & MM3946		Should be less than 1 kg/cm2 in 15 minutes	0.7 Kg/cm2 in 15 minutes	
4.2	Check BP Air leak	age			est spec. & MM3946	0.15 kg/cm2 in 5 minutes	0.05 Kg/cm2 in 5 minutes
5.0	Brake Test (Aut	omatic Brake opera	ation)				
5.1	Record Brake Pipe	e & Brake Cylinder pre	essure at Each Step				
	Check proportionality of Auto Brake system			eck sheet no. Version 2			
	Auto controller position	BP Pressure kg/cm2 BC (WAG-9 & WAP-7) Kg/cm2		9 & WAP-7)	BC (WAP-5) Kg/cm2		
		Value	Result	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
	Full service	3.35±0.2	3.35 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-

PLW/PATIALA

Loco No.: 41869

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	10 Sec
5.2	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946	0±2 300.	10 360
E 2			DD proceure felle	
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls to Below 2.5	OK
		MM3882 & MM3946	kg/cm2	UK
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.25
3.4	check braker iperressure switch on operates	F60.812 Version 2	4.05- 4.35	Kg/cm2
		100.012 VEISIOI12	kg/cm2	Ky/CITIZ
			Opens at BP	
			2.85- 3.15	3.0
			kg/cm2	
5.5	Move Auto Proke Controller handle from Dunning to	DeM test spec	kg/ciliz	Kg/cm2
5.5	Move Auto Brake Controller handle from Running to	D&M test spec. MM3882 & MM3946		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	1011013882 & 1011013940		
	Max. BC developed		4.1.000	
	WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	20 sec
Г/	WAG9 - BC 2.50 ± 0.1 kg/cm2	DOM to the second	21±3 sec.	20 300
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure up			
	to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time		47.5.05	
	WAP7		17.5±25 sec.	_,
	WAG9		52±7.5 sec.	56 sec.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	78 Sec
	BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test : The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.80
	functioning of brake.		60 Sec.	Kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors in			
	working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure			
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.55
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 Sec
	time	MM3882 & MM3946		

PLW/PATIALA

Loco No.: 41869

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	11 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now De- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			50 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

		R	OOF COMP	ROOF COMPONENT CAB 1 & 2	
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr po
	Pantograph	29880014(HR),	2	177	J. 110.
		29880026		FAIVELEY, GENERAL STORES	C24-2783,MAR-2024,3439-08-23
2	Servo motor	29880026	2	GENERAL STORES	3439-08/2023
	Air Intake filter Assly		2	PARKER	O/C 14430/BU/01 /BU/4/ 03 34) AFI
ω		29480103	ı		0/C 1442P/B/RH/01 (PLW-03-24), AFI
4	Insulator Panto Mtg.	29810127	×	IFC .	0/C/+38A-UZ-Z4
					03/23,03/23
			AIDDLE RO	MIDDLE ROOF COMPONENT	
5	High Voltage Bushing	29731021	1		5325-02-24
6	Voltage Transformer	2965028	1	TEM	2023-N-663149
7	Vacuum Circuit Breaker	25712202	1	ĒR	2265/2066-28N2-20-03-2024
∞	Insulator Roof line	29810139	9	IEC	05-23 06-23
9	Harmonic Filter	29650033		ITECH	02/24/232496/19
10	Earth Switch	29700073	Е	AUTOMETER	AALN/03/2024/014/FS/334
11 5	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	54835-2023 54827-2023
			Air Br	Air Brake Components	
12 /	Air Compressor (A,B)	29511008	2		EXKS 928020 -A, EXKS 922017 -B
13 /	Air Dryer	29162051	1	TRIDENT	
14 E	Babby compressor	25513000	1	CEC	171-04-24
15 /	Air Brake Panel	29180016	1	KNORR	23-11-CO-3132
16 0	Contoller (A,B)	29180016	2	KNORR	23-11-FO-3176 A, 24-03-FO-3401 B
17 E	Breakup Valve	29180016	2	KNORR	
18 v	wiper motor	29162026	4	ELGI	

SSE/ABS

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41869 LIST OF ITEMS FITTED BY ECS RLY: WR

· SHED: VTAD

PROPULSION SYSTEM: CGL

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER
	LED Based Flasher Light Cab I & II	29612937	22679	22784	ALTOS
	Led Marker Light Cab I & II	29612925	2573/2663/	2549/2563	KEPCO
	Cab Heater Cab I & II	29170011	820	887	ELECOS
_	Crew Fan Cab I & II	29470080	5470/4886/5478/5487		SARIA
	Master Controller Cab I	29860015	6454		WOAMA
_	Master Controller Cab II	. 29000019	64	56	
	Complete Panel A Cab I & II	29178265	466A	466B	
	Complete Panel C Cab I & II	29170539			HIND
	Complete Panel D Cab I & II	29178265	466A	· 466B	
	Complete Cubicle- F Panel Cab I & II	29178162	CGKF/24042307	CGKF/24042307	CG
	Speed Ind.& Rec. System	29200040	MTELS2404029/	MTELS2404029	AAL
	Battery (Ni- Cd)	29680025	В	30	HBL
	Set of Harnessed Cable Complete	29600420			KAYSONS
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	29500047	24/1503 & 02/24	24/1515 & 02/24	TROLEX
15	Transformer Oil Pressure Sensor (Cab-2)		24/1493 & 02/24	24/1520 & 02/24	
	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)	29500035	BG/TFP/55	62-FEB-23	BG INDUSTRIES
	Transformer Oil Temperature Sensor (Cab-2)		BG/TFP/55	97-FEB-23	
	Roof mounted Air Conditioner I	29811028	CCPL/HVA	C/CLW/0002	CEMCON
	Roof mounted Air Conditioner II	29011020	CCPL/HVAC	C/CLW/0001	OLINGO!!





			MOTIVE WORKS, PA				
		LOCO NO-418	369/WAG-9HC/WR/V	TAD	-		
S.No.	Equipment	PL No.	Equipme	nt Serial No.	Ma	ake	
1	Complete Shell Assembly with piping	29171027	Sr. 377	7, 04/2024	ВН	ILAI	
2	Side Buffer Assly Both Side Cab I	29130050	1836, 12/23	1622,10/23	KM	KM	
3	Side Buffer Assly Both Side Cab II	29130030	1249, 08/23	677,06/23	KM	KM	
4	CBC Cab I & II	29130037	01/24	02/24	FASP	FASP	
5	Hand Brake		02/2	4- 16747	Modified	1.5	
6	Set of Secondry Helical Spring	29045034			ABO		
7	Battery Boxes (both side)	29041041	105 02/2024				
8		29680013	185, 03/2024	09, 03/24	BRITE METALLOY	D R STEEL	
9	Traction Bar Bogie I Traction Bar Bogie II			, 05/23	NII		
10	Centre Pivot Housing in Shell Bogie I side			, 05/23	NII		
11	Centre Pivot Housing in Shell Bogie II side	29100057		04/24	AN		
12	Elastic Ring in Front in Shell Bogie I side			04/24	AN		
13	Elastic Ring in Front in Shell Bogie II side	29100010		02, Mfg 12/23	SSI		
		20721000 ()		02, Mfg 12/23	SSI	PL *	
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	CG-65-04-24-BH	IL-11469/04, 2024	CC	6	
15	Oil Cooling Radiator I	20.000	02/24, FG41500	02/M1/23-24/623	APOLLO INDUS	TRIAL CORPS	
16	Oil Cooling Radiator II	29470031		02/M1/23-24/631	APOLLO INDUS		
17	Main Compressor I with Motor			017, 02/24	ELC	- 1	
18	Main Compressor II with Motor	29511008		020, 02/24			
-	Transformer Oil Cooling Pump I				ELC		
-	Transformer Oil Cooling Pump II			, 09/23	SAMAL HARAND		
	Oil Cooling Blower OCB I			, 09/23	SAMAL HARAND		
-		29470043		03/24, AC-58177, LHP1001471396		ACCEL	
-	Oil Cooling Blower OCB II			1001461041, 03/24	PD STEELS LTD		
	TM Blower I	29440075		AF05, 23P2811/05	SAINI ELECTRICAL PVT LTD		
	TM Blower II		03/24, 23P2601	AF02, 23P2601/02	SAINI ELECTRI	CAL PVT LTD	
	Machine Room Blower I	29440105	MF-24.02	.62, 02/24	G.T.R CO	(P) LTD	
	Machine Room Blower II	25 1.10203	MF-24.02	.48, 02/24	G.T.R CO	(P) LTD	
27	Machine Room Scavenging Blower I	29440129	D25-6301, CF2	25D6663, 02/24	SAMAL HARAN		
28	Machine Room Scavenging Blower II	29440129	D25-6323, CF2	5/D6685, 02/24	SAMAL HARAN		
29	TM Scavenging Blower Motor I	29440117	ST-23.12	.31, 12/23	G.T.R CO		
30	TM Scavenging Blower Motor II	23440117	ST-24.02.1	100, 02/24	G.T.R CO		
	Traction Convertor I		04/24, CGP12	2441609-P724	0.,,,,,	. ,	
	Traction Convertor II	L'I	04/24, CGP12	2441610-P724			
	/ehicle Control Unit I	29741075		P724, 03/24			
	/ehicle Control Unit II			P724, 03/24	C.G.	L	
	Aux. Converter Box I (BUR 1)			12441137-P724			
	Aux. Converter Box 2 (BUR 2 + 3) Axillary Control Cubical HB-1	20171100		22441137-P724			
	Axillary Control Cubical HB-2	29171180		10022306194	STESALI		
-	Complete Control Cubicle SB-1	29171192	HB2/2024/C/0087/622, 05/23		HIND RECTIF		
	Complete Control Cubicle SB-2	29171209 29171210	02/24, SB1/-		KAYSONS ELECTR		
E	ilter Cubical (FB) (COMPLETE FILTER		04/23, SB2		KAYSONS ELECTR	ICAL PVT LTD	
C	UBICLES)	29480140	FB/2024/B/05		HIND RECTIF	IERS LTD	
	Priver Seats		11/23- B.No.272, S	No01, 25,, 37, 72	ABI		
	ransformer oil steel pipes	29230044	RANSA		RANSAL	pipes	
_	onservator Tank Breather	29731057	23-1710,	23-17107	YOGYA ENETRI	PRISES LTD	
	allast Assembly (only for WAG-9)	29170163	34	1,	AKN		
	ead Light		483/	494	M/S ENS	AVE	
	ucting Assembly	29470067			GOSPH		
18 F	ilter Frame Assly.	29480103			PARKE		

NAME Desh Band hu SSE/LAS NAME SHUBBAN SHARMA

NAME Annut

Effective Date: July-2023

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 41869

Shed: VTAD

S. No.	ITEM TO BE CHECKED	Specified Value	Ot	served Va	lue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		- NA	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2. TM scavenging blower 1 & 2 & Oil Cooling unit.	ОК		OK	
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		010	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		OK	
1.5	Check proper Fitment of FB panel on its position.	OK		OK	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		OK	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		OK	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		014	2.4
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		014	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		014	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		012	4
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		OK	
1.13	Check proper fitment of Cow catcher.	OK		012	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		012	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		OK	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		OK	
1.17	Check proper fitment of both battery box.	OK		014	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK	100	010	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK		01	_
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAE	3-1	CAB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std :35-60 mm	LP 54	ALP LP	
		Lateral Std- 45-50 mm	-	11 53	46
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	R/S
	Drg No IB031-02002.	mm	FRONT	1102	1100
			REAR	1095	1100
4.22	Puffer Length, Pages (641 mm + 2 to 10 mm with huffer fees)	641 mm	7,507,117	L/S	R/S
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-SK.DL-3430.	041 11111	FRONT		
	DIG NO-3N,DE-3430.			644	644
			REAR	645	645
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	117	116
			REAR	114	118
1.24	CBC Height: Range (1090, +15,-5)	1090, +15	FRONT:		110
1.24	Drg No- IB031-02002.	-5 mm	REAR:	1103	
				1103	

(Signature of SSE/Elect. Loco (UF))

(Signature of SSE/JE/Elect Loco)

NAME CHUBHAM SHARMA

DATE 20/05/29

Ankit appul (Signature of JE/UF)

NAME ANKIT UPPAL

DATE 20/05/24

Loco No. 41869

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-0063	ECBT	29100677	100360	As per PO/IRS
REAR	SL-0061	ECBT	29100677	100360	conditions

2. Hydraulic Dampers (PL No. 29040140) Make: ESCORT

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	26565	26395	26437	26175	26397	26178
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	56214	00853	56203	56157	56176	56224
Make	D.P.	D.P.	D.P.	D.P.	D.P.	D.P.
FREE END	56169	01168	56085	55958	56169	56818
Make	D.P.	D.P.	D.P.	D.P.	D.P.	D.P.
Bull Gear No.	23-B-29	23-F-62	24-B-34	23-L-35	22-L-38	23-K-07
Bull Gear Make	LMS	LMS	LMS	LMS	LMS	LMS

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	2312	2312	2312	2312	2312	2312
Free	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	2312	2312	2312	2312	2312	2312

6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	865	913	953	860	904	1017
FREE END	804	825	797	992	989	933

Loco No. 41869

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	KPE	KPE	KPE	KPE	KPE	KPE
GE Brg. PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
FE Brg. PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	EEE	EEE	EEE	KP	EEE	KP
BACKLASH (0.254 – 0.458mm)	0.300	0.350	0.300	0.320	0.310	0.320

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	16.21	17.42	18.43	16.14	17.28	15.82
LEFT SIDE	15.49	15.35	15.52	15.35	16.90	16.66

11. TRACTION MOTOR: (PL No. 29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	PLW	-	PLW-2659
2	PLW	-	PLW-2647
3	BHEL	102297	201240875
4	PLW	-	PLW-2632
5	BHEL	102297	201240912
6	BHEL	102297	201240903

E/ Rogio Sho

SSE/ Bogie Shop

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- 8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



भारत सरकार GOVERNMENT OF INDIA

रेल मंत्राल्य

MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना

PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244

फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310

माबाइल: 9779242310 पटियाला, 147003, भारत् PATIALA, 147003, INDIA आज़ादी_{का} अमृत महोत्सव

(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: 02.07.2024

(Through Mail)

Sr. Div. Mechanical Engineer, Electric Loco Shed, Vatva.

Email: srdmedvta@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 41869 WAG9-HC.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 41869 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to DLS/VTA/WR on 20.05.2024. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

(निशांत बंसीवाल) उप मुख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/WR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

Loco No. 41869

List of balance items of KAVACH pneumatic pipes & fitting yet to be supplied later on. These items are currently under procurement process at PLW. The same will be advised to the shed for collection of the material as soon as it will be received at PLW.

SN	PL No.	Description of item	Qty.
	en de la companya de	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 nos.
2	29611994	FEMALE TEE 3/8" BSPP – BRASS	06 nos.
		HEX PLUG -3/8" BSPT – BRASS	02 nos.
		FEMALE TEE 1/2" BSPP – BRASS	04 nos.
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos.
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos.
		HEX PLUG – 1/2" BSPT – BRASS	04 nos.
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos.
3	29170114	Copper Tube OD 9.52mm (3/8") X 1.245 Mm W.T X 6 Mtr	1.2 Mtr

AWMIABS

SSÉ/G/ABS

CN	PL No.	Description of item	Quantity
SN 1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.	_	WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	-	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.		80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	-	DIN Rail fitted inside the driver desk (LP Side)	02 nos.
1	·	<u></u>	_ /





Annexure-C

SN	PL No.	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm ² provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 nos.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.		Harness provided from KAVACH SB to SB-1	05 wires
5.	· · · · · · · ·	Harness provided from KAVACH SB to SB-2	05 wires
6.	· <u>-</u>	Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	_	Harness provided from KAVACH SB to CAB-1	24 wires
8.	<u> </u>	Harness provided from KAVACH SB to CAB-2	16 wires

Aym/ECS

SSE/G/ECS