# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

## PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.: 41942

TYPE: WAG9HC

RAILWAY SHED: ECR/BJU

PROPULSION SYSTEM: CGL

**DATE OF DISPATCH:** 25.10.2024

लोको निर्माण रिकार्ड



# पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41942

RAILWAY/SHED: ECR/BJU

**DOD: Oct-2024** 

#### **INDEX**

SN	PARA	ACTIVITIES	PAGE NO.	
Testing & Commissioning (ECS)				
1.	1.0	Continuity Test of the cables		
	1.1	Continuity Test of Traction Circuit Cables		
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4	
	1.3	Continuity Test of Battery Circuit Cables		
	1.4	Continuity Test of Screened Control Circuit Cables		
2.	2.0	Low Tension test		
	2.1	Measurement of resistor in OHMS (Ω)	5-6	
	2.2	Check Points	3-0	
	2.3	Low Tension Test Battery Circuits (without control electronics)		
3	3.0	Downloading of Software		
	3.1	Check Points		
	3.2	Download Software	7-10	
	3.3	Analogue Signal Checking		
	3.4	Functional test in simulation mode		
4	4.0	Sensor test & convertor test		
	4.1	Test wiring Transformer Circuits – Polarity Test		
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)		
	4.3	Primary Voltage Transformer		
	4.4	Minimum voltage relay (Pos. 86)	11-16	
	4.5	Maximum current relay (Pos. 78)	77.70	
	4.6	Test current sensors		
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)		
	4.8	Verification of Converter Protection Circuits (Hardware limits)		
_	4.9	Sequence of BUR contactors		
5.	5.0	Commissioning with High Voltage		
	5.1	Check List		
	5.2	Safety test main circuit breaker		
	5.3	Auxiliary Converter Commissioning		
	5.3.1	Running test of 3 ph. auxiliary equipments		
	5.3.2	Performance of Auxiliary Converters	40 OF	
	5.3.3	Performance of BURs when one BUR goes out	16-25	
	5.4 5.5	Auxiliary circuit 415/110 Hotel Load Circuit		
	5.6	Traction Converter Commissioning		
	5.7	Test protective shutdown SR		
	5.7 5.8	Test Harmonic Filter		
	5.9	Test important components of the locomotive		
6.	6.0	Running Trial of the locomotive	25-26	
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27	
8.	8.0	Status of RDSO modifications	28	
9.	1-10	Pneumatic Test Parameters	29 - 32	
10.		Loco Check Sheet(LAS)	33	
11.	-	Component History (LÁS,ECS,ABS)	34-36	
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38	
13	-	Warranty Conditions as per Tenders	39 -41	

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### **PATIALA LOCOMOTIVE WORKS, PATIALA**

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 1942 BHGL 1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

#### 1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ok	100 ΜΩ	650 ma
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	oK	100 ΜΩ	600 m (1
Filter Cubicle	Earthing Choke	oK	100 ΜΩ	650Ma.
Earthing Choke	Earth Return Brushes	οK	100 ΜΩ	500MM
Transformer	Power Converter 1	οK	100 ΜΩ	booma
Transformer	Power Converter 2	OK	100 ΜΩ	650MA
Power Converter 1	TM1, TM2, TM3	oK	100 ΜΩ	600 mA
Power Converter 2	TM4, TM5, TM6	οK	100 ΜΩ	600 ma
Earth	Power Converter 1	οK	100 ΜΩ	. 650 ma
Earth	Power Converter 2	οK	100 ΜΩ	600 ma

#### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

Issue No.03 Doc.No.F/ECS/01

. Effective Date: Feb 2022

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/942

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	øK'	100 MΩ	900 M/L
Transformer	BUR2	OK	100 MΩ	900 m2
Transformer	BUR3	OK	100 MΩ	800 ml
Earth	BUR1	οK	100 MΩ	GOD MA
Earth	BUR2	οK	100 MΩ	600 ml
Earth	BUR3	oK	100 MΩ	FOOML
BUR1	HB1	οK	100 MΩ	600 ML
BUR2	HB2	οK	100 MΩ	700 m
HB1	HB2	oK	100 MΩ	JUD MYL
. HB1	TM Blower 1	oK	100 ΜΩ	600 MA
HB1	TM Scavenge Blower 1	oK	100 M <b>Ω</b>	500 M/L
HB1	Oil Cooling Unit 1	OK	100 MΩ	600 MM
HB1	Compressor 1	oK	100 MΩ	700 MM
HB1	TFP Oil Pump 1	οK	100 MΩ	900M/L
HB1	Converter Coolant Pump 1	οK	100 ΜΩ	600 M/L
HB1	MR Blower 1	oK	100 ΜΩ	SOO MYL
HB1	MR Scavenge Blower 1	oK.	100 ΜΩ	600 Mr.
HB1	Cab1	oK	100 MΩ	FOO M/L
Cab1	Cab Heater 1	oK	100 MΩ	600 M/L
HB2	TM Blower 2	oK	100 MΩ	FOOML
HB2	TM Scavenge Blower 2	oK	100 ΜΩ	SOOMA
HB2	Oil Cooling Unit 2	oK	100 MΩ	FOOM
HB2	Compressor 2	OK	100 ΜΩ	900 MA
HB2	TFP Oil Pump 2	oK	100 M $\Omega$	600 M
· HB2	Converter Coolant Pump 2	oK	100 MΩ	700 M2
HB2	MR Blower 2	OK	100 MΩ	GOO MAL
HB2	MR Scavenge Blower 2	oK	100 ΜΩ	600 MR
HB2	Cab2	OK	100 ΜΩ	600 M/L
Cab2	Cab Heater 2	OK	100 MΩ	700 M2

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	QL.
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	ak.
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.X7-3		ac

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value 65MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

#### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK.
Memotel circuit of cab1 &2	10A	Q.
Memotel speed sensor	10A	ac,
Primary voltage detection	01A, 12A	94
Brake controller cab-1 & 2	06F, 06G	O.L.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41949

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK.
TE/BE meter bogie-1 & 2	08E, 08F	8K
Terminal fault indication cab-1 & 2	09F	OK
Brake pipe pressure actual BE electric	06H	°K
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	OK.
Auxiliary current sensors	12B, 12F	οK
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	9K
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	.ºK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	9k
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	q.C.
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	QL.
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	94
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	Q.
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= 10ΚΩ± ± 10%)	13A	q
UIC line	13B	9(
Connection FLG1-Box TB	13A	9k

Issue No.03 Doc.No.F/ECS/01

Effective Date: Feb 2022

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

## Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

#### , 2.0 Low Tension test

#### 2.1 Measurement of resistor in OHMS ( $\Omega$ )

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K <b>Ω</b> ± 10%	3.9Ks
Resister to maximum current relay.	1 <b>Ω</b> ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3.31
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.25
Between wire 6 & 7	0.2 Ω	0.25L
Between wire 5 & 7	0.4 Ω	0.45
For train bus, line U13A to earthing.	10 k <b>Ω</b> ± 10%	999KL
For train bus, line U13B to earthing.	10 k <b>Ω</b> ± 10%	10.0 KS
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 M <b>Ω</b>	Zooms
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.29.2
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.295
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.282
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.2-8-52
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.2Ks
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k <b>Ω</b> ± 10%	2.7K1
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3.8kv
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.8KSL
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	3905
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 kΩ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10 <b>Ω</b> ± 10%	10.50

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41912

Type of Locomotive: WAP-7/WAG-9HC

Notes

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	cheered or
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheeked on

#### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	clocked on
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	) OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	YK.
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	Q.
Test control Pneumatic devices	Sheets of Group 06	Q Y
Test lighting control	Sheets of Group 07	9K
Pretest speedometer	Sheets of Group 10	OK
Pretest vigilance control and fire system	Sheets of Group 11	92
Power supply train bus	Sheets of Group 13	94

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/942

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.0 Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yey
Check that all the fibre optic cables are correctly connected to the bus stations.	· Yes
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yey
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

Traction converter-1 software version:	792.09
Traction converter-2 software version:	792.09
Auxiliary converter-1 software version:	889 B
Auxiliary converter-2 software version:	889.08
Auxiliary converter-3 software version:	8-89.08
Vehicle control unit -1 software version:	61.01
Vehicle control unit -2 software version:	61.01

#### 3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	Or.
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	3K
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	1%
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100.1
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	257,

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	2-57,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	441.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741,
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	l4°c
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1400
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13.5°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1300
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1400
	Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1400

Effective Date: Feb 2022

Doc.No.F/ECS/01
(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

#### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through	VCB must open.	-Pack da
emergency stop switch 244	Panto must lower.	cheeted on
Shut Down through cab activation	VCB must open.	- Pookin I de
switch to OFF position	Panto must lower.	energed of
Converter and filter contactor	FB contactor 8.41 is closed.	
operation with both Power	By moving reverser handle:	
Converters during Start Up.	Converter pre-charging contactor	
·	12.3 must close after few seconds.	
	• Converter contactor 12.4 must close.	Proposition
	Converter re-charging contactor	chectadok
	12.3 must opens.	
	By increasing TE/BE throttle:	
	• FB contactor 8.41 must open.	
·	• FB contactor 8.2 must close.	
	<ul> <li>FB contactor 8.1 must close.</li> </ul>	
	Bring TE/BE to O .	1
operation with both Power	Bring the cab activation key to "O"	
Converters during Shut Down.	VCB must open.	
	Panto must lower.	chartada
	Converter contactor 12.4 must open.	,
·	• FB contactor 8.1 must open.	P
	• FB contactors 8.41 must close.	
	• FB contactor 8.2 must remain closed.	]

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

		4
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.  Check that FB contactor 8.1 is open. Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE FB contactor 8.1 closes. FB contactor 8.2 remains open.	oclocked oc
Test earth fault detection battery circuit positive & negative	By connecting wire 2050 to earth, create earth fault negative potential.  • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault	o chetsel ox
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.	CAROKONIA
Time, date & loco number	Ensure correct date time and Loco number	ØK.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41912

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

4.0 Sensor Test and Converter Test

#### 4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity	
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.0400	ar	
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.0408	. ملا	
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.05.1	ov.	
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0446	PK	
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.84p 5:5V@95	વ્ય	
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.1011 6.4402m	٥١	

#### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V <sub>p</sub> , 41.5V <sub>RMS</sub> and opposite polarity.	58-6 VP 41-5 VRM)	OK
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15-508	ar_
		11.00005	

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page : 12 of 27

#### 4.3 Primary Voltage Transformer

Apply  $250V_{\rm eff}/350V_{\rm p}$  by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

)	Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
	SLG1_G 87-XUPrim	25kV	250%	25KV	2501,
	SLG2_G 87-XUPrim	25 kV	250%	2540	2501

Decrease the supply voltage below 140  $V_{RMS}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	1707
SLG2_G 87-XUPrim	17 kV	170%	17120	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KV	300%
SLG2_G 87-XUPrim	30 kV	300%	30KV	3005

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41912

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

#### 4.4 Minimum voltage relay (Pos. 86)

H	u	r	C	tı	Ю	r	<u>ıa</u>	Н	ťγ	test	:

Minimum voltage relay (Pos. 86) must be adjusted to approx 68%							
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V <sub>RMS</sub> through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	(Yes/No)						
Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.	(Yes/No)						
Turn off the variac : Contactor 218 closes; the control electronics is be working	(Yes/No)						
Test Under Voltage Protection	<u>;</u>						
Activate the cab in cooling mode; Raise panto; Supply 200V <sub>RMS</sub> through variac to wire no. 1501 & 1502; Close the VCB; Interrupt the supply voltage The VCB goes off after 2 second time delay.	(XYES/NO)						
Again supply $200V_{RMS}$ through variac to wire no. 1501 & 1502; Decrease the supply voltage below $140V_{RMS}\pm4V$ ; Fine tune the minimum voltage relay so that VCB opens.	L(Yes/No)						

#### 4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current tra &1522 (including the resistor at Pos. 6.11); Put loco in si on contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the c maximum current relay Pos. 78 for correct over current	mulation for driving mode; Open $R_3 - R_4$ open wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact $R_3$ – $R_4$ of 136.3 closed; Close VCB; Tune th /9.9 $A_p$ at the open wire 1521;	ne resistor 78.1 for the current of 7.0A <sub>RMS</sub>
VCB opens with Priority 1 fault message on display.	(Yes/No)

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/9/2

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors		D	Cat/Managerad
Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298mn
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		
	Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		336mB
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)	I.	
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		345mB
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	MA	HA
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA.	ИВ

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

This test is to be done by the commissioning engineer of the firm if required.

#### 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	Pi	
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	GL.	

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close.	Close	Open	Open	Close

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

#### Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	close	open	clos	open	close	open	cles	close	open
BUR1 off	close	open	Wes	cles	open	close	Open	open	close
BUR2 off	open	apan	cler	class	cles	clogo	open		cless
BUR3 off	oben	closs	open	cles	close	close	open	open	cless

#### 5.0 Commissioning with High Voltage

#### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yey
No rubbish in machine room, on the roof, under the loco.	Yey
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	YC
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yey
Pulse generator (Pos. 94.1) connection done correctly.	19
All the oil cocks of the gate valve of the transformer in open condition.	Yey
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	1/69
KABA key interlocking system.	(6)

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheeked on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	CROCKED &
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	Challed on
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Chexada
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	cheeked on
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Charted on
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	cfeeted on
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	cheeseed or

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

### <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

#### 5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	10.0	12.2
Oil pump transformer 2	9.8 amps	10.0	11.8
Coolant pump converter 1	19.6 amps	5.8	6.6
Coolant pump converter 2	19.6 amps	5.8	6.7
Oil cooling blower unit 1	40.0 amps	38. v	1450
Oil cooling blower unit 2	40.0 amps	37.8	140.0
Traction motor blower 1	34.0 amps	31.0	1600
Traction motor blower 2	34.0 amps	31.0	1650
Sc. Blower to Traction motor blower 1	6.0 amps	4.0	17.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.0	12.0
Compressor 1	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	29.0	144.0
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	28.0	148-0

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

#### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	998V	Yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636V	Yey
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Amp	Yey

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1001	Yej
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yey
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	That	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	21 Arry	405
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	11 Asr	You
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1100	Yan

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10004	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	6374	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21 Anh	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	1) Amy	79
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	170~	169

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/942

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

#### 5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery C charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

#### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.4	20.0
Machine room blower 2	15.0 amps*	4.4	20.0
Sc. Blower to MR blower 1	1.3 amps	1.4	4.2
Sc. Blower to MR blower 2	1.3 amps	1.3	3.8
Ventilator cab heater 1	1.1 amps	1.5	1.9
Ventilator cab heater 2	1.1 amps	1.5	1.9
Cab heater 1	4.8 amps	5-7	5-9
Cab heater 2	4.8 amps	5-7	5-9

<sup>\*</sup> For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01
(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

#### 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### 5.6 Traction Converter Commissioning

#### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and precharging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chletoel ou
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cholked on
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeted or
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheekeel on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked on
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chaetad &
Pulsing of drive converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chleked of

Effective Date: Feb 2022

.Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC Page : 22 of 27

#### For Converter 2

Test Function	Results desired in sequence	Result obtained
1 CSC   GIICEIOII	nesults desired in sequence	nesuit optanieu
charging and pre- charging and charging	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choeted on
discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheked on
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chelled on
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	chalted a
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chaltedok
of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chocked on
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choekad on

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.  • VCB goes off  • Priority 1 fault mesg. on DDU appears  Disturbance in Converter 1	o checked on
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on diagnostic display appears  Disturbance in Converter 2	ochleted or

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained	
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	o clocked on	

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

Test traction motor speed sensors for both bogie in both	Traction converter manufacturer to declare the successful operation and demonstrate the same to the	Ou
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit	chocked on
	<ul> <li>FB contactor 8.2 must close.</li> <li>FB contactor 8.1 must close</li> <li>Check the filter current in diagnostic laptop</li> <li>Bring the TE/BE throttle to O</li> <li>Switch off the VCB</li> <li>FB contactor 8.1must open.</li> <li>FB discharging contactor 8.41 must close</li> <li>Check the filter current in diagnostic laptop</li> </ul>	p checked of

#### 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	chelted on
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheeked on
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	chelked a
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Chelkeel on
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	cheeked or

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	charted on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cheekael on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	chooted on  chooted on  chooted on  chooted on  chooted on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	chaetael a
Illuminated Push button	All illuminated push buttons should glow during the operation	charted of
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m <sup>3</sup> /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### 6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Leeper
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	Looked
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Rockedu
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm<sup>2</sup>, by pressing BPCS again.</li> </ul>	Looked
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	factour of

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41942

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

Set the speed more than 1.5 kmph and ensure that brakes are released i.e. BC < 1 Kg/cm².  For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then  Buzzer should start buzzing.  Set Ww should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:  Finergency brake should be applied automatically.  VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  At low pressure of MR (< 5.6 Kg/cm²).  With park brake in applied condition.  With direct loco brake applied (BP< 4.75 Kg/cm²).  With automatic train brake applied (BP< 4.75 Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  With automatic train brake applied (BP< 4.75 Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  With emergency				
locomotive  For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then  Buzzer should start buzzing.  LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:  Emergency brake should be applied automatically.  VCB should be switched off.  Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  At low pressure of MR (< 5.6 Kg/cm²).  With park brake in applied condition.  With direct loco brake applied (BP< 4.75Kg/cm²).  With automatic train brake applied (BP< 4.75Kg/cm²).  With automatic train brake applied (BP< 4.75Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  With emergency	6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
sanding foots switch or TE/BE throttle or BPVG switch then  Buzzer should start buzzing.  LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:  Emergency brake should be applied automatically.  VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  At low pressure of MR (< 5.6 Kg/cm²).  With park brake in applied condition.  With direct loco brake applied (BP< 4.75Kg/cm²).  With automatic train brake applied (BP< 4.75Kg/cm²).  With emergency cock (BP< 4.75 Kg/cm²).  With emergency cock (BP< 4.75 Kg/cm²).  With emergency cock (BP< 4.75 Kg/cm²).  With emergency cock (BP< 6.75Kg/cm²).  Check traction interlock  Bring the TE/BE throttle to BE side. Loco speed should open and BP reduces rapidly.  Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  Direct of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case.  Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup>	
switch then  Buzzer should start buzzing.  LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:  Emergency brake should be applied automatically.  VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock  With park brake in applied condition.  With direct loco brake applied (BP<4.75Kg/cm²).  With automatic train brake applied (BP<4.75Kg/cm²).  With emergency cock (BP<4.75 Kg/cm²).  With emergency cock (BP<4.75 Kg/cm²).  With emergency cock (BP<4.75 Kg/cm²).  Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  P. Check regenerative braking.  The term of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this ventilation level 1 & 3 of loco operation  Switch off the 2 BURs; loco should trip in this case.  The Check the power converter of the electronics. VCB should open and converter isolation test  Switch off the 2 BURs; loco should trip in this case.  Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		locomotive	For 60 seconds do not press vigilance foot switch or	
Buzzer should start buzzing.  LSVW should glow continuously. Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:  Emergency brake should be applied automatically.  VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock  At low pressure of MR (< 5.6 Kg/cm²).  With park brake in applied condition.  With direct loco brake applied (BP< 4.75 Kg/cm²).  With automatic train brake applied (BP< 4.75 Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  Predundancy test at ventilation level 1 & 3 of loco operation  BuRs can take the load of all the auxiliaries. For this switch off one BUR.  Auxillaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  The Check the power converter isolation test  Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			sanding foots switch or TE/BE throttle or BPVG	
Classified on vigilance foot switch further for 8 seconds then:		·	switch then	
Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:  • Emergency brake should be applied automatically.  • VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock  • At low pressure of MR (< 5.6 Kg/cm²).  • With park brake in applied condition.  • With direct loco brake applied (BP< 4.75Kg/cm²).  • With automatic train brake applied (BP< 4.75Kg/cm²).  • With emergency cock (BP < 4.75 Kg/cm²).  • With off the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative Bring the TE/BE throttle to BE side. Loco speed should start reducing.  10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  11. Check the power Cooperation Switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			Buzzer should start buzzing.	-
vigilance foot switch further for 8 seconds then:  • Emergency brake should be applied automatically.  • VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock  • At low pressure of MR (< 5.6 Kg/cm²).  • With park brake in applied condition.  • With direct loco brake applied (BP< 4.75Kg/cm²).  • With automatic train brake applied (BP< 4.75Kg/cm²).  • With emergency cock (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake applied (BP < 4.75 Kg/cm²).  • With automatic train brake			LSVW should glow continuously.	./ 0
Emergency brake should be applied automatically.     VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock     At low pressure of MR (< 5.6 Kg/cm²).     With park brake in applied condition.     With direct loco brake applied (BP< 4.75Kg/cm²).     With automatic train brake applied (BP< 4.75Kg/cm²).     With emergency cock (BP < 4.75 Kg/cm²).     With emergency cock (BP < 4.75			Do not acknowledge the alarm through BPVG or	22 54
automatically.  • VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock  • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP<4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²).  • With emergency cock (BP < 4.75 Kg/cm²).  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative braking.  Should start reducing.  10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter isolation test  Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			vigilance foot switch further for 8 seconds then:-	
VCB should be switched off. Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock     At low pressure of MR (< 5.6 Kg/cm²).     With park brake in applied condition.     With direct loco brake applied (BP< 4.75Kg/cm²).     With automatic train brake applied (BP< 4.75Kg/cm²).     With emergency cock (BP < 4.75 Kg/cm²).     With emergency cock (BP < 4.75 Kg/cm²).     With emergency cock (BP < 4.75 Kg/cm²).     With emergency cock (BP < 4.75 Kg/cm²).  8. Check traction interlock Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative braking. Bring the TE/BE throttle to BE side. Loco speed should start reducing. In the event of failure of one BUR, rest of the two loco operation BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter isolation test Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			Emergency brake should be applied	
Resetting of this penalty brake is possible only after 32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock  • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²).  8. Check traction interlock  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative Bring the TE/BE throttle to BE side. Loco speed should start reducing.  10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  BURs can take the load of all the auxiliaries. For this switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter isolation test  Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			automatically.	
32 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock  • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP< 4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²).  8. Check traction interlock  Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative braking.  Bring the TE/BE throttle to BE side. Loco speed should start reducing.  10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  BURs can take the load of all the auxiliaries. For this switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter isolation test  Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test			VCB should be switched off.	
acknowledge BPVR and press & release vigilance foot switch.  7. Check start/run interlock  • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²).  8. Check traction interlock  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative braking.  Bring the TE/BE throttle to BE side. Loco speed should start reducing.  10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  BURs can take the load of all the auxiliaries. For this switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter by switching off the electronics. VCB should open and converter isolation test  **Atokical Ax**  **Check start/run interlock  • At low pressure of MR (< 5.6 Kg/cm²). • With auxiliaries applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With automatic train brake applied (BP< 4.75 Kg/cm²).  • With autom			Resetting of this penalty brake is possible only after	
foot switch.  7. Check start/run interlock  • At low pressure of MR (< 5.6 Kg/cm²). • With park brake in applied condition. • With direct loco brake applied (BP< 4.75Kg/cm²). • With automatic train brake applied (BP<4.75Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²). • With emergency cock (BP < 4.75 Kg/cm²).  8. Check traction interlock  Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative braking.  Bring the TE/BE throttle to BE side. Loco speed should start reducing.  10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  BURs can take the load of all the auxiliaries. For this switch off one BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter isolation test  Switch off the electronics. VCB should open and converter should get isolated and traction is possible with			32 seconds by bringing TE/BE throttle to 0 and	
Check start/run interlock  At low pressure of MR (< 5.6 Kg/cm²).  With park brake in applied condition.  With direct loco brake applied (BP< 4.75Kg/cm²).  With automatic train brake applied (BP< 4.75Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  P. Check regenerative braking.  Bring the TE/BE throttle to BE side. Loco speed should start reducing.  In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter isolation test should get isolated and traction is possible with			acknowledge BPVR and press & release vigilance	
With park brake in applied condition.  With direct loco brake applied (BP< 4.75Kg/cm²).  With automatic train brake applied (BP<4.75Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  P. Check regenerative braking.  Bring the TE/BE throttle to BE side. Loco speed should start reducing.  Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  With park brake in applied condition.  With direct loco brake applied (BP< 4.75Kg/cm²).  With automatic train brake applied (BP< 4.75Kg/cm²).  With emergency cock (BP < 4.75 Kg/cm²).  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should applied to the chosen of the side of the loco speed should start reducing.  In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  Create disturbance in power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			<b>1</b>	
With automatic train brake applied (BP<4.75kg/cm <sup>2</sup> ).  With emergency cock (BP < 4.75 kg/cm <sup>2</sup> ).  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  P. Check regenerative braking.  Bring the TE/BE throttle to BE side. Loco speed should start reducing.  In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with	7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).	e C
With automatic train brake applied (BP<4.75kg/cm <sup>2</sup> ).  With emergency cock (BP < 4.75 kg/cm <sup>2</sup> ).  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  P. Check regenerative braking.  Bring the TE/BE throttle to BE side. Loco speed should start reducing.  In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			With park brake in applied condition.	*
With automatic train brake applied (BP<4.75kg/cm <sup>2</sup> ).  With emergency cock (BP < 4.75 kg/cm <sup>2</sup> ).  Switch of the brake electronics. The Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  P. Check regenerative braking.  Bring the TE/BE throttle to BE side. Loco speed should start reducing.  In the event of failure of one BUR, rest of the two BURs can take the load of all the auxiliaries. For this switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with			• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	el Oa
With emergency cock (BP < 4.75 Kg/cm²).   Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly.   Gheck regenerative braking.   Bring the TE/BE throttle to BE side. Loco speed should start reducing.	,	•	• With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).	•
8. Check traction interlock  Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative braking.  10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  BURs. Switch off the BUR. Auxiliaries should be catered by rest of two BURs. Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter isolation test  Switch of the brake electronics. The Tractive / Braking effort should ramp down, VCB sh			] a	
Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  9. Check regenerative braking.  10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  10. Check the power converter isolation test  11. Check the power should get isolated and traction is possible with  Tractive /Braking effort should ramp down, VCB should rapidly.	8.	Check traction interlock		1.0
10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  11. Check the power converter isolation test  12. Check the power should be categorian off the electronics. VCB should open and converter should get isolated and traction is possible with			Tractive /Braking effort should ramp down, VCB	रंभ
10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  11. Check the power converter isolation test  12. Check the power should be categorian off the electronics. VCB should open and converter should get isolated and traction is possible with			should open and BP reduces rapidly.	•
10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  11. Check the power converter isolation test  12. Check the power should be categorian off the electronics. VCB should open and converter should get isolated and traction is possible with	9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	POK
10. Check for BUR redundancy test at ventilation level 1 & 3 of loco operation  11. Check the power converter isolation test  12. Check the power should get isolated and traction is possible with  13. Check for BUR In the event of failure of one BUR, rest of the two BURs. BURs can take the load of all the auxiliaries. For this switch off one BUR.  14. Auxiliaries should be catered by rest of two BURs.  15. Check the power converter by switching off the electronics. VCB should open and converter should get isolated and traction is possible with		_	should start reducing.	•
ventilation level 1 & 3 of loco operation  Switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with	10.		In the event of failure of one BUR, rest of the two	
ventilation level 1 & 3 of loco operation  Switch off one BUR.  Auxiliaries should be catered by rest of two BURs.  Switch off the 2 BURs; loco should trip in this case.  Create disturbance in power converter by switching off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with		redundancy test at	BURs can take the load of all the auxiliaries. For this	læ
Switch off the 2 BURs; loco should trip in this case.  11. Check the power converter by switching converter off the electronics. VCB should open and converter should get isolated and traction is possible with		ventilation level 1 & 3 of	switch off one BUR.	
11. Check the power converter by switching converter off the electronics. VCB should open and converter should get isolated and traction is possible with		loco operation	Auxiliaries should be catered by rest of two BURs.	
converter off the electronics. VCB should open and converter isolation test should get isolated and traction is possible with			Switch off the 2 BURs; loco should trip in this case.	
isolation test should get isolated and traction is possible with	11.	Check the power		
isolation test should get isolated and traction is possible with		converter .	off the electronics. VCB should open and converter	dy
another power converter.		isolation test	should get isolated and traction is possible with	Ť
			another power converter.	

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4194g

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

#### 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OL	ac	9
2	Marker Red	DIL	0K	
3	Marker White	ak	OK	
4 .	Cab Lights	ο <sub>γ</sub> _	QL_	
5	Dr Spot Light	OK_	OK	
6	Asst Dr Spot Light	OK	ac	referred working o
7	Flasher Light	OK	UK	
8	Instrument Lights	0×	CK	
9	Corridor Light	Ove_	ac	
10	Cab Fans	ar_	OR	
11	Cab Heater/Blowers	, Or	ag	
12	All Cab Signal Lamps Panel 'A'	Ou	OK	

#### Status of RDSO modifications

LOCO NO: 41 942

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Ok/Not Ok
4	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Ok/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Ök/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	draining of batteries in three phase electric locomotives.	6k/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Ók/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Ök/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ök/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Ok/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Ök/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Ök/Not Ok

Signature of JE/SSE/ECS

Loco No.: 41942

#### PLW/PATIALA

#### PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: M/s Faiveley			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	55
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.60 Kg/cm2
		DMTS-014-1, 8	-	
		CLW's check sheet		
		no. F60.812 Version		
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.45 Kg/cm2
		no. F60.812 Version	kg/cm2, closes	
		2	5.5±0.15 kg/cm2	5.55 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Iso	lating Cocks & KABA co		
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.35 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			Ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 40
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	Ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2	- 0.1	-1	CP2-28 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.45 Kg/cm2
		MM3882 &	kg/cm2 Opens at	F CF W=/
2.5	Charles and December Contact DCCD (25)	MM3946	5.60±0.15kg/cm2	5.65 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10.1 Kg/cm2
		MM3882 &	kg/cm2 Closes at	0 1 Va/a3
2.6	Dun both the compresses Decord Dressure build up time	MM3946	8±0.20 kg/cm2	8.1 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.30 minute

#### PLW/PATIALA

Loco No.: 41942

						LUCU NU 41.	772
2.7	Check unloader v	alve operation time				Approx. 12 Sec.	10 sec
2.8	Check Auto Drain	Valve functioning (12	24 & 87)			Operates when	Ok
						Compressor	
						starts	
2.9	Check CP-I delive	ry safety valve setting	(10/1). Run CP	D&M t	est spec.	11.50±0.35	11.60
	Direct by BLCP.	, ,			& MM3946	kg/cm2	Kg/cm2
2.10	Check CP-2 delive	ry safety valve settin	g (10/2). Run CP	D&M t	est spec.	11.50±0.35	11.60
	direct by BLCP	, ,	5( , ,		& MM3946	kg/cm2	Kg/cm2
2.11		compressors and ensu	re that the safety	<del> </del>	est spec.	, , , , , , , , , , , , , , , , , , ,	,
		pressure 1.2 kg/cm2 le		1	& MM3946		
	pressure.						
2.12	•	ch 'OFF' compressor,	Drain MR Pressure	CLW's ched	ck sheet no.	5.0±0.10kg/cm2	5.0 Kg/cm2
				F60.812 Ve		SIGEOTIONS/ CITIZ	3.0 1(g) 01112
	by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.			100.012 V	.131011 2		
2.13	FP pressure:	source or bupies effect	( valve 321 .	CLW/s chec	k sheet no.	6.0±0.20kg/cm2	6.0 Kg/cm2
2.13	1 .	Test point 107F FPTP.	Onen isolate cock	F60.812 Ve		0.0±0.20kg/cm2	0.0 Kg/cm2
	136F. Check press		Open isolate cock	100.812 VE	131011 2		
2.0							
3.0	Air Dryer Opera		<u> </u>			T	61
3.1		90 of 2 <sup>nd</sup> MR to start				Tower to change	Ok
	open for Test Che	ck Air Dryer Towers t	o cnange.			i) Every minute	
						(FTIL & SIL)	
						ii)every two	
						minute (KBIL)	
3.2	Check Purge Air Stops from Air Dryer at Compressor stops						
3.3		of humidity indicator				Blue	Blue
4.0	Main Reservoir L						
4.1		4-9) in full service, Che	eck MR Pressure air	D&M test spec.		Should be less	0.35
	leakage from botl	h cabs.		MM3882 & MM3946		than 1 kg/cm2 in	Kg/cm2 in
						15 minutes	15 minutes
4.2	Check BP Air leak	age (isolate BP chargi	ng cock-70)	D&M test spec.		0.15 kg/cm2 in 5	0.05
				MM3882 & MM3946		minutes	Kg/cm2 in 5
							minutes
5.0	•	omatic Brake opera	•				
5.1	Record Brake Pipe	e & Brake Cylinder pr	essure at Each Step				
		10. 00 1					
	Check proportion	ality of Auto Brake sy	stem		ck sheet no.		
				F60.812	Version 2		
		DDD ' ' -		DO /11/15 =	. 0 .44.5 =;	BO (14/4.5.5)	
	Auto controller	BP Pressure kg/cm2	2	,	8 WAG-7)	BC (WAP-5)	
	position			Kg/cm2		Kg/cm2	
		Value	Result	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40% / -	0.75±0.15	_
				5.152011	0.40Kg/ cm2	5.7525.15	
	Full service	3.35±0.2	3.35 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	Emorgona	Less than 0.3	0.25 Kg/cm2	2.50±0.1		5.15±0.30	
	Emergency	Less than 0.3	U.ZO Ng/CMZ	∠.5U±U.1	2.5Kg/ cm2	5.15±0.50	-
_							

#### PLW/PATIALA

Loco No.: 41942

F 2	D 11: 1 DD 1 1 251 / 25	DOM.	0.12	100
5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	8 Sec
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	01/
		MM3882 & MM3946	to Below 2.5	OK
		011111	kg/cm2	
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.00
		F60.812 Version 2	4.05- 4.35	4.20
			kg/cm2	Kg/cm2
			Opens at BP	
			2.85- 3.15	3.0
			kg/cm2	Kg/cm2
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC developed			
	WAP5 – BC 5.15 $\pm$ 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
	WAG9 - BC 2.50 ± 0.1 kg/cm2		21±3 sec.	21 sec
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure up			
	to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	
	WAG9		52±7.5 sec.	51 sec.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	72 Sec
	BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test: The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.55
	functioning of brake.		60 Sec.	Kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A-9 (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors in			
	working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure			
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.55
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 Sec
0.2	time	MM3882 & MM3946	Jec. (Wax.)	, 300
	unic	INTINIDUUZ & INTINIDU40		

#### **PLW/PATIALA**

Loco No.: 41942

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)		-NA-	-NA-
7.1	Bail-off de-activated during emergency by any means	-		
7.2	DPWCS and Non-DPWCS mode enabled	-	Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is 12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

SAMSHER Digitally signed by SINGH BIST Date: 2025.01.28 13:17:08 +05'30'

SAMSHER SINGH BIST

Signature of SSE/Shop

				41942		
		ı	ROOF COMP	ONENT CAB 1 & 2		Warranty
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.	
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, CONTRANSYS	F24-0030/JUN-2024, 14304-04/24	
2	Servo motor	29880026	2	CONTRANSYS	14298-04/24	
3	Air Intake filter Assly	29480103	2	AFI	AFI/OC/529A-05/24, AFI/OC/523A- 05/24	
4	Insulator Panto Mtg.	29810127	8	IEC	04-24,04-24	
		-	MIDDLE RO	OF COMPONENT		
5	High Voltage Bushing	29731021	1	ELECTRANEX	EIPL-5516-06-24	
6	Voltage Transformer	29695028	1	ELIXIR ENGINEERING	15612408002	
7	Vacuum Circuit Breaker	25712202	1	SCHNEIDER	226609873-27N2-MAY/24	
8	Insulator Roof line	29810139	9	BHEL	12-2023, 01-2024	
9	Harmonic Filter	29650033	1	TELEMA	TEPL/RHF/009/2024/415	AS Per PO/IRS Conditions
10	Earth Switch	29700073	E	PATRA & CHANDA	PCE/SL.NO. 66 M/Y - 4/2024	
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	55115-2023, 57400-2024	
			Air Br	ake Components		
12	Air Compressor (A,B)	29511008	2	ELGI	EXFS 923376 -A, EXFS 923350 -B	
13	Air Dryer	29162051	1	TRIDENT	LD2-08-0505-24	
14	Babby compressor	25513000	1	ELGI	BXES 109289	
15	Air Brake Panel	29180016	1	FAIVELEY	SEP 24-50-WAG9-3630	
16	Contoller (A,B)	29180016	2	FAIVELEY	G24-005 A, G24-011 B	
17	Breakup Valve	29180016	2	FAIVELEY		
18	wiper motor	29162026	4	Auto industry		

SAMSHER Digitally signed by SAMSHER SINGH BIST Date: 2025.01.24 15:42:45 +05'30' SSE/ABS

#### PLW/PTA

#### **ELECTRIC LOCO HISTORY SHEET (ECS)**

ELECTRIC LOCO NO: 41942 LIST OF ITEMS FITTED BY ECS **RLY: ECR** 

SHED: BJUE

PROPULSION SYSTEM: CGL

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO C	AB-1/CAB-2	MAKE/SUPPLIER	
1	LED Based Flasher Light Cab I & II	29612937	26511	26551	MATSUSHI P. TECH	
2	Led Marker Light Cab I & II	29612925	142675/142815/1	42775/142660	MATSUSHI P. TECH.	
	Cab Heater Cab I & II	29170011	3196	3197	KKI	
4	Crew Fan Cab I & II	29470080	4407/4378/4	295/4412	SARIA	
5	Master Controller Cab I	29860015	018		AAL	
6	Master Controller Cab II	25000015	029		, v \L	
7	Complete Panel A Cab I & II	29178265	0534A	0545B	HIND	
8	Complete Panel C Cab I & II	29170539	1315	1307	KONTACT/CGL	
	Complete Panel D Cab I & II	29178265	0534A	0534B	HIND	
	Complete Cubicle- F Panel Cab I & II	29178162	SLCF00012404176	SLCF00012404181	SETSALIT	
	Speed Ind.& Rec. System	29200040	5728/5	055	MEDHA	
12	Battery (Ni- Cd)	29680025	9790-9802,9	777-9789	SAFT URJA	
	Set of Harnessed Cable Complete	29600420			QCPL	
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	29500047	BG/PS/1471 Jun-2024	BG/PS/1581 Jun-2024	BG INDUSTRIES	
15	Transformer Oil Pressure Sensor (Cab-2)	2 ·	BG/PS/1435 Jun-2024	BG/PS/1498 Jun-2024		
16	Transformer Oil Temperature Sensor (Cab-1)	29500035	BG/TFP/7353 May-2024		BG INDUSTRIES	
17	Transformer Oil Temperature Sensor (Cab-2)		BG/TFP/7319			
18	Roof mounted Air Conditioner I	29811028	24E/RMPU/DC/02/1184		DAULAT RAM	
19	Roof mounted Air Conditioner II	20011020	24J/RMPU/Do	C/02/1257	<i>5/1021110101</i>	

SSE/ECS

JE/ECS

			MOTIVE WORKS, PA 12/WAG-9HC/ECR/E					
S.No.	. Equipment	PL No.				84	-li-	
1	Complete Shell Assembly with piping			ent Serial No.		-	ake	
2	Side Buffer Assly Both Side Cab I	29171027		/63, 09/2024			CBT	
3	Side Buffer Assly Both Side Cab II	29130050	82, 08/24	71, 09/24		AEU	+	AEU
			04, 04/24	Not visible, 09/24	F	AEU	A . week	AEU
4	CBC Cab I & II	29130037	0161, 06/24	0165, 06/24		км	1	KM
5	Hand Brake		08/	/24- 789		Rising Eng	g. Conce	ern
	Set of Secondry Helical Spring	29045034 29041041				GE	BD	
	Battery Boxes (both side)	29680013	102, 08/24	89, 08/24	BRITE	METALLOY	BRITE	METALI
	Traction Bar Bogie I		538	37, 08/24		TE		
-	Traction Bar Bogie II			37, 08/24		TE		
	Centre Pivot Housing in Shell Bogie I side	29100057		6, 09/24		TE		***************************************
	Centre Pivot Housing in Shell Bogie II side	29100037		8, 09/24		TE		
	Elastic Ring in Front in Shell Bogie I side	29100010		, 07/24		AVA		
13	Elastic Ring in Front in Shell Bogie II side	29100010		5, 07/24		AVA		
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7		/15/1692, 2015		ΗV	- Company	
15	Oil Cooling Radiator I		G-24-	26, 07/24	BAN	CO PRODU	ICTS PV	TITD
16	Oil Cooling Radiator II	29470031		36, 07/24		CO PRODU		
	Main Compressor I with Motor			3350, 09/24		ELG		LIL
	Main Compressor II with Motor	29511008		3376, 09/24		ELC		
	Transformer Oil Cooling Pump I			c 0= /0 1			- 11	
	Transformer Oil Cooling Pump II			6, 05/24		SAMAL H		
	Oil Cooling Blower OCB I			0, 05/24		SAMAL H		
	Oil Cooling Blower OCB II	29470043		003, LHP1001558521		PD STEELS		
	TM Blower I			012, LHP1001559031		PD STEELS		
-		29440075		5/408, 09/24	F	ORCE MOT	ION TEC	,H
	TM Blower II		FMT/24-25	5/412, 09/24	FC	ORCE MOT	ION TEC	Н
	Machine Room Blower I	29440105	MF-24.09	9.77, 09/24		G.T.I	R	
	Machine Room Blower II	25440103	MF-24.09.	.66(NOT CLR)		G.T.I	R	
27 N	Machine Room Scavenging Blower I			136, CF25/D6808	SAMAL HARAND PVT LTD			
28 N	Machine Room Scavenging Blower II	29440129		CF25/D6812		AL HARAN		
29 T	TM Scavenging Blower Motor I			7.64, 07/24		G.T.F		
30 T	TM Scavenging Blower Motor II	29440117		.89, 07/24		G.T.F		
-	Traction Convertor I			.89, 07/24 .24A2072-P955	149	0	*	
32 T	Traction Convertor II	+		.24A2072-P955 .24A2071-P955		A THEFT		
	Vehicle Control Unit I	20744075		007-P955	No.			
	/ehicle Control Unit II	29741075		008-P955		C.G.I	L	
	Aux. Converter Box I (BUR 1)			4A1370-P955				
	Aux. Converter Box 2 (BUR 2 + 3)		CGA100224	4A1370-P955				
	Axillary Control Cubical HB-1	29171180	SLHB1007	22402267		STESALIT	LTD	
	Axillary Control Cubical HB-2	29171192		/2024, 08/24	KAYSO	NS ELECTR	ICAL PV	r LTD
	Complete Control Cubicle SB-1	29171209		23040536		C.G.L		
	Complete Control Cubicle SB-2	29171210	SB2/2024/E	/0010/1139	HJ	ND RECTIF	IERS LTD	)
CI	ilter Cubical (FB) (COMPLETE FILTER UBICLES)	29480140	FB/2024/H	1/0656/586	HII	ND RECTIFI	IERS LTD	,
	Priver Seats	29171131	<u>B.No</u> PLW-218-09	9/24-04, 17, 34, 42		ABI		
	ransformer oil steel pipes	29230044	VIKRAN	T PIPES	100			
	onservator Tank Breather	29731057		24-3494	YOGY	A ENETRE	PRISES	LTD
45 Ba	allast Assembly ( only for WAG-9)	29170163	61,38,3			AK		
16 He	ead Light		872/8		M	atsushi pov		

NAME SHURMA CHARMA

1/2 NAME....JE/LAS/UF NAME ANILIT OPPAL JE/LAS

Effective Date: July-2023

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

#### पटियाला रेलइंजन कारखाना, पटियाला

### PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 41942

Rly: ECR

Shed: BJUE

S. lo.	ITEM TO BE CHECKED	Specified Value	Ob	served Va	alue
.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		-NA	
.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.  TM scavenging blower 1 & 2 & Oil Cooling unit.	OK		CIL	
.3	Check proper of Fitment of oil cooling unit (OCU).	OK		OIL	
.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		CL	
.5	Check proper Fitment of FB panel on its position.	OK		012	· A
.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		CIL	
.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		OK	
.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		CIL	
.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		UL	
.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		UL	
.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		OIL	
.12	Check proper fitment of Bogie Body Safety Chains.	OK		OIL	*
.13	Check proper fitment of Cow catcher.	OK		UL	
.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		OIL	
.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		OLL	
.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		OK	
.17	Check proper fitment of both battery box.	OK		OIL	
.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		OIL	
.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK		OK	
.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAE	3-1	CAB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std :35-60 mm		ALP L	
		Lateral Std- 45-50 mm	-	43 4	
.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	R/S
	Drg No IB031-02002.	mm	FRONT	1100	1097
			REAR	1096	109
		C 44	TILLIAN	L/S	R/S
.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm	FRONT	-	-
	Drg No-SK.DL-3430.			648	644
			REAR	647	
.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	118	118
			REAR	118	116
24	CBC Height: Range (1090, +15,-5)	1090, +15		8901	
.24		-5 mm	REAR:	1100	
	Drg No- IB031-02002.	-5 mm	KEAK:	1100	

(Signature of SSE/Elect. Loco)

NAME SHUBHAM SIMM

DATE 25/10/2024

(Signature of /JE/Elect Loco)

NAME KARANSWILL

DATE 25/10/2029

(Signature of JE/UF)

NAME ANKIT UPPAC

DATE 25/10/2029

#### **Loco No.** 41942

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-2420	TACPL	29100677	100363	As per PO/IRS
REAR	SL-23/28	TACPL	29100677	100361	conditions

#### 2. Hydraulic Dampers (PL No.29040012) Make: ESCORT/ESCORT

#### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27417	27197	27250	27380	27393	26998
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC24-3119	CNC24-3151	CNC24-3140	CNC24-3136	CNC24-3089	CNC24-3086
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
FREE END	CNC24-3118	CNC24-3145	CNC24-3141	CNC24-3104	CNC24-3093	CNC24-3074
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
Bull Gear No.	16141	16166	16193	16191	16149	24-E-04
Bull Gear Make	GGAG	GGAG	GGAG	GGAG	GGAG	LMS

#### 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

AXLE POSITION NO		1	2	3	4	5	6
Gear	MAKE	NBC	NBC	NBC	NBC	FAG	NBC
End	PO NO. & dt	02875	02875	02875	02875	02312	02875
Free	MAKE	NBC	NBC	NBC	NBC	FAG	NBC
End	PO NO. & dt	02875	02875	02875	02875	02312	02875

#### 6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	804 KN	80 T	97 T	927 KN	1008 KN	92 T
FREE END	102 T	83 T	93 T	996 KN	988 KN	95 T

#### **Loco No.** 41942

#### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6	
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5	
DIA IN mm FE	1092.5 1092.5		1092.5	1092.5	1092.5	1092.5	
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK	

#### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION	1	2	3	4	5	6	
S.T. PL 29100288 MAKE		IN	IN	IN	KM	IN	IN
GE Brg. PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	NBC
FE Brg. PL 29030110	MAKE	FAG	FAG	FAG	FAG	FAG	NBC

#### 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KM	KM	KM	KM
BACKLASH (0.254 – 0.458mm)	0.300	0.310	0.330	0.360	0.450	0.320

#### 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	17.08	17.23	16.80	16.05	15.72	15.55
LEFT SIDE	18.30	15.64	16.32	15.51	15.78	15.65

#### 11. TRACTION MOTOR: (PL No.29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & Date	S. NO.
1	TMS		PLW-2980
2	BHEL	102297	201240913
3	TMS		PLW-2929
4	TMS		PLW-2933
5	TMS		PLW-2925
6	TMS		PLW-2541

JE/SSE/ Bogie Shop

#### TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- 8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646  ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



भारत सरकार

GOVERNMENT OF INDIA

रेल मंत्राल्य

MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना

PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244

फोन/ Phone: 0175- 2396422

मोबाईल: 9779242310 पटियाला, 147003, भारत्

PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Barauni.

Email: srdeetrsbju@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 41942 WAG9-HC.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 41942 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/BJU/ECR on 08.11.2024. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

उप मुख्य विदयुत अभियंता/लोको

CEE/Loco & CEE/D&Q, CMM, CELE/ECR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

### Loco No. 41942

<b>V</b>	PILING	<u> </u>	(a)(g);
X	Intellige	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
L	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
_		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP	01 no.
		BRASS FITTINGS  MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS	03 nos
		FITTINGS FEMALE TEE 3/8" BSPP – BRASS	06 nos
2	29611994	HEX PLUG -3/8" BSPT – BRASS	02 nos
		FEMALE TEE 1/2" BSPP - BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 no:
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 no
		HEX PLUG – 1/2" BSPT – BRASS	04 no
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS	02 no
3	29170114	FITTINGS  Copper Tube OD 9.52mm (3/8" ) X 1.245 Mm W.T X 6 Mtr	1.2M

SN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.	·	Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.		WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.		One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	-	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	-	DIN Rail fitted inside the driver desk (LP Side)	02 nos.

AWMABS & bys M

SSE/G/LFS

#### Annexure-C

SN	PL No.	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm <sup>2</sup> provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 nos.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	-	Harness provided from KAVACH SB to SB-1	05 wires
5.	-	Harness provided from KAVACH SB to SB-2	05 wires
6.	-	Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	-	Harness provided from KAVACH SB to CAB-1	24 wires
8.	-	Harness provided from KAVACH SB to CAB-2	16 wires



SSE/G/ECS