
# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

## PATIALA LOCOMOTIVE WORKS, PATIALA

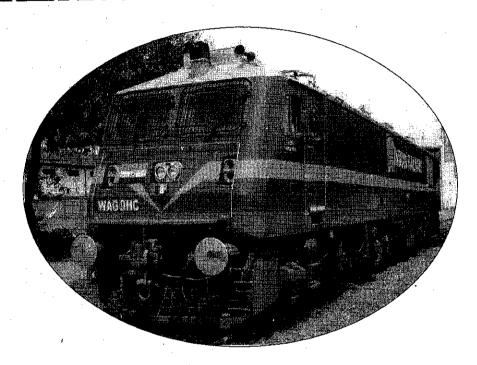

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

41982

TYPE:

WAG9HC

RAILWAY SHED:

WR/VTAD

PROPULSION SYSTEM:

CGL

DATE OF DISPATCH:

24.12.2024

लोको निर्माण रिकार्ड



## पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41982 RAILWAY/SHED: WR/VTAD

DOD: DEC-2024

#### INDEX

SN	PARA	ACTIVITIES	PAGE NO.
•		Testing & Commissioning (ECS)	
1.	1.0	Continuity Test of the cables	
1	1.1	Continuity Test of Traction Circuit Cables	
1	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
1	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	3-0
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
	3.1	Check Points	
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
<i>'</i>	4.1	Test winng Transformer Circuits – Polarity Test	
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	
	4.5	Maximum current relay (Pos. 78)	11-16
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.8	Verification of Converter Protection Circuits (Hardware limits)	
1	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
·	5.1	Check List	
	5.2	Safety test main circuit breaker	
1	5,3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	
	5.3.3	Performance of BURs when one BUR goes out	40.05
	5.4	Auxiliary circuit 415/110	16-25
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
	5.8	Test Harmonic Filter	
	5.9	Test important components of the locomotive	
6.	6.0	Running Trial of the locomotive	25-26
7.	7.0	Final Check List to be verified at the time of Loco dispatch	23-26
8.	8.0	Status of RDSO modifications	
9.	1-10	Pneumatic Test Parameters	28
10.	1-10	Loco Check Sheet(LAS)	29 - 32
1.			33
2.		Component History (LAS,ECS,ABS)	34-36
13		Component History & Testing Parameter (Bogie Shop)	37 - 38
, ,		Warranty Conditions as per Tenders	39 -41

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/983 - C42

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK.	100 ΜΩ	600MA
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	600MA
Filter Cubicle	Earthing Choke	OK	100 ΜΩ	SSOMA.
Earthing Choke	Earth Return Brushes	OK	100 ΜΩ	sooma
Transformer	Power Converter 1	ok	100 ΜΩ	608MA
Transformer	Power Converter 2	» ok	100 MΩ	650m1
Power Converter 1	TM1, TM2, TM3	ok	100 ΜΩ	600 ma
Power Converter 2	TM4, TM5, TM6	oK	100 ΜΩ	booms
Earth	Power Converter 1	οK	100 ΜΩ	650m1
Earth	Power Converter 2	oK	100 ΜΩ	booma

#### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 비영원 - C너니

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
	DUD4	51	100 ΜΩ	900 MJ
Transformer Transformer	BUR1 BUR2	OK	100 MΩ	200 MM
Transformer	BUR3	OK	100 MΩ	700 M
Earth	BUR1	0 K 0 K	100 ΜΩ	600 MJL
Earth	BUR2	OK	100 MΩ	500 MM
Earth	BUR3	OK	100 ΜΩ	600 MN
BUR1	HB1		100 ΜΩ	700 M.N
BUR2	HB2	0 K	100 MΩ	
HB1	HB2	OK	100 ΜΩ	800 MM
HB1	TM Blower 1	OK	100 MΩ	700 MJ
		OK	•	600 MJU
HB1	TM Scavenge Blower 1	OK	100 MΩ	SOOMN
HB1	Oil Cooling Unit 1	OK	100 MΩ	600 MN
HB1	Compressor 1	OK	100 M $\Omega$	700 MN
HB1	TFP Oil Pump 1	OK	100 MΩ	1800 MN
HB1	Converter Coolant Pump 1	0 %	100 ΜΩ	500 MM
HB1	MR Blower 1	OK	100 ΜΩ	600 M.A.
HB1	MR Scavenge Blower 1	OK	100 ΜΩ	700 MN
HB1	Cab1	OK	100 ΜΩ	800 MUB
Cab1	Cab Heater 1	OK	100 M $\Omega$	700 Mil
HB2	TM Blower 2	OK	100 ΜΩ	600 MJ
HB2	TM Scavenge Blower 2	OK	100 M <b>Ω</b>	500 M.M.
HB2	Oil Cooling Unit 2	OK	100 ΜΩ	600 M.M.
HB2	Compressor 2	OK	100 MΩ	700 MIN
HB2	TFP Oil Pump 2	OK	100 MΩ	600 MM
HB2	Converter Coolant Pump 2	OK	100 MΩ	800 MM
HB2	MR Blower 2	OK	100 MΩ	900 MM
HB2	MR Scavenge Blower 2	OK	100 MΩ	700 MM
HB2	Cab2	012	100 ΜΩ	600 MM
Cab2	Cab Heater 2	OK	100 MΩ	500 MN
			***************************************	· · · · · · · · · · · · · · · · · · ·

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41982 - Ch L 1.3 Continuity Test of Battery Circuit Cables Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	ok
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	OK
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.X7-3		OK

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured -
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>7</u> ΜΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

#### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no, mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	9K
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	OIC

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: リリタス- Chへ

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

	1000 000	
Master controller cab-1 &2	08C, 08D	ok
TE/BE meter bogie-1 & 2	08E, 08F	. ok
Terminal fault indication cab-1 & 2	09F	ok
Brake pipe pressure actual BE electric	06H	øς
Primary current sensors	12B, 12F	ar
Harmonic filter current sensors	12B, 12F	OC
Auxiliary current sensors	12B, 12F	or
Oil circuit transformer bogie 1	12E, 12I	0/2
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	on
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	or
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	on
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	G٢
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	0'C
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OL
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	OIC
10K <b>Ω</b> ± ± 10%) UIC line	120	
	13B	alc
Connection FLG1-Box TB	13A	OR

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

#### 2.0 Low Tension test

#### 2.0 Low Tension test 2.1 Measurement of resistor in OHMS $(\Omega)$

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K <b>Ω</b> ± 10%	3.912
Resister to maximum current relay.	1 <b>Ω</b> ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3.32
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.22
Between wire 6 & 7	0.2 Ω	0.21
Between wire 5 & 7	0.4 Ω	D-41
For train bus, line U13A to earthing.	10 k <b>Ω</b> ± 10%	333 KU
For train bus, line U13B to earthing.	10 k <b>Ω</b> ± 10%	10.0 KM
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 M <b>Ω</b>	300M52
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.282
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.291
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.28-2
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.28.1
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	<b>2.2 kΩ</b> ± 10%	2.212
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k <b>Ω</b> ± 10%	2.782
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3.9K2
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kΩ± 10%	1.8K1
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	3901
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k <b>Ω</b> ± 10%	NA.
Resistance for headlight dimmer; Pos. 332.3.	10 <b>Ω</b> ± 10%	705

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks	
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	Cheaked on	
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheaped or	

#### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	Cheared or
Test 48V supply	Sheet 04F & sheets of group 09	
Test traction control	Sheets of Group 08.	OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	9 K
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	014
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	010
Pretest speedometer	Sheets of Group 10	٥K
Pretest vigilance control and fire system	Sheets of Group 11	OR.
Power supply train bus	Sheets of Group 13	OΥ

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/989
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	408
Check that all the fibre optic cables are correctly connected to the bus stations.	408
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	900
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	gol

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

78	
2-B	
5.0	*
4.0	
40	
1600	
1600	
	9-B 5.0 4.0 40

#### 3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured
			Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OL
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	علا
TE/BE at 'o' position	FLG1; AMSB_0101- Xang Trans	Between 9% and 11%	10.1
from both cab	FLG2; AMSB_0101- Xang Trans		<b>'</b>
TE/BE at 'TE maximal'	FLG1; AMSB_0101- Xang Trans	Between 99 % and 101 %	100,
position from both cab	FLG2; AMSB_0101- Xang Trans	·	1004
TE/BE at 'TE minimal'	FLG1; AMSB_0101- Xang Trans	Between 20 % and 25 %	
position from both cab	FLG2; AMSB_0101- Xang Trans		24/

g

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

		·	
TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	44 <sub>1,</sub>
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	744
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	1500
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15.5°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1500
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	150
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14°C

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

#### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through	VCB must open.	Alacine of
emergency stop switch 244	Panto must lower.	they ked on
Shut Down through cab activation	VCB must open.	chearedor
switch to OFF position	Panto must lower.	e healted or
Converter and filter contactor	FB contactor 8.41 is closed.	N
operation with both Power	By moving reverser handle:	J l
Converters during Start Up.	<ul> <li>Converter pre-charging contactor</li> </ul>	/
	12.3 must close after few seconds.	
the of the state	• Converter contactor 12.4 must close.	
	Converter re-charging contactor	1 1
	12.3 must opens.	cheakedor
	By increasing TE/BE throttle:	
	• FB contactor 8.41 must open.	
	• FB contactor 8.2 must close.	
	• FB contactor 8.1 must close.	
I	or Bring TE/BE to O.	7
operation with both Pow	, ·	Λ
Converters during Shut Down.	VCB must open.	/
	• Panto must lower.	
	Converter contactor 12.4 must open	checicedou
	• FB contactor 8.1 must open.	y  -,(
	• FB contactors 8.41 must close.	/
	• FB contactor 8.2 must remain closed	
	1	,

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

setting TE/BE  • FB contactor 8.1 closes.  • FB contactor 8.2 remains open.  Test earth fault detection battery circuit positive & negative  By connecting wire 2050 to earth, create earth fault negative potential.  • message for earth fault  • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault  • message for earth fault  Test fire system. Create a smoke in  When smoke sensor-1 gets	ncedor
cut out switch. Wait for self-test of the loco.  • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open.  Test earth fault detection battery circuit positive & negative  By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault oearth, create earth fault positive potential. • message for earth fault  Test fire system. Create a smoke in  When smoke sensor-1 gets	ncedor
the loco.  Check that FB contactor 8.1 is open.  Check that FB contactor 8.2 is open.  After raising panto, closing VCB, and setting TE/BE  FB contactor 8.1 closes.  FB contactor 8.2 remains open.  By connecting wire 2050 to earth, create earth fault negative potential.  message for earth fault  By connecting wire 2095  to earth, create earth  fault positive potential.  message for earth fault  By connecting wire 2095  to earth, create earth  fault positive potential.  message for earth fault  When smoke sensor-1 gets	ncedor
Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE FB contactor 8.1 closes. FB contactor 8.2 remains open.  By connecting wire 2050 to earth, create earth fault negative potential.  message for earth fault By connecting wire 2095 to earth, create earth fault message for earth fault  message for earth fault  message for earth fault  message for earth fault  when smoke sensor-1 gets	nkedok
After raising panto, closing VCB, and setting TE/BE  • FB contactor 8.1 closes.  • FB contactor 8.2 remains open.  Test earth fault detection battery circuit positive & negative  By connecting wire 2050 to earth, create earth fault negative potential.  • message for earth fault  • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault	ncedor
setting TE/BE  • FB contactor 8.1 closes.  • FB contactor 8.2 remains open.  Test earth fault detection battery circuit positive & negative  By connecting wire 2050 to earth, create earth fault negative potential.  • message for earth fault  • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault  Test fire system. Create a smoke in  When smoke sensor-1 gets	iked ok
setting TE/BE  FB contactor 8.1 closes.  FB contactor 8.2 remains open.  By connecting wire 2050 to earth, create earth fault negative potential.  message for earth fault  By connecting wire 2095  to earth, create earth  fault positive potential.  message for earth fault  By connecting wire 2095  to earth, create earth  fault positive potential.  message for earth fault  Test fire system. Create a smoke in  When smoke sensor-1 gets	
• FB contactor 8.1 closes. • FB contactor 8.2 remains open.  Test earth fault detection battery circuit positive & negative  By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	
Test earth fault detection battery circuit positive & negative  By connecting wire 2050 to earth, create earth fault negative potential.  • message for earth fault  • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	
Test earth fault detection battery circuit positive & negative  By connecting wire 2050 to earth, create earth fault negative potential.  • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	
circuit positive & negative  earth, create earth fault negative potential.  • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	
negative potential.  • message for earth fault  • By connecting wire 2095  to earth, create earth fault positive potential.  • message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	
message for earth fault     By connecting wire 2095     to earth, create earth     fault positive potential.     message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	
By connecting wire 2095     to earth, create earth     fault positive potential.     message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	
to earth, create earth fault positive potential. • message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	Λ
fault positive potential.  • message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	uked r
• message for earth fault  Test fire system. Create a smoke in When smoke sensor-1 gets	
Test fire system. Create a smoke in When smoke sensor-1 gets	
· · · · · · · · · · · · · · · · · · ·	
· · · · · · · · · · · · · · · · · · ·	
the machine room near the FDU. activated then	
Watch for activation of alarm. • Alarm triggers and fault	
message priority 2	
appears on screen.	
When both smoke sensor	
14.0 · · · · · · · · · · · · · · · · · · ·	A
1+2 gets activated then  • A fault message priority	on unda
1 appears on screen and	M K EUC OI
lamp LSF1 glow.	SA KER OF
• Start/Running interlock occurs and	SI KEK U
TE/BE becomes to 0.	M RECUI
Fime, date & loco number Ensure correct date time and Loco	M. KER OF
number	- Kest of
Tuttibet	012

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

4.0 Sensor Test and Converter Test

Page : 11 of 27

#### 4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.04/2	OR
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.05VA	BK.
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.042	OK
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0Vp	SK
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	5. SVRMS	<sup>9</sup> k .
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.10 VP 6.44 VPMS	ex.

## 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141 V_p$  /  $100 V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$ , $41.5V_{RMS}$ and opposite polarity.	58.64 41.5 Jams)	On
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15.44	જા

11. OUPMS

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

#### 4.3 Primary Voltage Transformer

Apply  $250V_{eff}/350V_p$  by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	22KV	250+
SLG2_G 87-XUPrim	25 kV	250%	25160	250%

Decrease the supply voltage below 140  $V_{RMS}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	14120	1704.
SLG2 G 87-XUPrim	17 kV	170%	MKU	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	Boku	3001
SLG2 G 87-XUPrim	30 kV	300%	BOKV	300-1

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

#### 4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjus	ted to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage	(Yes/No)
transformer (wire no. 1511 and 1512) from load resistor (Pos.	
74.2) and connect variac to wire no. 1501 and 1502. Supply	·
200V <sub>RMS</sub> through variac. In this case; Minimum voltage relay	
(Pos. 86) picks up	
	(Mds (N(a)
Try to activate the cab in driving mode:	Vres/NO)
Contactor 218 do not close; the control	
electronics is not be working.	0.4.4
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	<u>;</u>
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501	1
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no.	,(Yes/No)
1501 & 1502; Decrease the supply voltage below	
140V <sub>RMS</sub> ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

#### 4.5 Maximum current relay (Pos. 78)

4.3 Maximum current relay (1 03. 76)	
Disconnect wire 1521 & 1522 of primary current transforme &1522 (including the resistor at Pos. 6.11); Put loco in simulation on contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the open wire maximum current relay Pos. 78 for correct over current value;	n for driving mode; Open R <sub>3</sub> – R <sub>4</sub>
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact $R_3$ – $R_4$ of 136.3 closed; Close VCB; Tune the resistor /9.9 $A_p$ at the open wire 1521;	or 78.1 for the current of 7.0A <sub>RMS</sub>
VCB opens with Priority 1 fault message on display.	(Yes/No)

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: べりかえ

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

#### 4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		2.98mp
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. $7(+)$ & $8(-)$ Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. $7(+)$ & $8(-)$	·	- 338m4
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		_
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		346mp
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8 8(-)	NA	NA
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	N14	<u>~\1</u>

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### **PATIALA LOCOMOTIVE WORKS, PATIALA**

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: いりかつ

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

#### 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown	Measured limit	
	should take place		
Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in	For 18.2/1=	T
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 18.2/2=	
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=	1
for Power Converter 1	with priority 1 fault for each	For 18.4/4=	/
	sensor.	For 18.5/1=	401
		For 18.5/2=	
		For 18.5/3=	
Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in	For 18.2/1=	<b>-</b>
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 8.2/2=	-
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=	1
for Power Converter 2	with priority 1 fault for each	For 18.4/4=	/
	sensor.	For 18.5/1=	1010
		For 18.5/2=	10"
		For 18.5/3=	
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK	\$
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	<b>O</b> K_	

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

#### **Monitored contactor sequence**

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	1000	oles	clase	ofen	clase	Of for	Close	Clase	olen
BUR1 off	10-2	- 10m	00,80	100,20	alen	cho so	OP-EN	alen	rlose
BUR2 off	of-la	open	chse	Close	Clase	Clase	ofen	ofen	Clase
BUR3 off	open	Chare	ofen	(lose	16086	Clase	open	open	close

#### 5.0 Commissioning with High Voltage

#### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	yes
No rubbish in machine room, on the roof, under the loco.	409
All the electronic Sub-D and connectors connected	4.08
All the MCBs of the HB1 & HB2 open.	708
All the three fuses 40/* of the auxiliary converters	408
The fuse of the 415/110V auxiliary circuit (in HB1) open.	708
Roof to roof earthing and roof to cab earthing done	ges
Fixing, connection and earthing in the surge arrestor done correctly.	401
Connection in all the traction motors done correctly.	Yal
All the bogie body connection and earthing connection done correctly.	709
Pulse generator (Pos. 94.1) connection done correctly.	7.08
All the oil cocks of the gate valve of the transformer in open condition.	Y-08
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	4.9
KABA key interlocking system.	Yes

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

## Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Theorteel ox
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Cheer Red OK
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	Chearlied oil
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	chearedor
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	charkelok
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL- <b>key in O</b> position.	VCB must open. Panto must lower.	chearedor
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	choixed on
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	chancelok

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	7.4	12.1
Oil pump transformer 2	9.8 amps	7.4 &·5	11.2
Coolant pump converter 1	19.6 amps	4.8	9.6
Coolant pump converter 2	19.6 amps	4.7	9.3
Oil cooling blower unit 1	40.0 amps	425	105.0
Oil cooling blower unit 2	40.0 amps	44.0	110:0
Traction motor blower 1	34.0 amps	26.5	73.0
Traction motor blower 2	34.0 amps	30.0	c. 08
Sc. Blower to Traction motor blower 1	6.0 amps	4,0	16.5
Sc. Blower to Traction motor blower 1	6.0 amps	5.4	2013
Compressor 1	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	22.0	820
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	213	936

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### **PATIALA LOCOMOTIVE WORKS, PATIALA**

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter</u>, Auxiliary Converter and TCN based VCU

Locomotive No.: 역성 영영

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

#### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10024	7/49
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636V	40)
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	Juny 1	رم کا

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1000	70)
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	6374	Yon
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 80%	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	21 Amb	70)
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	110mg	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1100	Yes

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1001	Yes
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637	Yey
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	Jun/	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21 Amy	Yey
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	11 Amj	Xey .
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	Ky

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: リックタ

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

#### 5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 182	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

#### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.6	18.5
Machine room blower 2	15.0 amps*	48	18:5
Sc. Blower to MR blower 1	1.3 amps	1.6	2.9
Sc. Blower to MR blower 2	1.3 amps	1 1	2.1
Ventilator cab heater 1	1.1 amps	1 - 1	<b>a</b> ⋅5
Ventilator cab heater 2	1.1 amps	1 . 1	25
Cab heater 1	4.8 amps	4.9	57.0
Cab heater 2	4.8 amps	4.9	5.9

\* For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

## 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### 5.6 Traction Converter Commissioning

#### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheaped on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheard or
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chearked on
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheaked oc
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chenkedok
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheaked or
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheakedok

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### **PATIALA LOCOMOTIVE WORKS, PATIALA**

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

#### For Converter 2

Test Function	Results desired in sequence	Result obtained
charging and charging	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked or
of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheared or
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chearmed on
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	chanked on
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chea keel ac
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheeked of
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheor need or

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### **PATIALA LOCOMOTIVE WORKS, PATIALA**

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41985

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on DDU appears  Disturbance in Converter 1	cheokedok
Measurement of protective shutdown	Start up the loco with both the converter. Raise panto. Close VCB.	
by Converter 2 electronics.	Move Reverser handle to forward or reverse. Remove one of the orange	chearzed or

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained		
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	chenicedor		

Doc.No.F/ECS/01

Effective Date: Feb 2022

(Ref: WI/ECS/10)

#### **PATIALA LOCOMOTIVE WORKS, PATIALA**

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: U \ 9 82

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

g A <sup>T</sup>	<ul> <li>FB contactor 8.2 must close.</li> <li>FB contactor 8.1 must close</li> <li>Check the filter current in diagnostic laptop</li> <li>Bring the TE/BE throttle to O</li> <li>Switch off the VCB</li> <li>FB contactor 8.1must open.</li> <li>FB discharging contactor 8.41 must close</li> <li>Check the filter current in diagnostic laptop</li> </ul>	cheakedok
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit	1 Checiked ok
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	ØK

#### 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	cheaned ar	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	Chaq Ked x	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	Chocadok	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	chearcelox	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	charkedok	

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

		•
Marker light	Both front and tail marker light should glow from both the cabs	chedicedois
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	chearced or
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheaked ac
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Cheniced on
Illuminated Push button	All illuminated push buttons should glow during the operation	Cheaked or
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1:9
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m <sup>3</sup> /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### 6.0 Running Trial of the locomotive

SN	Description of the items to Action which should take place be seen during trail run			
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	orkedoi	
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	chearel	
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	chequed	
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again.</li> </ul>	Cheoree On	
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	hear kad	

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41982

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

		rage: 20 c	n. 21
6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	1
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .	
	locomotive	For 60 seconds do not press vigilance foot switch or	.
	•	sanding foots switch or TE/BE throttle or BPVG	
		switch then	
		Buzzer should start buzzing.	
		LSVW should glow continuously.	
		Do not acknowledge the alarm through BPVG or	i
		vigilance foot switch further for 8 seconds then:-	
		Emergency brake should be applied	Chear
		automatically.	
		VCB should be switched off.	
		Resetting of this penalty brake is possible only after	
		32 seconds by bringing TE/BE throttle to 0 and	
		acknowledge BPVR and press & release vigilance	
•		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).	Cheolice
		With park brake in applied condition.	niA
		) a	
		• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	here
		• With automatic train brake applied (BP<4.75Kg/cm²).	9 7
	. •	• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).	- 1
8.	Check traction interlock	Switch of the brake electronics. The	),
		Tractive /Braking effort should ramp down, VCB	4 chear
	·	should open and BP reduces rapidly.	
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	y chear.
	braking.	should start reducing.	y chear
0.	Check for BUR	In the event of failure of one BUR, rest of the two	9'
	redundancy test at	BURs can take the load of all the auxiliaries. For this	4,1
	ventilation level 1 & 3 of	switch off one BUR.	Checike
	loco operation	Auxiliaries should be catered by rest of two BURs.	
		Switch off the 2 BURs; loco should trip in this case.	1
L1.	Check the power	Create disturbance in power converter by switching	7
	converter	off the electronics. VCB should open and converter	4 cheak
	isolation test	should get isolated and traction is possible with	
		another power converter.	
	200	<del>-</del>	· ———

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

#### **PATIALA LOCOMOTIVE WORKS, PATIALA**

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

**Locomotive No.:** 

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

## 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks	
1	Head lights	OK	OK		
2	Marker Red	olc	OK		•
3 -	Marker White	OK	σĸ		
4	Cab Lights	OK	OK		
5	Dr Spot Light	ok.	OK		
6	Asst Dr Spot Light	OK	0/4		•
7	Flasher Light	OK	010	chankael ul	onko. Ol
8	Instrument Lights	or	OK		
9	Corridor Light	OR	OK		
10	Cab Fans	OC	0 t		
11	Cab Heater/Blowers	OK	0 K		
12	All Cab Signal Lamps Panel 'A'	oc	OK		

## Status of RDSO modifications

LOCO NO: 41982

Sn	Modification No.	Docarieties	· · · · · · · · · · · · · · · · · · ·
1.		Description	Remarks
	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	locomotives.	Qk/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12-10	three phase locomotives to improve reliability	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Ok/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6. 7.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11 RDSO/2011/EL/MS/0403	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Øk/Not Ok
8.	Rev.'0' Dt 30.11.11 RDSO/2012/EL/MS/0408	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Not Ok
9.	Rev. '0' RDSO/2012/EL/MS/0411	Modification of terminal connection of heater cum blower assembly.	Øk/Not Ok
9.	Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25,04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev. 0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev. 0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Øk/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Ok/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Ok/Not Ok

Signature of JE/SSE/ECS

Loco No.: 41982

#### PLW/PATIALA

## PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: M/s Faiveley			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	58
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.45 Kg/cm2
		DMTS-014-1, 8	-	
		CLW's check sheet		
		no. F60.812 Version		
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.50 Kg/cm2
		no. F60.812 Version	kg/cm2, closes	
		2	5.5±0.15 kg/cm2	5.45 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Iso	olating Cocks & KABA co	ock by Key (KABA Key	)
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.25 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			Ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 25
2.2	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	Ok
2.2	compressors		both compressors	CD1 27 C
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual compressor from 8 kg/cm2 to 9 kg/cm2			CP2-27 Sec
2.4		DOM tost spec	Classes et C 4010 15	
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec. MM3882 &	Closes at 6.40±0.15 kg/cm2 Opens at	6.35 Kg/cm2
		MM3946	5.60±0.15kg/cm2	5.50 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	9.90 Kg/cm2
۷.3	check complessor riessure switch noch setting (33)	MM3882 &	kg/cm2 Closes at	9.90 Ng/UII2
		MM3946	8±0.20 kg/cm2	8.1 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.40 minute
۷.0	nun bour tile compressors necora Pressure bulla up time	manesults	3.3 Millares Max.	3.40 minute

## PLW/PATIALA

Loco No.: 41982

						LOCO NO	71302
2.7	Check unloader v	alve operation time				Approx. 12 Sec.	10 sec
2.8	Check Auto Drain	Valve functioning (12	24 & 87)			Operates when	Ok
						Compressor	
						starts	
2.9	Check CP-I deliver	ry safety valve setting	(10/1). Run CP	D&M t	est spec.	11.50±0.35	11.50
	Direct by BLCP.	, salet, raive setting	, (10, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,		& MM3946	kg/cm2	Kg/cm2
2.10	· '	ry safety valve setting	g /10/2\ Pup CP		est spec.	11.50±0.35	11.55
2.10	direct by BLCP	ily salety valve setting	g (10/2). Null Cr		& MM3946	kg/cm2	
2.44	Switch 'OFF' the compressors and ensure that the safety				Kg/CIIIZ	Kg/cm2	
2.11		•	•		est spec.		
	valve to reset at p	ess than opening	IVIIVI3882	& MM3946			
	pressure.						
2.12		ch 'OFF' compressor,			ck sheet no.	5.0±0.10kg/cm2	5.0 Kg/cm2
	· ·	" Main Reservoir, Sta	•	F60.812 Ve	ersion 2		
	check setting pres	ssure of Duplex Check	K Valve 92F.				
2.13	FP pressure:			CLW's ched	ck sheet no.	6.0±0.20kg/cm2	6.0 Kg/cm2
	Fit Test Gauge in	Test point 107F FPTP.	. Open isolate cock	F60.812 Ve	ersion 2		
	136F. Check press	sure in Gauge.					
3.0	Air Dryer Opera						
3.1	· · · · · ·	90 of 2 <sup>nd</sup> MR to start	Compressor, leave			Tower to change	Ok
		ck Air Dryer Towers t				i) Every minute	
						(FTIL & SIL)	
						ii)every two	
						minute (KBIL)	
3.2	Chack Durga Air S	t Compressor stone			minute (KBIL)		
3.3		tops from Air Dryer a of humidity indicator	t Compressor stops			Blue	Blue
4.0	Main Reservoir L					Blue	Blue
			a ale MAD. Dura a a una a in	DONA		Should be less	0.30
4.1		۱-9) in full service, Che	eck wik Pressure air	D&M test spec. MM3882 & MM3946			
	leakage from both cabs.			IVIIVI3882	& WIWI3946	than 1 kg/cm2 in	Kg/cm2 in
1.0		/: l · pp l ·	1.70)	5014		15 minutes	15 minutes
4.2	Check BP Air leak	age (isolate BP chargi	ng cock-/U)		est spec.	0.15 kg/cm2 in 5	0.05
				MM3882 & MM3946		minutes	Kg/cm2 in 5
			-1 3				minutes
5.0	<u> </u>	omatic Brake opera					
5.1	Record Brake Pipe	e & Brake Cylinder pr	essure at Each Step				
		III CA I D I		0111111			
	Check proportion	ality of Auto Brake sy	stem		ck sheet no.		
				F60.812	Version 2		
		T					
	Auto controller	BP Pressure kg/cm2	2		8 WAG-7)	BC (WAP-5)	
	position		Kg/cm2		Kg/cm2		
		Value	Result	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
		4.60+0.1					
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	_
	Full service	3.35±0.2	3.35 Kg/cm2	2.50±0.1	2 EV-/ 2	5.15±0.30	_
					2.5Kg/ cm2		
	Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
1	1				<b>-</b>		

## PLW/PATIALA

Loco No.: 41982

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	8 Sec
5.2	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946	δīz sec.	8 Sec
F 2			DD www.serves fells	
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls to Below 2.5	ОК
		MM3882 & MM3946	kg/cm2	OK
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	
J. <del>4</del>	check brake ripe riessure 3witch 03r operates	F60.812 Version 2	4.05- 4.35	4.10
		100.812 VEISION 2	kg/cm2	Kg/cm2
				Kg/CIIIZ
			Opens at BP 2.85- 3.15	3.00
5.5	Move Auto Brake Controller handle from Running to	DOM tost succ	kg/cm2	Kg/cm2
5.5	_	D&M test spec. MM3882 & MM3946		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	1011013002 & 1011013940		
	Max. BC developed		4.4.	
	WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	20.000
F 6	WAG9 - BC 2.50 ± 0.1 kg/cm2	DOMAL :	21±3 sec.	20 sec
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure up			
	to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	
	WAG9		52±7.5 sec.	48 sec.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	74 Sec
	BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test: The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.50
	functioning of brake.		60 Sec.	Kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A-9 (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors in			
	working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure			
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.50
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 Sec
	time	MM3882 & MM3946		

#### **PLW/PATIALA**

Loco No.: 41982

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.20 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)		-NA-	-NA-
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is 12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

SAMSHER Digitally signed by SAMSHER SINGH BIST Date: 2025.01.28 13:35:00 +05'30'

Signature of SSE/Shop

	41982								
		1	ROOF COME	PONENT CAB 1 & 2		Warranty			
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.	-			
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, CONTRANSYS	H24-0100/AUG-2024, 15664-11/24				
2	Servo motor	29880026	2	CONTRANSYS	15285-09/24				
3	Air Intake filter Assly	29480103	2	PARKER	O/C 1659P/A/01 (PLW)10/24, O/C 1668P/A/02 (PLW)10/24				
4	Insulator Panto Mtg.	29810127	8	IEC	05-24, 06-24				
	•	•	MIDDLE RC	OF COMPONENT					
5	High Voltage Bushing	29731021	1	ELECTRANEX	EIPL-5788-09-24				
6	Voltage Transformer	29695028	1	PRAGATI	24/819169-oct/2024				
7	Vacuum Circuit Breaker	25712202	1	AUTOMETERS	AALN/11/2024/042/VCBA/853				
8	Insulator Roof line	29810139	9	MIL	05-2024, 06-2024, 07-2024				
9	Harmonic Filter	29650033	1	Sunshine Industries	1273-10/2024	AS Per PO/IRS Conditions			
10	Earth Switch	29700073	E	Arihant Electricals	ES/1110/038-11/2024				
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	57406-2024, 57407-2024				
			Air B	rake Components					
12	Air Compressor (A,B)	29511008	2	ELGI	EXGS 923689 A, EXGS 923716 B				
13	Air Dryer	29162051	1	TRIDENT	LD2-11-0952-24				
14	Babby compressor	25513000	1	CEC	RH 3365-08-24				
15	Air Brake Panel	29180016	1	FAIVELEY	July 24-43-WAG9-3479				
16	Contoller (A,B)	29180016	2	FAIVELEY	K24-010 A, K24-007 B				
17	Breakup Valve	29180016	2	FAIVELEY					
18	wiper motor	29162026	4	Auto Industry					

SAMSHER Digitally signed by SAMSHER SINGH BIST Date: 2025.01.24 16:03:29 +05'30'

SSE/ABS

#### PLW/PTA

## ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41982 LIST OF ITEMS FITTED BY ECS RLY: WR

SHED: VTAD

PROPULSION SYSTEM: CGL

		ITEM DI NO	ITEM SR. NO C	AB-1/CAB-2	MAKE/SUPPLIER
SN	DESCRIPTION OF THEM	ITEM PL NO.	470	4713	POWER TECH
	LED Based Flasher Light Cab I & II	29612937	143071/143027/		MATSUSHI P. TECH.
2	Led Marker Light Cab I & II	29612925		2511	TOPGRIP
3	Cab Heater Cab I & II	29170011	2493		ROTO TECH
4	Crew Fan Cab I & II	29470080	RT04780924/05020924		
5	Master Controller Cab I	29860015	22		AAL
	Master Controller Cab II	29000013	22		KONTACT
7	Complete Panel A Cab I & II	29178265	1481	1559	KEPCO/CGL
8	Complete Panel C Cab I & II	29170539	3398	3479	KONTACT
	Complete Panel D Cab I & II	29178265	1548	1484	STESALIT
	Complete Cubicle- F Panel Cab I & II	29178162	SLCF00012410338	SLCF00012410332	
	Speed Ind.& Rec. System	29200040	5278/	5286	LAXVEN
		29680025	B-1	30	HBL
	Battery (Ni- Cd)	29600420			QUADRANT
13	Set of Harnessed Cable Complete	20000 1210	•		- C WELLOTDIEC
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	29500047			BG INDUSTRIES
15	Transformer Oil Pressure Sensor (Cab-2)				
	Transformer Oil Temperature Sensor (Cab-1)				
16	(Temperature Sensor Oil Circuit Transformer)	29500035			BG INDUSTRIES
17	Transformer Oil Temperature Sensor (Cab-2)		OOMOVW!	C/00 24/108	
18	Roof mounted Air Conditioner I	29811028	SSM/CLW/A	SATURN SHEET N	
19	Roof mounted Air Conditioner II	20011020	SSM/CLW//	C/09-24/104	

SSE/ECS

JE/ECS

## PATIALA LOCOMOTIVE WORKS, PATIALA

		1000 140-41302/	WAG-9HC/WR/V	IAD		
S.No.	. Equipment	PL No.	Equipment Serial No.		Ma	ke
1	Complete Shell Assembly with piping	29171027	Sr. 01/	/14, 11/2024	TRIC	DENT
2	Side Buffer Assly Both Side Cab I	-3433350	173, 10/24	222, 10/24	FASP	FASP
3	Side Buffer Assly Both Side Cab II	29130050	159, 10/24	Not visible, 09/24	FASP	AEU
4	CBC Cab I & II	29130037	113, 08/24	112, 08/24	FASP	FASP
5	Hand Brake		10	0/24- 960	Rising Eng	g. Concern
6	Set of Secondry Helical Spring	29045034 29041041			GE	3D
7	Battery Boxes (both side)	29680013	23, 10/24	15, 10/24	D R STEEL	D R STEEL
8	Traction Bar Bogie I		141	16, 12/23	FA	SL
9	Traction Bar Bogie II		140	05, 12/23	FA	SL
10	Centre Pivot Housing in Shell Bogie I side	29100057		19, 09/24	AN	
11	Centre Pivot Housing in Shell Bogie II side	23100037		51, 09/24	AN	
12	Elastic Ring in Front in Shell Bogie I side	29100010		8, 07/24	AVA	
13	Elastic Ring in Front in Shell Bogie II side	23100010	11	10, 07/24	AVA	ADH
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	HRL-65-12-2	4-10657-024, 2024	HF	RL
15	Oil Cooling Radiator I	22470021	10/24,	P1024RC2293	FINE AUTON	MOTIVE LTD
16	Oil Cooling Radiator II	29470031	10/24,	P1024RC2292	FINE AUTON	MOTIVE LTD
17	Main Compressor I with Motor	22544000	EXGS 9	23716, 10/24	ELGi	
18	Main Compressor II with Motor	29511008	EXGS 9	23689, 10/24	ELGi	
19	Transformer Oil Cooling Pump I		2408	1285, 08/23	FLOWOIL	
20	Transformer Oil Cooling Pump II		2406	0730, 06/24	FLOWOIL	
21	Oil Cooling Blower OCB I			LHP10015537681	ACCEL	
-22	Oil Cooling Blower OCB II	29470043	AC-58328, LHP1001564929		ACCEL	
23	TM Blower I			ICTMB241008	IC ELECTRICAL PVT LTD	
24	TM Blower II	29440075		FMT/24-25/431	FORCE MOTION TECHNOLOGY	
	Machine Room Blower I			24, 241099	G.T.R OO PVT LTD	
25		29440105		24, 241094		
26	Machine Room Blower II				G.T.R CO PVT LTD G.T.R CO PVT LTD	
27	Machine Room Scavenging Blower I	29440129		SM-24.07.23		
28	Machine Room Scavenging Blower II		09/24,	SM-24.08.68		PVT LTD
29	TM Scavenging Blower Motor I	29440117	10/24,	, ST-24.10.86		PVT LTD
30	TM Scavenging Blower Motor II	25440117	10/24,	ST-24.10.150	G.T.R CO	PVT LTD
31	Traction Convertor I		12/24, CGF	P124C2345-P1092		
32	Traction Convertor II			P124C2346-P1092		
33	Vehicle Control Unit I	29741075		24121281-P1092	C	GL
34	Vehicle Control Unit II			24121282-P1092		
35	Aux. Converter Box I (BUR 1)			.00124C1510-P1092		
36	Aux. Converter Box 2 (BUR 2 + 3)	20171100		.00224C1510-P1092 L0022405302	STESA	LIT LTD
37	Axillary Control Cubical HB-1	29171180 29171192		2/2024/J/0178/685		TIFIERS LTD
38	Axillary Control Cubical HB-2 Complete Control Cubicle SB-1	29171192		B1/564/11/2024		TRICAL PVT LTD
39	Complete Control Cubicle SB-1  Complete Control Cubicle SB-2	29171209		/2024/K/0225/1304		TIFIERS LTD
41	Filter Cubical (FB) (COMPLETE FILTER	29480140		4/L/0656/640		TIFIERS LTD
42	CUBICLES)  Driver Seats	29171131	10/24- 22	25, 221, 234, 241	TARL	JDEEP
		29230044		RANT PIPES		
43	Transformer oil steel pipes  Conservator Tank Breather	29731057		552, 24-8668	YOGYA ENET	RPRISES LTD
4.4		( 29/3103/ 1	27 00		YOGYA ENETRPRISES LTD	
44 45	Ballast Assembly ( only for WAG-9)	29170163	101	70, 41139	Ak	KM

NAMESHURHAM SHAPMA SSE/LAS NAME KARAN SINSH JE/LAS/UF

NAME ANKIT UP AL JE/LAS Issue No. : 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

#### पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 41982 Rly: 1

Shed: VTAD

S. No.	ITEM TO BE CHECKED	Specified Value	OI	oserved Va	llue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		- NA	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.  TM scavenging blower 1 & 2 & Oil Cooling unit.	OK		OIL	
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		OIL	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		all	
1.5	Check proper Fitment of FB panel on its position.	OK		UIL	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		0/2	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		0/2	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		UZ	
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		ak	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		OIL	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		OIL	
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		OK	
1.13	Check proper fitment of Cow catcher.	OK		0/2	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		OK	1
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		UL	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		OLL	
1.17	Check proper fitment of both battery box.	OK		0/2	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		0/2	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable.  As per Drg No 1209-01-113-001	OK		OK	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAE	3-1	CAB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP LF	ALP
		:35-60 mm	53	50 50	60
		Lateral Std- 45-50 mm		43 62	,
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	R/S
	Drg No IB031-02002.	mm	FRONT	1.00	11 -
			REAR	1093	1100
			REAR	1095	1100
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm	FDONE	L/S	R/S
	Drg No-SK.DL-3430.		FRONT	646	649
			REAR	648	643
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	119	119
			REAR	110	119
1.24	CBC Height: Range (1090, +15,-5)	1090, +15	FRONT:	Moy	
	Drg No- IB031-02002.	-5 mm	REAR:	1100	

(Signature of SSE/Elect. Loco )

NAME SHUBBAM SHAFMA

DATE 24/12/24

(Signature of /JE/Elect Loco)

NAME KARAN SINGH

DATE 24/12/24

(Signature of JE/UF)

NAME ANKIT UPPAL

DATE 24/12/24

## **Loco No.** 41982

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-338	ECBT	29100677	101682	As per PO/IRS
REAR	SL-117	SIMPLEX	29100677	100362	conditions

#### 2. Hydraulic Dampers (PL No.29040012) Make: KNORR / KNORR

#### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27849	27749	27699	27878	27760	27807
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC24-3535	CNC24-3696	CNC24-3737	CNC24-3738	CNC24-3779	CNC24-3794
Make	D.P.	D.P.	D.P.	D.P.	D.P.	D.P.
FREE END	CNC24-3534	CNC24-3538	CNC24-3732	CNC24-3796	PLW24-647	CNC24-3792
Make	D.P.	D.P.	D.P.	D.P.	D.P.	D.P.
Bull Gear No.	17190	16086	16116	17180	17147	16114
Bull Gear Make	GGAG	GGAG	GGAG	GGAG	GGAG	GGAG

## 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

AXLE POSITION NO		1	2	3	4	5	6
Gear End	MAKE	FAG	FAG	FAG	SKF	FAG	FAG
	PO NO. & dt	00091	00091	00091	02191	00091	00091
Free	MAKE	FAG	FAG	FAG	SKF	FAG	FAG
End	PO NO. & dt	00091	00091	00091	02191	00091	00091

## 6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	976 KN	992 KN	978 KN	795 KN	938 KN	82 T
FREE END	992 KN	821 KN	1016 KN	1010 KN	1015 KN	84 T

## **Loco No.** 41982

#### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + .5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6	
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5	
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5	
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK	

#### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	KPE	KPE	KPE	IN	IN	IN
GE Brg. PL 29030110	MAKE	SKF	SKF	SKF	SKF	SKF	SKF
FE Brg. PL 29030110	MAKE	SKF	SKF	SKF	SKF	SKF	SKF

## 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KM	EEE	KM	KPE
BACKLASH (0.254 – 0.458mm)	0.330	0.400	0.320	0.390	0.400	0.410

## 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	16.41	18.04	17.68	17.91	17.10	16.23
LEFT SIDE	15.64	15.98	15.43	17.51	16.93	17.12

## 11. TRACTION MOTOR: (PL No.29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & Date	S. NO.
1	CGL	102027	2232006-7114
2	CGL	102027	2232006-7112
3	CGL	102027	2232006-7116
4	CGL	102027	2232006-7117
5	PIONEER	102028	318A24705
6	PIONEER	102028	318A24706

JE/SSE/ Bogie Shop

#### TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646  ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



#### भारत सरकार GOVERNMENT OF INDIA

रेल मंत्राल्य

#### MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना

#### PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244

फोन/ Phone: 0175-2396422 मोबाईल: 9779242310

पटियाला, 147003, भारत् PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: As signed

(Through Mail)

Sr. Div. Mechanical Engineer, Electric Loco Shed, Vatva.

Email: srdmedvta@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 41982 WAG9-HC.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 41982 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to DLS/VTA/WR on 11.01.2025. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

NISHANT Digitally signed by NISHANT BANSIWAL Date: 2025.02.04 (निशांत बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

#### प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/WR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

## Loco No. 41982

31	RLKO.	Decolpion of tem	egy,
4	204 52244	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
i	29611994	FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 nos
		FEMALE TEE 3/8" BSPP – BRASS	06 nos
2		HEX PLUG -3/8" BSPT — BRASS	02 nos
		FEMALE TEE 1/2" BSPP – BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos
		HEX PLUG – 1/2" BSPT – BRASS	04 nos
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos
3	29170114	Copper Tube OD 9.52mm (3/8" ) X 1.245 Mm W.T X 6 Mtr	1.2Mtr

AWWABS & LFS

SSEJĞİABS

SN	PLNo.	Description of item	Quantity
1,	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.	-	WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	_	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	-	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.		DIN Rail fitted inside the driver desk (LP Side)	02 nos.

FOT AWMIABS & LFS

SSE/G/LFS

## Annexure-C

SN	PL No.	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm <sup>2</sup> provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	-	Harness provided from KAVACH SB to SB-1	07 wires
5.	-	Harness provided from KAVACH SB to SB-2	05 wires
6.		Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	-	Harness provided from KAVACH SB to CAB-1	/6 wires
8.	-	Harness provided from KAVACH SB to CAB-2	16 wires

AWMEES

SSEIGIECS