
# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

## PATIALA LOCOMOTIVE WORKS, PATIALA

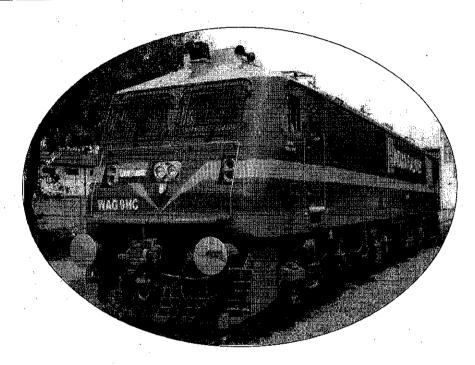

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

TYPE:

RAILWAY SHED:

PROPULSION SYSTEM:

DATE OF DISPATCH:

41984

WAG9HC

SECR/BSPE

**ALSTOM** 

24.12.2024

लोको निर्माण रिकार्ड



## पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41984

RAILWAY/SHED: SECR/BSPE

DOD: DEC-2024

#### INDEX

SN	PARA	ACTIVITIES	PAGE NO.
<u></u>		Testing & Commissioning (ECS)	
1.	1.0	Continuity Test of the cables	
ļ	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	5-6
	2.2	Check Points	3-0
	2.3	Low Tension Test Battery Circuits (without control electronics)	
3	3.0	Downloading of Software	
_	3.1	Check Points	
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	*
4	4.0	Sensor test & convertor test	
4	4.0	Test wiring Transformer Circuits – Polarity Test	
	4.2 4.3	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer	
	4.3 4.4		
	4.4 4.5	Minimum voltage relay (Pos. 86)	11-16
		Maximum current relay (Pos. 78)	
	4.6	Test current sensors	·
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	•
	4.8	Verification of Converter Protection Circuits (Hardware limits)	
-	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5.4	Auxiliary circuit 415/110	
	5.5 5.6	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
	5.8	Test Harmonic Filter	
	5.9	Test important components of the locomotive	
6.	6.0	Running Trial of the locomotive	25-26
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27
8.	8.0	Status of RDSO modifications	28
9.	1-10	Pneumatic Test Parameters	29 - 32
10.		Loco Check Sheet(LAS)	33
11.	-	Component History (LAS,ECS,ABS)	34-36
12.		Component History & Testing Parameter (Bogie Shop)	37 - 38
13		Warranty Conditions as per Tenders	39 -41

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41984 - AUSTOM 1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	500ma
Filter Cubicle	Terminal Box of , Harmonic Filter Resistor (Roof)	ok	100 ΜΩ	booma
Filter Cubicle	Earthing Choke	OK	100.ΜΩ	650MA.
Earthing Choke	Earth Return Brushes	OK	100 ΜΩ	600 m/
Transformer	Power Converter 1	ok	100 M <b>Ω</b>	500m1
Transformer	Power Converter 2	o <sub>K</sub>	100 MΩ	550ma
Power Converter 1	TM1, TM2, TM3	ok	100 MΩ	booma
Power Converter 2	TM4, TM5, TM6	OK	100 M <b>Ω</b>	600m()
Earth	Power Converter 1	oK	100 ΜΩ	650MA
Earth	Power Converter 2	OK	100 MΩ	600mil

#### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

*	•			
From	To	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 M $\Omega$	900 MN
Transformer	BUR2	0 K	100 M $\Omega$	800 MN
Transformer	BUR3	OK	100 M <b>Ω</b>	700 M N
Earth	BUR1	O.K	100 M $\Omega$	600 MM
Earth	BUR2	OK	100 MΩ	500 M N
Earth	BUR3	OK	100 M $\Omega$	500 M N
BUR1	HB1	OK _	$100~ extsf{M}\Omega$	600 MM
BUR2	HB2	Ŏĸ	100 ΜΩ	700 MM
HB1	HB2	OK	100 M $\Omega$	800 MJ
HB1	TM Blower 1	OK	100 M $\Omega$	900 MM
HB1	TM Scavenge Blower 1	OK	100 MΩ	800 MM
HB1	Oil Cooling Unit 1	OK	$100~ extsf{M}\Omega$	700 M.A.
HB1	Compressor 1 .	OK	100 MΩ	600 MN
HB1	TFP Oil Pump 1	DK OK	100 MΩ	500 MN
HB1	Converter Coolant Pump 1	OK	100 ΜΩ	600 MN
HB1	MR Blower 1	OK	100 MΩ	700 MM
HB1	MR Scavenge Blower 1	OK	100 MΩ	800-M.N
HB1	Cab1	OK	100 M $\Omega$	900 Mil
Cab1 .	Cab Heater 1	DK	100 M <b>Ω</b>	800 MN
HB2	TM Blower 2	OK	100 M <b>Ω</b>	700 MN
HB2	TM Scavenge Blower 2	OK.	100 MΩ	600 M.N
HB2	Oil Cooling Unit 2	ОК	100 M <b>Ω</b>	500 MN
HB2	Compressor 2		- 100 MΩ	700 MM
HB2	TFP Oil Pump 2	OK	100 M <b>Ω</b>	800 Mil
HB2	Converter Coolant Pump 2	OK	100 M <b>Ω</b>	900 Mill
HB2	MR Blower 2	OK	∞ 100 MΩ	600 MM
HB2	MR Scavenge Blower 2	OK	100 MΩ	500 MM
HB2	Cab2	Ok	100 MΩ	700 MN
Cab2	Cab Heater 2	Ok	100 MΩ	800 M.N

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41984 1.3 Continuity Test of Battery Circuit Cables Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110 2, 112.1-1, 310.4-1	By opening and closing MCB 112	ok
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	ek
Battery (Wire no. 2052)	Connector 50.X7-2		ok
SB2 (Wire no 2050)	Connector 50.X7-3		OR

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured .
2050	> 50 MΩ	Value <u>65</u> ΜΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no, mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	ØK
Memotel circuit of cab1 &2	10A	OK
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	04

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

	·	
Master controller cab-1 &2	08C, 08D	018
TE/BE meter bogie-1 & 2	08E, 08F	ok.
Terminal fault indication cab-1 & 2	09F	ek
Brake pipe pressure actual BE electric	06H	08
Primary current sensors	12B, 12F	08
Harmonic filter current sensors	12B, 12F	0R
Auxiliary current sensors	12B, 12F	bk
Oil circuit transformer bogie 1	12E, 12I	ole ·
Magnetization current	12C, 12G	<i>0</i> 6.
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	; <b>o</b> K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OR
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OR
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	OR
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	Ok
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OR
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	OL
10K <b>Ω</b> ± ± 10%)	<u> </u>	
UIC line	13B	OK
Connection FLG1-Box TB	13A	OF .

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

### 2.0 Low Tension test

2.1 Measurement of resistor in OHMS  $(\Omega)$ 

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K <b>Ω</b> ± 10%	3.912
Resister to maximum current relay.	1Ω ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3.312
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.22
Between wire 6 & 7	0.2 Ω	0.25
Between wire 5 & 7	0.4 Ω	0 452
For train bus, line U13A to earthing.	10 k <b>Ω</b> ± 10%	10.0102
For train bus, line U13B to earthing.	$10 \text{ k}\Omega \pm 10\%$	386 kg
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 M <b>Ω</b>	300191
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.282
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.352
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.281
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	<b>2.2 kΩ</b> ± 10%	2.2kr
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k <b>Ω</b> ± 10%	2-7/20
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3.9 Kr
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.8KZ
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	390A
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k <b>Ω</b> ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	- 10 <b>Ω</b> ± 10%	1050

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Note:

Make sure that the earthing brush device don't make direct contact with the axle housing,

earth connection must go by brushes.

### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	caealed or
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	objected of

### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	Ob Chaked ole
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	915
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	019
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	or
Test control Pneumatic devices	Sheets of Group 06	oK
Test lighting control	Sheets of Group 07	ρK
Pretest speedometer	Sheets of Group 10	· · · · · · · · · · · · · · · · · · ·
Pretest vigilance control and fire system	Sheets of Group 11	OK.
Power supply train bus	Sheets of Group 13	OK.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/984
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	yes
Check that all the fibre optic cables are correctly connected to the bus stations.	yes
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

propersion equipment to be ensured und anottou.	
Traction converter-1 software version:	1.0.6.4
Traction converter-2 software version:	1.0.6.4
Auxiliary converter-1 software version:	1.0.0.8
Auxiliary converter-2 software version:	2.0.0.8
Auxiliary converter-3 software version:	3.0.08
Vehicle control unit -1 software version:	6.0.0.14
Vehicle control unit -2 software version:	6.0.0.14

#### 3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2,0101XPrAutoBkLn	100% (= 5 Kg/cm2)	De.
Actual BE electric	FLG2, AMSB_0201- Wpn BEdem	100% (= 10V)	94
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	164-
TE/BE at 'TE maximal' position from both cab	FLG1, AMSB 0101- Xang Trans FLG2, AMSB 0101- Xang Trans	Between 99 % and 101 %	100/-
TE/BE at 'TE minimal' position from both gab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	244.

S

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/984

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001,
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB 0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	241,
TE/BE at '1/3' position in TE and BE mode in both cab.	LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741,
Both temperature sensor of TM1	SLG1, AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	1400
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14.5°C
Both temperature sensor of TM4	SLG2, AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1500
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C.
	Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14°C



Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41981

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	checked oll
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	checked oll
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed.  By moving reverser handle:  Converter pre-charging contactor 12.3 must close after few seconds.  Converter contactor 12.4 must close.  Converter re-charging contactor 12.3 must opens.  By increasing TE/BE throttle:  FB contactor 8.41 must open.  FB contactor 8.2 must close.  FB contactor 8.1 must close.	checked of
Converter and filter contactor operation with both Power Converters during Shut Down.		duebelols

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4) 9 84

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

•	Ensure correct date time and Loco number	ole_
	• Start/Running interlock occurs and TE/BE becomes to 0.	
	lamp LSF1 glow.	/
	1 appears on screen and	
	A fault message priority	1
	1+2 gets activated then	
	When both smoke sensor	1 Checi del
	appears on screen.	7 checkede
	message priority 2	. ,
Watch for activation of alarm.	Alarm triggers and fault	
the machine room near the FDU.	activated then	
Test fire system. Create a smoke in	When smoke sensor-1 gets	,
M.	• message for earth fault	ľ
	fault positive potential.	l <i>)</i>
	to earth, create earth	[]
and the second s	By connecting wire 2095	
	message for earth fault	17 mil
en e	negative potential.	Mechedo
circuit positive & negative	earth, create earth fault	]
Test earth fault detection battery	By connecting wire 2050 to	,
	• FB contactor 8.2 remains open.	
	• FB contactor 8.1 closes.	V
	setting TE/BE	])
	After raising panto, closing VCB, and	I/ ~
	• Check that FB contactor 8.2 is open.	Cheepedo
	Check that FB contactor 8.1 is open.	
Isolating any bogie	the loco.	i
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of	)

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply 198V<sub>p</sub>/140V<sub>RMS</sub> to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A-804A	10.05V <sub>p</sub> and same polarity	10.0411	OL
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.0500	3K
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.0400	SY.
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0549	عاد
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.8 VP 5-5 VRMS	οu
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.10 Vp 6.44 Vpmsj	ou

## 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V <sub>p</sub> , 41.5V <sub>RMS</sub> and opposite polarity.	58-60P 1 41-SURM	OX
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15:508	2 K

11.0Uers

J

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

### 4.3 Primary Voltage Transformer

Apply  $250V_{\rm eff}/350V_{\rm p}$  by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25/CV	250%
SLG2_G 87-XUPrim	25 kV	250%	45KV	250%.

Decrease the supply voltage below 140 V<sub>RMS</sub>. VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	170%
SLG2_G 87-XUPrim	17 kV	170%	17KV	170%.

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V<sub>RMS</sub> through variac. VCB must open at this voltage, In this case the readings in **diagnostic tool** and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KU	200/
SLG2_G 87-XUPrim	30 kV	300%	BOKU	3001

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

\$1984

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

### 4.4 Minimum voltage relay (Pos. 86)

Functionality test:	
Minimum voltage relay (Pos. 86) must be adjus	ted to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V <sub>RMS</sub> through variac. In this case; Minimum voltage relay (Pos. 86) picks up	(Yés/No)
Try to activate the cab in driving mode:  Contactor 218 do not close; the control electronics is not be working.	(Yes/No)
Turn off the variac : Contactor 218 closes; the control electronics is be working	(Yes/No)
Test Under Voltage Protection	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501 & 1502; Close the VCB; Interrupt the supply voltage The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no. 1501 & 1502; Decrease the supply voltage below 140V <sub>RMS</sub> ± 4V; Fine tune the minimum voltage relay so that VCB opens.	(Yés/No)

### 4.5 Maximum current relay (Pos. 78)

Diagram of the control of the contro	
Disconnect wire 1521 & 1522 of primary current transform	er: Connect variac to wire 1521
&1522 (including the resistor at Pos. 6.11); Put loco in simulati	on for driving mode. Onen D. D.
discrete the second of the sec	on for anying mode; Open K <sub>3</sub> – K <sub>4</sub>
on contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the open w	rire 1521: Tune the drum of the
maximum current relay Pos. 78 for correct over current value;	
the state of the s	
	<i>)</i> .
VCB opens with Priority 1 fault message on	(Xes/No)
display.	4100/110/
Keep contact $R_3 - R_4$ of 136.3 closed; Close VCB; Tune the resis	tor 78.1 for the current of 7.04 pers
/0.04 at the area with 1501	to Form for the carrent of F. DARIVIS
/9.9A <sub>p</sub> at the open wire 1521;	
VCB opens with Priority 1 fault message on	(Ves/No)
	J/163/140/
display.	
	The state of the s

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41 984

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

#### 4.6 Test current sensors

4.6 Test current sensors	20 C C C C C C C C C C C C C C C C C C C	Described value	Set/Measured
Name of the sensor	Description of the test	Prescribed value	value
Primary return current sensor (Test-1,Pos.£.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	(
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		(
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		296mA
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		
	Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		336 mB
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)	<u></u>	
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		346mb
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NB	MA
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	MA	MA

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

This test is to be done by the commissioning engineer of the firm if required.

### 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown	Measured limit	1
	should take place		1
Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in	For 18.2/1=	]
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 18.2/2= /	
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=	
for Power Converter 1	with priority 1 fault for each	For 18.4/4=	lot
A CONTRACTOR OF THE SECOND SEC	sensor.	For 18.5/1=	
		For 18.5/2=	
		For 18.5/3=	
and the second of the second o	*		
Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in	For 18.2/1=	1
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 8.2/2=	)
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3= /	
for Power Converter 2	with priority 1 fault for each	For 18.4/4=	61
	sensor.	For 18.5/1=	1
		For 18.5/2=	1
	All and the second of the seco	For 18.5/3=	1
	19400		
Fibre optic failure In Power	Remove one of the orange		1
Converter1	fibre optic plugs on traction		
	converter. VCB should trip	ok.	1
<u> </u>			l
Fibre optic failure In Power	Remove one of the orange		1
Converter2	fibre optic plugs on traction	019	
	converter. VCB should trip		
	<u> </u>		1

### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

### Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5				52.5/2
AI BUR OK	clase	ofen	clase	olen	close	open	0080	case	ofen
BUR1 off	100,20	olen	Close	close	oren	close	olan	olen	cl 80
BUR2 off	open	DEPM	Close	Osse	PASS	Clase	Alen	den	Cluse
BUR3 off	seen	clase	oser	Cluso	Cose	No 88	oler	open	Close

### 5.0 Commissioning with High Voltage

#### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	yes
No rubbish in machine room, on the roof, under the loco.	yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Tes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes.
KABA key interlocking system.	Yes

### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41184

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	afectefole
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	checked of
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	checked ore
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator.	VCB must open with diagnostic message that catenary voltage out of limits	cheeby of
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- <b>key in O</b> position.	VCB must open. Panto must lower.	checked old
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL- <b>key in O</b> position.	VCB must open. Panto must lower.	checked old
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Checkedole
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	checkedole

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9-1	12.0
Oil pump transformer 2	9.8 amps	9.4	12.5
Coolant pump converter 1	19.6 amps	6.5	10.0
Coolant pump converter 2	19.6 amps	6.9	9.8
Oil cooling blower unit 1	40.0 amps	41.0	142.
Oil cooling blower unit 2	40.0 amps	40.5	138.0
Traction motor blower 1	34.0 amps	40.3	145.0
Traction motor blower 2	34.0 amps	41.0	148.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.5	220
Sc. Blower to Traction motor blower 1	6.0 amps	5.4	21.0
Compressor 1	25 amps at 0 kg/cm <sup>2</sup> 40 amps at 10 kg/cm <sup>2</sup>	28.0	1800
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	27.0	1780

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BÜR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	1002	Yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636 N	Yej.
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	Jamp 1	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10000	Xey .
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yes
BUR2 7303-XUIZ 1		1% (10%=50A)*	7 Am	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Amp	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12Amb	Ky
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1101	Kes .

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10000	Xey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	22 Amb	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12 Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110√	Toes

Readings are dependent upon charging condition of the battery.

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41 944

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	La real Control Contro	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	/

### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	5.0	20.0
Machine room blower 2	15.0 amps*	4.9	19.4
Sc. Blower to MR blower 1	1.3 amps	1-5	6.5
Sc. Blower to MR blower 2	1.3 amps	1.3	66
Ventilator cab heater 1	1.1 amps	1-9	2.0,
Ventilator cab heater 2	1.1 amps	, 7 . 8	2.0
Cab heater 1	4.8 amps	5.8	6 3
Cab heater 2	4.8 amps	5-8-	6.2

\* For indigenous MK blowers.

Sa

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

## 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

### 5.6 Traction Converter Commissioning

### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

For Converter 1		
Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ob
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ob
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ole
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chetted de
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked on
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked or
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkelok

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

### For Converter 2

For Converter 2		
Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ob
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ole
positive potential of DC Link of Converter 2.	demonstrate the same to the PLW supervisor.	checked old
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	carkedok
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked old
of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked or
Converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor. ,	Checked ok

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/984

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Maggurament of		
Measurement of	Start up the loco with both the	<b>h</b>
protective shutdown	converter. Raise panto. Close VCB.	1)
by Converter 1	Move Reverser handle to forward or	/
electronics.	reverse. Remove one of the orange	
203	fibre optic feedback cable from	
<b>4</b>	converter 1Check that converter 1	hal- 1- 1 -M
	electronics produces a protective shut	Checked ol
	down.	
	● VCB goes off	
	<ul> <li>Priority 1 fault mesg. on DDU</li> </ul>	
*.	appears	1
	Disturbance in Converter 1	/
Measurement of	Start up the loco with both the	· · · · · · · · · · · · · · · · · · ·
protective shutdown	converter. Raise panto. Close VCB.	<b>`</b>
by Converter 2	Move Reverser handle to forward or	/
electronics.	reverse. Remove one of the orange	/
	fibre optic feedback cable from	
·	converter 2. Check that converter 2	Theched of
	electronics produces a protective shut	period of
	down.	ŧ.
	• VCB goes off	
	Priority 1 fault mesg, on diagnostic	1
· · · · · ·	display appears	<i>'</i>
	Disturbance in Converter 2	

### 5.8 Test Harmonic filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
currents	Start up the loco with both the converter, Raise panto, Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	Checkedou

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE'WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	A Company of the Comp	
	<ul> <li>FB contactor 8.2 must close.</li> <li>FB contactor 8.1 must close</li> <li>Check the filter current in diagnostic laptop</li> <li>Bring the TE/BE throttle to O</li> <li>Switch off the VCB</li> <li>FB contactor 8.1 must open.</li> <li>FB discharging contactor 8.41 must close</li> <li>Check the filter current in diagnostic laptop</li> </ul>	Threehed ol
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit	Checked old
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	checked ok

## 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	Checked or
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	checked ob
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	Checked of
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Checked of
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	checked of

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	checked of
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	checked old
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	checked of
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Checkedola
Illuminated Push button	All illuminated push buttons should glow during the operation	checkedok
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1:7
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m <sup>3</sup> /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

## 6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Checkedel
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	Checked
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	checked
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm<sup>2</sup>, by pressing BPCS again.</li> </ul>	checked!
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP	checkel

## P.L.W

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

		and the second of the second o		
6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that		
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .		
	locomotive	For 60 seconds do not press vigilance foot switch or	/\	
		sanding foots switch or TE/BE throttle or BPVG		ļ
		switch then		
		Buzzer should start buzzing.	-	
		LSVW should glow continuously.		
		Do not acknowledge the alarm through BPVG or		
		vigilance foot switch further for 8 seconds then:-	C	hecla
		• Emergency brake should be applied	(	
		automätically.		
		VCB should be switched off.		ŀ
		Resetting of this penalty brake is possible only after		
	S	32 seconds by bringing TE/BE throttle to 0 and		
		acknowledge BPVR and press & release vigilance		
		foot switch.		اررا
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).	Che	e Ce
. :		With park brake in applied condition.	N	A
		• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	7/66	ch
		• With automatic train brake applied (BP<4.75Kg/cm		
:		• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).		Ì
8.	Check traction interlock	Switch of the brake electronics. The		
		Tractive /Braking effort should ramp down, VCB	· Icho	eked.
	· 	should open and BP reduces rapidly.		]
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed		
	braking.	should start reducing.	Licha	ched
10.	Check for BUR	In the event of failure of one BUR, rest of the two	<del>- { -</del>	-
	redundancy test at	BURs can take the load of all the auxiliaries. For this	)  _1	
	ventilation level 1 & 3 of	switch off one BUR.	you	ecka
	loco operation	Auxiliaries should be catered by rest of two BURs.	)	ŀ
11		Switch off the 2 BURs; loco should trip in this case.		
11.	Check the power	Create disturbance in power converter by switching	5	
.	converter	off the electronics. VCB should open and converter	4	uku
	isolation test	should get isolated and traction is possible with	100	unu
		another power converter.		

Effective Date: Feb 2022

W.J.q

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41984

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

## 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
JIV	Item	Cap-T	Cab-2	Kemana
1	Head lights	ob	OK	
2	Marker Red	ok.	OB	·
3	Marker White	d	OR	
4	Cab Lights	ok .	OR	
5	Dr Spot Light	ok .	or	
6	Asst Dr Spot Light	οK	OK	cheked
7	Flasher Light	OK	0/2	Coursey
8	Instrument Lights	OR	015	
9	Corridor Light	ok	OF	
10	Cab Fans	ok	OR	
11	Cab Heater/Blowers	OK	OR	
12	All Cab Signal Lamps Panel 'A'	or	OF	

## M'7'd Status of RDSOmbdifications

LOCO NO: 41984

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	9k/Not 0k
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	QK/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Øk/Not Ok
5,	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Øk/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Øk√Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.1411	draining of batteries in three phase electric locomotives.	Øk/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	assembly	Øk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	White and Red marker light in three phase electric locomotives.	бк/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	contactors of three phase locomotives to improve reliability	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Øk/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	ØK/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	бк/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Øk∕Net Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.†4	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives	Øk/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
19	RDSO/2017/EL/MS/0467 Rev. '0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Øk/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Ok/Not Ok

Signature of JE/SSE/ECS

Loco No.: 41984

### PLW/PATIALA

## PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: KNORR BREMSE			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.	For Faiveley	60 sec. (Max.)	
	Record pressure Build up time (8.0 kg/cm2)	For Knorr	120 sec. (Max.)	113 sec.
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.45 kg/cm2
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.55 kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.55 kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co		
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	Ok
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	Ok
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	7 sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.25 kg/cm2
			Min.	in 5 min.
1.11	High Reach Panto emergency test and reset.			Ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		6 min.& 35
	i) with 1750 LPM compressor		i) 7 mins Max.	sec.
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	Ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 sec
	compressors, Check pressure build time of individual			CP2-27 sec
	compressor from 8 kg/cm2 to 9 kg/cm2			
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.5 kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.6 kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10.1 kg/cm2
		MM3882 &	kg/cm2, Closes at	
		MM3946	8±0.20 kg/cm2	8.1 kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.30 min

## PLW/PATIALA

Loco No.: 41984

Compressor starts  2.9 Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP.  2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP  2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor,  Compressor kg/c  D&M test spec. MM3882 & MM3946 kg/cm2  D&M test spec. MM3882 & MM3946  D&M test spec. MM3882 & MM3946  CLW's check sheet no. F60.812 Version 2	g/cm2
Compressor starts  2.9 Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP.  2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP  2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor,  Compressor kg/c  D&M test spec. MM3882 & MM3946 kg/cm2  D&M test spec. MM3882 & MM3946  D&M test spec. MM3882 & MM3946  CLW's check sheet no. F60.812 Version 2	g/cm2
2.9 Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP.  2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP  2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor,  D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946 D&M test spec. MM3882 & MM3946  CLW's check sheet no. F60.812 Version 2  5.0 ±0.10kg/cm2 5.0 kg	
Direct by BLCP.  2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP  2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor,  MM3882 & MM3946 kg/cm2  D&M test spec. MM3882 & MM3946  D&M test spec. MM3882 & MM3946  CLW's check sheet no. F60.812 Version 2  Solution 1.50±0.10kg/cm2  Solution 2.50±0.10kg/cm2  Solution 2.50±0.10kg/cm2  Solution 2.50±0.10kg/cm2	
2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP  2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor,  D&M test spec. MM3882 & MM3946  D&M test spec. MM3882 & MM3946  CLW's check sheet no. F60.812 Version 2	/cm2
direct by BLCP  2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  CLW's check sheet no. by drain cock of 1" Main Reservoir, Start Compressor, F60.812 Version 2	
2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  D&M test spec. MM3882 & MM3946  CLW's check sheet no. 5.0±0.10kg/cm2 5.0 kg by drain cock of 1" Main Reservoir, Start Compressor, F60.812 Version 2	/cm2
valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, F60.812 Version 2  MM3882 & MM3946  CLW's check sheet no. 5.0±0.10kg/cm2 5.0 kg	/cm2
pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, F60.812 Version 2  by drain cock of 1" Main Reservoir, Start Compressor, F60.812 Version 2	/cm2
2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, F60.812 Version 2	/cm2
by drain cock of 1" Main Reservoir, Start Compressor, F60.812 Version 2	/cm2
	, <b>.</b> _
check setting pressure of Duplex Check Valve 92F.	
2.13 FP pressure: CLW's check sheet no. 6.0±0.20kg/cm2 6.0 kg	/cm2
Fit Test Gauge in Test point 107F FPTP. Open isolate cock   F60.812 Version 2	
136F. Check pressure in Gauge.	
3.0 Air Dryer Operation	1.
3.1 Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave  Tower to change Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave	K
open for Test Check Air Dryer Towers to change. every minute  3.2 Check Purge Air Stops from Air Dryer at Compressor stops O	k
3.3 Check condition of humidity indicator  Blue  Blue	
4.0 Main Reservoir Leakage Test	16
4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air D&M test spec. Should be less 0.3	25
leakage from both cabs.    MM3882 & MM3946   than 1 kg/cm2 in   kg	
15 minutes 15 r	
4.2 Check BP Air leakage (isolate BP charging cock-70) D&M test spec. 0.15 kg/cm2 in 5 0.0	
MM3882 & MM3946 minutes kg/cm	
5.0 Brake Test (Automatic Brake operation)	
5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step	
Check proportionality of Auto Brake system  CLW's check sheet no.	
F60.812 Version 2	
Auto controller BP Pressure kg/cm2 BC (WAG-9 & WAP-7) BC (WAP-5)	
position   Kg/cm2   Kg/cm2	
Value Result Value Result Value	
Run 5±0.1 5.05 Kg/cm2 0.00 <sub>0.00 Kg/cm2</sub> 0.00	,
Intial 4.60±0.1 <b>4.6 Kg/cm2</b> 0.40±0.1 <sub>0.40Kg/cm2</sub> 0.75±0.15	-
5 11 2 25 20 2 2 5 2 5 2 5 2 5 2 5 2 5 2 5 2	•
2.5% 6112	
Emergency Less than 0.3 0.25 Kg/cm2 2.50±0.1 2.5Kg/cm2 5.15±0.30	•

## PLW/PATIALA

Loco No.: 41984

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	8 sec.
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	
		MM3882 & MM3946	to Below 2.5	Ok
			kg/cm2	
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.10
		F60.812 Version 2	4.05- 4.35	kg/cm2
			kg/cm2	
			Opens at BP	
			2.85- 3.15	3.05
			kg/cm2	kg/cm2
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC developed			19 sec.
	WAP5 – BC 5.15 $\pm$ 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
	WAG9 - BC 2.50 ± 0.1 kg/cm2		21±3 sec.	
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure up			
	to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	
	WAG9		52±7.5 sec.	53 sec.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	72 sec.
	BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test: The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.75
	functioning of brake.		60 Sec.	kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A-9 (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors in			
	working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure			
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.5
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 sec.
	time	MM3882 & MM3946	, ,	
	1	1	1	1

### **PLW/PATIALA**

Loco No.: 41984

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2 ±0.1 kg/cm2	0.20 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now De- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	DDOG Litter to	Pressure Setting Needed is 12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	RDSO letter no. EL/3.2.19/3-phase (CCB), dtd 30.01.2023		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			45 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

**SAMSHER** X SINGH BIST Date: 2025.01.28

Digitally signed by SAMSHER SINGH BIST

13:35:52 +05'30'

Signature of SSE/Shop

				41984		
			ROOF COM	PONENT CAB 1 & 2		Warranty
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.	
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, CONTRANSYS	F24-0015/JUN-2024, 15299-09/24	
2	Servo motor	29880026	2	CONTRANSYS	15287-09/24	
3	Air Intake filter Assly	29480103	2	PARKER	O/C 1452P/A/02 (PLW)04/24, O/C 1545P/A/02 (PLW)06/24	
4	Insulator Panto Mtg.	29810127	8	IEC	05-24, 05-24	1
	,	•	MIDDLE R	OOF COMPONENT		
5	High Voltage Bushing	29731021	1	ELECTRANEX	EIPL-5672-08-24	
6	Voltage Transformer	29695028	1	PRAGATI	24/819150-oct/2024	
7	Vacuum Circuit Breaker	25712202	1	AUTOMETERS	AALN/11/2024/047/VCBA/858	
8	Insulator Roof line	29810139	9	MIL	06-2024, 06-2024	
9	Harmonic Filter	29650033	1	Sunshine Industries	1239-09/2024	AS Per PO/IRS Conditions
10	Earth Switch	29700073	E	Arihant Electricals	ES/1110/039-11/2024	
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	57686-2024, 57689-2024	
			Air E	Brake Components		
12	Air Compressor (A,B)	29511008	2	ELGI	EXGS 923682 A, EXGS 923640 B	
13	Air Dryer	29162051	1	TRIDENT	LD2-11-0925-24	
14	Babby compressor	25513000	1	CEC	RH 3347-08-24	
15	Air Brake Panel	29180016	1	KNORR	24-10-CO-3812	
16	Contoller (A,B)	29180016	2	KNORR	24-04-FO-3481 A, 24-04-FO-3479 B	
17	Breakup Valve	29180016	2	KNORR		
18	wiper motor	29162026	4	Auto Industry		1



### PLW/PTA

### **ELECTRIC LOCO HISTORY SHEET (ECS)**

ELECTRIC LOCO NO: 41984 LIST OF ITEMS FITTED BY ECS

**RLY: SECR** 

SHED: BSPE

PROPULSION SYSTEM: ALSTOM

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER
1	LED Based Flasher Light Cab I & II	29612937	26950	26949	MATSUSHI P. TECH.
2	Led Marker Light Cab I & II	29612925	143171/143053/	143109/143035	MATSUSHI P. TECH.
3	Cab Heater Cab I & II	29170011	2546	2495	TOPGRIP
4	Crew Fan Cab I & !!	29470080	RT04880924/05910924	1/05620924/05320924	ROTO TECH
5	Master Controller Cab I	20000045	21		
6	Master Controller Cab II	29860015	22	7	AAL
7	Complete Panel A Cab I & II	29178265	1539	1537	KONTACT
8	Complete Panel C Cab I & II	29170539	3558	3563	KEPCO/ALSTOM
9	Complete Panel D Cab I & II	29178265	1474	1476	KONTACT
ĺ	Complete Cubicle- F Panel Cab I & II	29178162	SLCF00012411342	SLCF00012411346	STESALIT
11	Speed Ind.& Rec. System	29200040	5661/		LAXVAN
12	Battery (Ni- Cd)	29680025	1153-	1178	SAFT URJA
	Set of Harnessed Cable Complete	29600420			QUADRANT
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	29500047			BG INDUSTRIES
	Transformer Oil Pressure Sensor (Cab-2)			•	DG INDOS INIES
16	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)	29500035			
17	Transformer Oil Temperature Sensor (Cab-2)				BG INDUSTRIES
18	Roof mounted Air Conditioner I	20244222	S\$K/CLW/	2404004	
19	Roof mounted Air Conditioner II	29811028	SSK/CLW/	2404006	- ssk ·

SSE/ECS

JE/EC\$

		LOCO NO-41984	/WAG-9HC/SECR/BS	PE		
S.No.	Equipment	PL No.	Equipmen	t Serial No.	M	ake
1	Complete Shell Assembly with piping	29171027	Sr. 03/14	, 11/2024	TRII	DENT
2	Side Buffer Assly Both Side Cab I		170, 10/24	193, 10/24	FASP	FASP
3	Side Buffer Assly Both Side Cab II	29130050	Not visible, 09/24	215, 10/24	AEU	FASP
4	CBC Cab I & II	29130037	62, 11/24	58, 10/24	FASP	FASP
5	Hand Brake			4- 967		gg. Concen
6	Set of Secondry Helical Spring	29045034	19,2	. 50,		BD BD
		29041041		42.40/24		
7	Battery Boxes (both side)	29680013	05, 10/24	42, 10/24	D R STEEL	D R STEEL
8	Traction Bar Bogie I			12/23		ASL
9	Traction Bar Bogie II			12/23	-	ASL
10	Centre Pivot Housing in Shell Bogie I side	29100057		09/24		VIL
11	Centre Pivot Housing in Shell Bogie II side			09/24		VIL
	Elastic Ring in Front in Shell Bogie I side	29100010		19/24		ADH
13	Elastic Ring in Front in Shell Bogie II side		92, 0	7/24	AVA	ADH
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	CG-65-10-24-BH	L11500/18, 2024	С	G
15	Oil Cooling Radiator I		P1024RC22	262, 10/24	FINE AUTO	MOTIVE LTD
_	Oil Cooling Radiator II	29470031	P1024RC22		FINE AUTOMOTIVE LTD	
_	Main Compressor I with Motor		EXGS 9236		ELGi	
	Main Compressor II with Motor	29511008	EXGS 9236		ELGi 4	
-	Transformer Oil Cooling Pump I		2406072		FLOWOIL	
_	Transformer Oil Cooling Pump II		2406074		FLOWOIL	
	Oil Cooling Blower OCB I	29470043	AC-58335, LHP1001571875		AC	
_22	Oil Cooling Blower OCB II		PDS2410036, L	HP1001558527	PD STEELS	
23	TM Blower I	29440075	ICTMB2412	207, 12/24	IC ELECTRICAL PVT LTD	
24	TM Blower II	23440073	ICTMB2412	208, 12/24	IC ELECTRICAL PVT LTD	
25	Machine Room Blower I	20440105	AC-57530, CG	LXGCM10658	AC	CEL *
26	Machine Room Blower II	29440105	AC-57553, CG	LXGCM10936	ACI	CEL
27	Machine Room Scavenging Blower I		SM-24.07.		G.T.R CO	PVT LTD
	Machine Room Scavenging Blower II	29440129	SM-24.07.	55, 07/24	G.T.R CO	
29	TM Scavenging Blower Motor I	20440117	ST-24.10.1	05, 10/24	G.T.R CO	PVT LTD
30	TM Scavenging Blower Motor II	29440117	ST-24.10.1	06, 10/24	G.T.R CO	PVT LTD
31	Traction Convertor I		11/24, ATIL/10/2	2024/50/A/4119		
32	Traction Convertor II		11/24, ATIL/11/2	2024/01/A/4122		
33	Vehicle Control Unit I	29741075	11/24, ATIL/10/2	2024/50/A/4119	В1	11
34	Vehicle Control Unit II	29741073	11/24, ATIL/10/2	2024/50/A/4120	] "	IL.
	Aux. Converter Box I (BUR 1)		2024M/1030			
	Aux. Converter Box 2 (BUR 2 + 3)		2024M/1030			
_	Axillary Control Cubical HB-1	29171180	SLHB1002		STESAL	
	Axillary Control Cubical HB-2	29171192	HB2/2024/.		HIND RECT	
-	Complete Control Cubicle SB-1	29171209	SB1/566/11/2024		KAYSONS ELCT	
	Complete Control Cubicle SB-2	29171210	24091703	1, 09/24	TROLEX INC	DIA PVT LTD
41 1	Filter Cubical (FB) (COMPLETE FILTER CUBICLES)	29480140	FB/2024/G	/0656/570	HIND RECT	IFIERS LTD
42	Driver Seats	29171131	10/24- 105, 2	30, 209, 237	TARU	DEEP
43	Transformer oil steel pipes	29230044	VIKRAN	T PIPES		
	Conservator Tank Breather	29731057	24-10507,	2410505	YOGYA EMET	RPRISES LTD
	Ballast Assembly ( only for WAG-9)	29170163	44 66,	54172	AK	M
	Head Light		1	1093	ENS	AVE

NAME SHU BRAM SMAPMA SSE/LAS NAME KARAN SINGH JE/LAS/UF NAME ANILIT UPPAR

Issue No. : 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

## पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 41984

Shed: BSPE

S. No.	ITEM TO BE CHECKED	Specified Value	Ob	served Va	alue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		-MA	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.  TM scavenging blower 1 & 2 & Oil Cooling unit.	OK		OIL	
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		UK	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		all	
1.5	Check proper Fitment of FB panel on its position.	OK		012	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		0/2	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		0)2	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		014	
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		012	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		0/2	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		OK	
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		OZ	
1.13	Check proper fitment of Cow catcher.	OK		0/2	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		0/2	i
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		OK	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		OK	
1.17	Check proper fitment of both battery box.	OK		ok	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		OK	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK		0/2	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAB	-1	CAB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP LI	P ALP
		:35-60 mm	55 4	17 5	5 50
		Lateral Std- 45-50 mm		45 6	
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	R/S
	Drg No IB031-02002.	mm	FRONT	1100	1100
			REAR	1100	1097
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/S	R/S
	Drg No-SK.DL-3430.		FRONT	646	644
			REAR	645	646
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S
1.20	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	115	116
			REAR	115	115
1.24	CBC Height: Range (1090, +15,-5)	1090, +15	FRONT:	1094	
	Drg No- IB031-02002.	-5 mm	REAR:	1097	

(Signature of SSE/Elect. Loco )

NAME SHUBBAM SHARMA

DATE 24/12/24

(Signature of /JE/Elect Loco)

NAME KARAN SINSH

DATE 24/12 kg

(Signature of JE/UF)

NAME ANKIT UPPAL

DATE 24/12/24

## **Loco No.** 41984

### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-295	ECBT	29100677	100360	As per PO/IRS
REAR	SL-121	SIMPLEX	29100677	100362	conditions

### 2. Hydraulic Dampers (PL No.29040012) Make: KNORR / KNORR

### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27964	27868	27875	27728	27896	27414
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

### 4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC24-3741	CNC24-3537	PLW24-666	CNC24-3808	CNC24-3782	CNC24-3461
Make	D.P.	D.P.	D.P.	D.P.	D.P.	IMPORTED
FREE END	PLW24-669	PLW24-466	CNC24-3785	CNC24-3813	CNC24-3717	CNC24-3181
Make	D.P.	D.P.	D.P.	D.P.	D.P.	IMPORTED
Bull Gear No.	17170	17296	22-B-31	16051	17289	24-F-62
Bull Gear Make	GGAG	GGAG	LMS	GGAG	GGAG	LMS

## 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

AXLE POSITION NO		1	2	3	4	5	6
Gear	MAKE	SKF	FAG	SKF	SKF	SKF	SKF
End	PO NO. & dt	02191	00091	02191	02191	02191	02191
Free	MAKE	SKF	FAG	SKF	SKF	SKF	SKF
End	PO NO. & dt	02191	00091	02191	02191	02191	02191

## 6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	923 KN	948 KN	1003 KN	783 KN	799 KN	954 KN
FREE END	1000 KN	921 KN	907 KN	80 T	102 T	100 T

## **Loco No.** 41984

### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + .5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	IN	KPE	KPE	KPE	IN	IN
GE Brg. PL 29030110	MAKE	SKF	SKF	SKF	SKF	SKF	NBC
FE Brg. PL 29030110	MAKE	SKF	SKF	SKF	SKF	SKF	NBC

## 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KPE	KM	KPE	KPE	KPE
BACKLASH (0.254 – 0.458mm)	0.300	0.300	0.325	0.310	0.340	0.320

## 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	17.81	18.02	16.50	17.72	17.52	15.72
LEFT SIDE	15.62	16.47	16.92	15.53	16.01	15.42

## 11. TRACTION MOTOR: (PL No.29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & Date	S. NO.
1	PIONEER	102028	318A24695
2	TMS		PLW-3124
3	TMS		PLW-3118
4	PIONEER	102028	318A24686
5	PIONEER	102028	318A24692
6	PIONEER	102028	318A24691

JE/SSE/ Bogie Shop

### TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646  ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



#### भारत सरकार **GOVERNMENT OF INDIA**

रेल मंत्राल्य

### **MINISTRY OF RAILWAYS**

पटियाला रेलइंजन कारखाना

## PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244

फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310 पटियाला, 147003, भारत

PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Bilaspur.

Email: electriclocoshedbsp@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 41984 WAG9-HC.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 41984 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/BSPE/SECR on 09.01.2025. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed by NISHANT NISHANT BANSIWAL BANSIWAL Date: 2025.02.04 17:22:04 +05'30' (निशांत बंसीवाल)

उप म्ख्य विद्युत अभियंता/लोको

#### प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/SECR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

## Loco No. 41984

(18	PLNO	ાગ્યાની મામાં કરવા છે. આ મામાં મ	(0)(4)
and the second	Kangan, Tidan Sarambaka san kana 1954 banda 1	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
	·	MALÉ CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 nos
		FEMALE TEE 3/8" BSPP – BRASS	06 nos
2	29611994	HEX PLUG -3/8" BSPT — BRASS	02 nos
		FEMALE TEE 1/2" BSPP – BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos
-		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos
		HEX PLUG – 1/2" BSPT – BRASS	04 nos
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos
3	29170114	Copper Tube OD 9.52mm (3/8" ) X 1.245 Mm W.T X 6 Mtr	1.2Mtr

AWMABS & LFS

SSEIGIABS

SN	PL No.	Description of item	Quantity
1,	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.	·	Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.	-	WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	-	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8	-	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9	_	DIN Rail fitted inside the driver desk (LP Side)	02 nos.

FOR AWMYABS & LFS

SSE/G/LFS

## Annexure-C

SN	PL No.	Description of Ifem	Quantity
1.	42310301	Flexible conduit size 25mm <sup>2</sup> provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	-	Harness provided from KAVACH SB to SB-1	07 wires
5.	-	Harness provided from KAVACH SB to SB-2	05 wires
6.	-	Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	-	Harness provided from KAVACH SB to CAB-1	) / wires
· 8.	-	Harness provided from KAVACH SB to CAB-2	16 wires

AWMJECS

SSEGIECS