
# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

# PATIALA LOCOMOTIVE WORKS, PATIALA

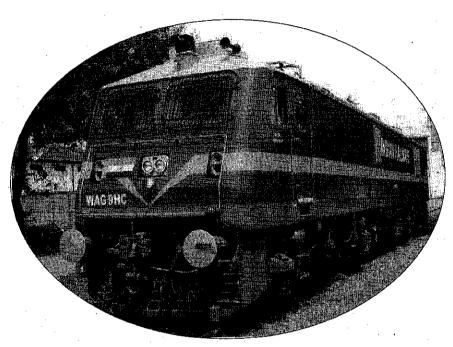

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

TYPE:

RAILWAY SHED:

PROPULSION SYSTEM:

DATE OF DISPATCH:

41987

WAG9HC

ECOR/WATE

ALSTOM

27.12.2024

लोको निर्माण रिकार्ड



# पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41987 RAILWAY/SHED: ECOR/WATE

DOD: DEC-2024

#### INDEX

EAT T	DADA	ACTIVITIES	PAGE NO.
SN	PARA_	Testing & Commissioning (ECS)	
<del>, ,</del>	- 40	Continuity Test of the cables	
1.	1.0	Continuity Test of the Cables Continuity Test of Traction Circuit Cables	
1	1.1 1.2	Continuity Test of Traction Circuit Cables  Continuity Test of Auxiliary Circuit Cables	1-4
1	1.2	Continuity Test of Battery Circuit Cables	
ļ	1.3	Continuity Test of Battery Circuit Cables Continuity Test of Screened Control Circuit Cables	
<del>_</del>	1.4	Low Tension test	1
2.	2.0	Low Tension test Measurement of resistor in OHMS (Ω)	5-6
	2.1		]
	2.2	Check Points Low Tension Test Battery Circuits (without control electronics)	
	2.3		
3	3.0	Downloading of Software	
)	3.1	Check Points  Download Software	7-10
}	3.2	Download Software	]
j	3.3	Analogue Signal Checking	<u> </u>
Ì	3.4	Functional test in simulation mode	+
4	4.0	Sensor test & convertor test	
1	4.1	Test wiring Transformer Circuits – Polarity Test	
l	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
4	4.3	Primary Voltage Transformer	1.
i	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	,
1	4.6	Test current sensors	
	4.0	Test DC Link Voltage Sensors (Pos 15.6/*)	
	4.7	Verification of Converter Protection Circuits (Hardware limits)	
	4.6	Sequence of BUR contactors	<u></u>
5.	5.0	Commissioning with High Voltage	
, <b>U</b> .	5.1	Check List	
	5.7	Safety test main circuit breaker	ļ
	5.2	Auxiliary Converter Commissioning	
	5.3	Running test of 3 ph. auxiliary equipments	İ
		Performance of Auxiliary Converters	
	5.3.2	Performance of Auxiliary Converters Performance of BURs when one BUR goes out	16-25
	5.3.3	renormance or bons when one bon goes out  Auviliant circuit 415/440	,0-23
	5.4	Auxiliary circuit 415/110	İ
	5.5	Hotel Load Circuit  Traction Convertor Commissioning	
	5.6	Traction Converter Commissioning	1
	5.7	Test protective shutdown SR	
	5.8	Test Harmonic Filter	
	5.9	Test important components of the locomotive	25.25
6.	6.0	Running Trial of the locomotive	25-26
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27
8.	8.0	Status of RDSO modifications	28
9.	1-10	Pneumatic Test Parameters	29 - 32
10.		Loco Check Sheet(LAS)	33
11.		Component History (LAS,ECS,ABS)	34-36
12.	<del>-</del>	Component History & Testing Parameter (Bogie Shop)	37 - 38
13		Warranty Conditions as per Tenders	39 -41

Issue No.03

Effective Date: Feb 2022

મું તેલું કલ્પ્યુ

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41887—AUSTOM

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	oK	100 ΜΩ	880 mg
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	ok	100 ΜΩ	750m2
Filter Cubicle	Earthing Choke	оK	100 ΜΩ	900 M2.
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	Sooms
Transformer	Power Converter 1	OK	100 MΩ	200 Ma
Transformer	Power Converter 2	ok	100 ΜΩ	80022
Power Converter 1	TM1, TM2, TM3	oK	100 ΜΩ	700 m
Power Converter 2	TM4, TM5, TM6	øk	100 ΜΩ	900m
Earth	Power Converter 1	ok	100 ΜΩ	700 mg
Earth	Power Converter 2	ok	100 ΜΩ	200 ma

#### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

Issue No.03

Effective Date: Feb 2022

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	$100~ extsf{M}\Omega$	800 M
Transformer	BUR2	OK	100 MΩ	600MM
Transformer	BUR3	OK_	100 MΩ	700 mr
Earth	BUR1	OK	100 MΩ	600 m2
Earth	BUR2	OK	100 ΜΩ	500 mr
Earth	BUR3	OK	100 MΩ	600ML
BUR1	HB1	OK_	100 MΩ	600 m/
BUR2	HB2	o.K	100 ΜΩ	FOOM
HB1	HB2	OK	100 ΜΩ	600 M
HB1	TM Blower 1	OK	100 ΜΩ	FOOML
HB1	TM Scavenge Blower 1	OK	100 MΩ	600 M/L
HB1	Oil Cooling Unit 1	OK	100 ΜΩ	700 m2
HB1	Compressor 1	OK	100 ΜΩ	800 m/2
HB1	TFP Oil Pump 1	OK	100 ΜΩ	600 ma
HB1	Converter Coolant Pump 1	OK	100 ΜΩ	Form
HB1	MR Blower 1	OX	100 MΩ	600M/L
HB1	MR Scavenge Blower 1	OK	100 ΜΩ	FOOM
HB1	Cab1	OK	100 ΜΩ	600 mn
Cab1	Cab Heater 1	OK	100 ΜΩ	700 ml
HB2	TM Blower 2	OK	100 ΜΩ	600ma
HB2	TM Scavenge Blower 2	OK	100 ΜΩ	Fooms
HB2	Oil Cooling Unit 2	OK	100 ΜΩ	600 ma
HB2	Compressor 2	OK	100 ΜΩ	600 mn
HB2	TFP Oil Pump 2	OK	$100 extsf{M}\Omega$	600ma
HB2	Converter Coolant Pump 2	OK.	100 ΜΩ	FOO MA
HB2	MR Blower 2	OK.	100 ΜΩ	600 ma
HB2	MR Scavenge Blower 2	OK	100 MΩ	600 Mr
HB2	Cab2	0 K	100 ΜΩ	500 mg
Cab2 '	Cab Heater 2	OK	100 MΩ	Goom

# PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC

Page ; 3 of 27

1.3 Continuity Test of Battery Circuit Cables.

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	a fire and	То	Condition	Continuity (OK/Not OK)
Battery (w	vire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	br
MCB 110	3 •	Connector 50.X7-1	By opening and closing MCB 110	• eK
Battery (V	Vire no. 2052)	Connector 50.X7-2		مد
	no 2050)	Connector 50.X7-3		عد

Prescribed value	Measured
> 0.5 MΩ	Value <u>&amp;</u> MΩ
Prescribed value:	Measured .
> 50 MΩ	Value 65_ MΩ
	> 0.5 MΩ  Prescribed value:

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

#### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	٩٤
Memotel circuit of cab1 &2	10A	Ou.
Memotel speed sensor	10A	9 <u>e</u> .
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	ac

81

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC Page: 4 of 27

Section 2 Section 2 Section 2	LOOC OOD	OR
Master controller cab-1 &2	08C, 08D	OIL.
TE/BE meter bogie-1 & 2	08E, 08F	
Terminal fault indication cab-1 & 2	09F	OK.
Brake pipe pressure actual BE electric	06H	عد
Primary current sensors	12B, 12F	e <sub>lL</sub>
Harmonic filter current sensors	12B, 12F	ar'
Auxiliary current sensors	12B, 12F	9K
Oil circuit trageformer bogie 1	12E, 12I	92
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	عد
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	٩٤
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	91
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	ac
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	عد
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	OK
10KΩ± ± 10%)		
UIC line	13B	٥κ
Connection FLG1-Box TB	13A	ac

#### का. एत. डब्ल PATIALA LOCOMOTIVE WORKS, PATIALA

### Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

41987 Locomotive No.:

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

#### 2.0 Low Tension test

2.1 Measurement of resistor in OHMS  $(\Omega)$ Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
oad resistor for primary voltage	3.9K <b>Ω</b> ± 10%	3,9452
transformer (Pos. 74.2).	1Ω ± 10%	1-0-
Resister to maximum current relay.  Load resistor for primary current	3.3 Ω ± 10%	2.32
transformer (Pos. 6.11).  Resistance harmonic filter (Pos 8.3). Variation allowed ± 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.20
Between wire 6 & 7	0.2 Ω	0.20
Between wire 5 & 7	0.4 Ω	0.42
For train bus, line U13A to earthing.	10 kΩ± 10%	10.04
For train bus, line U13B to earthing.	10 k <b>Ω</b> ± 10%	99982
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	30042
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0:28-1
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.29~2
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	25.0
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0 28-0
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.2×12
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k <b>Ω±</b> 10%	2.712
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3.940
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kΩ± 10%	1.8hz
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	390-2
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k <b>Ω</b> ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	101

(Ref: WI/ECS/10)

#### यी. एख खब्ब्य PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Note:

Make sure that the earthing brush device don't make direct contact with the axle housing,

earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	Cherked on
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	creeped on

### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in

Para 3.6 of the document no. 3 EHX 6 Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked	cheereda
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	هد
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	ak
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	વેદ
Test control Pneumatic devices	Sheets of Group 06	<u> </u>
Test lighting control	Sheets of Group 07	%
Pretest speedometer	Sheets of Group 10	عر
Pretest vigilance control and fire system	Sheets of Group 11	94
Power supply train bus	Sheets of Group 13	ae

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4) 987

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.0 Downloading of Software

	Yes/No
3.1 Check Points.	Yes
Check that all the cards are physically present in the bus stations and all the plugs are connected.	//
Check that all the fibre optic cables are correctly connected to the bus stations.	/e <sub>j</sub>
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

1,0.6.4
1.0.6.4
1.0.0.8
2.0.0.8
3.0.08
6.0.0.14
6.0.0.14

#### 3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OU
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	ov.
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	10.1,
TE/BE at 'TE maxima' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100,
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	24%

#### P.L.W

l'd (Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

2.0			
TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS 0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	74.1
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	14°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14.5°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13°
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1400
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14°C

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41887

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

#### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	Cheered 91
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	chebolou
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed.  By moving reverser handle:  Converter pre-charging contactor 12.3 must close after few seconds.  Converter contactor 12.4 must close.  Converter re-charging contactor 12.3 must opens.  By increasing TE/BE throttle:  FB contactor 8.41 must open.  FB contactor 8.2 must close.  FB contactor 8.1 must close.	choeked
Converter and filter contactor operation with both Power Converters during Shut Down.	1	croexelon

#### W.J.G

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

Contactor filter adaptation by isolating any bogie  Test earth fault detection battery circuit positive & negative	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.  • Check that FB contactor 8.1 is open.  • Check that FB contactor 8.2 is open.  After raising panto, closing VCB, and setting TE/BE  • FB contactor 8.1 closes.  • FB contactor 8.2 remains open.  By connecting wire 2050 to earth, create earth fault negative potential.  • message for earth fault  • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault	cheeped ac
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.	cheepeda
Time, date & loco number	Ensure correct date time and Loco number	OL

#### मी, एस डब्ब्य PATIALA LOCOMOTIVE WORKS, PATIALA

### Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

### 4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

Output Winding nos.	following of the transformers.  Bescription of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub> .	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.040	cX
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A-814A	10.05V <sub>p</sub> and same polarity	10.0540	OK.
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.01/2	SV.
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0400	ac.
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103-1117 (in HB1) For Aux converter 2 between cable 1103-1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	S.SVRMS	ev.
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.1019 6.44 NEWD	ه بد

### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$ , $41.5V_{RMS}$ and opposite polarity.	58679 1 41.5VRM9	οú
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15.576	ળ

11.00ems

(Ref: WI/ECS/10)

#### Effective Date: Feb 2022 PATIALA LOCOMOTIVE WORKS, PATIAL

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC Page: 12 of 27

#### **Primary Voltage Transformer** 4.3

Apply 250Veff/350Vp by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in - catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	25kV	250%	25XV	2501
SLG1_G 87-XUPrim	25 kV	250%	28KV	2501

Decrease the supply voltage below 140  $V_{RMS}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	17kV	170%	17KV	1707-
SLG2 G 87-XUPrim	17 kV	170%	1740	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV	300%	30KV	300%
SLG2 G 87-XUPrim	30 kV	300%	30KV	30011

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

(Ref: WI/ECS/10)

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

#### Minimum voltage relay (Pos. 86) 4.4

Functionality test:	ted to approx 68%
Minimum voltage relay (Pos. 86) must be adjus	ted to approx do /u = )
Activate loco in cooling mode. Check Power supply of 48V to	(Yes/No)
minimum voltage relay. Disconnect primary voltage	
transformer (wire no. 1511 and 1512) from load resistor (Pos.	
74.2) and connect variac to wire no. 1501 and 1502. Supply	
200V <sub>RMS</sub> through variac. In this case; <i>Minimum voltage relay</i>	
200V <sub>RMS</sub> through variate. In this case, within the	
(Pos. 86) picks up	
	(Yes/No)
Try to activate the cab in driving mode:	(1.63,1.5)
Contactor 218 do not close; the control	· ·
electronics is not be working.	
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	
I	
working Table Jan Voltage Protection	21
Test Under Voltage Protection	·
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no.	(Yés/No)
1501 & 1502; Decrease the supply voltage below	
140V <sub>RMS</sub> ± 4V;	•
Fine tune the minimum voltage relay so that VCB opens.	·-
The tale the minimum voltage relay so that ver opens.	

4.5 Maximum current relay (Pos. 78)	·
Disconnect wire 1521 & 1522 of primary current transformation (including the resistor at Pos. 6.11); Put loco in simulation contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the opermaximum current relay Pos. 78 for correct over current value.	lation for driving mode; Open $R_3 - R_4$ in wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact R <sub>3</sub> – R <sub>4</sub> of 136.3 closed; Close VCB; Tune the r	esistor 78.1 for the current of 7.0A <sub>RMS</sub>
$/9.9A_{p}$ at the open wire 1521;	
VCB opens with Priority 1 fault message on display.	(Yes/No)

#### φ. τα. εκτ. W.J.q

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/98 7

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

4.6 Test current sensors Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	,
	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
Primary return current sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1012 pin no. 7(+) & 8(-)		298mB
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1002 pin no. 7(+) & 8(-) Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)	r.	337ma
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding or sensor through connector 415.AE/10 2 pin no. 7(+) & 8(-)		
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/10 2 pin no. 7(+) & 8(-)		347mm
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DO</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8(-)	· ·	HA
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	Nett	NA

Ja V

## केट होते पि

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*) This test is to be done by the commissioning engineer of the firm if required.

## 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	ac
Fibre optic failure in Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	٠٠٠

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

### Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4				52.5/1	52.5/2
AI BUR OK	clase	÷000	claso	open	18080	ofen	Clase	close	alen
BUR1 off			0000	10.80	Meda	cluse	olen	alen	close
BUR2 off	cose	open	Class	0/080	O COR LA	Close	esen	ofen	close
	over	Oscar						over	10000
BUR3 off	olen	1200 DE	Of the	Crost	TCRASE	COSE	1 1 1 1	<u> </u>	

### Commissioning with High Voltage

#### Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yes
No rubbish in machine room, on the roof, under the loco.	Yey
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	16,
All the three fuses 40/* of the auxiliary converters	You .
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	K
Connection in all the traction motors done correctly.	X
All the bogie body connection and earthing connection done correctly.	763
Pulse generator (Pos. 94.1) connection done correctly.	Yey
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Yas

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41887

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Expected result   Monitored result					
Name of the test	Description of the test	Expected result			
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	-Refeel me		
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop	VCB must open. Panto must lower. Emergency brake will be	cheekedou		
Under voltage protection in cooling mode	button 244.  Raise panto in cooling mode. Close the VCB.  Switch off the supply of catenary by isolator	applied. VCB must open.	Charelou		
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	cheered on		
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	chockedou		
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cheeked on		
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	chockeda		
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		chaloed on		

## PL.W

d (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

. Switch on the high vortage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.2	11,8
Oil pump transformer 2	9.8 amps	9.1	11.5
Coolant pump converter 1	19.6 amps	. 5.7	6.5
Coolant pump converter 2	19.6 amps	5.6	6.5
Oil cooling blower unit 1	40.0 amps	45.0	185.0
Oil cooling blower unit 2	40.0 amps	40.8	1800
Traction motor blower 1	34.0 amps	27.3	165.0
Traction motor blower 2	34.0 amps	36.0	1600
Sc. Blower to Traction motor blower 1	6.0 amps	4.6	17.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.8	1870
Compressor 1	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	27.0	135-
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	. 29.0	140.0

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	9884	Yen
BUR1 7303 XUUZI	DC link voltage of BUR1	60% (10%=100V)	636°	49
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	dines !	79

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10014	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637 <sup>V</sup>	Yen
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amp	Yoy
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	21Amb	Yey
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	11 Brosh	74
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1104	701

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1000	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637~	Yey
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	Somb	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21 Bmp	(k)
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	11 Amb	Yey .
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	710~	100

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

की, एत. उब्ब्यू

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the

Filation level 3 of the locomotive.

Condition of	Loads on BUR1	Loads in BUR2	Loads in BUR3
BURS All BURS OK	Oil Cooling unit	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery ( charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2	• 	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Of Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.6	20.0
Machine room blower 2	15.0 amps*	4-4	16.2
Sc. Blower to MR blower 1	1.3 amps	1.3	4.5
Sc. Blower to MR blower 2	1.3 amps	1.6	4.4
Ventilator cab heater 1	1.1 amps	1.2	1.8
Ventilator cab heater 2	1.1 amps	1.2	1.8
Cab heater 1	4.8 amps	4.9	5.)
Cab heater 2	4.8 amps	4.5	5.)

<sup>\*</sup> For indigenous MR blowers.

W.J.q

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

### 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### 5.6 Traction Converter Commissioning

### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

For Converter 1		
Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked on
Earth fault detection on positive potential of CL Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeteelou
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charted on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choekeel ou
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	choeked ac
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	CROCKED ON

## P.L.W

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/887

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

For Converter 2		Result obtained
Test Function	Results desired in sequence	Result obtained
charging and pre- charging and charging of DC Link of Converter	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheltof on
Measurement of discharging of DC Link, of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked on
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cherada
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	cheeked on
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	creeted on
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	c focked or
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	charada
		·

W.J.q

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

		Result obtained
Test Function	Results desired in sequence	Result obtained
Measurement of	Start up the loco with both the	<b>{\</b>
protective shutdown	converter. Raise panto. Close VCB.	
by Converter 1	Move Reverser handle to forward or	\ <i>\</i>
electronics.	reverse. Remove one of the orange	1
	fibre optic feedback cable from	except on
	converter 1Check that converter 1	re cree
	electronics produtes a protective shut	
	down.	
	VCB goes off	and the state of t
· ·	Priority 1 fault mesg. on DDU	
	appears	
	Disturbance in Converter 1	
Measurement of	Start up the loco with both the	1
protective shutdown	converter. Raise panto. Close VCB.	<b>)</b>
by Converter 2	Move Reverser handle to forward or	
electronics.	reverse. Remove one of the orange	•
	fibre optic feedback cable from	
	converter 2. Check that converter 2	charact ou
	electronics produces a protective shut	
	down.	
	VCB goes off	
	Priority 1 fault mesg. on diagnostic	<b>A</b> .
	display appears	N.
	Disturbance in Converter 2	

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
currents	i converter, raise parito, ciose vcb.	cheesedon

क्षेत्रक क्षेत्र क्ष

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop	o cheeked on
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit	o choeted or
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	ou_

#### 5.9 Test important components of the locomotive

Items to be tested ,	Description of the test	Monitored value/remarks		
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	A Rocked ac		
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheeted au		
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	Checked as		
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Checked an		
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	Cheekedae		

P.L.W

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.:

41987

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

the state of the s		
Marker light	Both front and tail marker light should glow from both the cabs	cheeral or
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Chookeel on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	charted on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	chekala
Illuminated Push button	All illuminated push buttons should glow during the operation	
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS;
	Criteria:  The minimum flow of air of cab fan should be 25 m³/minute	Cab 2 M15

#### **6.0** Running **Trial of the locomotive**

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	eerd or
•	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	Loovede
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	ROLFER
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again.</li> </ul>	Recede
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	COOKER

### W.J.q

DOC.NO.P/EC3/01

#### (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6. Check vigilance operation of the brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .  locomotive For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then	
locomotive For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG	
sanding foots switch or TE/BE throttle or BPVG	
l l	
switchthen	
Switch then	
Buzzer should start buzzing.	1 .
LSVW should glow continuously.	Properties
Do not acknowledge the alarm through BPVG or	Leerest
vigilance foot switch further for 8 seconds then:-	
Emergency brake should be applied	
automatically.	
VCB should be switched off.	
Resetting of this penalty brake is possible only after	
32 seconds by bringing TE/BE throttle to 0 and	
acknowledge BPVR and press & release vigilance	
foot switch.	
7. Check star/run interlock • At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).	Rockelo
With park brake in applied condition.	-3041)
• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	
• With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).	chercel
• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).	
8. Check traction interlock Switch of the brake electronics. The	Rockalou
Tractive /Braking effort should ramp down, VCB	KULFER
should open and BP reduces rapidly.	
9. Check regenerative Bring the TE/BE throttle to BE side. Loco speed	Leckaloe
braking. should start reducing.	<u> </u>
10. Check for BUR In the event of failure of one BUR, rest of the two	0.54
redundancy test at BURs can take the load of all the auxiliaries. For this	Packad in
ventilation level 1 & 3 of switch off one BUR.	
loco operation Auxiliaries should be catered by rest of two BURs.	
Switch off the 2 BURs; loco should trip in this case.	
11. Check the power Create disturbance in power converter by switching	acet
converter off the electronics. VCB should open and converter	On.
isolation test should get isolated and traction is possible with	
another power converter.	

Issue No.03

Effective Date: Feb 2022

### P.L.W

(Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/987

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

### 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	O/L	هلا ٢	
2	Marker Red	Ou_	ou	
3	Marker White	ov	aL	
4	Cab Lights	<i>a</i> v	ac .	
5	Dr Spot Light	ου	ac	
6	Asst Dr Spot Light	OV	ac	choosed works
7 .	Flasher Light	Q	DK.	
8	Instrument Lights	on	0,00	
9	Corridor Light	Ou	מע	
10	Cab Fans	ov_	as	
11	Cab Heater/Blowers	0.	عر	
12	All Cab Signal Lamps Panel 'A'	O.C.	ac	

### **M<sup>-</sup>T'd** Status of RDSO medifications

LOCO NO: 41987

000	No: 41987	and the state of t	
Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	ØK/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Øk/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	6k/Not 0k
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126	6k/Not 0k
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.14**	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	QK/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Øk/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'		Øk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12		6k/Not 0k
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16		Øk/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12		Øk/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13		Ók/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13		Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13		Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Øk/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	
17 :	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14		Ok/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17		
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	phase electric locomotives.	Øk/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	1	Øk/Not Ok

Signature of JE/SSE/ECS

Loco No.: 41987

#### PLW/PATIALA

#### PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: M/s Faiveley			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	58
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.45 Kg/cm2
		DMTS-014-1, 8	-	
		CLW's check sheet		
		no. F60.812 Version		
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.50 Kg/cm2
		no. F60.812 Version	kg/cm2, closes	
		2	5.5±0.15 kg/cm2	5.45 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Iso	olating Cocks & KABA co		
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ок
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.25 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			Ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 25
2.2	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	Ok
2.2	compressors		both compressors	CD1 27 C
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual			CD2 27 Coo
2.4	compressor from 8 kg/cm2 to 9 kg/cm2	DSM tost spec	Classes at 6 4010 15	CP2-27 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec. MM3882 &	Closes at 6.40±0.15 kg/cm2 Opens at	6.35 Kg/cm2
		MM3946	5.60±0.15kg/cm2	5.50 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	9.90 Kg/cm2
2.3	Check complessor riessure switch noch setting (55)	MM3882 &	kg/cm2 Closes at	9.90 Ng/UII/2
		MM3946	8±0.20 kg/cm2	8.1 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.40 minute

#### PLW/PATIALA

Loco No.: 41987

	LOCO NO.: 4198					71307	
2.7		alve operation time				Approx. 12 Sec.	10 sec
2.8	Check Auto Drain	Valve functioning (12	24 & 87)			Operates when	Ok
						Compressor	
						starts	
2.9	Check CP-I deliver	y safety valve setting	(10/1). Run CP	D&M t	est spec.	11.50±0.35	11.50
	Direct by BLCP.			MM3882	& MM3946	kg/cm2	Kg/cm2
2.10	Check CP-2 delive	ry safety valve setting	g (10/2). Run CP	D&M t	est spec.	11.50±0.35	11.55
	direct by BLCP			MM3882	& MM3946	kg/cm2	Kg/cm2
2.11	Switch 'OFF' the c	ompressors and ensu	ire that the safety		est spec.		
	valve to reset at p	ressure 1.2 kg/cm2 le	ess than opening	MM3882	& MM3946		
	pressure.						
2.12		ch 'OFF' compressor,		CLW's ched	ck sheet no.	5.0±0.10kg/cm2	5.0 Kg/cm2
	1	" Main Reservoir, Sta		F60.812 Ve	ersion 2		
		ssure of Duplex Check	Valve 92F.				
2.13	FP pressure:			CLW's chec	ck sheet no.	6.0±0.20kg/cm2	6.0 Kg/cm2
	_	Test point 107F FPTP.	Open isolate cock	F60.812 V€	ersion 2		
	136F. Check press						
3.0	Air Dryer Opera						
3.1		90 of 2 <sup>nd</sup> MR to start (				Tower to change	Ok
	open for Test Che	ck Air Dryer Towers t	o change.			i) Every minute	
						(FTIL & SIL)	
						ii)every two	
					minute (KBIL)		
3.2		C Purge Air Stops from Air Dryer at Compressor stops					
3.3		ion of humidity indicator				Blue	Blue
4.0	Main Reservoir Le	-		D0.14.		61 111 1	0.20
4.1		9) in full service, Che	eck MR Pressure air		est spec.	Should be less	0.30
	leakage from both	n cabs.		MM3882	& MM3946	than 1 kg/cm2 in	Kg/cm2 in
4.2	Charle DD Airelands	ge (isolate BP charging cock-70)		DOMA		15 minutes	15 minutes
4.2	Check BP Air leak	age (isolate BP chargi	ng cock-70)		est spec.	0.15 kg/cm2 in 5	0.05
				MM3882 & MM3946		minutes	Kg/cm2 in 5 minutes
5.0	Brake Test (Aut	omatic Brake opera	ation)				minutes
5.1		e & Brake Cylinder pro					
3.1	Record Brake Pipe	e & brake Cyllilder pro	essure at Each Step				
	Check proportion	ality of Auto Brake sy	stem	CLW's che	ck sheet no.		
				F60.812	Version 2		
	Auto controller	BP Pressure kg/cm2	2	BC (WAG-9 & WAG-7) Kg/cm2		BC (WAP-5)	
	position					Kg/cm2	
		Value	Result	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
					0.40kg/ cm2		
	Full service	3.35±0.2	3.35 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2 EVa/2	5.15±0.30	_
					2.5Kg/ cm2		

#### PLW/PATIALA

Loco No.: 41987

			T a a	
5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	8 Sec
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	01/
		MM3882 & MM3946	to Below 2.5	ОК
F 4		011111111111111111111111111111111111111	kg/cm2	
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.40
		F60.812 Version 2	4.05- 4.35	4.10
			kg/cm2	Kg/cm2
			Opens at BP	
			2.85- 3.15	3.00
			kg/cm2	Kg/cm2
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC developed			
	WAP5 – BC $5.15 \pm 0.3$ kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
	WAG9 - BC 2.50 ± 0.1 kg/cm2		21±3 sec.	20 sec
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure up			
	to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	
	WAG9		52±7.5 sec.	48 sec.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	74 Sec
	BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test: The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.50
	functioning of brake.		60 Sec.	Kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A-9 (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors in			
	working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure			
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.50
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 Sec
0.2	time	MM3882 & MM3946	o sec. (iviax.)	/ 366
	une	1V11V13002 & 1V11V13940		<u> </u>

#### **PLW/PATIALA**

Loco No.: 41987

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.20 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)		-NA-	-NA-
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no	Pressure Setting Needed is 12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

SINGH **BIST** 

SAMSHER Digitally signed by SAMSHER SINGH BIST Date: 2025.01.28 13:37:04 +05'30'

Signature of SSE/Shop

	41987									
	ROOF COMPONENT CAB 1 & 2									
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.					
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, CONTRANSYS	H24-0079/AUG-2024, 15665-10/24					
2	Servo motor	29880026	2	CONTRANSYS	15290-09/24					
3	Air Intake filter Assly	29480103	2	PARKER	O/C 1649P/A/02 (PLW)09/24, O/C 1667P/A/01 (PLW)10/24					
4	Insulator Panto Mtg.	29810127	8	IEC	05-24, 06-24					
	,	•	MIDDLE RC	OF COMPONENT						
5	High Voltage Bushing	29731021	1	ELECTRANEX	EIPL-5781-09-24					
6	Voltage Transformer	ansformer 29695028 1 PRAGATI 24/819151-oct/2024		24/819151-oct/2024						
7	Vacuum Circuit Breaker	rcuit Breaker 25712202 1 AUTOMETERS AALN/09/2024/031/VCBA/628		AALN/09/2024/031/VCBA/628						
8	Insulator Roof line	29810139 9 MIL 05-2024, 06-2024, 07-2024		05-2024, 06-2024, 07-2024						
9	Harmonic Filter	29650033	1	Sunshine Industries	1279-10/2024	AS Per PO/IRS Conditions				
10	Earth Switch	29700073	E	AUTOMETERS	AALN/04/2024/017/ES/017					
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	57409-2024, 57412-2024					
				rake Components						
	Air Compressor (A,B)	29511008	2	ELGI	EXGS 923650 A, EXGS 923731 B					
13	Air Dryer	29162051	1	TRIDENT	LD2-11-0936-24					
14	Babby compressor	25513000	1	CEC	RH 3336-08-24					
15	Air Brake Panel	29180016	1	FAIVELEY	July24-27-WAG9-3463					
16	Contoller (A,B)	29180016	2	FAIVELEY	H24-125 A , K24-039 B					
17	Breakup Valve	29180016	2	FAIVELEY						
18	wiper motor	29162026	4	Auto Industry						



#### PLW/PTA

#### **ELECTRIC LOCO HISTORY SHEET (ECS)**

ELECTRIC LOCO NO: 41987 LIST OF ITEMS FITTED BY ECS **RLY: ECoR** 

SHED: WATE

PROPULSION SYSTEM: ALSTOM

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO CA	AB-1/CAB-2	MAKE/SUPPLIER	
1	LED Based Flasher Light Cab I & II	29612937	4754	4698	POWER TECH.	
2	Led Marker Light Cab I & II	29612925	143129/143163/14	43047/143094	MATSUSHI P. TECH.	
3	Cab Heater Cab I & II	29170011	2538	2535	TOPGRIP	
4	Crew Fan Cab I & II	29470080	5870/5722/58	358/5690	MTI	
5	Master Controller Cab I	29860015	229		- AAL	
6	Master Controller Cab II	29000015	238	· · · · · · · · · · · · · · · · · · ·	7712	
7	Complete Panel A Cab I & II	29178265	1536	1550	KONTACT	
8	Complete Panel C Cab I & II	29170539	3580	3590	KEPCO/ALSTOM	
9	Complete Panel D Cab I & II	29178265	1466	1543	KONTACT	
10	Complete Cubicle- F Panel Cab I & II	29178162	SLCF00012410328	SLCF00012410330	STESALIT	
11	Speed Ind.& Rec. System	29200040	5670/56	369	LAXVEN	
12	Battery (Ni- Cd)	29680025	B-12	8	. HBL	
13	Set of Harnessed Cable Complete	29600420			POLYCAB	
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	29500047	BG/PS/1582 Jun-24	BG/PS/1548 Jun-24	BG INDUSTRIES	
15	Transformer Oil Pressure Censor (Cab-2)		BG/PS/1412 Jun-24	BG/PS/1566 Jun-24		
16	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)	29500035	BG/TFP/7592 May-24		BG INDUSTRIES	
17			BG/TFP/5666			
18	Roof mounted Air Conditioner I	29811028	SSK/CLW/2	2404014	SSK	
19	Roof mounted Air Conditioner II	29011020	SSK/CLW/2	2404008	JON	

SSE/ECS

JE/ECS

Equipment	PL No.			Ma	ake	
Complete Shell Assembly with piping	29171027	Sr. 44/	63, 12/2024	EC	ВТ	
Side Buffer Assly Both Side Cab I	20120050	27, 11/24	012, 11/24	FASP	FASP	
Side Buffer Assly Both Side Cab II	29130050	175, 11/24	171, 11/24	FASP	FASP	
CBC Cab Í & II	29130037	02, 09/24	158, 09/24	FASP FASP		
Hand Brake		9/	24- 951	Rising Eng	g. Concern	
Set of Secondry Helical Spring	29045034 29041041			GI	BD .	
Battery Boxes (both side)	29680013	17, 10/24	10, 10/24	D R STEEL	D R STEEL	
Traction Bar Bogie I		178	35, 07/24	FA	SL	
Traction Bar Bogie II		141	.9, 12/23	FA	SL	
Centre Pivot Housing in Shell Bogie I side	20100057	22	7, 09/24	AN	NIL -	
Centre Pivot Housing in Shell Bogie II side	29100057	24!	5, 09/24	1A	NIL	
Elastic Ring in Front in Shell Bogie I side	20100010	05	5, 07/24	AVA	ADH,	
Elastic Ring in Front in Shell Bogie II side	29100010	75	7, 09/24	AVA	ADH	
Main Transformer	29731008 for WAG 9 29731057 for WAP-7	CG-65-10-24-E	BHL11500/20, 2024	. C	G	
Oil Cooling Radiator I	20470004	P1124R	C2359, 11/24	FINE AUTO	MOTIVE LTD	
Oil Cooling Radiator II	294/0031	P1024R0	22284, 10/24	FINE AUTO	FINE AUTOMOTIVE LTD	
Main Compressor I with Motor		EXGS 92	23731, 10/24	ELGi		
	29511008	EXGS 92	23650, 10/24	ELGi		
				FLOWOIL		
				FLOWOIL		
				ACCEL		
	29470043			ACCEL		
				ACCEL		
	29440075			ACCEL		
				G.T.R CO PVT LTD		
	29440105					
	29440129					
				·		
TM Scavenging Blower Motor I	29440117					
TM Scavenging Blower Motor II				G.T.R CC	PVT LTD	
Traction Convertor I						
Traction Convertor II						
	29741075			. В	ΓIL	
	29171180			C	GL	
					TIFIERS LTD	
					ALLIACE PVT LTD	
·					TIFIERS LTD	
Filter Cubical (FB) (COMPLETE FILTER	29480140				TIFIERS LTD	
Driver Seats	29171131	10/24- 219	9, 183, 173, 206	TARL	JDEEP	
Transformer oil steel pipes	29230044	VIKRA	ANT PIPES			
Conservator Tank Breather	29731057	24-787	71, 24-7869	YOGYA ENET	RPRISES LTD	
Ballast Assembly ( only for WAG-9)	29170163	75,	65,62,52	Al	KM	
		102	26, 0709	ENS	SAVE	
	Side Buffer Assly Both Side Cab I Side Buffer Assly Both Side Cab II CBC Cab I & II Hand Brake Set of Secondry Helical Spring Battery Boxes (both side) Traction Bar Bogie I Traction Bar Bogie II Centre Pivot Housing in Shell Bogie I side Centre Pivot Housing in Shell Bogie II side Elastic Ring in Front in Shell Bogie II side Elastic Ring in Front in Shell Bogie II side Elastic Ring in Front in Shell Bogie II side Elastic Ring in Front in Shell Bogie II side Main Transformer Oil Cooling Radiator I Oil Cooling Radiator II Main Compressor I with Motor Transformer Oil Cooling Pump I Transformer Oil Cooling Pump II Oil Cooling Blower OCB I Oil Cooling Blower OCB II TM Blower I TM Blower I Machine Room Blower II Machine Room Blower II Machine Room Scavenging Blower II TM Scavenging Blower Motor I Traction Convertor I Traction Convertor I Traction Convertor II Vehicle Control Unit II Vehicle Control Unit II Aux. Converter Box I (BUR 1) Axillary Control Cubical HB-1 Axillary Control Cubical HB-2 Complete Control Cubical HB-2 Complete Control Cubical FILTER CUBICLES) Driver Seats Transformer oil steel pipes Conservator Tank Breather	Equipment PL No.  Complete Shell Assembly with piping 29171027  Side Buffer Assly Both Side Cab I 3  Side Buffer Assly Both Side Cab I 29130050  CBC Cab I & II 29130037  Hand Brake Set of Secondry Helical Spring 29045034 29041041  Battery Boxes (both side) 29680013  Traction Bar Bogie I 7  Traction Bar Bogie I 7  Traction Bar Bogie II 7  Centre Pivot Housing in Shell Bogie I side 29100057  Elastic Ring in Front in Shell Bogie I side Elastic Ring in Front in Shell Bogie II side Elastic Ring in Front in Shell Bog	Equipment	Complete Shell Assembly with piping         29171027         Sr. 44/63, 12/2024           Side Buffer Assly Both Side Cab II         29130050         27, 11/24         012, 11/24           CGC Cab I & II         29130037         02, 09/24         178, 09/24           Hand Brake         9/24-951         9/24-951           Set of Secondry Helical Spring         29045034	COC NO - 41987 / WAG-9HC/FEOR/WATE	

NAME SHU BHAM SHAPM SSE/LAS

NAME LARAN S INGIN JE/LAS/UF NAME ANILIT COME

Issue No.: 05 Effective Date: July-2023

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

#### पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 41987

Rly: E(OR

Shed: WATE

S. No.	ITEM TO BE CHECKED	Specified Value	0	bserved	l Val	ue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK.	-	- N	1	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.  TM scavenging blower 1 & 2 & Oil Cooling unit.	OK		úll	1	
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		014	_	4
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		a)	2	
1.5	Check proper Fitment of FB panel on its position.	OK		0)	12	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		014		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		0/	2	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		014	_	
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		0/2	_	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		0/2		
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		u).		
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		ak	2	
1.13	Check proper fitment of Cow catcher.	OK		0)		
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		01	2 1	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		ok	_	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		OŁ		
1.17	Check proper fitment of both battery box.	OK		OL	)	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		Ula	)	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK		01		
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAE	3-1	С	AB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP	LP	ALP
		:35-60 mm	55		54	50
		1 4 1041				20
1.04		Lateral Std- 45-50 mm	49	50	8	40
1.21	Buffer height: Range (1090, +15,-5) Drg No IB031-02002.	1085-1105		L/S	4	R/S
	DIG NO 1003 1-02002.	mm	FRONT	1104		1096
			REAR	1094	•	1095
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/S	-	R/S
	Drg No-SK.DL-3430.	041 111111	FRONT	645	_	644
			REAR	-		
4 22	Unicht of Poil Coard (444 F 40)	444	REAR	644		649
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).  As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	114 mm + 5		L/S		R/S
	As per NOSO Pampinet important bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	112		114
			REAR	112		116
1.24	CBC Height: Range (1090, +15,-5)	1090, +15	FRONT:	1095		

(Signature of SSE/Elect. Loco )

NAME SHUBMAN SHAPMA

DATE 27/12/24

(Signature of /JE/Elect Loco)

NAME KARAN SINGH

DATE 27/12/24

(Signature of JE/UF) NAME ANKIT UPIAL

DATE 27/12/24

#### **Loco No.** 41987

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-116	SIMPLEX	29100677	100362	As per PO/IRS
REAR	SL-118	SIMPLEX	29100677	100362	conditions

#### 2. Hydraulic Dampers (PL No.29040012) Make: KNORR / KNORR

#### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27526	27903	27667	27707	27845	27827
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC24-3876	PLW24-675	CNC24-3293	CNC24-3542	CNC24-3831	CNC24-3804
Make	D.P.	D.P.	IMPORTED	D.P.	D.P.	D.P.
FREE END	CNC24-3877	PLW24-676	CNC24-3307	CNC24-3540	CNC24-3878	CNC24-3802
Make	D.P.	D.P.	IMPORTED	D.P.	D.P.	D.P.
Bull Gear No.	17201	17196	13533	16031	17292	16998
Bull Gear Make	GGAG	GGAG	GGAG	GGAG	GGAG	GGAG

#### 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	00091	00091	00091	00091	00091	00091
Free	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	00091	00091	00091	00091	00091	00091

### 6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	87 T	100 T	83 T	82 T	80 T	828 KN
FREE END	91 T	101 T	81 T	80 T	89 T	906 KN

#### **Loco No.** 41987

#### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + .5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

#### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	IN	IN	SDI	KPE	IN	IN
GE Brg. PL 29030110	MAKE	NBC	SKF	NBC	NBC	NBC	NBC
FE Brg. PL 29030110	MAKE	NBC	SKF	NBC	NBC	NBC	NBC

#### 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KPE	KPE	KPE	KPE	KM	KM
BACKLASH (0.254 – 0.458mm)	0.360	0.360	0.350	0.320	0.340	0.310

#### 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	18.10	18.60	18.21	16.25	15.54	15.75
LEFT SIDE	16.71	17.05	17.63	18.71	15.45	15.31

#### 11. TRACTION MOTOR: (PL No.29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & Date	S. NO.
1	PIONEER	102028	318A24690
2	PIONEER	102028	318A24703
3	CGP	102027	2232006-7105
4	PIONEER	102028	318A24693
5	TMS		PLW-3100
6	PIONEER	102028	318A24665

JE/SSE/ Bogie Shop

#### TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646  ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



#### भारत सरकार **GOVERNMENT OF INDIA**

रेल मंत्राल्य

#### **MINISTRY OF RAILWAYS**

पटियाला रेलइंजन कारखाना

### PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244

फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310

पटियाला, 147003, भारत PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

No. PLW/M/ECS/Tech/Kavach

Date: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Waltair.

Email: srdee\_trsvskp@yahoo.co.in, elsvskp1982@gmail.com

Sub:- Fitment of KAVACH in three Phase Electric Loco. No. 41987 WAG9-HC.

Ref:- (i). Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii).Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 41987 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/WAT/ECoR on 13.01.25. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed by NISHANT BANSIWAL Date: 2025.02.08

11:52:00 +05'30' (निशात बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

#### प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/ECoR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

#### Loco No. 41987

N	PLX6	Description of Item	(eliy)
		ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS	03 nos
		FEMALE TEE 3/8" BSPP – BRASS	06 nos
2	29611994	HEX PLUG -3/8" BSPT – BRASS	02 nos
-		FEMALE TEE 1/2" BSPP – BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos
.*		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos
*		HEX PLUG – 1/2" BSPT – BRASS	04 no:
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos
3	29170114	Copper Tube OD 9.52mm (3/8" ) X 1.245 Mm W.T X 6 Mtr	1.2Mt

AWM/ABS & LFS

SSE/GIABS

SN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.	-	WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	-	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	_	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	-	DIN Rail fitted inside the driver desk (LP Side)	02 nos.

#### Annexure-C

SN	PL No.	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm <sup>2</sup> provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	<u>-</u>	Harness provided from KAVACH SB to SB-1	07 wires
5.	_	Harness provided from KAVACH SB to SB-2	05 wires
6.	<b>-</b>	Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	-	Harness provided from KAVACH SB to CAB-1	24 wires
8.	<u>-</u>	Harness provided from KAVACH SB to CAB-2	16 wires