# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

## PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED wAg9hc ELECTRIC LOCOMOTIVE

LOCO NO.: 42000

TYPE: WAG9HC

Rail way shed: ER/ASNL

ProPulsion system: ABB

Date of Dispatch: 31.12.2024

लोको निर्माण रिकार्ड



## पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

**LOCO NO.: 42000** 

RAILWAY/SHED: ER/ASNL

DOD: Dec.-2024

#### **INDEX**

SN	PARA	ACTIVITIES	PAGE NO.			
	Testing & Commissioning (ECS)					
1.	1.0	Continuity Test of the cables				
	1.1	Continuity Test of Traction Circuit Cables				
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4			
	1.3	Continuity Test of Battery Circuit Cables				
	1.4	Continuity Test of Screened Control Circuit Cables				
2.	2.0	Low Tension test				
	2.1	Measurement of resistor in OHMS ( $\Omega$ )	5-6			
	2.2	Check Points	3 3			
_	2.3	Low Tension Test Battery Circuits (without control electronics)				
3	3.0	Downloading of Software				
	3.1	Check Points				
	3.2	Download Software	7-10			
	3.3	Analogue Signal Checking				
	3.4	Functional test in simulation mode				
4	4.0	Sensor test & convertor test				
	4.1	Test wiring Transformer Circuits – Polarity Test				
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)				
	4.3	Primary Voltage Transformer				
	4.4	Minimum voltage relay (Pos. 86)	11-16			
	4.5	Maximum current relay (Pos. 78)				
	4.6	Test por Link Voltage Sensors (Pee 15 6/*)				
	4.7 4.8	Test DC Link Voltage Sensors (Pos 15.6/*) Verification of Converter Protection Circuits (Hardware limits)				
	4.8 4.9	Sequence of BUR contactors				
5.	5.0	Commissioning with High Voltage				
0.	5.1	Check List				
	5.2	Safety test main circuit breaker				
	5.3	Auxiliary Converter Commissioning				
	5.3.1	Running test of 3 ph. auxiliary equipments				
	5.3.2	Performance of Auxiliary Converters				
	5.3.3	Performance of BURs when one BUR goes out	16-25			
	5.4	Auxiliary circuit 415/110				
	5.5	Hotel Load Circuit				
	5.6	Traction Converter Commissioning				
	5.7	Test protective shutdown SR				
	5.8	Test Harmonic Filter				
	5.9	Test important components of the locomotive				
6.	6.0	Running Trial of the locomotive	25-26			
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27			
8.	8.0	Status of RDSO modifications	28			
9.	1-10	Pneumatic Test Parameters	29 - 32			
10.		Loco Check Sheet(LAS)	33			
11.	-	Component History (LAS,ECS,ABS)	34-36			
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38			
13	-	Warranty Conditions as per Tenders	39 -41			

Effective Date: Feb 2022

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

ALSTOM.

Type of Locomotive: WAP-7/WAG-9HC Page: 1 of 27

(Ref: WI/ECS/10)

Locomotive No.: 1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	600 ma
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	650M2
Filter Cubicle	Earthing Choke	OK	100 ΜΩ	800MQ
Earthing Choke	Earth Return Brushes	OK	100 ΜΩ	650 ma
Transformer	Power Converter 1	ok	100 ΜΩ	700 mr
Transformer	Power Converter 2	OK	100 ΜΩ	550M
Power Converter 1	TM1, TM2, TM3	ok	100 ΜΩ	700 ma
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	700MM
Earth	Power Converter 1	ok	100 ΜΩ	750 MM
Earth	Power Converter 2	ok	100 ΜΩ	650M/

### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.:

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

DOC.140.1 /E00/01

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	0/<	100 MΩ	700 MZ
Transformer	BUR2	G)(	100 MΩ	600 MM
Transformer	BUR3	0)(	100 M $\Omega$	goo ma
Earth	BUR1	6)<	100 ΜΩ	600 MM
Earth	BUR2	ok.	100 MΩ	700 MA
Earth	BUR3	0)(	100 ΜΩ	Sooma
BUR1	HB1	6 K	100 ΜΩ	600 m
BUR2	HB2	20	100 MΩ	FOOMA
HB1	HB2	oχ	100 ΜΩ	goo ma
HB1	TM Blower 1	ok	100 ΜΩ	600 m
HB1	TM Scavenge Blower 1	ok	100 MΩ	700 m
HB1	Oil Cooling Unit 1	ناد	100 MΩ	500 m/
HB1	Compressor 1	ok	100 MΩ	600 M/
HB1	TFP Oil Pump 1	ok	$100~ extsf{M}\Omega$	Form
HB1	Converter Coolant Pump 1	°/<	100 ΜΩ	800 MM
HB1	MR Blower 1	OK	100 MΩ	900 mr
HB1	MR Scavenge Blower 1	0)<	100 MΩ	Booms
HB1	Cab1	ok	100 ΜΩ	900 m
Cab1	Cab Heater 1	ØK	100 MΩ	Gooms
HB2	TM Blower 2	0 K	100 ΜΩ	800 m
HB2	TM Scavenge Blower 2	0)<	100 ΜΩ	100 m
HB2	Oil Cooling Unit 2	છ)ર	100 ΜΩ	Soom
HB2	Compressor 2	olc	100 ΜΩ	HOOM
HB2	TFP Oil Pump 2	ok	100 ΜΩ	Goom
HB2	Converter Coolant Pump 2	o)s	100 MΩ	Hoom
HB2	MR Blower 2	010	100 MΩ	gos m
HB2	MR Scavenge Blower 2	o <sub>K</sub>	100 ΜΩ	GOO MA
HB2	Cab2	ok	100 ΜΩ	Hoom
Cab2	Cab Heater 2	ok	100 MΩ	900m

PATIALA LOCOMOTIVE WORKS, PATIALA

(Ref: WI/ECS/10)

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	To	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OU
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	OK
Battery (Wire no. 2052)	Connector 50.X7-2		OR
SB2 (Wire no 2050)	Connector 50.X7-3		OK.

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>6</u> ΜΩ
Measure the resistance between 2093 & 2052,	Prescribed value: ,	Measured .
2093 & 2050, 2052 & 2050	> 50 MΩ	Value 65 MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

### 1.4 Continuity Test of Screened Control Circuit Cables

1997年中国大学的大学、李大学的大学、大学等于1997年

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04В	0/5
Memotel circuit of cab1 &2	10A	ok
Memotel speed sensor	10A	618
Primary voltage detection	01A, 12A	ok
Brake controller cab-1 & 2	06F, 06G	ø/K

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC Page: 4 of 27

Master controller cab-1 &2	08C, 08D	ok
TE/BE meter bogie-1 & 2	08E, 08F	
Terminal fault indication cab-1 & 2	09F	ale
Brake pipe pressure actual BE electric	06H	
Primary current sensors	12B, 12F	ok
Harmonic filter current sensors	12B, 12F	@le
Auxiliary current sensors	12B, 12F	ok
Oil circuit transformer bogie 1	12E, 12I	ak_
Magnetization current	12C, 12G	ok
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	6k
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	ak
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	ak
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	ok
Traction motor speed sensors (2 nos) and temperature sensors (1 no.) of TM-5	12H	Cok
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	ok
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	
10KΩ±±10%)		Gls
UIC line	13B	G/K
Connection FLG1-Box TB	13A	ra/s

Effective Date: Feb 2022

DOC.NO.F/EU (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

### Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

### 2.0 Low Tension test

2.1 Measurement of resistor in OHMS  $(\Omega)$ 

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K <b>Ω</b> ± 10%	3,9 \$2
Resister to maximum current relay.	1Ω ± 10%	12
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.3.7
Resistance harmonic filter (Pos 8.3). Variation allowed ± 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0,27
Between wire 6 & 7	0.2 Ω	0·2A
Between wire 5 & 7	0.4 Ω	065
For train bus, line U13A to earthing.	10 kΩ± 10%	999M
For train bus, line U13B to earthing.	10 k <b>Ω</b> ± 10%	10.0Kr
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	3 00 MV
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	01281
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.2951
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.3eV
Earthing resistance (earth fault detection) Harmonic Filter -1; Pos. 8.61.	2.2 kΩ± 10%	2.242
Earthing resistance (earth fault detection) Harmonic Filter -II; Pos 8.62.	2.7 kΩ± 10%	2:712
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 kΩ ± 10%	3,9K2
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.8100
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390Ω ± 10%	3902
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAPS).	3.3 kΩ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	10.52

Effective Date: Feb 2022

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

(Ref: WI/ECS/10)

Note:

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	checked ok
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	Checked ok

### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Para 3.6 of the document no. 3 EHX 6 Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	ok
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	ck
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	· ok
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	19 k
Test control Pneumatic devices	Sheets of Group 06	c.k.
Test lighting control	Sheets of Group 07	ok_
Pretest speedometer	Sheets of Group 10	ok
Pretest vigilance control and fire system	Sheets of Group 11	øk .
Power supply train bus	Sheets of Group 13	o K

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42500
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

(Ref: WI/ECS/10)

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Ve
Check that all the fibre optic cables are correctly connected to the bus stations.	405
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Vos

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

propulsion equipment to be ensured and noted.	· · · · · · · · · · · · · · · · · · ·
Traction converter-1 software version:	1.0.5.4
Traction converter-2 software version:	1.0.5.4
Auxiliary converter-1 software version:	1.0.0.8
Auxiliary converter-2 software version:	2.0.0.8
Auxiliary converter-3 software version:	3.0.0.8
Vehicle control unit -1 software version:	6.0.0.12
Venicle control unit -2 software version:	6.0.0.12

3.3 Analogue Signal Checking

check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK.
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	°K.
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	w,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100/,
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	257,

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	ا (محم)
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257
TE/BE at '1/3'position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	74,
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	16°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	16.500
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	16°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	16°C
	Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	16°C

Effective Date: Feb 2022

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

### Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

### Functional test in simulation mode

STEEL A CONTROL Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	Checked ok
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	checked on
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed.  By moving reverser handle:  Converter pre-charging contactor 12.3 must close after few seconds.  Converter contactor 12.4 must close.  Converter re-charging contactor 12.3 must opens.  By increasing TE/BE throttle:  FB contactor 8.41 must open.  FB contactor 8.2 must close.  FB contactor 8.1 must close.	checked ok
MINE	<ul> <li>Bring TE/BE to O.</li> <li>Bring the cab activation key to "O"</li> <li>VCB must open.</li> <li>Panto must lower.</li> <li>Converter contactor 12.4 must open.</li> <li>FB contactor 8.1 must open.</li> <li>FB contactors 8.41 must close.</li> <li>FB contactor 8.2 must remain closed.</li> </ul>	OR

DOC.NO.F/ECS/UI (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

## Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

***		
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.	
	<ul> <li>Check that FB contactor 8.1 is open.</li> </ul>	
	<ul> <li>Check that FB contactor 8.2 is open.</li> <li>After raising panto, closing VCB, and</li> </ul>	Checked
	setting TE/BE	6/2
	• FB contactor 8.1 closes.	
	• FB contactor 8.2 remains open.	
Test earth fault detection battery	By connecting wire 2050 to	
circuit positive & negative	earth, create earth fault	
	negative potential.	
	<ul> <li>message for earth fault</li> </ul>	Checked
•	By connecting wire 2095	City
	to earth, create earth	
	fault positive potential.	
	message for earth fault	
	•	
Test fire system. Create a smoke in	When smoke sensor-1 gets	i
the machine room near the FDU.	activated then	
Watch for activation of alarm.	<ul> <li>Alarm triggers and fault</li> </ul>	
	message priority 2	1 1
	appears on screen.	checked
	When both smoke sensor	OK
	1+2 gets activated then	- <b>/</b> .
	A fault message priority	4
	1 appears on screen and	¥
	lamp LSF1 glow.	ļ
	Start/Running interlock occurs and	1
	TE/BE becomes to 0.	
Time, date & loco number	Ensure correct date time and Loco	l GV
	humber	OK
	***************************************	

Effective Date: Feb 2022

DOC.NO.F/ECS/VI (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

of the following of the transformers

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.0440	OK
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.0508	OU.
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.04~8	O <sub>U</sub>
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 8118- 8148	10.05V <sub>p</sub> and same polarity	10,0420	OIL
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103-1117 (in HB1)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.9 VP 5-6 VRMS	ou
	For Aux converter 2 between cable 1103- 1117 (in HB2)			
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.1041 6.44vems)	gr.

### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Signer of the second of the second

south a Healthy graning mediate and

	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$ , $41.5V_{RMS}$ and opposite polarity.	58.671 41.50pm)	øų
	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.		e3M
	Alternative respective to the second	11.0 V Rms)	

#### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42 orv

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

#### 4.3 Primary Voltage Transformer.

Apply 250V<sub>eff</sub>/350V<sub>p</sub> by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25KV	250 x
SLG2 G 87-XUPrim	25 kV	250%	25KV	250 X

Decrease the supply voltage below 140  $V_{RMS}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	12KV	170 Y
SLG2 G 87-XUPrim	17 kV	170%	12 KV	170 y.

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac. VCB must open at this voltage, in this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30 KV	3000 X
SLG2_G 87-XUPrim	30 kV	300%	30KV	300 4

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

### 4.4 Minimum voltage relay (Pos. 86)

Functionality test:	
Minimum voltage relay (Pos. 86) must be adjus	ted to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage	(Yes/No)
transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply	
200V <sub>RMS</sub> through variac. In this case; <i>Minimum voltage relay</i> (Pos. 86) picks up	
Try to activate the cab in driving mode:	(Mes/No)
Contactor 218 do not close; the control	
electronics is not be working.	
Turn off the variac :	(Yés/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	<u>,</u>
Activate the cab in cooling mode; Raise panto;	(Kes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	· .
The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no.	(Yes/No)
1501 & 1502; Decrease the supply voltage below	
140V <sub>RMS</sub> ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

#### 4.5 Maximum current relay (Pos. 78)

4.5 Waximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transfor &1522 (including the resistor at Pos. 6.11); Put loco in simula on contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the open maximum current relay Pos. 78 for correct over current value	ation for driving mode; Open R <sub>3</sub> – R <sub>4</sub> wire 1521: Tune the drum of the
VCB opens with Priority 1 fault message on display.	L(Yes/No)
Keep contact $R_3$ – $R_4$ of 136.3 closed; Close VCB; Tune the res/9.9 $A_p$ at the open wire 1521;	sistor 78.1 for the current of 7.0A <sub>RMS</sub>
VCB opens with Priority 1 fault message on display.	L(Yes/No)

Effective Date: Feb 2022

### PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors  Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		-
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298mg
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. $7(+)$ & 8(-) Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. $7(+)$ & 8(-)	7	336mp
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/10 2 pin no. 7(+) & 8(-) Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/10	r	345ma
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8(-)	ren.	NA
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	ren	MA

DOC.NO.F/ECS/VI

### (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

## Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42 over

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

This test is to be done by the commissioning engineer of the firm if required.

### 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown	Measured limit
	should take place	
Current sensors (Pos 18.2/1, 18.2/2,	increase the current quickly in	For 18.2/1=
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 18.2/2=
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=
for Power Converter 1	with priority 1 fault for each	For 18.4/4=
	sensor.	For 18.5/1=
		For 18.5/2=
		For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2,	Increase the current quickly in	For 18.2/1=
18.2/3, 18.4/4, 18.5/1, 18.5/2,	the test winding of the current	For 8.2/2=
18.5/3)	sensors, VCB will off at 2.52A	For 18.2/3=
for Power Converter 2	with priority 1 fault for each	For 18.4/4=
	sensor.	For 18.5/1=
		For 18.5/2=
en de la companya de La companya de la co	ting.	For 18.5/3=
Fibre optic failure in Power	Remove one of the orange	
Converter1	fibre optic plugs on traction	
	converter. VCB should trip	0K
Fibre optic failure In Power	Remove one of the orange	
Converter2	fibre optic plugs on traction	
	converter. VCB should trip	ok .
	•	1

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

Js

PATIALA LOCOMOTIVE WORKS, PATIALA

(Ref: WI/ECS/10)

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Clare	open	Clore	cOlm	ronze	Ner	Cluse	Clase	open
BUR1 off	Classe	coen	Close	Chil		case	4/4	coen	Clare
BUR2 off	der	alen	Clase	Clare	Morse	come	open	open	Clase
BUR3 off	Den	clara	color	10012	Core	Come	Den	open	Conse

#### Commissioning with High Voltage

#### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	res
No rubbish in machine room, on the roof, under the loco.	yes
All the electronic Sub-D and connectors connected	yes
All the MCBs of the HB1 & HB2 open.	Ye3
All the three fuses 40/* of the auxiliary converters	Vel
The fuse of the 415/110V auxiliary circuit (in HB1) open.	408
Roof to roof earthing and roof to cab earthing done	408
Fixing, connection and earthing in the surge arrestor done correctly.	Vas
Connection in all the traction motors done correctly.	VOS
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	403
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	yes
KABA key interlocking system.	yes

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 48000

Type of Locomotive: WAP-7/WAG-9HC Page: 17 of 27

(Ref: WI/ECS/10)

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	checked on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Checked 6k
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	Checkedok
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	checkesok
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	Chareson
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Checked ox
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	checkesok
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		chakelok

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	8.9	11:10
Oil pump transformer 2	9.8 amps	9.0	12.0
Coolant pump converter 1	19.6 amps	4,5	5-6
Coolant pump converter 2	19.6 amps	5.5	. 7.0
Oil cooling blower unit 1	40.0 amps	41.00	132.0
Oil cooling blower unit 2	40.0 amps	42.0	140.0
Traction motor blower 1	34.0 amps	36,5	106.0
Traction motor blower 2	34.0 amps	37.0	115.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.1	11.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.2	15.0
Compressor 1	25 amps at 0 kg/cm <sup>2</sup> 40 amps at 10 kg/cm <sup>2</sup>	27. 9	40.0
Compressor 2	25 amps at 0 kg/cm <sup>2</sup> 40 amps at 10	280	45.0
5 · ·	kg/ cm²		٠.,

Effective Date: Feb 2022

Feb 2022 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 2000

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	9984.	Yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636V	4cy
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Bmh	7+

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1002~	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637 <sup>V</sup>	res
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amb	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	21 Amp	46
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	11 Amh	Ye,
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110~	Yes

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1002~	Yes
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	6370	Yey
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7Amb	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	218ml	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	11 Am)	Yey
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	Yey

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

Effective Date: Feb 2022

Doc.No.F/ECS/UT (Ref: WI/ECS/10)

#### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4200

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

#### 5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery Conditions of the Condition of th
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

#### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	5.8	120
Machine room blower 2	15.0 amps*	5.0	10.0
Sc. Blower to MR blower 1	1.3 amps	1.2	2.9
Sc. Blower to MR blower 2	1.3 amps	1-2	3,0
Ventilator cab heater 1	1.1 amps	1.7	2.2
Ventilator cab heater 2	1.1 amps	1.7	8.3
Cab heater 1	4.8 amps	5.2	5.4
Cab heater 2	4.8 amps	5.2	5.4

\* For indigenous MR blowers.

Effective Date: Feb 2022

### (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

### Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 your

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

### 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

### 5.6 Traction Converter Commissionina

### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

For Converter 1		Result obtained
Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checkesok
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkesok
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checkes ok
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkedok
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok

Effective Date: Feb 2022

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 48000

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

DOC.NO.F/ECS/UI

(Ref: WI/ECS/10)

#### For Converter 2

For Converter 2	B. M. Josiwal in companso	Result obtained		
Test Function	Results desired in sequence	Meanit oprairies		
charging and pre-	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok		
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok		
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkelok		
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	checked GK		
Earth fault detection on AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ou		
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok		
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked or		
	<u> </u>	<u> </u>		

Effective Date: Feb 2022

b 2022

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4900

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on DDU appears  Disturbance in Converter 1	checked ok
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down.  • VCB goes off  • Priority 1 fault mesg. on diagnostic display appears  Disturbance in Converter 2	checked ok

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained	
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	Checked ok	

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	a FB contactor 9.2 must close	
	<ul> <li>FB contactor 8.2 must close.</li> <li>FB contactor 8.1 must close</li> <li>Check the filter current in diagnostic laptop</li> <li>Bring the TE/BE throttle to O</li> <li>Switch off the VCB</li> <li>FB contactor 8.1must open.</li> <li>FB discharging contactor 8.41 must close</li> <li>Check the filter current in</li> </ul>	checked ok
	diagnostic laptop $igcup$	
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit	Checked ok
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	ok

#### 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	Checkes ok	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	checked ok	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	Checkelok	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	checkesok	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	Checkedok	

of the second

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42000

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	checked ok
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	checked oh
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	Checkedok Checkedok
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Checkedok
Illuminated Push button	All illuminated push buttons should glow during the operation	Checked o k
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### 6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run			
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Checke	
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	Charke	
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Checke	
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75</li> <li>Kg/cm<sup>2</sup>, by pressing BPCS again.</li> </ul>	checko	
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Checker ols	

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

## <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 49 000

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .	
	locomotive	For 60 seconds do not press vigilance foot switch or	
		sanding foots switch or TE/BE throttle or BPVG	
}		switch then	
		Buzzer should start buzzing.	
		LSVW should glow continuously.	
		Do not acknowledge the alarm through BPVG or	2)
		Do not acknowledge the alarm through BPVG or vigilance foot switch further for 8 seconds then:-	U
·		Emergency brake should be applied	
		automatically.	
		VCB should be switched off.	
	•	Resetting of this penalty brake is possible only after	
		32 seconds by bringing TE/BE throttle to 0 and	
		acknowledge BPVR and press & release vigilance	
		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).	(Q)
		• With park brake in applied condition.	
		• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	, a 1
		• With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).	tol
		• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).	
8.	Check traction interlock	Cuitch of the broke electronics The	
0.	Check traction interiock	Tractive /Braking effort should ramp down VCB	21
		should open and BP reduces rapidly.	
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed Checket	e/
	braking.	should start reducing.	C
10.	Check for BUR	In the event of failure of one BUR, rest of the two	
	redundancy test at	BURS can take the load of all the auxiliaries. For this	ol
	ventilation level 1 & 3 of		10
	loco operation	Auxiliaries should be catered by rest of two BURs.	
		Switch off the 2 BURs; loco should trip in this case.	
11.	Check the power	Create disturbance in power converter by switching	. A
	converter	off the electronics. VCB should open and converter Check	,ejj
	isolation test	should get isolated and traction is possible with	
		another power converter.	

Effective Date: Feb 2022

eb 2022

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 Lovo

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

### 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

	•		•	·
SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	ok .	a k	1
2	Marker Red	als	6K	
3	Marker White	ok	ok_	
4	Cab Lights	oK	6k	
5	Dr Spot Light	o K	ok	
6	Asst Dr Spot Light	ak.	0/<	checked woming of
7	Flasher Light	ok.	ale	
8	Instrument Lights	ak	ak	
9	Corridor Light	oo k	O/	
10	Cab Fans	de	- le	
11	Cab Heater/Blowers	0 (c	ols	
12	All Cab Signal Lamps Panel 'A'			
		o K	G/<	

LOCO NO: 42000 Status of RDSO modifications

		Remarks	
Sn	Modification No.	Description	
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Øk/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Øk/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Øk/Not Ok
6	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of	Ok/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ók/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Øk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	QK/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ók/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13		OK/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Øk/Not Ok
16	Rev.'0' Dt 10.12.13	harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
17	Rev. 0' Dt 12.03.14	current relay of three phase electric locomotives.	ON NOT ON
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ók/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	phase electric locomotives.	OKITOL OK
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Ok/Not Ok

Signature of JE/SSE/ECS

Loco No.: 42000

### PLW/PATIALA

### PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: M/s Knorr			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	
	Record pressure Build up time (8.0 kg/cm2)		120 sec (knorr)	118 sec
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.45 Kg/cm2
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.45 Kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.45 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co		1
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.25 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.	:\ 7 NA	
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. &
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	50 sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP2-28 -Sec
	compressors, Check pressure build time of individual		, ,	
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-29- Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.50 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.50 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10.0 Kg/cm2
		MM3882 &	kg/cm2, Closes at	
		MM3946	8±0.20 kg/cm2	8.0 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.45 minute

### PLW/PATIALA

Loco No.: 42000

2.7	Check unloader v	alve operation time				Approx. 12 Sec.	11sec
2.8	Check Auto Drain Valve functioning (124 & 87)					Operates when Compressor starts	ok
2.9	Check CP-I deliver Direct by BLCP.	ry safety valve setting	g (10/1). Run CP	D&M test spec. MM3882 & MM3946		11.50±0.35 kg/cm2	11.5 Kg/cm2
2.10	Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP			est spec. & MM3946	11.50±0.35 kg/cm2	11.50 Kg/cm2	
2.11		ompressors and ensuressure 1.2 kg/cm2 l	-		est spec. & MM3946		
2.12	by drain cock of 1	ch 'OFF' compressor, " Main Reservoir, Sta ssure of Duplex Checl	rt Compressor,	CLW's chec F60.812 Ve	ck sheet no. ersion 2	5.0±0.10kg/cm2	5.0 Kg/cm2
2.13	FP pressure: Fit Test Gauge in 136F. Check press	Test point 107F FPTP. sure in Gauge.	. Open isolate cock	CLW's chec F60.812 Ve	ck sheet no. ersion 2	6.0±0.20kg/cm2	6.0 Kg/cm2
3.0	Air Dryer Opera						
3.1	Open Drain Cock	90 of 2 <sup>nd</sup> MR to start ck Air Dryer Towers t				Tower to change every minute	ok
3.2	Check Purge Air S	tops from Air Dryer a	t Compressor stops				
3.3	Check condition o	of humidity indicator				Blue	Blue
4.0	Main Reservoir L	eakage Test					
4.1	Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.		D&M test spec. MM3882 & MM3946		Should be less than 1 kg/cm2 in 15 minutes	0.4 Kg/cm2 in 15 minutes	
4.2	Check BP Air leak	age			est spec. & MM3946	0.15 kg/cm2 in 5 minutes	0.05 Kg/cm2 in 5 minutes
5.0	Brake Test (Aut	omatic Brake opera	ation)				
5.1	Record Brake Pipe	e & Brake Cylinder pr	essure at Each Step				
	Check proportionality of Auto Brake system			ck sheet no. Version 2			
	Auto controller position	BP Pressure kg/cm2	2	BC (WAG-9 & WAP-7) Kg/cm2		BC (WAP-5) Kg/cm2	
		Value	Result	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
	Full service	3.35±0.2	3.35 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-

### PLW/PATIALA

Loco No.: 42000

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure Automatic Brake Controller handle is Full Service from Run	D&M test spec. MM3882 & MM3946	8±2 sec.	9 Sec
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 2.5 kg/cm2	ок
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2 Opens at BP 2.85- 3.15 kg/cm2	4.25 Kg/cm2 3.0 Kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC $5.15 \pm 0.3$ kg/cm2 apply time WAP7 - BC $2.50 \pm 0.1$ kg/cm2 WAG9 - BC $2.50 \pm 0.1$ kg/cm2	D&M test spec. MM3882 & MM3946	4±1 sec. 7.5±1.5 sec. 21±3 sec.	20 sec.
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAP7	D&M test spec. MM3882 & MM3946	17.5±25 sec. <b>52±7.5 sec</b> .	55 sec.
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	78 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake.  * Allow The MR pressure to build up to maximum stipulated limit.  * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A (Automatic brake controlling) at run position.  * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe.  The test shall be carried out with all the compressors in working condition.	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.45 Kg/cm2
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.60 Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (Max.)	8 Sec

### **PLW/PATIALA**

Loco No.: 42000

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.20±0.10 kg/cm2	0.20 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	14 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now De- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	PD00 Little and	Pressure Setting Needed is12 kg/sqcm Causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	RDSO letter no. EL/3.2.19/3-phase (CCB), dtd 30.01.2023		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			50 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok



Signature of SSE/Shop

	42000								
		i	ROOF COME	PONENT CAB 1 & 2		Warranty			
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.				
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, CONTRANSYS	H24-0081/AUG-2024, 15680-11/24				
2	Servo motor	29880026	2	CONTRANSYS	15417-10/24				
3	Air Intake filter Assly	29480103	2	PARKER	O/C 1527P/A/02 (PLW)06/24, O/C 1678P/A/01 (PLW)10/24				
4	Insulator Panto Mtg.	29810127	8	BHEL	09-2024, 09-2024				
			MIDDLE RC	OF COMPONENT					
5	High Voltage Bushing	29731021	1	ELECTRANEX	EIPL-5780-09-24				
6	Voltage Transformer	29695028	1	CG POWER & INDUSTRIAL	243315-18.09.2024				
7	Vacuum Circuit Breaker	25712202	1	AUTOMETERS	AALN/11/2024/071/VCBA/882				
8	Insulator Roof line	29810139	9	MIL	05-2024, 06-2024, 07-2024				
9	Harmonic Filter	29650033	1	ELECOS ENGINEERING	EEPL/HF/1583	AS Per PO/IRS Conditions			
10	Earth Switch	29700073	1	AUTOMETERS	AALN/04/2024/026/ES/026				
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	57716-2024, 57717-2024				
			Air B	rake Components					
12	Air Compressor (A,B)	29511008	2	ELGI	EXGS 923701 A , EXGS 923709 B				
13	Air Dryer	29162051	1	TRIDENT	LD2-10-0786-24				
14	Babby compressor	25513000	1	ELGI	BXFS 109378				
15	Air Brake Panel	29180016	1	KNORR	24-11-CO-3866				
16	Contoller (A,B)	29180016	2	KNORR	24-10-FO-3907 A, 24-10-FO-3907 B				
17	Breakup Valve	29180016	2	KNORR					
18	wiper motor	29162026	4	Auto Industry					

SAMSHER Digitally signed by SAMSHER SINGH BIST Date: 2025.02.17 10:51:20 +05'30' SSE/ABS

### PLW/PTA

### ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 42000 LIST OF ITEMS FITTED BY ECS RLY: ER

SHED: ASNL

PROPULSION SYSTEM: ALSTOM

<del></del> 1	OPIDTION OF ITEM	ITEM PL NO.	ITEM SR. NO CAB-1/CAB-2		MAKE/SUPPLIER
SN	DESCRIPTION OF ITEM	29612937	4658	4728	POWER TECH
1	LED Based Flasher Light Cab I & II	29612925	143513/143527/1	43530/143595	MATSUSHI P. TECH.
	Led Marker Light Cab I & II		3263	3260	KKI
3	Cab Heater Cab I & II	29170011	5831/5894/5		MTI
4	Crew Fan Cab I & II	29470080			1,77
1 1	Master Controller Cab I	29860015	722		WOAMA
	Master Controller Cab II	20000010	7054	T	
	Complete Panel A Cab I & II	29178265	568A	568B	HIND
	Complete Panel C Cab I & II	29170539	3594	3604	KEPCO/ALSTOM
		29178265	551A	551B	HIND
9	Complete Panel D Cab I & II	29178162	SLCF00012412424	SLCF00012412422	STESALIT
	Complete Cubicle- F Panel Cab I & II	29200040	5293/5	958	MEDHA
11	Speed Ind.& Rec. System		B-13		HBL
12	Battery (Ni- Cd)	29680025			QUADRANT
13	Set of Harnessed Cable Complete	29600420			
14	Transformer Oil Pressure Sensor (Cab-1)	29500047	BG/PS/1311 Jun-24	BG/PS/1557 Jun-24	BG INDUSTRIES
15	Transformer Oil Pressure Sensor (Cab-2)		BG/PS/1322 Jun-24	BG/PS/1468 Jun-24	
16	Transformer Oil Temperature Sensor (Cab-1)	29500035	BG/TFP/8873 Aug-24		BG INDUSTRIES
1-	Transformer Oil Temperature Sensor (Cab-2)		BG/TFP/9044 Aug-24		
11/	Roof mounted Air Conditioner I	20044000	. SSM/CLW/AC	/11/24/126	SATURN SHEET M
	Roof mounted Air Conditioner II	29811028	.SSM/CLW/AC	C/11/24/121	0, 1, 0, 11, 0, 12, 11, 11
110	DOOT MOUNTED ALL COMUNIONS IN	1		· ····	

SSE/ECS

JENECS

		PATIALA LOCOMO	/WAG-9HC/ER/AS			
S.No.	Equipment	PL No.		ent Serial No.	Ma	ake
1	Complete Shell Assembly with piping	29171027		63, 12/24	-	BT
2	Side Buffer Assly Both Side Cab I	231/102/	123, 11/24	45, 11/24	FASP	FASP
		29130050	-		FASP	FASP
3	Side Buffer Assly Both Side Cab II		68, 11/24	42, 11/24		
4	CBC Cab I & II	29130037	156, 09/24	239, 09/24	FASP FASP	
5	Hand Brake		9,	/24- 956	Rising Eng	g. Concern
6	Set of Secondry Helical Spring	29045034 29041041			GI	BD
7	Battery Boxes (both side)	29680013	13, 11/24	30, 11/24	BHARTIA BRIGHT	BHARTIA BRIGH
8	Traction Bar Bogie I		86	50, 09/24	K	M
9	Traction Bar Bogie II		86	668, 9/24		М
10	Centre Pivot Housing in Shell Bogie I side	29100057		59, 11/24		VE
11	Centre Pivot Housing in Shell Bogie II side	23100037		59, 11/24		VE .
12	Elastic Ring in Front in Shell Bogie I side	29100010		18, 9/24		ADH
13	Elastic Ring in Front in Shell Bogie II side		8:	16, 9/24	AVA	ADH
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	Т 93	77/2, 2001		G
15	Oil Cooling Radiator I	20470021	11/24,	P1124RC2331	FINE AUTO	MOTIVE LTD
16	Oil Cooling Radiator II	29470031	11/24,	P1124RC2319	FINE AUTOR	MOTIVE LTD
17	Main Compressor I with Motor	20511000	EXGS9	23709, 10/24	ELGi	
18	Main Compressor II with Motor	29511008	EXGS9	23701, 10/24	ELGi 4	
19	Transformer Oil Cooling Pump I		2408	1296, 08/23	FLOWWELL	
20	Transformer Oil Cooling Pump II		2408:	1374, 08/23	FLOWWELL	
21	Oil Cooling Blower OCB I		PDS2410055, LHP1001559785		PD STEELS PVT LTD	
22	Oil Cooling Blower OCB II	29470043	PDS2412016, LHP1001602210		PD STEELS PVT LTD	
23	TM Blower I			049, CGLXKAM23165	ACCEL	
24	TM Blower II	29440075		046, CGLXKAM23162	ACCEL	
	Machine Room Blower I			MF -42/D- 5840	SAMAL HARAND PVT LTD	
	Machine Room Blower II	29440105		MF-24.10.102	GTR CO	PVT LTD
	Machine Room Scavenging Blower I			SM-24.11.47	GTR CO	PVT LTD
28	Machine Room Scavenging Blower II	29440129	11/24,	SM-24.11.36	GTR CO	PVT LTD
29	TM Scavenging Blower Motor I	20110117	10/24,	ST-24.10.183	GTR CO	PVT LTD
30	TM Scavenging Blower Motor II	29440117	10/24,	ST-24.10.175	GTR CO I	PVT LTD
31	Traction Convertor I			3/OROPULSIONA/4145		
32	Traction Convertor II			3/OROPULSIONA/4146		
33	Vehicle Control Unit I	29741075		3/0ROPULSIONA/4145	R	ΓIL
34	Vehicle Control Unit II	23/410/3		3/OROPULSIONA/4146	-	
35	Aux. Converter Box I (BUR 1)			M/10303/24A/1225		
36	Aux. Converter Box 2 (BUR 2 + 3)	20171100		M/10303/24B/1225	CTECA	LIT LTD
37	Axillary Control Cubical HB-1	29171180		HB10022410355 L/2024/07/HB2G9/080		ALLIANCE LTD
38	Axillary Control Cubical HB-2	29171192		0/2024/07/HB2G9/080 0/2024/01/SB1G9/061		ALLIANCE LTD
39	Complete Control Cubicle SB-1	29171209 29171210		4, 24101709		DIA PVT LTD
40	Complete Control Cubicle SB-2 Filter Cubical (FB) (COMPLETE FILTER	29480140		/09/2024/26/FB/128		ALLIANCE LTD
42	CUBICLES)  Driver Seats	29171131	PI W- 586-	1/25-73,23, 31, 72	A	BI
				SAL PIPES		
43	Transformer oil steel pipes	29230044		80, 24-6178	YOGYA ENTE	RPRISES LTD
44	Conservator Tank Breather	29731057		, 07,55,53		FT
45	Ballast Assembly ( only for WAG-9)	29170163		134, 158		SAVE
46	Head Light			107, 100		

NAME SHUPMEN SNAPAN SSE/LAS NAME ANICIT UPPEL

NAME RAPAY SIN EY

Effective Date: July-2023

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

#### पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA **ELECTRIC LOCO CHECK SHEET**

LOCO NO: 42000

ASNL Shed:

S. No.	ITEM TO BE CHECKED	Specified Value	Ob	served Val	ue		
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK	_	NA			
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.  TM scavenging blower 1 & 2 & Oil Cooling unit.	OK		012			
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		014			
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		OLL			
1.5	Check proper Fitment of FB panel on its position.	OK		012			
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		0/2			
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		CIL			
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		012			
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK	,	6/2			
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		1.12			
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		9/2			
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		012	1		
1.13	Check proper fitment of Cow catcher.	OK					
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		012 012 012			
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK	012				
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK	OK OK				
1.17	Check proper fitment of both battery box.	OK		OP			
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK	OK				
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	ОК		OK	7		
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAB	-1	CAB-2		
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std :35-60 mm		ALP LP	ALP 50		
		Lateral Std- 45-50 mm	54	37 55			
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	R/S		
	Drg No IB031-02002.	mm	FRONT	1098	1096		
			REAR	1095	1096		
		044	INLAIN	L/S	R/S		
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm	FRONT				
	Drg No-SK.DL-3430.			647	648		
			REAR .	650	649		
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S		
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	112	116		
			REAR	113	113		
4.04	ODO Hainki Danza (4000 145 E)	1090, +15	FRONT:	1096			
1.24	CBC Height: Range (1090, +15,-5)  Drg No- IB031-02002.	-5 mm	REAR:	1105			

(Signature of SSE/Elect. Loco )

NAME SHURIAM SHAPMA

DATE 31/12/2024

(Signature of /JE/Elect Loco)

NAME KARAN SWEN

ture who (Signature of JE/UF)

NAME ANKIT UPPAL

DATE 31/12/2024

पी. एल. डब्ल्यू P.L.W

### **Loco No.** 42000

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-346	ECBT	29101104	102079	As per PO/IRS
REAR	SL-349	ECBT	29101104	102079	conditions

### 2. Hydraulic Dampers (PL No.29040012) Make: G.B. / G.B.

### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	28032	27984	28108	27902	27480	27986
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC24-4063	CNC24-4061	CNC24-3914	PLW24-688	CNC24-3773	CNC24-4051
Make	IMPORTED	IMPORTED	IMPORTED	D.P.	D.P.	IMPORTED
FREE END	CNC24-3994	CNC24-3985	CNC24-3979	CNC24-3815	CNC24-3774	CNC24-4050
Make	IMPORTED	IMPORTED	IMPORTED	D.P.	D.P.	IMPORTED
Bull Gear No.	24-D-0974	23-M-1621	24-D-1234	17185	17008	23-M-1615
Bull Gear Make	KPCL	KPCL	KPCL	GGAG	GGAG	KPCL

### 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

AXLE POSITION NO		1	2	3	4	5	6
Gear End	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
	PO NO. & dt	02191	02191	02191	02191	02191	02191
Free	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	02191	02191	02191	02191	02191	02191

### 6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	90 T	102 T	80 T	87 T	945 KN	96 T
FREE END	102 T	100 T	88 T	85 T	986 KN	95 T

### Loco No. 42000

#### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + .5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6	
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5	
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5	
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK	

#### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	SDI	SDI	KPE	IN	IN	SDI
GE Brg. PL 29030110	MAKE	NBC	NBC	NBC	SKF	NBC	NBC
FE Brg. PL 29030110	MAKE	NBC	NBC	NBC	SKF	NBC	NBC

### 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	EEE	EEE	EEE	EEE	EEE	KM
BACKLASH (0.254 – 0.458mm)	0.290	0.310	0.280	0.300	0.300	0.310

### 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	15.46	17.04	15.76	15.68	16.38	15.78
LEFT SIDE	16.04	15.56	15.81	16.68	16.35	15.92

### 11. TRACTION MOTOR: (PL No.29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	NO MAKE PO No. & Date		S. NO.
1	TMS		PLW-3134
2	TMS		PLW-3147
3	TMS		PLW-3138
4	TMS		PLW-3158
5	TMS		PLW-3141
6	HIND RECTIFIER	101655	237010154/026

JE/SSE/ Bogie Shop

#### TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646  ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



#### भारत सरकार GOVERNMENT OF INDIA

रेल मंत्राल्य

#### MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना

### PATIALA LOCOMOTIVE WORKS



फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310 पटियाला, 147003, भारत् PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Asansol.

Email: srdeetrsasn@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 42000 WAG9-HC.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 42000 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/ASNL/ER on 26.01.2025. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed by NISHANT BANSIWAL Date: 2025.03.21 17:36:29 +05'30'

(निशांत बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/ER:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

### Loco No. 42000

	PLIXO.	ાગ્રેક્સનો દુધિયા છે પૈકામ	Oly,
XI	IPLINE	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
ı	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
	j	MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP	01 no.
		BRASS FITTINGS MALÉ CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS	03 nos
		FITTINGS FEMALE TEE 3/8" BSPP – BRASS	06 nos
2	29611994	HEX PLUG -3/8" BSPT – BRASS	02 nos
	·	FEMALE TEE 1/2" BSPP – BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 no
		HEX PLUG - 1/2" BSPT - BRASS	04 no
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS	02 no
	_	FITTINGS  Copper Tube OD 9.52mm (3/8" ) X 1.245 Mm W.T X 6 Mtr	1.2M

AWM/ABS & LFS

SSE/GIABS

ŚN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.	-	WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.		One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	-	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	_	DIN Rail fitted inside the driver desk (LP Side)	02 nos.

AWM/ABS & CES

SSEGILFS

### Annexure-C

SN	PL No.	Description of Item	Quantity
1.	42310301	Flexible conduit size 25mm <sup>2</sup> provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	<b>-</b>	Harness provided from KAVACH SB to SB-1	07 wires
5.	<u> </u>	Harness provided from KAVACH SB to SB-2	05 wires
6.		Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	<del>-</del>	Harness provided from KAVACH SB to CAB-1	gų wires
8.		Harness provided from KAVACH SB to CAB-2	16 wires

AVIMECS

SSEGIECS