# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

# PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED wAg9hc ELECTRIC LOCOMOTIVE

LOCO NO.: 42008

TYPE: WAG9HC

Rail way shed: WCR/NKJE

ProPulsion system: ALSTOM

Date of Dispatch: 25.01.2025

लोको निर्माण रिकार्ड



# पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

**LOCO NO.: 42008** 

**RAILWAY/SHED: WCR/NKJE** 

DOD: Jan-2025

### **INDEX**

SN	PARA	ACTIVITIES	PAGE NO.		
	Testing & Commissioning (ECS)				
1.	1.0	Continuity Test of the cables			
	1.1	Continuity Test of Traction Circuit Cables			
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4		
	1.3	Continuity Test of Battery Circuit Cables			
	1.4	Continuity Test of Screened Control Circuit Cables			
2.	2.0	Low Tension test			
	2.1	Measurement of resistor in OHMS (Ω)	5-6		
	2.2	Check Points	3-0		
	2.3	Low Tension Test Battery Circuits (without control electronics)			
3	3.0	Downloading of Software			
	3.1	Check Points			
	3.2	Download Software	7-10		
	3.3	Analogue Signal Checking			
	3.4	Functional test in simulation mode			
4	4.0	Sensor test & convertor test			
	4.1	Test wiring Transformer Circuits – Polarity Test			
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)			
	4.3	Primary Voltage Transformer			
	4.4	Minimum voltage relay (Pos. 86)	11-16		
	4.5	Maximum current relay (Pos. 78)	17.76		
	4.6	Test current sensors			
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)			
	4.8	Verification of Converter Protection Circuits (Hardware limits)			
	4.9	Sequence of BUR contactors			
5.	5.0	Commissioning with High Voltage			
	5.1	Check List			
	5.2	Safety test main circuit breaker			
	5.3	Auxiliary Converter Commissioning			
	5.3.1	Running test of 3 ph. auxiliary equipments			
	5.3.2	Performance of Auxiliary Converters	40.05		
	5.3.3	Performance of BURs when one BUR goes out	16-25		
	5.4 5.5	Auxiliary circuit 415/110			
	5.5 5.6	Hotel Load Circuit Treation Convertor Commissioning			
	5.6 5.7	Traction Converter Commissioning Test protective shutdown SP			
	5.7 5.8	Test protective shutdown SR Test Harmonic Filter			
	5.6 5.9	Test important components of the locomotive			
6.	6.0	Running Trial of the locomotive	25-26		
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27		
8.	8.0	Status of RDSO modifications	28		
9.	1-10	Pneumatic Test Parameters	29 - 32		
10.		Loco Check Sheet(LAS)	33		
11.	-	Component History (LAS,ECS,ABS)	34-36		
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38		
13	-	Warranty Conditions as per Tenders	39 -41		

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

L'2008 -ALSTOM

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	booma
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	or.	100 ΜΩ	650MN
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	booma.
Earthing Choke	Earth Return Brushes	OK	100 ΜΩ	650mA
Transformer	Power Converter 1	OK	100 ΜΩ	booma
Transformer	Power Converter 2	OK	100 ΜΩ	650ma
Power Converter 1	TM1, TM2, TM3	OK	100 ΜΩ	100MA
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	650m1
Earth	Power Converter 1	oK	100 ΜΩ	150 ma
Earth	Power Converter 2	OK	100 ΜΩ	600ma

### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

**Locomotive No.:** 

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 MΩ	800 MN
Transformer	BUR2	OK	100 MΩ	700 MM
Transformer	BUR3.	OK	100 M $\Omega$	600 MM
Earth	BUR1	OK	$100~ extsf{M}\Omega$	SOO MIL
Earth	BUR2	OK	100 MΩ	600 MM
Earth	BUR3	OK	$100\mathrm{M}\Omega$	700 MIR
BUR1	HB1	OK	100 M $\Omega$	800 MJ
BUR2	HB2	OR	100 M $\Omega$	500 Min
HB1	HB2	OK	100 ΜΩ	600 MIR
HB1	TM Blower 1	OK	100 MΩ	700 Mis
HB1	TM Scavenge Blower 1	OK	100 MΩ	800 MN
HB1	Oil Cooling Unit 1	OK	$100~ extsf{M}\Omega$	700 MM
HB1	Compressor 1	OK	100 M $\Omega$	600 MM
HB1	TFP Oil Pump 1	OK	100 M $\Omega$	500 MM
HB1	Converter Coolant Pump 1	OK	100 ΜΩ	600 MM
HB1	MR Blower 1	OK	100 M <b>Ω</b>	700 MM
HB1	MR Scavenge Blower 1	OK	100 ΜΩ	800 MIL
HB1	Cab1	018	100 MΩ	600 MM
Cab1	Cab Heater 1	OR	100 MΩ	700 MIN
HB2	TM Blower 2	OK	$100~ extsf{M}\Omega$	800 MM
HB2	TM Scavenge Blower 2	OK	100 MΩ	600 Mil
HB2	Oil Cooling Unit 2	08	100 MΩ ·	700 MN
HB2	Compressor 2	15.00 TO OK .	100 MΩ	800 MJ
HB2	TFP Oil Pump 2	OK	100 MΩ	600 MN
HB2	Converter Coolant Pump 2	OK	100 MΩ	700 MM
HB2	MR Blower 2	OK	100 ΜΩ	800 MM
HB2	MR Scavenge Blower 2	OK	100 ΜΩ	600 Minz
HB2	Cab2	OR	100 MΩ	700 MM
Cab2	Cab Heater 2	OK	100 ΜΩ	800 MN

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50 X7-1	By opening and closing MCB 110	OK
Battery (Wire no. 2052)	Connector 50.X7-2		٥٢
SB2 (Wire no 2050)	Connector 50.X7-3		. હંહ

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>&amp;</u> MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value <u>6 γ</u> ΜΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	ok.
Memotel circuit of cab1 &2	10A	OK.
Memotel speed sensor	10A	ગ્ય
Primary voltage detection	01A, 12A	Οχ
Brake controller cab-1 & 2	06F, 06G	. 00_

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	ou
TE/BE meter bogie-1 & 2	08E, 08F	ق <sub>الا</sub>
Terminal fault indication cab-1 & 2	09F	٥n.
Brake pipe pressure actual BE electric	06H	٥ <u>لا</u>
Primary current sensors	12B, 12F	عو
Harmonic filter current sensors	12B, 12F	OK .
Auxiliary current sensors	12B, 12F	. ૧૮
Oil circuit transformer bogie 1	12E, 12I	D <sub>k</sub>
Magnetization current	12C, 12G	DK.
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	ِ ٥٧٠
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	عد.
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	٥٢ .
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	Se
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	O.L.
Train Bus cab, 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	ο <sub>K</sub>
10KΩ±±10%)		
UIC line	13B	. °K
Connection FLG1-Box TB	13A	ou

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42908

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

### 2.0 Low Tension test

### 2.1 Measurement of resistor in OHMS ( $\Omega$ )

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K <b>Ω</b> ± 10%	3.962
Resister to maximum current relay.	1 <b>Ω</b> ± 10%	12 .
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3.35
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.2.1
Between wire 6 & 7	0.2 Ω	6.252
Between wire 5 & 7	0.4 Ω	0.452
For train bus, line U13A to earthing.	10 k <b>Ω</b> ± 10%	10.0K2
For train bus, line U13B to earthing.	$10~\text{k}\Omega\pm10\%$	.99921
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	300MJZ
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.24-2
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.295
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.28-2
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.285
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	<b>2.2 kΩ</b> ± 10%	29 KZ
Earthing resistance (earth fault detection) Harmonic Filter –II; P. Øs 8.62.	2.7 k <b>Ω</b> ± 10%	2.7K2
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3.9K2
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.8Kr
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	3902
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k <b>Ω±</b> 10%	INA
Resistance for headlight dimmer; Pos. 332.3.	10 <b>Ω</b> ± 10%	10.4

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 49008

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	cheeked an
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheeped on

### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	cheekeel ac
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	عد
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked. લૂદ
Test control main apparatus	Sheets of Group 05.	. &
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	DV.
Test control Pneumatic devices	Sheets of Group 06	Q
Test lighting control	Sheets of Group 07	04
Pretest speedometer	Sheets of Group 10	24
Pretest vigilance control and fire system	Sheets of Group 11	91
Power supply train bus	Sheets of Group 13	. Ar

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

Yes.

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4908

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.0 Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yey
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D <b>411.LG</b> and loco is set up in simulation mode.	Tes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Y6.4

### 3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.0.5.4
Traction converter-2 software version:	1.0.5.6
Auxiliary converter-1 software version:	1,0.0.8
Auxiliary converter-2 software version:	2.0.0.8
Auxiliary converter-3 software version:	3.0.0.8
Vehicle control unit -1 software version:	6.0.0.12
Vehicle control unit -2 software version:	6.0.0.12

### 3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	ÒK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	٥٢
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	101,
TE/BE at 'TE maximæl' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100,1
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	25),

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

	·		<del></del> -
TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	(00-1)
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	25),
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	16°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	16°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	12°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15.5°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C
		Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1605

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

8 مرو یا Locomotive No.: 4

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained `
Emergency shutdown through	VCB must open	creexad on
emergency stop switch 244	Panto must lower.	Chest
Shut Down through cab activation	VCB must open.	
switch to OFF position	Panto must lower.	cheekdon
Converter and filter contactor	FB contactor 8.41 is closed.	
operation with both Power	By moving reverser handle:	
Converters during Start Up.	Converter pre-charging contactor	
•	12.3 must close after few seconds.	
	<ul> <li>Converter contactor 12.4 must close.</li> </ul>	0 1.0
	Converter re-charging contactor	ockeeted on
	12.3 must opens.	
	By increasing TE/BE throttle:	
	• FB contactor 8.41 must open.	
	• FB contactor 8.2 must close.	
	• FB contactor 8.1 must close.	
Converter and filter contactor		
operation with both Power	, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	•
Converters during Shut Down.	VCB must open.	
	Panto must lower.	chocked ox
	• Converter contactor 12.4 must open.	7
	• FB contactor 8.1 must open.	
	• FB contactors 8.41 must close.	
, not	FB contactor 8.2 must remain closed.	
<u> </u>		

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.  • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open.  By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault • Message for earth fault • Message for earth fault • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.  Ensure correct date time and Loco number			1
circuit positive & negative  earth, create earth fault negative potential.  • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault  Test fire system. Create a smoke in the machine room near the FDU.  Watch for activation of alarm.  When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco		cut out switch. Wait for self-test of the loco.  • Check that FB contactor 8.1 is open.  • Check that FB contactor 8.2 is open.  After raising panto, closing VCB, and setting TE/BE  • FB contactor 8.1 closes.	pockaeted on
circuit positive & negative  earth, create earth fault negative potential.  • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault  Test fire system. Create a smoke in the machine room near the FDU.  Watch for activation of alarm.  When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco	Test earth fault detection battery	By connecting wire 2050 to	*
negative potential.  • message for earth fault  • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault  Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.  When smoke sensor-1 gets activated then  • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then  • A fault message priority 1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Firme, date & loco number  Ensure correct date time and Loco	· ·		<b>'</b>
• message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault  Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.  When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.		1	A
to earth, create earth fault positive potential.  • message for earth fault  Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.  When smoke sensor-1 gets activated then  • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then  • A fault message priority 1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.	,	, · · · · · · · · · · · · · · · · · · ·	
to earth, create earth fault positive potential.  • message for earth fault  Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.  When smoke sensor-1 gets activated then  • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then  • A fault message priority 1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.		1 .	cheeked on
fault positive potential.  • message for earth fault  Test fire system. Create a smoke in the machine room near the FDU.  Watch for activation of alarm.  When smoke sensor-1 gets activated then  • Alarm triggers and fault message priority 2 appears on screen.  When both smoke sensor 1+2 gets activated then  • A fault message priority 1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.			1
Test fire system. Create a smoke in the machine room near the FDU.  Watch for activation of alarm.  When smoke sensor-1 gets activated then  Alarm triggers and fault message priority 2 appears on screen.  When both smoke sensor 1+2 gets activated then  A fault message priority 1 appears on screen and lamp LSF1 glow.  Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Tensure correct date time and Loco		I see the second of the second	<b>V</b>
Test fire system. Create a smoke in the machine room near the FDU.  Watch for activation of alarm.  • Alarm triggers and fault message priority 2 appears on screen.  When both smoke sensor  1+2 gets activated then  • A fault message priority  1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.		I a contract the contract to t	
the machine room near the FDU.  Watch for activation of alarm.  • Alarm triggers and fault message priority 2 appears on screen.  When both smoke sensor 1+2 gets activated then  • A fault message priority 1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco			)
the machine room near the FDU.  Watch for activation of alarm.  • Alarm triggers and fault message priority 2 appears on screen.  When both smoke sensor 1+2 gets activated then  • A fault message priority 1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco	Test fire system. Create a smoke in	When smoke sensor-1 gets	<del>-</del>
message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco	the machine room near the FDU.	· · · · · · · · · · · · · · · · · · ·	
appears on screen. When both smoke sensor 1+2 gets activated then  • A fault message priority 1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco	Watch for activation of alarm.	Alarm triggers and fault	
1+2 gets activated then  • A fault message priority  1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco	, est	message priority 2	
1+2 gets activated then  • A fault message priority  1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco		, ,	2000-00
1+2 gets activated then  • A fault message priority  1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco	·	When both smoke sensor	Cheeter
1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco		1+2 gets activated then	ľ
lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco		A fault message priority	1.
lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.  Fime, date & loco number  Ensure correct date time and Loco		1 appears on screen and	
TE/BE becomes to 0.  Fime, date & loco number Ensure correct date time and Loco		1	
TE/BE becomes to 0.  Fime, date & loco number Ensure correct date time and Loco		Start/Running interlock occurs and	
9,		- '	Ų.
1 01	Time, date & loco number	Ensure correct date time and Loco	1
		number	عد

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

### 4.0 Sensor Test and Converter Test

### 4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.0476	Đιζ
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.04~0	O <sub>K</sub>
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	9420,01	OK
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0401	O'K.
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.84P 564PINS	<sup>©</sup> لا_
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	6.44 VEMS	Pv.

### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$ , $41.5V_{RMS}$ and opposite polarity.	58.7 Vp 1	ac
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15.500	DK.

11.0 VEIDO

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 2008

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

### **Primary Voltage Transformer**

Apply 250Veff/350Vp by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply 200V<sub>RMS</sub> through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25¥V	2507
SLG2 G 87-XUPrim	25 kV	250%	254V	230-11

Decrease the supply voltage below 140 V<sub>RMS</sub>. VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	, Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	170%
SLG2_G 87-XUPrim	17 kV	170%	1744	17011

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV *	300%	30KV	3007
SLG2_G 87-XUPrim	30 kV	300%	3047	3004

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Doc.No.F/ECS/01 Effective Date: Feb 2022 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

### 4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjus	ted to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V <sub>RMS</sub> through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	(Mes/No)
Try to activate the cab in driving mode:	) (V65/Na)
Contactor 218 do not close; the control	1170377007
electronics is not be working.	
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	•
working	
Test Under Voltage Protection	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no.	(Yes/No)
1501 & 1502; Decrease the supply voltage below	
$140V_{RMS} \pm 4V$ ;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transforme &1522 (including the resistor at Pos. 6.11); Put loco in simulatio on contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the open with maximum current relay Pos. 78 for correct over current value;	in for driving mode; Open R <sub>3</sub> – R <sub>4</sub> ire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	(Yes/No)
	<u></u>
Keep contact $R_3 - R_4$ of 136.3 closed; Close VCB; Tune the resist	or 78.1 for the current of 7.0A <sub>RMS</sub>
/9.9A <sub>p</sub> at the open wire 1521;	
VCB opens with Priority 1 fault message on display.	Yves/No)
	1

Effective Date: Feb 2022

Doc.No.F/ECS/01

(Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page : 14 of 27

### 4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	1
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		1
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298mg
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		(
**	Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		336mm
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		. (
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)	_	346mA
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NF	MA
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	PO PT	reA

Effective Date: Feb 2022

Doc.No.F/ECS/01

· (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4208

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

### 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	ou
Fibre optic failure in Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	. Or

### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4800

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

### Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	closs	opey	clos	opey	clos	open	class	clas	obey
BUR1 off	clos	open	clos	clos	open	clos	opcy	open	clo8
BUR2 off	open	open	cles	cles		clos	oper,	Spen	cles
BUR3 off	open	close	open	cles	cles	Clor	Open	Open	clos

### **5.0** Commissioning with High Voltage

### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yes
No rubbish in machine room, on the roof, under the loco.	No.
All the electronic Sub-D and connectors connected	Yey
All the MCBs of the HB1 & HB2 open.	79
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yos
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yay
All the bogie body connection and earthing connection done correctly.	Yey
Pulse generator (Pos. 94.1) connection done correctly.	Yej
All the oil cocks of the gate valve of the transformer in open condition.	Yey
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes .
KABA key interlocking system.	Ye.

### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4208

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheexed on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheeked ou
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	Choetel a
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	chelted a
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	Cheeked on
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Cheltedon
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	CROCKed on
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Cheekedon

Effective Date: Feb 2022

Doc.No.F/ECS/01

? (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

### 5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	8.8	14.0
Oil pump transformer 2	9.8 amps	8.9	15-0
Coolant pump 💞 converter 1	19.6 amps	5.8	13.2
Coolant pump converter 2	19.6 amps	6.3	11.9
Oil cooling blower unit 1	40.0 amps	44.5	78-0
Oil cooling blower unit 2	40.0 amps	42.9	87.0
Traction motor blower 1	34.0 amps	37.4	68.0
Traction motor blower 2	34.0 amps	36.5	70.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.2	19.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.2	19.1
Compressor 1	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	24.5	67.0
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	23 ~	62 0

Doc.No.F/ECS/01 (Ref: WI/ECS/10) Effective Date: Feb 2022

### PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42008 Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10011	Yey
BURI 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636 V	Yey
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	1 Amb	75

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10000	Ye,
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	(6)
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amp	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	218m	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	() Amb	رچ
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1104	40-

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10000	Yes
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	TAMA	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	2-1 Amp	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	1) Any	Ycs
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	le,

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

(Ref: WI/ECS/10)

### **✓ PATIALA LOCOMOTIVE WORKS, PATIALA**

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

### 5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery Charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.9	20.0
Machine room blower 2	15.0 amps*	5.3	19.0
Sc. Blower to MR blower 1	1.3 amps	<b>2</b> , 3	50
Sc. Blower to MR blower 2	1.3 amps	1.8	5-6
Ventilator cab heater 1	1.1 amps	2.2	3.4
Ventilator cab heater 2	1.1 amps	2.3	2.34
Cab heater 1	4.8 amps	5-0	5.2
Cab heater 2	4.8 amps	5.0	5.5

<sup>\*</sup> For indigenous MR blowers.

Effective Date: Feb 2022

Doc.No.F/ECS/01
2022 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

### 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

### 5.6 Traction Converter Commissioning

### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

### For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging	Traction converter manufacturer to declare the successful operation and demonstrate the same to the	cheeted on
of DC Link of Converter 1  Measurement of discharging of DC Link	PLW supervisor.  Traction converter manufacturer to declare the successful operation	Creeked on
of Converter 1	and demonstrate the same to the PLW supervisor.	
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	CReked on
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	c-Refed on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	CROCKED ON
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	c-Reference
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheered on

Effective Date: Feb 2022

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC Page : 22 of 27

### For Converter 2

Test Function	Results desired in sequence	Result obtained		
Measurement of	Traction converter manufacturer to declare the successful operation and	opered on		
charging and pre- charging and charging	demonstrate the same to the PLW			
	supervisor.	•		
2				
Measurement of	Traction converter manufacturer to	cheesed on		
discharging of DC Link	declare the successful operation and			
of Converter 2	demonstrate the same to the PLW			
Forth foult detection on	supervisor.  Traction converter manufacturer to	_		
	declare the successful operation and	cheeked on		
Link of Converter 2.	demonstrate the same to the PLW			
	supervisor.			
	Traction converter manufacturer to	Cheeked on		
	declare the successful operation and	Cheffer		
Link of Converter 2.	demonstrate the same to the supervisor/v			
Farth fault detection on	Traction converter manufacturer to			
AC part of the traction	declare the successful operation and	CROCKED OU		
circuit of Converter 2.	demonstrate the same to the PLW			
	supervisor.			
1 -	Traction converter manufacturer to	creeked un		
of Converter 2.	declare the successful operation and demonstrate the same to the PLW			
	supervisor.	•		
Pulsing of drive	Traction converter manufacturer to			
converter of	declare the successful operation	cheeked on		
Converter 2	and demonstrate the same to the			
13.5	PLW supervisor.			
Ì				

Effective Date: Feb 2022

Doc.No.F/ECS/01

# ?22 (Ref: WI/ECS/10) PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on DDU appears  Disturbance in Converter 1	p crocked on
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on diagnostic display appears  Disturbance in Converter 2	o atelied

### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	Cheeked on

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>

IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42208

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	· .	
•3*	<ul> <li>FB contactor 8.2 must close.</li> <li>FB contactor 8.1 must close</li> <li>Check the filter current in diagnostic laptop</li> <li>Bring the TE/BE throttle to O</li> <li>Switch off the VCB</li> <li>FB contactor 8.1 must open.</li> <li>FB discharging contactor 8.41 must close</li> <li>Check the filter current in diagnostic laptop</li> </ul>	o cheeked on
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit	- cheeked ioa
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	9r

### **5.9** Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	Chelted on
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheekeed &
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	chocked on
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Cheked ou
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	checked of

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	chocked on chocked on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Aceked a
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	1
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	cheeked in
Illuminated Push button	All illuminated push buttons should glow during the operation	cheeredu
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:
10 <sup>4</sup>	The minimum flow of air of cab fan should be 25 m <sup>3</sup> /minute	

### 6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	cexed &
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	Locked
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	kocrel
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75</li> <li>Kg/cm², by pressing BPCS again.</li> </ul>	Koekel Su
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	perd

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .
	locomotive	For 60 seconds do not press vigilance foot switch or
		sanding foots switch or TE/BE throttle or BPVG
-		switch then
		D <sup>0</sup> and a state of the sector
		LSVW should glow continuously.      LSVW should glow continuously.
,		Do not acknowledge the alarm through BPVG or
	*5**	vigilance foot switch further for 8 seconds then:-
		Emergency brake should be applied
		automatically.
. ]		VCB should be switched off.
		Resetting of this penalty brake is possible only after
		32 seconds by bringing TE/BE throttle to 0 and
		acknowledge BPVR and press & release vigilance
		foot switch.
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).  • With park brake in applied condition
		• With park brake in applied condition.
		• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).
		• With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).
		• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).
8.	Check traction interlock	Switch of the brake electronics. The
		Tractive / Braking effort should ramp down, VCB
		should open and BP reduces rapidly.
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed Cocked ou
	braking.	should start reducing.
10.	Check for BUR	In the event of failure of one BUR, rest of the two
	redundancy test at	BURS can take the load of all the auxiliaries. For this switch off one BUR
	ventilation level 1 & 3 of	SWICE OF THE BOTT
	loco operation	Auxiliaries should be catered by rest of two BURs.
		Switch off the 2 BURs; loco should trip in this case.
11.	Check the power	Create disturbance in power converter by switching
	converter	off the electronics. VCB should open and converter
	isolation test	should get isolated and traction is possible with
		another power converter.

Effective Date: Feb 2022

b 2022 (Ref: WI/ECS/10)

### PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42008

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

Doc.No.F/ECS/01

### 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	00	ON (	
2	Marker Red	Ou	al	
3 -	Marker White	.ov	ax	
4	Cab Lights	SV-	SX.	
5	Dr Spot Light	DC.	S. S.	
6	Asst Dr Spot Light	20_	عر	Checkel working on
7	Flasher Light	00	De_	<b>V</b>
8	Instrument Lights	OU	3(	
9	Corridor Light	Du_	- OIL	
10	Cab Fans	OL	au	
11	Cab Heater/Blowers	OK	ac	
12	All Cab Signal Lamps Panel 'A'	· ac	On	

### Status of RDSO modifications

LOCO NO: 4200 B

Sn	Modification No.	Description	Remarks
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	Øk/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Ok/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Qk/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Ok/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Ok/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Qk/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	QK/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Øk/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Øk/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Øk/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Qk/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	QK/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	QK/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Ok/Not Ok

Signature of JE/SSE/ECS

Loco No.: 42008

### PLW/PATIALA

### PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: M/s Faiveley			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	55 sec
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.5 Kg/cm2
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.45 Kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.45 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co		
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.10 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.	:\ 7 \ A	C : 0.45
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 45
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-29 Sec
	compressors, Check pressure build time of individual		, ,	
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-29 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.45 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.6 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10 Kg/cm2
		MM3882 &	kg/cm2, Closes	
		MM3946	at 8±0.2kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.45 minute

### PLW/PATIALA

Loco No.: 42008

2.7	Check unloader val	ve operation time				Approx. 12 Sec.	11 sec
2.8		alve functioning (12	4 & 87)			Operates when	ok
		0.	•			Compressor	
						starts	
2.9	Check CP-I delivery	safety valve setting	(10/1). Run CP	D&M t	est spec.	11.50±0.35	11.6 Kg/cm2
	Direct by BLCP.			MM3882	& MM3946	kg/cm2	
2.10	Check CP-2 delivery safety valve setting (10/2). Run CP		D&M t	est spec.	11.50±0.35	11.5 Kg/cm2	
	direct by BLCP			MM3882	& MM3946	kg/cm2	
2.11	Switch 'OFF' the co	•	•	D&M t	est spec.		
	valve to reset at pro	essure 1.2 kg/cm2 le	ess than opening	MM3882	& MM3946		
	pressure.						
2.12		n 'OFF' compressor,			ck sheet no.	5.0±0.10kg/cm2	5.0 Kg/cm2
	II	Main Reservoir, Sta		F60.812 Ve	ersion 2		
		ure of Duplex Check	Valve 92F.				
2.13	FP pressure:		O ! l		k sheet no.	6.0±0.20kg/cm2	6.05
		est point 107F FPTP.	Open isolate cock	F60.812 Ve	ersion 2		Kg/cm2
3.0	136F. Check pressu						
3.1	Air Dryer Operati	of 2 <sup>nd</sup> MR to start (	Communication leaves			Tayyor ta shanga	alı
3.1	1 -		•			Tower to change every minute	ok
3.2	open for Test Check Air Dryer Towers to change.  Check Purge Air Stops from Air Dryer at Compressor stops					every minute	
3.3	Check condition of humidity indicator					Blue	Blue
4.0	Main Reservoir Leakage Test					Bide	Bide
4.1	Put Auto Brake (A-9) in full service, Check MR Pressure air			D&M t	est spec.	Should be less	0.4 Kg/cm2
	leakage from both	•	on min i ressure un		& MM3946	than 1 kg/cm2 in	in 15
	reality is the second s					15 minutes	minutes
4.2	Check BP Air leakag	ge (isolate BP chargi	ng cock-70)	D&M t	est spec.	0.15 kg/cm2 in 5	0.04
				MM3882 & MM3946 mir		minutes	Kg/cm2 in 5
							minutes
5.0	Brake Test (Auto	matic Brake opera	ntion)				
5.1	Record Brake Pipe 8	& Brake Cylinder pro	essure at Each Step				
	Chack propertional	ity of Auto Brake sy	ct a ma	CLW/c cho	ak shaat na		
	Check proportional	ity of Auto brake sy	stem	CLW's check sheet no. F60.812 Version 2			
				100.012	VEISION 2		
	Auto controller	BP Pressure kg/cn	12	BC (WAG-9	) & WAP-7)	BC (WAP-5)	
	position	2		Kg/cm2	,	Kg/cm2	
		Value	Result	J	Result	Value	Result
		Value	Result	Value	Result	value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
	Full service	3.35±0.2	3.4 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	_
	Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	1	1		1	1	1	

### PLW/PATIALA

Loco No.: 42008

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure Automatic Brake Controller handle is Full Service from Run	D&M test spec. MM3882 & MM3946	8±2 sec.	8 Sec
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 2.5 kg/cm2	ОК
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2 Opens at BP 2.85- 3.15 kg/cm2	4.30 Kg/cm2 3.05 Kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC $5.15 \pm 0.3$ kg/cm2 apply time WAP7 - BC $2.50 \pm 0.1$ kg/cm2 WAG9 - BC $2.50 \pm 0.1$ kg/cm2	D&M test spec. MM3882 & MM3946	4±1 sec. 7.5±1.5 sec. 21±3 sec.	21 Sec.
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAP7 WAG9	D&M test spec. MM3882 & MM3946	17.5±25 sec. <b>52±7.5 sec</b> .	56 sec.
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	77 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake.  * Allow The MR pressure to build up to maximum stipulated limit.  * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A-9 (Automatic brake controlling) at run position.  * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe.  The test shall be carried out with all the compressors in working condition.	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.5 Kg/cm2
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.6 Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (Max.)	8 Sec

### **PLW/PATIALA**

Loco No.: 42008

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	14 Sec
7.0	Modified System Software (only for CCB)		-NA-	-NA-
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled	_	Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is 12 kg/sqcm causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok



Signature of SSE/Shop

		i	ROOF COME	PONENT CAB 1 & 2		Warranty
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.	
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, CONTRANSYS	A25-0849/JAN-2025, 15401-10/24	
2	Servo motor	29880026	2	CONTRANSYS	15274-09/24	
3	Air Intake filter Assly	29480103	2	PARKER	O/C 1651P/A/01 (PLW) 09/24, O/C 1673P/A/01 (PLW) 10/24	
4	Insulator Panto Mtg.	29810127	8	IEC	08-24, 08-24	
		-	MIDDLE RC	OF COMPONENT		
5	High Voltage Bushing	29731021	1	ELECTRANEX	EIPL-5814-11-24	
6	Voltage Transformer	29695028	1	CG POWER & INDUSTRIAL	243328-18/09/2024	
7	Vacuum Circuit Breaker	25712202	1	AUTOMETERS	AALN/10/2024/020/VCBA/728	
8	Insulator Roof line	29810139	9	MIL	05-2024, 06-2024, 07-2024	
9	Harmonic Filter	29650033	1	ELECOS ENGINEERING	EEPL/HF/1584	AS Per PO/IRS Conditions
10	Earth Switch	29700073	1	AUTOMETERS	AALN/10/2024/026/ES/473	
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	57730-2024, 57733-2024	
			Air Bı	rake Components		
12	Air Compressor (A,B)	29511008	2	ELGI	EXGS 923666 A, EXGS 923683 B	
13	Air Dryer	29162051	1	KNORR	E24 J 0590	
14	Babby compressor	25513000	1	ELGI	BXFS 109 384	
15	Air Brake Panel	29180016	1	FAIVELEY	OCT-23-57-WAG 9-3196	
16	Contoller (A,B)	29180016	2	FAIVELEY	N 24-003 A, N 24-040 B	
17	Breakup Valve	29180016	2	FAIVELEY		
18	wiper motor	29162026	4	Auto Industry		

SAMSHER SINGH BIST

Digitally signed by SAMSHER SINGH BIST Date: 2025.02.18 15:42:41 +05'30'

SSE/ABS

# PLW/PTA

# ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 42008 LIST OF ITEMS FITTED BY ECS

RLY: WCR

SHED: NKJ

PROPULSION SYSTEM: ALSTOM

	)C/02/1312	24K/RMPU/DC/02/1312	29811028	18 Root mounted Air Conditioner II	1_
DAULAI RAM	00/02/1313	24K/KMF0/DC/02/1010			
	C/03/1315			17 Transformer Oil Temperature Sensor (Cab-2)	7
5 6 8 W	TFP/8934 Aug-24	BG/TFP/893	29500035	16 (Temperature Sensor Oil Circuit Transformer)	_
BG INDUSTRIES	TFP/8808 Aug-24	BG/TFP/880		Transformer Oil Temperature Sensor (Cab-1)	1-
	BG/Po/odod Nov-27	BG/PS/3047 Nov-24			_
BG INDUSTRIES	DOI: 0.2000 Nov-24	BG/PS/3042 NOV-24	29500047	Transformer Oil Pressure Sensor (Cab-1)  14 (Cab-1)	7
	BG/PS/2390 Aug-24		29600420	13 Set of Harnessed Cable Complete	1
QUADRANI			7900000	12 Battery (Ni- Cd)	12
HBL		B-16	2000000	11 Speed Ind.& Rec. System	11
NEO. S.	001	5328/6001	29200040		10
MEDHA	2/3//01/23	2743/01/25	29178162		
CG	222/04/25	K17463	29178265		0
KONTACT	. KT1618	34400	291/0539		$\infty$
KEPCO/ALSTOM	3602	3501	20170702	Complete Panel A Cab I & II	7
KONTACT	KT1617	KT1622	200470065		0
		401	29860015		5
AAL		421	10000		4
IVI	40/5819	5640/5685/5840/5819	20470080	-	w
MTI		3318	29170011	+	1
KKI	3347	10000	29612925		S
MATSUSHI P. TECH	2893/142983	143528/142969/142893/142983	29612937	LED Based Flasher Light Cab I & II	_
POWER TECH	4971	4937	DOG 12027	DESCRIPTION OF ITEM	NS
NO.	B-1/CAB-2	ITEM SR. NO CAB-1/CAB-2			

SSE/ECS

JE/ECS 129, 11-12

		ATIALA LOCOMOTIVE OCO NO- 42008/WAG				
S.No.	Equipment	PL No.		t Serial No.	N	lake
1	Complete Shell Assembly with piping	29171027		, 01/25		CBT
2	Side Buffer Assly Both Side Cab I	*	not visible, 09/24	322, 04/24	AEU	AEU
3	Side Buffer Assly Both Side Cab II	29130050	not visible, 09/24	82, 08/24	AEU	AEU
4	CBC Cab I & II	29130037	258, 10/24	202, 10/24	FASP	FASP
5	Hand Brake		12/24 - 1094		Rising Engg Concern	
6	Set of Secondry Helical Spring	29045034 29041041				ONTIER
7	Battery Boxes (both side)	29680013	12, 11/24	09, 11/24	BHARTIA BRIGHT	BHARTIA BRIGH
8	Traction Bar Bogie I		8646,	09/24		KM
9	Traction Bar Bogie II		8717,	12/24		KM
10	Centre Pivot Housing in Shell Bogie I side	20100057	302,	12/24	, A	ANIL
11	Centre Pivot Housing in Shell Bogie II side	29100057	285,	12/24	, A	ANIL
12	Elastic Ring in Front in Shell Bogie I side		1475,	11/24	A	/ADH
13	Elastic Ring in Front in Shell Bogie II side	29100010	not give	n, 10/24	A	/ADH
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7		IL11500/44, 2025		CG
15	Oil Cooling Radiator I	20470024	11/24, P11	24RC2430	FINE AUTO	DMOTIVE LTD
16	Oil Cooling Radiator II	29470031	11/24, P11	24RC2358	FINE AUTO	MOTIVE LTD
17	Main Compressor I with Motor	20544000	EXGS923683, 10/24 .		E	LGi
18	Main Compressor II with Motor	29511008	EXGS923666, 10/24		E	LGi
19	Transformer Oil Cooling Pump I		2408130	03, 08/23	FLO	WWELL (
20	Transformer Oil Cooling Pump II		2408130	02, 08/23	FLO	WWELL
21	Oil Cooling Blower OCB I		10/24, 32410376	37, 32410AF3767	SAINI ELECT	RICAL PVT LTD
22	Oil Cooling Blower OCB II	29470043		, LHP1001553767	A	CCEL
23	TM Blower I		12/24 , AC-61045	, CGLXKAM23161	AC	CCEL .
24	TM Blower II	29440075	12/24, AC-61065,	CGLAXKAM23156	AC	CCEL
25	Machine Room Blower I		12/24. D42/582	6, MF42/D5873	SAMAL HAF	RAND PVT LTD
26	Machine Room Blower II	29440105	09/24, AC-57508,	CGLXFAM10463	AC	CCEL
27	Machine Room Scavenging Blower I		11/24, CF25/D	7208, D25-6836	SAMAL HAF	RAND PVT LTD
28	Machine Room Scavenging Blower II	29440129		7208 D25-6836	SAMAL HAF	RAND PVT LTD
29	TM Scavenging Blower Motor I			-24.10.187	GTR CO	O PVT LTD
30	TM Scavenging Blower Motor II	29440117		-24.10.174	GTR CC	) PVT LTD
31	Traction Convertor I			ROPULSIONA/4123		
32	Traction Convertor II			ROPULSIONA/4124		
33	Vehicle Control Unit I		ATIL/11/2024/02/PI	ROPULSIONA/4123		
34	Vehicle Control Unit II	29741075	ATIL/11/2024/02/PI	ROPULSIONA/4124		BTIL
35	Aux. Converter Box I (BUR 1)		12/24, 2024M/1	0303/13A/1214		
36	Aux. Converter Box 2 (BUR 2 + 3)			0303/13B/1214		
37	Axillary Control Cubical HB-1	29171180	10/24, SLHB	10022410368	STES	ALIT LTD
38	Axillary Control Cubical HB-2	29171192		024/01/HB2G9/032	AUTOMERTS	ALLIANCE PVT
39	Complete Control Cubicle SB-1	29171209		B1/24110910 .	(	CGL
40	Complete Control Cubicle SB-2	29171210		24/J/0225/1290	HIND RE	CTIFRS LTD
41	Filter Cubical (FB) (COMPLETE FILTER CUBICLES)	29480140		00012410162		ALIT LTD
42	Driver Seats	29171131	1/25- 80.	21, 09, 04	J.P	SEATS
43	Transformer oil steel pipes	29230044		T PIPES		200
44	Conservator Tank Breather	29731057		24-2710	YOGYA ENE	TRPRISES LTD
45	Ballast Assembly ( only for WAG-9)	29170163		7,88,69		GFT
46	Head Light	25170103		0170	FNSA	
47	Ducting Assembly	29470067	01.91	-110	F7 3/K	

NAME SHURHAM SHAPAM SSE/LAS

NAME TO THE PARTY IF/LAS/UF

NAME ALIKIT WHAC

Issue No. : 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

### पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 42008 Rly: WC

Shed: NKJE

S. No.	ITEM TO BE CHECKED	Specified Value	0	bserved Va	lue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK	-	- N/ N	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.  TM scavenging blower 1 & 2 & Oil Cooling unit.	ОК		0/2	
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		UL.	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		1/2	
1.5	Check proper Fitment of FB panel on its position.	OK		812	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		0/2	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		0/2	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		Q2	
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		0/2	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		CIL	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		OR	
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		0/2	
1.13	Check proper fitment of Cow catcher.	OK		0/2	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		012	1
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		0/2	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		UP	
1.17	Check proper fitment of both battery box.	OK		UK	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		OL	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK ·		OIL	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAE	3-1	CAB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP LP	ALP
		:35-60 mm	54	5146	
		Lateral Otal			-1-3
		Lateral Std- 45-50 mm	52	35 5	2 56
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	R/S
	Drg No IB031-02002.	mm	FRONT	1098	
			2 3 3 5 6 7 5 5		1099
			REAR	1098	1100
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/S	R/S
	Drg No-SK.DL-3430.		FRONT	650	645
			REAR	646	649
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	112	116
			REAR		
1.51	ODO 11 1 1 4 D	4000 - 47		116	119
1.24	CBC Height: Range (1090, +15,-5)	1090, +15	FRONT:		
	Drg No- IB031-02002.	-5 mm	REAR:	1095	

(Signature of SSE/Elect. Loco )

NAME SHURMAN SHAPMA

DATE 25/01/25

(Signature of /JE/Elect Loco)

NAME Payada IN- MEONY

DATE 25/01/25

(Signature of JE/UF)

NAME ANKIT UPPAL

DATE 25/01/25

### **Loco No.** 42008

### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-02	BK	29101104	771911	As per PO/IRS
REAR	SL-16/22	TACPL	29101104	102223	conditions

### 2. Hydraulic Dampers (PL No.29040012) Make: G.B. / G.B.

### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27911	27952	28017	28002	27793	28050
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

### 4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC24-3860	CNC24-3909	CNC24-3952	CNC24-3955	CNC24-3875	CNC25-72
Make	D.P.	IMPORTED	IMPORTED	IMPORTED	D.P.	IMPORTED
FREE END	CNC24-3857	CNC24-3915	CNC25-59	CNC25-0160	CNC24-3832	CNC25-51
Make	D.P.	IMPORTED	IMPORTED	IMPORTED	D.P.	IMPORTED
Bull Gear No.	17061	23-M-912	23-L-9114	24-D-0964	17107	24-D-1284
Bull Gear Make	GGAG	KPCL	KPCL	KPCL	GGAG	KPCL

### 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	02312	02312	02312	02312	02312	02312
Free	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	02312	02312	02312	02312	02312	02312

### 6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	96 T	906 KN	83 T	94 T	97 T	96 T
FREE END	100 T	797 KN	102 T	101 T	88 T	89 T

### Loco No. 42008

### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + .5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	IN	PITTI	KPE	KPE	IN	KPE
GE Brg. PL 29030110	MAKE	SKF	NBC	NBC	NBC	NBC	NBC
FE Brg. PL 29030110	MAKE	SKF	NBC	NBC	NBC	NBC	NBC

### 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	EEE	EEE	EEE	EEE	KM	EEE
BACKLASH (0.254 – 0.458mm)	0.310	0.350	0.300	0.290	0.290	0.310

### 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	17.30	17.10	16.02	16.42	16.32	15.95
LEFT SIDE	16.23	17.71	16.06	17.71	17.71	16.51

### 11. TRACTION MOTOR: (PL No.29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & Date	S. NO.
1	CGP	102027	2232006-7760
2	CGP	102027	2232006-7757
3	CGP	102027	2242001-7713
4	CGP	102027	2242001-7718
5	CGP	102027	2232006-7751
6	CGP	102027	2232006-7761

JE/SSE/ Bogie Shop

### TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646  ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



### भारत सरकार GOVERNMENT OF INDIA

रेल मंत्राल्य

### MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना
PATIALA LOCOMOTIVE WORKS

### फैक्स/Fax No.: 0175-2397244 फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310 पटियाला, 147003, भारत् PATIALA, 147003, INDIA

Email: dyceeloco.dmw@gmail.com



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, New Katni jn.

Email: srdeetrsnkj@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 42008 WAG9-HC.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023.

In ref. to the above letter's Loco No. 42008 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/NKJ/WCR on 13.02.2025. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed by NISHANT BANSIWAL Date: 2025.03.21

(निशांत बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

### पतिलिपि'-

CEE/Loco & CEE/D&Q, CMM, CELE/WCR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

## Loco No. 42008

SN.	PL No.	Description of item	Qty.
	telende (al-legal pallet)	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP	01 no.
	29611994	BRASS FITTINGS  MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS	03 nos
i		FITTINGS  FEMALE TEE 3/8" BSPP – BRASS	06 nos
2		HEX PLUG -3/8" BSPT – BRASS	02 nos
		FEMALE TEE 1/2" BSPP – BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos
		HEX PLUG – 1/2" BSPT – BRASS	04 nos
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS	02 nos
3	29170114	FITTINGS  Copper Tube OD 9.52mm (3/8" ) X 1.245 Mm W.T X 6 Mtr	1.2Mtr

AWMARS & LFS

SSE/G/ABS

SN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.		WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.		One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.		80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	-	DIN Rail fitted inside the driver desk (LP Side)	02 nos.

AWMIABS & LFS

SSE/G/LFS

### Annexure-C

SN	PL No.	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm <sup>2</sup> provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	**	Harness provided from KAVACH SB to SB-1	07 wires
5.	<del></del>	Harness provided from KAVACH SB to SB-2	05 wires
6.	-	Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	-	Harness provided from KAVACH SB to CAB-1	& wires
8.	<del>-</del> .	Harness provided from KAVACH SB to CAB-2	16 wires

AWMIECS

SSEIGIECS