
भारतीय रेल Indian Railways

पटियाला रेलइंजन कारखाना, पटियाला

PATIALA LOCOMOTIVE WORKS, PATIALA

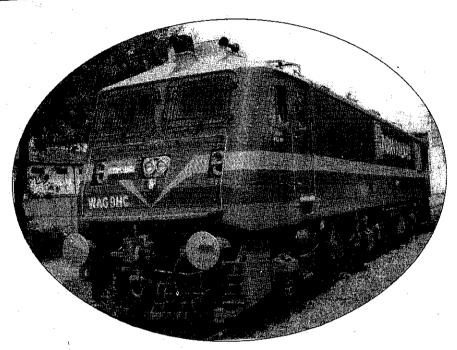

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

TYPE:

RAILWAY SHED:

PROPULSION SYSTEM:

DATE OF DISPATCH:

41989

WAG9HC

ECOR/WATE

ALSTOM

28.12.2024

लोको निर्माण रिकार्ड



पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 41989

RAILWAY/SHED: ECOR/WATE

DOD: DEC-2024

INDEX

			PAGE NO.
	DADA	ACTIVITIES (ECS)	
N	PARA	Testing & Commissioning (ECS)	
		t the pobles	
1.	1.0		1-4
.]	1.1		Ì
	1.2	Continuity Test of Battery Circuit Cables Continuity Test of Battery Circuit Cables Control Circuit Cables	
	1.3	Continuity Test of Battery Circuit Cables Continuity Test of Screened Control Circuit Cables	
	14	Transien toer	5-6
2.	2.0	Low Tension test Measurement of resistor in OHMS (Ω)	1 5-0
	2.1	Measurement of roots and the desired of the desired	·
	2.2	Check Points Low Tension Test Battery Circuits (without control electronics)	
	2.3	Downloading of Software	
3	3.0	Check Points	7-10
	3.1	Download Software	
	3.2	A - Law Signal Checking	*
	3.3	Functional test in simulation mode	
	3.4	FullCitorial test in order	
4	4.0	Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring Transformer 1000V/415V-110V (pos. 67)	
'	4.1	Test wiring Transformer Circuits – Polarity 1631 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.2	Test wiring auxiliary transformer roots to	
	4.3	↑ Drimary Voltage Halistonner	11-16
	4.4	Minimum voltage relay (Pos. 86)	
1	4.5	Maximum current relay (Pos. 78)	1
1	4.6	Test current sensors	'
	4.7	Test Current School Test DC Link Voltage Sensors (Pos 15.6/*) Verification of Converter Protection Circuits (Hardware limits)	
	4.8	Verification of Convener Protection Should be a section of Convener	
	4.9	Sequence of BUR contactors	
5.		Commissioning with High Voltage	1
	5.1	Check List Safety test main circuit breaker	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
ŀ	5.2	Auxiliary Converter Commissioning	Ì
	5.3		
1	5.3.1	Deutermana of Auvillan/ Conveners	16-25
1	5.3.2		70-20
1	5.3.3	Auxiliary circuit 415/110	
l	5.4	Hotel Load Circuit	
	5.5	Traction Converter Commissioning	
	5.6	1 - 1 1 1 - nhutdown SH	
	5.7	Test Harmonic Filter	
	5.8 5.9	1	25-26
<u> </u>		The contract of the lecometric	. 27
	6. 6.0 7. 7.0		28
l —			29 - 32
· -	8. 8.0		33
	9. 1-1	Loco Check Sheet(LAS)	34-36
	10.	- Lucation (LAS ECS ABS)	37 - 38
	11.	Component History & Testing Parameter (Bogie Shop)	37 - 36
1 1	12. <u> </u>	Warranty Conditions as per Tenders	J9 -41

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989-ALSTOM

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

00V megger. From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OR:	100 ΜΩ	80000
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	oK	100 ΜΩ	700 Ma
Filter Cubicle	Earthing Choke	OK	100 ΜΩ	800 M.
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	250mg
Transformer	Power Converter 1	OK	100 ΜΩ	80000
Transformer	Power Converter 2	ok	100 ΜΩ	200 Mg
Power Converter 1	TM1, TM2, TM3	oK	100 ΜΩ	800M9
Power Converter 2	TM4, TM5, TM6	oK	100 ΜΩ	200000
Earth	Power Converter 1	oK	100 ΜΩ	600 ma
Earth	Power Converter 2	OK	100 MΩ	900 ms

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
		OK	100 ΜΩ	800 M/L
Transformer	BUR1	OK	100 ΜΩ	800 ma
Transformer	BUR2	OK_	100 MΩ	900 MS
Transformer	BUR3	OK	100 ΜΩ	800 MM
Earth	BUR1		100 MΩ	700 MS
Earth	BUR2	OK	100 MΩ	600 M.N
Earth	BUR3	1 OK	100 MΩ	500 MM
BUR1	HB1	OK	100 ΜΩ	gooms
BUR2	HB2	OK	100 ΜΩ	800 MM
HB1	HB2	1 OK	100 MΩ	100
HB1	TM Blower 1	OK		700 100
HB1	TM Scavenge Blower 1	OK_	100 ΜΩ	600 MV
HB1	Oil Cooling Unit 1	OK	100 ΜΩ	500 MM
HB1	Compressor 1	OK	100 MΩ	900 MV
HB1	TFP Oil Pump 1	OK	100 ΜΩ	700 M. N
HB1	Converter Coolant Pump 1	OK	100 ΜΩ	800 MS
HB1	MR Blower 1	OK_	100 M Ω	700 MU
HB1	MR Scavenge Blower 1	O.K	100 ΜΩ	600 MJ
HB1	Cab1	01	100 ΜΩ	500 MJ
Cab1	Cab Heater 1	OK	100 ΜΩ	600 MJ
HB2	TM Blower 2	OK	100 ΜΩ	700 My
HB2	TM Scavenge Blower 2	OK_	100 ΜΩ	300 MJ
HB2	Oil Cooling Unit 2	OK	100 ΜΩ	800 MU
HB2	Compressor 2	OK	100 MΩ	700 MJ
HB2	TFP Oil Pump 2	OK	100 ΜΩ	600 MU
HB2	Converter Coolant Pump 2		100 ΜΩ	300 MU
HB2	MR Blower 2	OK	100 MΩ	900 M
HB2	MR Scavenge Blower 2	OK_	100 ΜΩ	800 MU
HB2	Cab2	OK	100 MΩ	700 Mi
Cab2	Cab Heater 2	OK	100 ΜΩ	600 MJ

e JE/SSE/Loco Testing Signature of the

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989 1.3 Continuity Test of Battery Circuit Cables Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

continuity of following ca	To	Condition	Continuity (OK/Not OK)
Battery (wire no 2093) MCB 110	Circuit breakers 110- 2, 112.1-1, 310.4-1 Connector 50.X7-1	By opening and closing MCB 112 By opening and closing MCB 110	ok ok
Battery (Wire no. 2052) SB2 (Wire no 2050)	Connector 50.X7-2 Connector 50.X7-3		ok ok

Close the MCB 112, 110, 112.1, and 310.4 and measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	Prescribed value $> 0.5 \ M\Omega$	Measured ValueMΩ
Measure the resistance between 2093 & 2052,	Prescribed value:	Measured
2093 & 2050, 2052 & 2050	> 50 MΩ	Value 60 M Ω

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
04B	o/s
10A	C3/6
10A	ok
01A, 12A	ole
06F, 06G	ok
	Sheet Nos. 04B 10A 10A 01A, 12A

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC Page : 4 of 27

Naster controller cab-1 &2	08C, 08D	0 k
E/BE meter bogie-1 & 2	08E, 08F	Ols
erminal fault indication cab-1 & 2	09F	OK
Brake pipe pressure actual BE electric	06H	O.V.
	12B, 12F	CK
Primary current sensors	12B, 12F	ak .
larmonic filter current sensors	12B, 12F	ok
Auxiliary current sensors Oil circuit transformer bogie 1	12E, 12l	OK-
	12C, 12G	GK
Magnetization current Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	0K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	Ole
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	ok.
Traction motor speed sensors (2 nos.)	12H	ok
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	010
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing	13A	
resistance= 10K Ω ± ± 10%)		ok
UIC line	13B	ok
Connection FLG1-Box TB	13A	oK

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
gad resistor for primary voltage	3.9K Ω ± 10%	3.9452
transformer (Pos. 74.2).	1Ω ± 10%	152
Resister to maximum current relay.	3.3 Ω ± 10%	3.35
Load resistor for primary current		<u> </u>
transformer (Pos. 6.11).	WAP7	WAP7
Resistance harmonic filter (Pos 8.3). Variation		
allowed ± 10%	0.2 Ω	0.20
Between wire 5 & 6 Between wire 6 & 7	0.2 Ω	0.22
	0.4 Ω	0.452
Between wire 5 & 7	10 kΩ± 10%	988K2
For train bus, line U13A to earthing.	10 kΩ ± 10%	10.0Kg
For train bus, line U13B to earthing.	200 ΜΩ	300M
Insulation resistance of High Voltage Cable from the top of the roof to the earth		
(by1000 V megger).		
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.31
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.285
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.285
Earthing resistance (earth fault detection) Harmonic Filter -1; Pos. 8.61.	2.2 kΩ± 10%	2.2KZ
Earthing resistance (earth fault detection). Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	2.7K2
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3-9Kr
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kΩ± 10%	1.8102
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	3905
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 kΩ± 10%	re A
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	1000

PATIALA LOCOMOTIVE WORKS, PATIALA

(Ref: WI/ECS/10)

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

	Remarks
Items to be checked	
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cherkes ok
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	checkes or

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Para 3.6 of the document no. 3 EHX 6 Name of the test	Schematic used.	Remarks .
Test 24V supply	Sheet 04F and other linked sheets	MECKED OR
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	ck
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	ok
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	3K
Test control Pneumatic devices	Sheets of Group 06	g k
Test lighting control	Sheets of Group 07	O/e
Pretest speedometer	Sheets of Group 10	o _k
Pretest vigilance control and fire system	Sheets of Group 11	ok
Power supply train bus	Sheets of Group 13	OK

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/989
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

	Yes/No
3.1 Check Points.	
3.1 Check Points. Check that all the cards are physically present in the bus stations and all the plugs are connected.	YC3
Check that all the fibre optic cables are correctly connected to the bus stations.	40)
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

propulsion equipment to be ensured and noted:	
Traction converter-1 software version:	1.0.6.4
Traction converter-2 software version:	1.0.6.4
Auxiliary converter-1 software version:	1,0,0,8
Auxiliary converter-2 software version:	2.0.0.8
Auxiliary converter-3 software version:	3.0.0.8
Vehicle control unit -1 software version:	.6.0.0:14
Vehicle control unit -2 software version:	6.0.0.14
100000000000000000000000000000000000000	

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	g analogue signals with the help of diag Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	014
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	ou
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	10%,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100%
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	2-59.

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC

Page : 8 of 27

· Si			
TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	100)
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	28,
TE/BE at '1/3' position in TE and BE mode in both cab.	****** A MO 0101	Between 42 and 44%	441.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1400
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1300
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14° =
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13.50

S

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

Functional test in simulation mode 3.4

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	Checkesci
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	checkelor
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	checked Gk
Converter and filter contacto operation with both Powe Converters during Shut Down.	 Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed 	Gle

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

	·	
isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco. • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open.	enecked or
Test earth fault detection battery circuit positive & negative	By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault	checkes
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then • Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then • A fault message priority 1 appears on screen and lamp LSF1 glow. • Start/Running interlock occurs and TE/BE becomes to 0.	Chec ked ok
Time, date & loco number	Ensure correct date time and Loco number	Ok:

Effective Date: Feb 2022

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/988

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

(Ref: WI/ECS/10)

Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

e of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.0521	٥٧.
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A-814A	10.05V _p and same polarity	10.0418	
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B-804B	10.05V _p and same polarity	10.05VR	OV.
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.0518	<i>ع</i> يد
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.8UP S.SUPMS	OK
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.101P	on

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.	58,74P 415VENS	OK
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.5 VP	مر
		11.0V2015	

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/980

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

Primary Voltage Transformer 4.3

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	95KV	950 Y.
SLG2 G 87-XUPrim	25 kV	250%	25KV	250 Y.

Decrease the supply voltage below 140 V_{RMS}. VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	17kV	170%	17KV	170 X
SLG2 G 87-XUPrim	17 kV	170%	17KV	170 X

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV	300%	30KV	300 y.
SLG2 G 87-XUPrim	30 kV	300%	3015	300 %

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Minimum voltage relay (Pos. 86) must be adjusted	to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	(Yés/No)
=	(Yes/No)
Try to activate the cab in driving mode: Contactor 218 do not close; the control	
electronics is not be working.	(Yes/No)
Turn off the variac : Contactor 218 closes; the control electronics is be	<i>(yes),,</i>
working Test Under Voltage Protection;	
Test Officer Voltage 1 Total Street,	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V _{RMS} through variac to wire no. 1501 & 1502; Close the VCB; Interrupt the supply	
voltage The VCB goes off after 2 second time delay.	
Again supply 200V _{RMS} through variac to wire no. 1501 & 1502; Decrease the supply voltage below	(Yés/No)
140V _{RMS} ± 4V; Fine tune the minimum voltage relay so that VCB opens.	
4.5 Maximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transformer &1522 (including the resistor at Pos. 6.11); Put loco in simulation on contact 136.3; Close VCB; supply 3.6A _{RMS} at the open wire	for driving mode; Open $R_3 - R_4$

8.1522 (including the resistor at Pos. 6.11); Put loco in simulation for driving mode; Open R₃ – R₄ on contact 136.3; Close VCB; supply 3.6A_{RMS} at the open wire 1521; Tune the drum of the maximum current relay Pos. 78 for correct over current value;

VCB opens with Priority 1 fault message on display.

Keep contact R₃ – R₄ of 136.3 closed; Close VCB; Tune the resistor 78.1 for the current of 7.0A_{RMS} /9.9A_p at the open wire 1521;

VCB opens with Priority 1 fault message on display.

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors	Call a took	Prescribed value	Set/Measured
Name of the sensor	Description of the test	T Cocinoca Talia	value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		2-96m#
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-) Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		336mg
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/10 2 pin no. 7(+) & 8(-)		
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/10 2 pin no. 7(+) & 8(-)		347mA
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8(-)	• • • • • • • • • • • • • • • • • • • •	MA
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	MA

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	in the
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=) ex
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	SX.	ae
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	sic.	

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open.	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

PATIALA LOCOMOTIVE WORKS, PATIALA

(Ref: WI/ECS/10)

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41 989

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

				-0 (A	53/5	52.4/1	52 4/2	52.5/1	52.5/2
Status	52/1	52/2	52/3	52/4	52/5	32.4/1	32.772		
AI BUR OK	close	Den	Classe	gean	close	for	(lone		10
BUR1 off	Mara	000	1/1020	conso	dem	Clore	den	l -,	
BUR2 off	sen	nen	clerre	clase	Chise	MASE	de	-coler	Close
BUR3 off	der	Clase	alla	Mise	(108e	dose	de	gen	come

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	yes_
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Ves
Connection in all the traction motors done correctly.	408
All the bogie body connection and earthing connection done correctly.	Yas
Pulse generator (Pos. 94.1) connection done correctly.	198
All the oil cocks of the gate valve of the transformer in open condition.	YPS
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	403
KABA key interlocking system.	Yes

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.:4/9

Type of Locomotive: WAP-7/WAG-9HC Page: 17 of 27

yat ^{itt}			Monitored result
Name of the test	Description of the test	Expected result	
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	enceked or
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Cheeked or
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	Checkedok
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Checkedok
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	checked ok
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Checkesok
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Checkedok
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		checkesou

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/939

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.1	11.2
Oil pump transformer 2	9.8 amps	9.5	11.5
Coolant pump converter 1	19.6 amps	5.7	6.7
Coolant pump	19.6 amps	5-6	6.7
Oil cooling blower unit 1	40.0 amps	40.0	185.0.
Oil cooling blower unit 2	40.0 amps	39.3	175.0
Traction motor blower 1	34.0 amps	37.0	1750
Traction motor blower 2	34.0 amps	37.0	1650
Sc. Blower to Traction motor blower 1	6.0 amps	4.6	17.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.5	16.0
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28,0	120,0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	28.3	145.0

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

Description of the signal	Prescribed value	Monitored value	Limit (Yes/No)
Input voltage to BUR1	75% (10%=125V)	1002	Yey
	60% (10%=100V)	636	49
DC link current of BUR1	0% (10%=50A)	100%	Ya.
I	DC link voltage of BUR1	Input voltage to BUR1 75% (10%=125V) DC link voltage of BUR1 60% (10%=100V)	Input voltage to BUR1 75% (10%=125V) 1002 100 100 100 100 100 100 100 100 10

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10034	Yej
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637	(0)
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Am	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	2/Bm	Yey
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	11 Asop	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1100	78

Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by

commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1002	Yoy
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637V	Yey
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	JAmp	70)
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	2-1 Any	Ye,
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	1) Bros	Ye,
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	Te,

* Readings are dependent upon charging condition of the battery.

DOC.NO.F/EUS/VI (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/98?

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the

ion level 3 of the locomotive

auxiliaries at ve	ntilation leve1 3 of the lo	Comotive.	Loads in BUR3
Condition of	Loads on BUR1	Loads in BUR2	Loads III Bo.is
BURs		Tralli 400 TED oil	Compressor 1&2, Battery
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.4	180
Machine room blower 2	15.0 amps*	4.7	18.0
Sc. Blower to MR blower 1	1.3 amps	13	4.3
Sc. Blower to MR blower 2	1.3 amps	1.4	4,0
Ventilator cab heater 1	1.1 amps	1.2	1.8
Ventilator cab heater 2	1.1 amps	1.2	1.8
Cab heater 1	4.8 amps	4.9	5.0
Cab heater 2	4.8 amps	4.9	2.0

^{*} For indigenous MR blowers.

Effective Date: Feb 2022

DOC:NO.F/EGG/V (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41989

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1 Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkes on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked ok
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkedok
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkedok
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	especial ou
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ou
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok

Effective Date: Feb 2022

DOC:MO.F/ECS/01 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

For Converter 2	The second se	Result obtained
Test Function	Results desired in sequence	Nesuit obtaines
charging and pre- charging and charging of DC Link of Converter	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok
discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked ok
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Charles or
negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	checked ok
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked ox
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41 989

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shuldown. • VCB goes off • Priority 1 fault mesg. on DDU appears Disturbance in Converter 1	Checkedou
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shudown. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	t cheeked or

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	checked ok

DOC.NO.F/ECS/61

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:4/ 989

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop 	· .
	Bring the TE/BE throttle to O Switch off the VCB • FB contactor 8.1must open. • FB discharging contactor 8.41 must close • Check the filter current in diagnostic laptop	, week sok
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that 2 Earth fault in harmonic filter circuit	cnecked on
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	ok

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	Checked ok
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheeked on
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	checked ok
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	checked ok
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	charlesok

DOC.NO.P/ECS/VI (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

and the second s		
Marker light	Both front and tail marker light should glow from both the cabs	check dok
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Checkedok
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	Checkedok
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	checkedok
Illuminated Push button	All illuminated push buttons should glow during the operation	
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1.7 For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m ³ /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	e seen during trail run	
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	ok
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	checke ok
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Charke
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	Chake Ok
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Checkes

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/989

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

		the start Elemband ensure that	0
6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
)	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .	
	locomotive	For 60 seconds do not press vigilance foot switch or	
		sanding foots switch or TE/BE throttle or BPVG	. /
		switch then	11
ŀ		 Buzzer should start buzzing. 	
Ì		 LSVW should glow continuously. 	
Ì		Do not acknowledge the alarm through BPVG or	Chara
		vigilance foot switch further for 8 seconds then:-	Medical
1		 Emergency brake should be applied 	06
		automatically.	1
		 VCB should be switched off. 	
		Resetting of this penalty brake is possible only after	
	W. 15	32 seconds by bringing TE/BE throttle to 0 and	
		acknowledge BPVR and press & release vigilance	
		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).	Makedok
		With park brake in applied condition.	- N.A
		• With direct loco brake applied (BP< 4.75Kg/cm ²).	
		• With automatic train brake applied (BP<4.75Kg/cm ²).	chackes
	,	• With emergency cock (BP < 4.75 Kg/cm ²).	
8.	Check traction interlock	Switch of the brake electronics. The	9
		Tractive /Braking effort should ramp down, VCB	Checkes
		should open and BP reduces rapidly.	J ch
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	1. Checke
	braking.	should start reducing.	0/4
10.	Check for BUR	In the event of failure of one BUR, rest of the two	2
	redundancy test at	BURs can take the load of all the auxiliaries. For this	1000
	ventilation level 1 & 3 of	switch off one BUR.	Checker
	loco operation	Auxiliaries should be catered by rest of two BURs.	y Ok
	W ^A	Switch off the 2 BURs; loco should trip in this case.	
11.	Check the power	Create disturbance in power converter by switching	7
	converter	off the electronics. VCB should open and converter	checke
	isolation test	should get isolated and traction is possible with	POK
		another power converter.	.)

Effective Date: Feb 2022

3 (Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.:4/989

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1.	Head lights	ok	ok _	
2	Marker Red	ak	0 %	
3	Marker White	_ 0k	OK	· .
4	Cab Lights	<u> </u>	ok .	
5	Dr Spot Light	ok	Ok	
6	Asst Dr Spot Light	019	OK.	
7	Flasher Light	als	ok	. checkel
8	Instrument Lights	ok	ok:	
9	Corridor Light	015	ole	
10	Cab Fans	Ok	Ok	
11	Cab Heater/Blowers	015	0k	
12	All Cab Signal Lamps Panel 'A'	or	OK _	

Status of RDSO modifications

LOCO NO: 41989

<u> </u>	Modification No.	Description	Remarks
Sn	Modification 40:		
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Ok/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126	Ok/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Øk/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Øk/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Øk/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	assembly.	Øk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	contactors of three phase locomotives to improve reliability.	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev. 0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	arrangement in Primary Over Current Relay of three phase locomotives.	Øk/Not Ok
13	RDSO/2013/EL/MS/0425 Rev. 0' Dt 22.05.13	dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	phase electric locomotives.	Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev. 0' Dt 23.10.13	locomotives.	Ók/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ók/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	current relay of three phase electric locomotives.	6k/Not 0k
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Ok/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Ok/Not Ok

Signature of JE/SSE/ECS

Loco No.: 41989

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: KNORR BREMSE			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.	For Faiveley	60 sec. (Max.)	
	Record pressure Build up time (8.0 kg/cm2)	For Knorr	120 sec. (Max.)	112 sec.
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.45 kg/cm2
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.45 kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.45 kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co	ock by Key (KABA Key)
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	Ok
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	Ok
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.30 kg/cm2
			Min.	in 5 min.
1.11	High Reach Panto emergency test and reset.			Ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		6 min.& 40
	i) with 1750 LPM compressor		i) 7 mins Max.	sec.
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	Ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-28 sec
	compressors, Check pressure build time of individual			CP2-29 sec
	compressor from 8 kg/cm2 to 9 kg/cm2			
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.40 kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.60 kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10.1 kg/cm2
		MM3882 &	kg/cm2, Closes at	
		MM3946	8±0.20 kg/cm2	8.1 kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.30 min

PLW/PATIALA

Loco No.: 41989

2.7	Check unloader va	lve operation time				Approx. 12 Sec.	10 sec.
2.8		/alve functioning (12	24 & 87)			Operates when	10 300.
		. 4.1.6 . 4.1.6	,			Compressor	ok
				starts			
2.9	Check CP-I delivery	safety valve setting	g (10/1). Run CP	D&M t	est spec.	11.50±0.35	11.4 kg/cm2
	Direct by BLCP.		MM3882	& MM3946	kg/cm2		
2.10	Check CP-2 delivery safety valve setting (10/2). Run CP		D&M t	est spec.	11.50±0.35	11.4 kg/cm2	
	direct by BLCP			MM3882	& MM3946	kg/cm2	
2.11		mpressors and ensi	-	D&M t	est spec.		
	valve to reset at pr	essure 1.2 kg/cm2 l	ess than opening	MM3882	& MM3946		
	pressure.						
2.12		h 'OFF' compressor,			ck sheet no.	5.0±0.10kg/cm2	5.0 kg/cm2
	1 *	Main Reservoir, Sta	•	F60.812 Ve	ersion 2		
2.42		sure of Duplex Checl	k Valve 92F.	61347/		6010001 / 0	601 / 2
2.13	FP pressure:	ast maint 107F FDTD	Onen isolata saak		ck sheet no.	6.0±0.20kg/cm2	6.0 kg/cm2
	136F. Check pressu	est point 107F FPTP	. Open isolate cock	F60.812 Ve	ersion 2		
3.0	Air Dryer Operat						
3.1		0 of 2 nd MR to start	Compressor leave			Tower to change	Ok
3.1	-		•			every minute	OK .
3.2	open for Test Check Air Dryer Towers to change. Check Purge Air Stops from Air Dryer at Compressor stops				every minute	Ok	
3.3	Check condition of humidity indicator				Blue	Blue	
4.0	Main Reservoir Leakage Test				5.00	2.00	
4.1		Put Auto Brake (A-9) in full service, Check MR Pressure air			est spec.	Should be less	0.15
	leakage from both			MM3882 & MM3946		than 1 kg/cm2 in	kg/cm2 in
						15 minutes	15 min.
4.2	Check BP Air leaka	ge (isolate BP chargi	ng cock-70)	D&M t	est spec.	0.15 kg/cm2 in 5	0.05
				MM3882 & MM3946		minutes	kg/cm2 in 5
							min.
5.0		matic Brake oper					
5.1	Record Brake Pipe						
	Check proportiona	lity of Auto Brake sy	rstem	CLW/s che	ck sheet no.		
	Check proportionality of Auto Brake system				Version 2		
					7 0.0.0 2		
	Auto controller	BP Pressure kg/cr	m2	BC (WAG-9) & WAP-7)	BC (WAP-5)	
	position		Kg/cm2		Kg/cm2		
		Value	Result	Value	Result	Value	
		Value	Result	Value	Result	Value	
	Run	5±0.1	5.05 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
	Full service	3.35±0.2	3.4 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
	31				2.3Kg/ CMZ		

PLW/PATIALA

Loco No.: 41989

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	8 sec.
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	
		MM3882 & MM3946	to Below 2.5	Ok
			kg/cm2	
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	4.10
		F60.812 Version 2	4.05- 4.35	kg/cm2
			kg/cm2	
			Opens at BP	
			2.85- 3.15	3.0
			kg/cm2	kg/cm2
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC developed			
	WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time		4±1 sec.	21 sec.
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
	WAG9 - BC 2.50 ± 0.1 kg/cm2		21±3 sec.	
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure up			
	to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	
	WAG9		52±7.5 sec.	54 sec.
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	69 sec.
	BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test : The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.75
	functioning of brake.		60 Sec.	kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe to			
	5 kg/cm2 by A-9 (Automatic brake controlling) at run			
	position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors in			
	working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure			
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.50
		1	_	1., _
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	kg/cm2
6.2	WAP5 Apply Direct Brake, Record Brake Cylinder charging	F60.812 Version 2 D&M test spec.	5.15±0.3 kg/cm2 8 sec. (Max.)	kg/cm2 7 sec.

PLW/PATIALA

Loco No.: 41989

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2 ±0.1 kg/cm2	0.20 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)			
7.1	Bail-off de-activated during emergency by any means			Now De- activated
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled	_	Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	DD00 L III	Pressure Setting Needed is 12 kg/sqcm Causing mismatching with standard Pr Setting	nothappeningin PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	RDSO letter no. EL/3.2.19/3-phase (CCB), dtd 30.01.2023		Brake electronic failure message not generate on DDS
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			45 sec
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok

SAMSHER SINGH BIST Date: 2025.01.28

Digitally signed by SAMSHER SINGH BIST

13:37:54 +05'30'

Signature of SSE/Shop

41989									
		i	ROOF COME	PONENT CAB 1 & 2		Warranty			
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.				
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, CONTRANSYS	H24-0085/AUG-2024, 15663-11/24				
2	Servo motor	29880026	2	CONTRANSYS	15297-09/24				
3	Air Intake filter Assly	29480103	2	PARKER	O/C 1670P/A/02 (PLW)10/24, O/C 1672P/A/02 (PLW)10/24				
4	Insulator Panto Mtg.	29810127	8	IEC	05-24, 05-24				
			MIDDLE RC	OF COMPONENT	•				
5	High Voltage Bushing	29731021	1	ELECTRANEX	EIPL-5652-08-24				
6	Voltage Transformer	29695028	1	PRAGATI	24/819176-oct/2024				
7	Vacuum Circuit Breaker	25712202	1	AUTOMETERS	AALN/09/2024/032/VCBA/629				
8	Insulator Roof line	29810139	9	MIL	06-2024, 07-2024				
9	Harmonic Filter	29650033	1	Daulat Ram	24K/RHFG/06/731-10/2024	AS Per PO/IRS Conditions			
10	Earth Switch	29700073	E	AUTOMETERS	AALN/04/2024/005/ES/005				
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	57755-2024, 57756-2024				
				rake Components					
	Air Compressor (A,B)	29511008	2	ELGI	EXGS 923719 A, EXGS 923717 B				
13	Air Dryer	29162051	1	TRIDENT	LD2-11-0946-24				
14	Babby compressor	25513000	1	CEC	RH 3361-08-24				
15	Air Brake Panel	29180016	1	KNORR	24-11-CO-3838				
16	Contoller (A,B)	29180016	2	KNORR	24-09-FO-3821 A, 24-09-FO-3821 B				
17	Breakup Valve	29180016	2	KNORR					
18	wiper motor	29162026	4	Auto Industry					



PLW/RTA

ELECTRIC LOCO HISTORY SHEET (LCS)

ELECTRIC LOCO NO: 41989 LIST OF ITEMS FITTED BY ECS **RLY: ECOR**

SHED: WATE

PROPULSION SYSTEM: ALSTOM

SN	DESCRIPTION OF ITEM	ITEM PL NO.	ITEM SR. NO CAB-1/CAB-2		MAKE/SUPPLIER	
1	LED Based Flasher Light Cab I & II	29612937	4756	4781	POWER TECH.	
2	Led Marker Light Cab I & II	29612925	143003/143100/14	143003/143100/143120/143165		
	Cab Heater Cab I & II	29170011	2508	2510	TOPGRIP	
4	Crew Fan Cab I & II	29470080	5737/5854/58	873/5847	MTI	
5	Master Controller Cab I	29860015	213	213		
6	Master Controller Cab II	29000015	0031		AAL/STESALIT	
7	Complete Panel A Cab I & II	29178265	1611	1610	KONTACT	
8	Complete Panel C Cab I & II	29170539	3584	3600	KEPCO/ALSTOM	
	Complete Panel D Cab I & II	29178265	1525	1455	KONTACT	
10	Complete Cubicle- F Panel Cab I & II	29178162	SLCF00012412433	SLCF00012412436	STESALIT	
ļ	Speed Ind.& Rec. System	29200040	5658/5	658	LAXVEN	
12	Battery (Ni- Cd)	29680025	B-13	1	HBL	
<u> </u>	Set of Harnessed Cable Complete	29600420			POLYCAB	
14	Transformer Oil Pressure Sensor (Cab-1) (Pressure Sensor Oil Circuit Transformer)	29500047			BG INDUSTRIES	
15	Transformer Oil Pressure Sensor (Cab-2)					
16	Transformer Oil Temperature Sensor (Cab-1) (Temperature Sensor Oil Circuit Transformer)	29500035			BG INDUSTRIES	
17	Transformer Oil Temperature Sensor (Cab-2)					
18	Roof mounted Air Conditioner I	29811028	SSM/CLW/AC	<u> </u>	SATURN SHEET M	
19	Roof mounted Air Conditioner II	20011020	SSM/CLW/AC	/11/24/113		



JE/ECS

		PATIALA LOCOMO	TIVE WORKS, PATI	ALA			
			WAG-9HC/ECoR/W				
S.No.	Equipment	PL No.	Equipme	nt Serial No.	Ma	ake	
1	Complete Shell Assembly with piping	29171027	Sr. 46/6	53, 12/2024	EC	BT	
2	Side Buffer Assly Both Side Cab I		004, 11/24	94, 10/24	FASP	FASP	
3	Side Buffer Assly Both Side Cab II	29130050	385, 10/24	88, 11/24	FASP	FASP	
4	CBC Cab I & II	29130037	88, 09/24 69, 09/24		FASP	FASP	
5	Hand Brake		9/2	24- 949	Rising Eng	g. Concern	
6	Set of Secondry Helical Spring	29045034 29041041			GI	BD	
7	Battery Boxes (both side)	29680013	35, 10/24	01, 10/24	D R STEEL	D R STEEL	
. 8	Traction Bar Bogie I		177	7, 07/24	FA	SL	
9	Traction Bar Bogie II		1792	2, 07/24	FA	SL	
10	Centre Pivot Housing in Shell Bogie I side	29100057	215	, 09/24	1A	NIL	
11	Centre Pivot Housing in Shell Bogie II side	29100037	219	, 09/24	1A	NIL	
12	Elastic Ring in Front in Shell Bogie I side	29100010	871	, 09/24	AVA	ADH	
13	Elastic Ring in Front in Shell Bogie II side	29100010	893	, 09/24	AVA	ADH	
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	HRL-65-12-24	-10657-021, 2024	Н	RL	
15	Oil Cooling Radiator I	22.7	10/24, FG41	5002/24-25/159	APOLLO HEAT EXCHANGERS		
16	Oil Cooling Radiator II	29470031	10/24, P	1024RC2291	FINE AUTOMOTIVE LTD		
17	Main Compressor I with Motor			3717, 10/24	ELGi		
18	Main Compressor II with Motor	29511008		3719, 10/24	ELGi 🗼		
19	Transformer Oil Cooling Pump I			24060695, 06/24		FLOWOIL	
20	Transformer Oil Cooling Pump II		24060734, 06/24		FLOWOIL		
21	Oil Cooling Blower OCB I		10/24, PDS2410045, LHP1001575962		PD STEELS PVT LTD		
22	Oil Cooling Blower OCB II	29470043	10/24, PDS2410065, LHP1001578045			S PVT LTD	
23	TM Blower I			7, CGLXKAM23163	ACCEL		
24	TM Blower II	29440075		9, CGLXKAM23151	ACCEL		
25	Machine Room Blower I			AC-57532, (GLXGO)			
	Machine Room Blower II	29440105		MF-24.10.93	G.T.R COPVT LTD		
					G.T.R COPVT LTD		
27	Machine Room Scavenging Blower I Machine Room Scavenging Blower II	29440129		SM-24.09.64 M-24.09.86		PVT LTD	
			, ,	ST-24.10.93		PVT LTD	
29	TM Scavenging Blower Motor I	29440117	,	ST-24.10.93		PVT LTD	
30	TM Scavenging Blower Motor II Traction Convertor I			/PROPULSIONA/4142	G.1.K CC	PVILID	
31	Traction Convertor II			/PROPULSIONA/4141			
33	Vehicle Control Unit I			/PROPULSIONA/4141			
34	Vehicle Control Unit II	29741075		/PROPULSIONA/4142	Bī	TIL	
35	Aux. Converter Box I (BUR 1)			/10303/22A/1223			
36	Aux. Converter Box 2 (BUR 2 + 3)			/10303/22B/1223			
37	Axillary Control Cubical HB-1	29171180	CGHB1	G2480770	C	GL	
38	Axillary Control Cubical HB-2	29171192		2024/K/0178/696	HIND RECT	IFIERS LTD	
39	Complete Control Cubicle SB-1	29171209	11/24, SB1	/562/11/2024	KAYSONS ELEC	TRICAL PVT LTD	
40	Complete Control Cubicle SB-2	29171210	08/24,	24091702	TROLEX INC	DIA PVT LTD	
41	Filter Cubical (FB) (COMPLETE FILTER CUBICLES)	29480140	08/24, FB/2	024/L/0274/649	HIND RECT	TIFIERS LTD	
42	Driver Seats	29171131	10/24- 169, 200, 242, 238 TARUDEEP			DEEP	
43	Transformer oil steel pipes	29230044	VIKRA	ANT PIPE			
44	Conservator Tank Breather	29731057	24-726	0, 24-7282	YOGYA EN	ETRPRISES	
45	Ballast Assembly (only for WAG-9)	29170163	65,5	1,70,67	Al	(M	
46	Head Light		1064, 1054 ENSAVE				

NAME S MUSINA STAFMA
SSE/LAS

NAME KARAN SINGH

NAME AND KIT OPPA

Issue No.: 05 Effective Date: July-2023

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA **ELECTRIC LOCO CHECK SHEET**

LOCO NO: 41989

Rly: FloR

Shed:

S. No.	ITEM TO BE CHECKED	Specified Value	0	bserved	Valu	ie
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK	-	- MA	-	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2. TM scavenging blower 1 & 2 & Oil Cooling unit.	OK		UZ		
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		0/2		
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		0/2		
1.5	Check proper Fitment of FB panel on its position.	OK		0/2		
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		614		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		0/2		
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		0/2		
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		0/2		
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		012		
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		0)2		
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		0/2		
1.13	Check proper fitment of Cow catcher.	OK		0/2	-	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK			21	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK	OK			
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK	0/2			
1.17	Check proper fitment of both battery box.	OK		6/	2	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK	0/2			
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK		G	14	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CAE	3-1	C	AB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP	LP	ALP
		:35-60 mm	50	54	57	51
		Lateral Std- 45-50 mm	51		54	43
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S		R/S
1	Drg No IB031-02002.	mm	FRONT	109		1105
			REAR	1095		1105
4.00	D. Karlanath, Danes (CAA area - 2 to 40 area with b. Karfasa)	641 mm	TKE/TK	L/S		R/S
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-SK.DL-3430.	041 111111	FRONT	-	_	
	บารู พบาริก.มะ-งจรงง.			646		645
			REAR	646		645
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S		R/S
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	117		118
			REAR	114		111
1.24	CBC Height: Range (1090, +15,-5) Drg No- IB031-02002.	1090, +15 -5 mm	FRONT: REAR:	1098		

(Signature of SSE/Elect. Loco)

NAME SMUBRAN SHAPMA

DATE 28/12/24

(Signature of /JE/Elect Loco)

NAME KARAN SINGH

DATE 28/12/24

their uppal (Signature of JE/UF)

NAME ANKIT UPPAL

DATE 28/12/24

Loco No. 41989

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-329	ECBT	29100677	101682	As per PO/IRS
REAR	SL-328	ECBT	29100677	101682	conditions

2. Hydraulic Dampers (PL No.29040012) Make: KNORR / KNORR

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27737	27884	27721	27585	27813	27783
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC24-680	CNC24-3861	CNC24-3803	CNC24-3321	CNC24-3872	CNC24-3864
Make	D.P.	D.P.	D.P.	IMPORTED	D.P.	D.P.
FREE END	CNC24-681	PLW24-504	CNC24-3659	PLW24-0117	CNC24-3883	CNC24-3890
Make	D.P.	D.P.	D.P.	IMPORTED	D.P.	D.P.
Bull Gear No.	16106	16996	17091	13597	17111	17295
Bull Gear Make	GGAG	GGAG	GGAG	GGAG	GGAG	GGAG

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	00091	00091	00091	00091	00091	00091
Free	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	00091	00091	00091	00091	00091	00091

6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	101 T	95 T	828 KN	1014 KN	102 T	101 T
FREE END	80 T	101 T	982 KN	906 KN	85 T	793 KN

Loco No. 41989

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + .5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5		1092.5			
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288	MAKE	IN	IN	IN	IN	IN	PITTI
GE Brg. PL 29030110	MAKE	SKF	NBC	NBC	NBC	NBC	NBC
FE Brg. PL 29030110	MAKE	SKF	NBC	NBC	NBC	NBC	NBC

9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	EEE	EEE	EEE	EEE	KM	KM
BACKLASH (0.254 – 0.458mm)	0.340	0.350	0.410	0.350	0.310	0.345

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	15.37	16.02	15.28	15.62	16.72	16.03
LEFT SIDE	16.13	16.21	15.59	15.55	16.31	15.52

11. TRACTION MOTOR: (PL No.29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & Date	S. NO.
1	DAULAT RAM	102242	DR48/0624L0096
2	PIONEER	102028	318A24678
3	PIONEER	102028	318A24699
4	DAULAT RAM	102242	DR48/0624L0083
5	PIONEER	102028	2408081
6	PIONEER	102028	2409014

JE/SSE/ Bogie Shop

TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



भारत सरकार GOVERNMENT OF INDIA

रेल मंत्राल्य

MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना
PATIALA LOCOMOTIVE WORKS

फैक्स/Fax No.: 0175-2397244 फोन/ Phone: 0175-2396422 मोबाईल: 9779242310 पटियाला, 147003, भारत् PATIALA, 147003, INDIA

Email: dyceeloco.dmw@gmail.com



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

No. PLW/M/ECS/Tech/Kavach

Date: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Waltair.

Email: srdee_trsvskp@yahoo.co.in, elsvskp1982@gmail.com

Sub:- Fitment of KAVACH in three Phase Electric Loco. No. 41989 WAG9-HC.

Ref:- (i). Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii).Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 41989 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/WAT/ECoR on 13.01.25. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed by NISHANT BANSIWAL Date: 2025.02.08 11:54:01 +05'30'

(निशांत बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/ECoR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

Loco No. 41989

				en beneficiens en en en en en
	SN	PLNO.	Description of Itali	(၉)ရုံပု
			ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
	1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
-			TEE UNION 3/8"X3/8" BRASS FITTINGS	02 nos.
			MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
			MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
			FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
			MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 nos
			FEMALE TEE 3/8" BSPP – BRASS	06 nos
	2	29611994	HEX PLUG -3/8" BSPT — BRASS	02 nos
			FEMALE TEE 1/2" BSPP BRASS	04 nos
			HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos
			RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos
			HEX PLUG – 1/2" BSPT – BRASS	04 nos
			MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos
	3	29170114	Copper Tube OD 9.52mm (3/8") X 1.245 Mm W.T X 6 Mtr	1.2Mtr
	Ì			<u> </u>

AWM/ARS & TES

SSE/G/ABS

SN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.		WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	-	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	<u>-</u>	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	-	DIN Rail fitted inside the driver desk (LP Side)	02 nos.





Annexure-C

-SN-	PL No.	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm ² provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.		Harness provided from KAVACH SB to SB-1	07 wires
5.	-	Harness provided from KAVACH SB to SB-2	05 wires
6.	-	Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	_	Harness provided from KAVACH SB to CAB-1	24 wires
8.	<u>-</u>	Harness provided from KAVACH SB to CAB-2	16 wires

AWMIECS

SSERGIECS