
INDIAN PORTOR OF THE PROPERTY OF THE PROPERTY

भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला Patiala Locomotive Works, Patiala

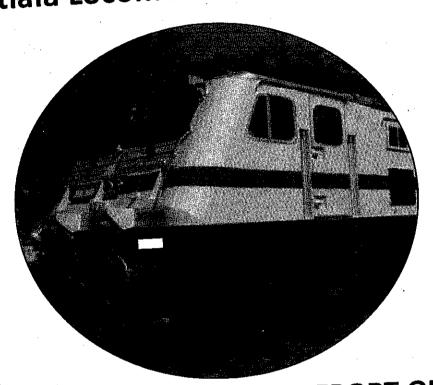

LOCO TESTING & DISPATCH REPORT OF IGBT BASED 3 PHASE ELECTRIC LOCOMOTIVE

LOCO NO.:

TYPE:

RAILWAY SHED:

PROPULSION SYSTEM:

HOTEL LOAD:

DATE OF DISPATCH:

39419

WAP-7

SWR/KJMD

MEDHA

AAL

29.12.2024

लोको निर्माण रिकार्ड



पटियाला रेलइंजिन कारख़ाना, पटियाला Patiala Locomotive Works, Patiala

LOCO NO. - 39419

RAILWAY/SHED: SWR/KJMD

DOD: DEC-2024

INDEX

. •		INDEX	}
			PAGE NO.
	DADA	ACTIVITIES (FOS)	
SN	PARA	Testing & Commissioning (ECS)	
		The sables	1
1.	1.0		1-4
	1.1	Continuity Test of Auxiliary Circuit Cables Continuity Test of Auxiliary Circuit Cables	1 1
I	1.2	Continuity Test of Auxiliary Circuit Cables Continuity Test of Battery Circuit Cables Continuity Test of Serround Control Circuit Cables	\
	1.3	Continuity Test of Screened Control Circuit Cables Continuity Test of Screened Control Circuit Cables	
	1.4		1 1
2.	2.0	Low Tension test	5-6
۷.	2.1	Measurement of resistor in Univid (12)	. }'
. 1	2.2	Check Points Low Tension Test Battery Circuits (without control electronics)	
į į	2.3	Low Tension Test Battery Circuits (with the	
<u></u> '	3.0	Downloading of Software	1
3	3.0	\ Check Points	7-10
,	3.7	Download Software	1
		Analogue Signal Checking	
1	3.3	Functional test in simulation mode	
		- to tot	•
4	4.0	Sensor test & conventor test Test wiring Transformer Circuits – Polarity Test Test wiring Transformer 1000V/415V-110V (pos. 67))
	4.1	Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Test wiring auxiliary transformer	
1	4.2	Test wiring auxiliary unanormer	. '
1	4.3	Primary Voltage Transformer Primary Voltage Transformer Primary Voltage Transformer	11-16
	4.4	Minimum voltage relay (Pos. 86)	•
	4.5	Maximum current relay (Pos. 78)	•
	4.6	Test current sensors Test current sensors (Pos 15.6/*)	
1	4.7	Test Current Sensors Test DC Link Voltage Sensors (Pos 15.6/*) Verification of Converter Protection Circuits (Hardware limits)	
ĺ	4.8	Varification of Converter Protection Circuits (112)	1
	4.9	Sequence of BUR contactors	
<u> </u>		Commissioning with High Voltage	
5.		Chook List	1
Ì	5.1	Sofoty tost main circuit breaker	
ĺ	5.2	\ Auxilian/Converter Commissioning	
	5.3	u Dunning test of 3 ph. auxiliary equipments	
-	5.3.1	- Lawrence of Auvillary Conventer	16-25
}	5.3.2		1.5 ==
1	5.3.3		
	5.4		į
Ì	5.5	La u o contan Commissionia	1
ĺ	5.6		
]	5.7	\ — (II- magnic Eiltor	
	5.8		25-26
	5.9		25-26
	6. 6.0		l :
	7. 7.0		28-33
. —	8. 1-6		34-37
	9. 1-10	n Pneumatic Test Parameters	38
	10.	Loco Check Sheet(LAS)	39-41
	11 -	Component History (LAS,ECS,ABS) Component History (LAS,ECS,ABS)	42-43
	12	Component History & Testing Parameter (Bugie Chop)	44-46
	13 -	Little monty Conditions as Der Tenuers	

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419 - MEDHA

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with Same the same 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	oK	100 ΜΩ	800 me
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	ok.	100 ΜΩ	700 m
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	650 Mg.
Earthing Choke	Earth Return Brushes	OK	100 ΜΩ	200 mg
Transformer	Power Converter 1	ok	100 ΜΩ	gooma
Transformer	Power Converter 2	ok	100 ΜΩ	700 m
Power Converter 1	TM1, TM2, TM3	ok	100 ΜΩ	950 me
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	1800 ma
Earth	Power Converter 1	OR	100 ΜΩ	700 m
Earth	Power Converter 2		100 ΜΩ	650 mg

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419 - MEDHA

Type of Locomotive: WAP-7/WAG-9HC Page: 2 of 27

From	To	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
	4. San X	OK	100 ΜΩ	600 M/L
Transformer	BUR1	OK	100 ΜΩ	500 mr
Transformer	BUR2 BUR3	OK_	100 ΜΩ	300 m/
Transformer		OK	100 ΜΩ	600 ml
Earth	BUR1 BUR2	OK	100 ΜΩ	800 m
Earth		OK	100 MΩ	600 m2
Earth	BUR3	OK	100 ΜΩ	FOOM
BUR1	HB1	OK	100 MΩ	JOD MA
BUR2	HB2	TOX -	100 ΜΩ	300MM
HB1	HB2	_ 	100 MΩ	600M
HB1	TM Blower 1	OK_	100 ΜΩ	700 M2
HB1	TM Scavenge Blower 1	OK_	100 ΜΩ	600m2
HB1	Oil Cooling Unit 1	OK_	100 ΜΩ	FOO MA
HB1	Compressor 1	OK_	100 ΜΩ	600 M/L
HB1	TFP Oil Pump 1	OK.	100 MΩ	
HB1	Converter Coolant Pump 1	OK		700 M/L
HB1	MR Blower 1	OX	100 MΩ	600 m/
HB1	MR Scavenge Blower 1	OK	100 MΩ	70000
		OK	100 MΩ	600M
HB1	Cab1 Cab Heater 1	OK	100 MΩ	Foom
Cab1		OK	100 ΜΩ	600 m/
HB2	TM Blower 2		100 ΜΩ	HOOM
HB2	TM Scavenge Blower 2	OK OK	100 ΜΩ	600 M
HB2	Oil Cooling Unit 2	OK	100 MΩ	600 m
HB2	Compressor 2	<u>ok</u>	100 MΩ	700 m
HB2	TFP Oil Pump 2		100 840	Toom
HB2	Converter Coolant Pump		100 MO	
HB2	MR Blower 2	OK		600 m/
HB2	MR Scavenge Blower 2	OK	100 ΜΩ	Soom
HB2	Cab2	O.K	100 MΩ	600 m
Cab2	Cab Heater 2	OX	. I 100 MQ.	SOOM

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419 39419 1.3 Continuity Test of Battery Circuit Cables Type of Locomotive: WAP-7/WAG-9HC Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

	To	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110-	By opening and closing MCB 112	OK
	2, 112.1-1, 310.4-1 Connector 50.X7-1	By opening and closing MCB 110	ok
	50 V7 3		OK
Battery (Wire no. 2052) SB2 (Wire no 2050)	Connector 50.X7-2 Connector 50.X7-3		or

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value $\frac{1}{2}$ $M\Omega$
Measure the resistance between 2093 & 2052,	Prescribed value:	Measured
2093 & 2050, 2052 & 2050	> 50 MΩ	Value _65_MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
O4B	ok_
10A	ok
10A	OK
01A, 12A	ak
06F, 06G	or
	Sheet Nos. 04B 10A 10A 01A, 12A

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419 - MEDHA

Type of Locomotive: WAP-7/WAG-9HC Page: 4 of 27

The state of the s	08C, 08D	OK
Vlaster controller cab-1 &2	08E, 08F	OK
TE/BE meter bogie-1 & 2	09F	ØK.
Terminal fault indication cab-1 & 2	\ 	OK
Brake pipe pressure actual BE electric	06H	ok
Primary current sensors	12B, 12F	OK_
Harmonic filter current sensors	12B, 12F	or
Auxiliary current sensors	12B, 12F	010
Oil circuit transformer bogie 1	12E, 12l	
Magnetization current	12C, 12G	OR
Traction motor speed sensors (2 nos.)	12D	OK
and temperature sensors (1 no.) of TM-1 Traction motor speed sensors (2nos)	12D	014
and temperature sensors (1 no.) of fivi-2		ļ
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	ok
Traction motor speed sensors (2 nos.)	12H	OK
and temperature sensors (1 no.) of TM-4	12H	0.10
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12	OK
Traction motor speed sensors (2nos)	12H	OK
and temperature sensors (1 no.) of TM-6 Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	OK
10KΩ± ± 10%)	13B	OK
UIC line	13A	OK
Connection FLG1-Box TB		7,7

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419 - MEDHA

Type of Locomotive: WAP-7/WAG-9HC Page: 5 of 27

2.0 Low Tension test

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

	Prescribed value	Measured value
Name of the resistor Load resistor for primary voltage	3.9K Ω ± 10%	3.9KM
transformer (Pos. 74.2).	1Ω ± 10%	152
Resister to maximum current relay.	3.3 Ω ± 10%	3:352
Load resistor for primary current transformer (Pos. 6.11).	WAR7	WAP7
Resistance harmonic filter (Pos 8.3). Variation	WAF,	
allowed ± 10%	0.2 Ω	0.252
Between wire 5 & 6	0.2 Ω	0.252
Between wire 6 & 7	0.4 Ω	0.452
Between wire 5 & 7		10.002
For train bus, line U13A to earthing.	10 kΩ± 10%	399 Hz
For train bus, line U13B to earthing.	10 k Ω ± 10%	
Inculation registance of High Voltage Cable	200 MΩ	300WW
from the top of the roof to the earth (by1000 V megger).		
Resistance measurement earth return	≤0.3 Ω	0.28-2
brushes Pos. 10/1. Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.291
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.309
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.2Kr
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	27K2
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9162
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kΩ± 10%	1.8KZ
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	3905
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 kΩ± 10%	1052
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	1030

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof room as mentioned in sheet no. 22A is done prop These earthing connections must be flexible and s	
marked yellow & green Check whether all the earthing connection between and bogie is done properly or not. These cables making correct length and cross section	en loco body

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Para 3.6 of the document no. 3 EHX 61 Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	Cheared or
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked. $\mathcal{O}\mathcal{C}$
Test traction control	Sheets of Group 08.	OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked
Test control main apparatus	Sheets of Group 05.	OIC
Test earth fault detection battery circuit by making artificial earth fault	Sheet 04C	ok
to test the earth fault detection Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	OK
Pretest speedometer	Sheets of Group 10	OK
Pretest vigilance control and fire	Sheets of Group 11	OK
System Power supply train bus	Sheets of Group 13	OIC

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

Downloading of Software

	Yes/No
3.1 Check Points. Check that all the cards are physically present in the bus stations and all the plugs are	429
connected. Check that all the fibre optic cables are correctly connected to the bus stations.	405
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Hag
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	yay

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

propulsion equipment to be ensured and noted:	<u> </u>
Traction converter-1 software version:	1.09
Traction converter-2 software version:	1.09
	1.04
Auxiliary converter-1 software version:	1.04
Auxiliary converter-2 software version:	
Auxiliary converter-3 software version:	
Vehicle control unit -1 software version:	3.0
Vehicle control unit -2 software version:	3.0

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	2K
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	101-
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1001
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	257,

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 394り

Type of Locomotive: WAP-7/WAG-9HC

Page : 8 of 27

			
TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	(001,
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257,
TE/BE at '1/3' position in TE and BE mode in both cab.	TYDD1 ANKS 0101	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	74,
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	you
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	14°
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1500
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 35419

Type of Locomotive: WAP-7/WAG-9HC Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	cheviced of
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	cheaked of
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB-contactor 8.1 must close.	chemicalo
Converter and filter contactor operation with both Power Converters during Shut Down.	or Bring TE/BE to O .	y spearced.

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

Contactor filter adaptation by	Isolate any one bogie through bogie	1
isolating any bogie	cut out switch. Wait for self-test of	
Isolating any 2081	the loco.	, ,
	Check that FB contactor 8.1 is open.	Λ \
	• Check that FB contactor 8.2 is open.	theoread or
	After raising panto, closing VCB, and	
	setting TE/BE	
	• FB contactor 8.1 closes.	
	• FB contactor 8.2 remains open.	
- U.S. W. detection battery	By connecting wire 2050 to	
Test earth fault detection battery	earth, create earth fault	
circuit positive & negative	negative potential.	
	• message for earth fault	
	By connecting wire 2095	cheapered of
	to earth, create earth	(Heylead on
	fault positive potential.	!
	message for earth fault	
1	Title concert gets	<u> </u>
Test fire system. Create a smoke in	When smoke sensor-1 gets	
the machine room near the FDU.	activated then	'
Watch for activation of alarm.	Alarm triggers and fault	
	message priority 2	cheaked on
	appears on screen.	1-11
	When both smoke sensor	1
	1+2 gets activated then	
	A fault message priority	
	1 appears on screen and	
	lamp LSF1 glow.	
	Start/Running interlock occurs and	
	TE/BE becomes to 0.	
Time, date & loco number	Ensure correct date time and Loco	0
Time, date or look training.	number	o K

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419 - MEDHA

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

Output Winding nos.	following of the transformers. Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.041	or
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A-814A	10.05V _p and same polarity	10.041	SX
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.054	R.
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.040	e.r
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.8VP 5-6VR1PS	9k
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.10VP 6.44VPMS	ar.

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.	58-6N1, 41-5URMS	or.
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.5Vl	OK
**************************************		11-OVRMS	

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC Page: 12 of 27

Primary Voltage Transformer 4.3

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25 KY	250-1
SLG2 G 87-XUPrim	25 kV	250%	123 RV	

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	HKJ	Mo 1.
SLG2 G 87-XUPrim	17 kV	170%	1 MRU	<u> 17 8) </u>

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
	30kV	300%	-30KV	-300-
SLG2 G 87-XUPrim	30 kV	300%	30 KV	-300-1.

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: Feb 2022

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 3つ419

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

(Ref: WI/ECS/10)

Minimum voltage relay (Pos. 86) 4.4

unctionality test:	ted to approx 68%
Functionality test: Minimum voltage relay (Pos. 86) must be adjusted to the set of 487 to the set of	(Yes/No)
Activate loco in cooling mode. Check Power supply of 48V to	V
The second of th	
transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply	
74.2) and connect variac to whe ho. 1301 and 2001 output 200V _{RMS} through variac. In this case; <i>Minimum voltage relay</i>	
200V _{RMS} through variac. If this case, remineral	
(Pos. 86) picks up	
Try to activate the cab in driving mode:	(Yes/No)
Contactor 218 do not close; the control	
electronics is not be working.	
	(Yes/No)
Turn off the variac : Contactor 218 closes; the control electronics is be	V.
working Test Under Voltage Protection	n;
Test Office Forces	
h in analina moder Paise nanto:	(Ŷes/No)
Activate the cab in cooling mode; Raise panto;	
Supply 200V _{RMS} through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	(Yes/No)
Again supply 200V _{RMS} through variac to wire no.	X1E3/NO/
1501 & 1502; Decrease the supply voltage below	
140V _{RMS} ± 4V;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (POS. 70)	· · · · · · · · · · · · · · · · · · ·
Disconnect wire 1521 & 1522 of primary current transform &1522 (including the resistor at Pos. 6.11); Put loco in simulation contact 136.3; Close VCB; supply 3.6A _{RMS} at the open maximum current relay Pos. 78 for correct over current value;	ion for driving mode; Open $R_3 - R_4$ wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on	(Yès/No)
display.	
Keep contact R ₃ - R ₄ of 136.3 closed; Close VCB; Tune the res	istor 78.1 for the current of 7.0A _{RMS}
/9.9A _p at the open wire 1521;	
VCB opens with Priority 1 fault message on display.	(Yes/No)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 3940

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/10 2 pin no. 7(+) & 8(-)		298mA
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding or sensor through connector 415.AC/10 2 pin no. $7(+)$ & $8(-)$ Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. $7(+)$ & $8(-)$	r	338 mg
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding o sensor through connector 415.AE/10 2 pin no. 7(+) & 8(-)		
	Supply 342mA _{DC} to the test winding or sensor through connector 415.AE/10 2 pin no. 7(+) & 8(-)	f r	348mg
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{Di} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8(-)	1	
33/2)	Supply 1242mA _{DC} to the test windin of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	g	1250mp

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: ろっぺつ

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

	Limit on which shutdown should take place	Measured limit	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	0 {
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	O
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	ok	
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	ok	

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC Page: 16 of 27

Monitored contactor sequence

Ollifored conte				1 /-	E2/E	E2 //1	52 4/2	52.5/1	52.5/2
Status	52/1	52/2	52 <u>/</u> 3_	52/4					
AI BUR OK	10000	den	close	offer		ofer		cluse	1 ** 1
BUR1 off	Mala	mes.	conso	cose	ofer	clase	ofen	Gen	COSE
BUR2 off	200.	200m	Close	Laura	core	case	open	1774 177	Class
BUR3 off	olen	103 DE	you	Clerke	Clase	cose	oper	ofen	1 (1)(2)

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yes
No rubbish in machine room, on the roof, under the loco.	743
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Y-e9
All the three fuses 40/* of the auxiliary converters	408
The fuse of the 415/110V auxiliary circuit (in HB1) open.	429
Roof to roof earthing and roof to cab earthing done	Yeg
Fixing, connection and earthing in the surge arrestor done correctly.	4.29
Connection in all the traction motors done correctly.	4.08
All the bogie body connection and earthing connection done correctly.	405
Pulse generator (Pos. 94.1) connection done correctly.	729
All the oil cocks of the gate valve of the transformer in open condition.	Yag
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	408
KABA key interlocking system.	7.05

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC Page: 17 of 27

		· · · ·	1 - 1
Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	chearsed ox
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	chemiced or
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	chesical ox
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	heared or
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	cheaked or
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Cheated ok
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	chearked or
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT		housed or

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	8.6	12.1
Oil pump transformer 2	9.8 amps	9.0	12.5
Coolant pump converter 1	19.6 amps	3.7	7:5
Coolant pump converter 2	19.6 amps	3 &	5-7
Oil cooling blower unit 1	40.0 amps	35.7	1)80
Oil cooling blower unit 2	40.0 amps	34.5	110.0
Traction motor blower 1	:34:0 amps	36.3	94.0
Traction motor blower 2	34.0 amps	33.6	94.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.3	16.3
Sc. Blower to Traction motor blower 1	6.0 amps	415	16.3
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	24.0	42-1
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	33.0	48.2

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10014	Yej
	DC link voltage of BUR1	60% (10%=100V)	637	Yey
	DC link current of BUR1	0% (10%=50A)	1 Amil	Y 9
	:	<u> </u>	14-6-	'

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10090	Yoy
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	6374	Yey
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amp	Tes .
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Amp	16)
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12 Amh	169
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	//0∨	发

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1002V	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	6374	Yey
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Brap	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	22 Am	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12 Amp	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1102	Yos

^{*} Readings are dependent upon charging condition of the battery.

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the

auxiliaries at ventilation leve1 3 of the locomotive.

auxiliaries at ve	ntilation leve1 3 of the 10	Comotive	Loads in BUR3
Condition of	Loads on BUR1	Loads in BUR2	Luaus III DONS
BURS All BURS OK	Oil Cooling unit	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

auxiliary machine and measure the Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	4.9	16.7
Machine room blower 2	15.0 amps*	5.3	17:3
Sc. Blower to MR blower 1	. 1.3 amps	1.4	4-2
Sc. Blower to MR blower 2	1.3 amps	ఎ ०	4.0
Ventilator cab heater 1	1.1 amps	1.6	2.3
Ventilator cab heater 2	1.1 amps	1.6	2.3
Cab heater 1	4.8 amps	5.3	2.2
Cab heater 2	4.8 amps	5.3	5.5
4.5 1.11	<u> </u>		2

* For indigenous MR blowers.

Effective Date: Feb 2022

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

(Ref: WI/ECS/10)

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1		
Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheaked ok
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheared or
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheaked of
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheared or
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chearedor
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	chearcedoc
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheaked or

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39以り

Type of Locomotive: WAP-7/WAG-9HC Page : 22 of 27

For Converter 2	Result Optalica					
Test Function	Results desired in sequence					
charging and pre- charging and charging of DC Link of Converter	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheaked or				
discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheaked on				
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Chearked ok				
Earth fault detection on negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	chearcel or				
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheared or				
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheaked or				
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheakedok				

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39417

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

	1. 1. 1. 1	Result obtained
Test Function	Results desired in sequence	Result obtained
Measurement of	Start up the loco with both the	1
protective shutdown	converter. Raise panto. Close VCB.	V
by Converter 1	Move Reverser handle to forward or	1
electronics.	reverse. Remove one of the orange	
Ciccaomos	fibre optic feedback cable from	
	converter 1Check that converter 1	
	electronics produces a protective shu	
	down.	charged occ
	• VCB goes off	
	Priority 1 fault mesg. on DDU	
	appears	1
	Disturbance in Converter 1	
Measurement of	Start up the loco with both the	
protective shutdown	converter. Raise panto. Close VCB.	1
by Converter 2	Move Reverser handle to forward or	
electronics.	reverse. Remove one of the orange	
	fibre optic feedback cable from	
	converter 2. Check that converter 2	1
	electronics produces a protective shu	to Cheaked on
	down.	
. 4	• VCB goes off	1
	• Priority 1 fault mesg. on diagnostic	
	display appears	
	Disturbance in Converter 2	
	Disturbunce in Converter 2	<u> </u>

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	cheated on

PATIALA LOCOMOTIVE WORKS, PATIALA

(Ref: WI/ECS/10)

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	and a contract of the contract	
	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop 	cheaked or
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	cheared on
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	ok

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark		
	and the contract of the contra			
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	chearked ok		
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	chanced or		
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	cheaked or		
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	cheared or		
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	chearced on		

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	cheaked ok
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	theaked ok
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheared on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Cheared or
Illuminated Push button	All illuminated push buttons should glow during the operation	Cheaked or
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: For contactor 8.2:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m ³ /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	ealked o
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	heorked t
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	reakel
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	ee,16.eef0
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	ercedou

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	1		
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .			
	locomotive	For 60 seconds do not press vigilance foot switch or	A		
1		sanding foots switch or TE/BE throttle or BPVG		-	ı .
.		switch then			í
		Buzzer should start buzzing.			ŧ
.]		LSVW should glow continuously.			(·
		Do not acknowledge the alarm through BPVG or			1
		vigilance foot switch further for 8 seconds then:-			f ,
		Emergency brake should be applied	\	che	piked
· }		automatically.			
		VCB should be switched off.		1	
	1	Resetting of this penalty brake is possible only after		J	
		32 seconds by bringing TE/BE throttle to 0 and			
		acknowledge BPVR and press & release vigilance		J	
-		foot switch.			
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).	di	h'est le	edou
		With park brake in applied condition.	- 1	fork N/J	
	· .	• With direct loco brake applied (BP< 4.75Kg/cm ²).		1	1
		• With automatic train brake applied (BP<4.75Kg/cm ²).	46	chear	ced e
		• With emergency cock (BP < 4.75 Kg/cm ²).			
8.	C' literation intoriock	Switch of the brake electronics. The	4		
O.	Check traction interlock		1		
		Tractive /Braking effort should ramp down, VCB	VIC	theork	edo
9.	Check regenerative	should open and BP reduces rapidly. Bring the TE/BE throttle to BE side. Loco speed	#	cheerk heerc	-
-	braking.	should start reducing.	الم ر	haosic.	100
10.	Check for BUR	In the event of failure of one BUR, rest of the two	杆	//	
	redundancy test at	BURs can take the load of all the auxiliaries. For this	7	I	
	ventilation level 1 & 3 of	switch off one BUR.	$I \parallel$	A.	4
	loco operation	Auxiliaries should be catered by rest of two BURs.	4/1	Cheer	ced
	Mar. 18	Switch off the 2 BURs; loco should trip in this case.	$ I ^{\circ}$	•	
11.	Check the power	Create disturbance in power converter by switching -	卅		
	converter	off the electronics. VCB should open and converter		. }	1
	isolation test	should get isolated and traction is possible with	4/0	Cheer 10	sed o
	1	another power converter.	I	I	

Effective Date: Feb 2022

(Ref: WI/ECS/10)

PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 39419

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks			
1	Head lights	ok	BR				
2	Marker Red	OK	or				
3	Marker White	, or	orc				
4	Cab Lights	OK	ok				
5	Dr Spot Light	OR	012				
6	Asst Dr Spot Light	OK	or			•	
7	Flasher Light	O IC	OK	choared	008h	(g ¹ 12)	(
8	Instrument Lights	010	OK			_	
9	Corridor Light	010	OK				
10	Cab Fans	olc	Ole				
11	Cab Heater/Blowers	OK	ok				
12	All Cab Signal Lamps Panel 'A'	0 t_	6/L				

PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format for 2x500KVA IGBT based Hotel Load Converter for 3-phase Electric Locomotives

Locomotive No.: 39419	Page: 1 of 6
Type of Locomotive: <u>ルAP チ</u>	·
Make of Hotel Load Converter:	

Details of Equipment: -

Equipment	SI. No	Equipment	SI. No
HLC1	1024020199	IV Coupler CAB1 ALP	
HLC2	1024020360	IV Coupler CAB1 LP	
Converter-1	1024020199	IV Coupler CAB2 ALP	
Converter-2	1024020200	IV Coupler CAB2 LP	
UIC Coupler for Hotel Load Converter (353.3/2 CAB2)	•	UIC Coupler for Hotel Load Converter (353.3/3 CAB1)	

1. Polarity test of Hotel Load Winding:

Apply 198 /140 to the primary winding of the transformer (at 1U; wire no. 2 at surge arrestor and at 1V; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformer.

Output Winding Nos.	Description of winding	Prescribed Output Voltage &Polarity with input supply	Measured Output	Measured Polarity
2UH1 & 2VH1	For Hotel load between cable 91- 94	5.9 ,4.2 and same polarity	OX_	ox
2UH2 & 2VH2	For Hotel load between cable 91A- 94A	5.9 ,4.2 and same polarity	aL	OIL

2. Visual Inspection:

Fitment of Units and Earthing to Sub-assemblies

Verify the following Equipments Fitment and grounding cables are connected to Locomotive body.

SI. No.	Equipment Name	Unit Fitment (Yes/No)	Provision of Earthing (Yes/No)
1	HLC1	Yes	Yes
2	HLC2	Yes	Yes
3	Output Contactor unit1 HLC1	Yes	Yes
4	Output Contactor unit2 HLC2	Yes	Yes
5	IV Coupler CAB1 ALP	Yes	Yes
6	IV Coupler CAB1 LP	Yes	Yes
7	IV Coupler CAB2 ALP	Yes	Yes
8	IV Coupler CAB2 LP	Yes	Yes
9	UIC Coupler for Hotel Load Converter (353.3/3 CAB1)	Yes	Yes
10	UIC Coupler for Hotel Load Converter (353.3/2 CAB2)	Yes	Yes
11	CT (LEM sensor) under HLC1	Yes	Yes
12	CT(LEM sensor) under HLC2	Yos	Yes

3. Cable Routing and Laying

3.1 Control cable routing and layout

Verify the connections, tightness and cable routing of the following Control cable.

SI. No.	Cables Details	Performed (Yes/No)
1	From Wago SB1 to HLC1 are connected as per wiring format	tes
2	From SB1 to UIC Coupler Hotel Load Converter (353.3/3 CAB2) through Bayonet connector XK22HL:01(22pin)is connected as per wiring format	Yes
3	From SB1 wago(XF22S:01/53) to IV coupler CAB1 ALP are connected as per wiring format	Yes
4	From SB1 wago(XF22S:01/54) to IV coupler CAB1 LP are connected as per wiring format	Yes
5	From Wago SB2 to HLC2 are connected as per wiring format	Yes
6	From SB2 to UIC Coupler Hotel Load Converter (353.3/2 CAB2) through Bayonet connector XK77HL:02 (22 pin) is connected as per wiring format	Yes
7	From SB2 wago (XF77S:01/53) to IV coupler CAB2 ALP are connected as per wiring format	Yes
8	From SB2 wago (XF77S:01/54) to IV coupler CAB2 LP are connected as per wiring format	Yos
9	From HLC1 to Contactor unit 1 through 4 Core Cable are connected as per wiring format	Yes
10	From HLC2 to Contactor unit 2 through 4 Core Cable are connected as per wiring format	Yes
11	From SB to VCU are connected as per wiring format	Yes
12	From CT (HLC1 LEM sensor) to SR1 are connected as per wiring format	Yes
13	From CT (HLC2 LEM sensor) to SR2 are connected as per wiring format	Yes

3.2 Power cable routing and layout

Verify the connections, tightness and cable routing of the following Power cable.

31. No.	Cables Details	Performed Yes/No)
1	From Transformer to HLC1(2UH1 & 2VH1) are connected as per wiring format	Yes
2	From Transformer to HLC2(2UH2 &2VH2) are	Yes
3	From HLC1 to Output Contactor unit1 are connected as per	Yes
4	From HLC 2 to Output Contactor unit 2 are connected as per	Yes
5	From Output Contactor unit 1 to IV Coupler CAB1 ALP and IV Coupler CAB2ALP through Junction box are connected as per wiring format	Yes
6	From Output Contactor unit 2 to IV Coupler CAB2 LP and IV Coupler CAB1 LP through Junction box are connected as per wiring format	Yes

4. Continuity test:

Check the continuity test for the External connections made to Equipments.

Note: This continuity test should be done before power ON the Locomotive Battery.

4.1 Control cable continuity

SI. No.	Cables Details	Performed (Yes/No)
1	From Wago SB1 to HLC1 are connected as per wiring format	Yes
2	From SB1 to UIC Coupler Hotel Load Converter (353.3/3 CAB2) through Bayonet connector XK22HL:01(22pin)is connected as per wiring format	Yes
3	From SB1 wago(XF22S:01/53) to IV coupler CAB1 ALP are connected as per wiring format	Yes
4	From SB1 wago(XF22S:01/54) to IV coupler CAB1 LP are connected as per wiring format	Yes
5	From Wago SB2 to HLC2 are connected as per wiring format	Yes
6	From SB2 to UIC Coupler Hotel Load Converter (353.3/2 CAB2) through Bayonet connector XK77HL:02(22pin) is connected as per wiring format	Yos
7	From SB2 wago (XF77S:01/53) to IV coupler CAB2 ALP are connected as per wiring format	Yes
8	From SB2 wago(XF77S:01/54) to IV coupler CAB2 LP are connected as per wiring format	Yes
9	From HLC1 to Contactor unit 1 through 4 Core Cable are connected as per wiring format	Yes
10	From HLC2 to Contactor unit 2 through 4 Core Cable are connected as per wiring format	Yes
. 11	From SB to VCU are connected as per wiring format	Yes
12	From HLC1 LEM sensor to SR1 are connected as per wiring format	Yes
13	From HLC2 LEM sensor to SR2 are connected as per wiring format	Yes

Page: 5 of 6

4.2 Power cable continuity

These cables continuity should be checked before mounting of converter in the locomotive.

SI. No.	Cables Details	Performed (Yes/No)
1	From Transformer to HLC1(2UH1 & 2VH1) are connected as per wiring format	Yes
2	From Transformer to HLC2(2UH2 &2VH2) are connected as per wiring format	res
3	From HLC1 to Output Contactor unit1 are connected as per wiring format	Yes
4	From HLC 2 to Output Contactor unit 2 are connected as per wiring format	Yes
5	From Output Contactor unit 1 to IV Coupler CAB1 ALP and IV Coupler CAB2ALP through Junction box are connected as per wiring format	Yes
6	From Output Contactor unit 2 to IV Coupler CAB1 LP and IV Coupler CAB2 LP through Junction box are connected as per wiring format	Yes

5. Battery power ON

Tests Supply Voltages

Remove all Control cable connectors (Analog and Digital Input/output connectors) from HLC1, HLC2. While Switch ON Battery supply observe is there any MCBs tripping. Wait for one or two minutes after switching ON Circuit breaker(MCB1) and observe for any overheating symptoms like smell, smoke, temperature etc. from the wire bunches. If any such symptoms are noticed, there might be a short circuit in the wire bunch. Check up once again continuity wherever suspected. After that check the Voltage levels at all equipments connectors as mentioned below.

Test Details	Acceptance	Observations
Voltage Level at HLC1: I. Between wago terminal XF22S:03/54 and XF22S:03/58 II. Between wago terminal XF22S:03/53 and XF22S:03/58	~110VDC	OL
Voltage Level at HLC2: I. Between wago terminal XF77S:03/52 and XF77S:03/56 II. Between wago terminal XF77S:03/51 and XF77S:03/56	~110VDC	2 K

Note: After Above tests switch off the Power and restore all removed connectors and once again switch ON the 110 V Supply and ensure that no MCB tripping due to abnormality.

Page: 6 of 6

6. Converter operation (ON/OFF) test

Power supply is directly available to the Hotel Load Converter via Hotel Load Converter winding (2UH1-2VH1) and (2UH2-2VH2). As soon as BLDJ is closed power will be available to the Hotel Load Converter. Connect the test jig of Hotel Load Converter to the UIC and IV Coupler. Charge the locomotive and switch on the BLHO, LSHO indication should glow. Hotel Load Converter screen will show message "waiting for ON command". One by one Hotel Load Converter can be switched on by test jig. Finally both the Hotel Load Converter should be turned out simultaneously. Observe the flow of air from the air duct, this will ensure that Hotel Load Converter is ON. Both the Hotel Load Converters are ON, then voltage and frequency should be measured as per the table below:-

Converters should run without any irregularities.

Hotel Load Converter 1 Output Voltage			Output Frequency	
U-V	V-W	U-W	(Hz)	
91	ev_	Ou_	Oa	

Hotel Load Converter 2				
Output Voltage			Output Frequency	
U-V	V-W	U-W	(Hz)	
DB	or_	OF	Dr.	

7. Earth Fault Test

- 7.1 Input Earth Fault:-Ground the input terminal of the Hotel Load Converter using a proper resistance and then turn on the Hotel Load Converter. The converter should trip with the message "Input earth fault".
- **7.2 Output Earth Fault:**-Ground the output terminal of the Hotel Load Converter using a proper resistance and then turn on the Hotel Load Converter. The converter should trip with the message "Output earth fault".

Note: These to be done for the both the converters (HLC1 and HLC2) separately.

Page: 33/A

33 A

Status of RDSO modifications

LOCO NO: 39419

Sn [Modification No.	Description	Remarks
		Modification in control circuit of Flasher Light and Head	
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	OK/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	OK/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev. '0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Ok/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Øk/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Øk/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev. 0'	Modification of terminal connection of heater cum blower assembly.	Øk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	contactors of three phase locomotives to improve reliability.	Øk/Not Ok
11	RDSO/2012/EL/MS/0419 Rev. '0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13		Ók/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev. '0' Dt 18.07.13		Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13		6k/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	Ok/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	ර්k/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	phase electric locomotives.	OKINOL OK
20	RDSO/2018/EL/MS/0478 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Øk/Not Ok
21	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09.19		Øk/Not Ok

Signature of JE/SSE/ECS

Loco No.: 39419

PLW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: Faiveley			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	55
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.55
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.55 Kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.55 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co	ock by Key (KABA Key)
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ок
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	7 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.40 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.		-NA-	-NA-
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 45
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-28 Sec
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-28 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.45 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.55 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10.1 Kg/cm2
		MM3882 &	kg/cm2, Closes at	
		MM3946	8±0.20 kg/cm2	8.1 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.3 minute

PLW/PATIALA

Loco No.: 39419

2.7	Check unloader v	alve operation time				Approx. 12 Sec.	10 sec
2.8		n Valve functioning (1	24 & 87)			Operates when	ok
						Compressor	
						starts	
2.9	Check CP-I delive	ery safety valve settin	g (10/1). Run CP	D&M t	est spec.	11.50±0.35	11.50
	Direct by BLCP.			1	& MM3946	kg/cm2	Kg/cm2
2.10	Check CP-2 deliv	ery safety valve settir	ng (10/2). Run CP	D&M t	est spec.	11.50±0.35	11.50
	direct by BLCP			MM3882	& MM3946	kg/cm2	Kg/cm2
2.11	Switch 'OFF' the	compressors and ens	ure that the safety	D&M t	est spec.		
	valve to reset at	pressure 1.2 kg/cm2	less than opening	MM3882	& MM3946		
	pressure.						
2.12	BP Pressure: Swi	tch 'OFF' compressor	, Drain MR Pressure	CLW's chec	ck sheet no.	5.0±0.10kg/cm2	5.0 Kg/cm2
	by drain cock of	1" Main Reservoir, St	art Compressor,	F60.812 Ve	ersion 2		
	check setting pre	essure of Duplex Chec	k Valve 92F.				
2.13	FP pressure:			CLW's chec	ck sheet no.	6.0±0.20kg/cm2	6.0 Kg/cm2
	1	Test point 107F FPTP	. Open isolate cock	F60.812 V€	ersion 2		
	136F. Check pres						
3.0	Air Dryer Oper						
3.1	Open Drain Cock	90 of 2 nd MR to start	Compressor, leave			Tower to change	ok
	open for Test Ch	eck Air Dryer Towers	to change.			every minute	
3.2	Check Purge Air	at Compressor stops					
2.2	Chael candition			Dlug	Dlug		
3.3	Check condition of humidity indicator					Blue	Blue
4.0	Main Reservoir Leakage Test						
4.1	Put Auto Brake (A-9) in full service, Ch	eck MR Pressure air	D&M t	est spec.	Should be less	0.25
	leakage from bot	th cabs.		MM3882 & MM3946		than 1 kg/cm2 in	Kg/cm2 in
						15 minutes	15 minutes
4.2	Check BP Air leal	kage (isolate BP charg	ing cock-70)	D&M test spec.		0.15 kg/cm2 in 5	0.05
				MM3882	& MM3946	minutes	Kg/cm2 in 5
							minutes
5.0	Brake Test (Au	tomatic Brake oper	ation)				
5.1	Record Brake Pip	e & Brake Cylinder p	ressure at Each Step				
	Check proportion	nality of Auto Brake s	ustem	CLW/s che	ck sheet no.		
	Check proportion	iality of Auto Brake 5	ystein		Version 2		
				100.812	Version 2		
	Auto controller p	osition		BC (WAG-9 & WAG-7)		BC (WAP-5)	
	Adto controller p	7031011		Kg/cm2	, a was ij	Kg/cm2	
				1.0/ 5/11/2	1		
				,,,,			ļ
		BP Pressure kg/cn	12	Value	Result	Value	Result
	Run	5±0.1	5.05 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
	Initial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.35Kg/ cm2	0.75±0.15	-
	Full service	3.35±0.2	3.4 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
1	Emergency	Loss than 0.3	0.25 V-/2	2 50±0 1		E 1E±0 20	
	Emergency	Less than 0.3	0.25 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-

PLW/PATIALA

Loco No.: 39419

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	8 Sec
3.2	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946	012 500.	0 300
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec.	BP pressure falls	
0.0	operate / issue Silver Emergency cookly	MM3882 & MM3946	to Below 2.5	ок
		ininggo a mingg io	kg/cm2	
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no.	Closes at BP	
		F60.812 Version 2	4.05- 4.35	4.15Kg/cm2
			kg/cm2	
			Opens at BP	
			2.85- 3.15	3.05Kg/cm2
			kg/cm2	
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.		
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of	MM3882 & MM3946		
	Max. BC developed			
	WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time		4±1 sec.	
	WAP7 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	8.0 sec
	WAG9 - BC 2.50 ± 0.1 kg/cm2		21±3 sec.	
5.6	Move Auto Brake Controller handle to full service and	D&M test spec.		
	BP pressure 3.5 kg/cm2. Move Brake controller to	MM3882 & MM3946		
	Running position BC Release time to fall BC Pressure			
	up to 0.4 kg/cm2 i.e. 95% of Max. BC developed			
	BC release Time			
	WAP7		17.5±2.5 sec.	18.0 sec.
	WAG9		52±7.5 sec.	
5.7	Move Auto Brake Controller handle to Release, Check	CLW's check sheet no.	60 to 80 Sec.	75 Sec
	BP Pressure Steady at 5.5±0.2 kg/cm2 time.	F60.812 Version 2		
5.8	Auto Brake capacity test : The capacity of the A9 valve	RDSO Motive power	BP pressure	
	in released condition must conform to certain limit in	Directorate report no.	should not fall	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	below 4.0	
	train without interfering with the automatic	1999 Rev.1	kg/cm2 with in	4.65
	functioning of brake.		60 Sec.	Kg/cm2
	* Allow The MR pressure to build up to maximum			
	stipulated limit.			
	* Close brake pipe angle cock and charge brake pipe			
	to 5 kg/cm2 by A-9 (Automatic brake controlling) at			
	run position.			
	* Couple 7.5 dia leak hole to the brake hose pipe of			
	locomotive. Open the angle cock for brake pipe.			
	The test shall be carried out with all the compressors			
	in working condition.		BO : (5)	
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press		BC comes to '0'	0
	Driver End paddle Switch (PVEF)			
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure	GIVAN I I I I	25.0051 / 5	251/ / 5
	WAG9/WAP7	CLW's check sheet no.	3.5±0.20 kg/cm2	3.5 Kg/cm2
	WAP5	F60.812 Version 2	5.15±0.3 kg/cm2	
6.2	Apply Direct Brake, Record Brake Cylinder charging	D&M test spec.	8 sec. (Max.)	7 Sec
	time	MM3882 & MM3946		

PLW/PATIALA

Loco No.: 39419

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.20±0.1 kg/cm2	0.20 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	12 Sec
7.0	Modified System Software (only for CCB)		-NA-	-NA-
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled	_	Multi Loco	
7.3	TCAS and Non-TCAS mode enabled	_	Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is12 kg/sqcm causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok



Signature of SSE/Shop

39419

	Roof compnent Cab-1 & Cab-2									
S.NO.	DESCRIPTION	PL NO.	QPL/Nos.	SUPPLIER		Sr.I	No.	Warranty		
				Contransys	RSI	15134-08/24,	448344/2-			
1	Pantograph	25880068	2	Switchgear		Sep/2023				
				Contransys	RSI	15141-08/24,	448344/2-			
2	Servo Motor	25880068	2	Switchgear		Sep/2023				
						O/C1549P/A/02 (PI	₋W)06-24,			
3	Air Intake Filter Assembly	29480103	2	PARKER		O/C1550P/A/02 (PI	₋W)06-24			
4	Insulator Panto Mounting	29810127	8	IEC		05-24, 05-24				
			Middle	roof Component						
5	High Voltage Bushing	29731021	1	ELECTRANEX		EIPL-5796-09-24				
6	Voltage Transformer	29695028	1	PRAGATI		24/819156-Oct/202	24			
7	Vaccum Circuit Breaker	25712202	1	AUTOMETERS		AALN/11/2024/053/VCBA/864				
8	Insulator Roof Line	29810139	9	MIL		05-2024, 07-2024		As per PO/IRS Conditions		
9	Harmonic Filter	29650033	1	Sunshine		1275-10-2024				
10	Earthing Switch	29700073	1	AUTOMETERS		AALN/04/2024/021	l/ES/021			
11	Surge Aresster	29750052	2	C G POWER		57404-2024, 57405	5-2024			
			Air Bra	ke Components						
12	Air Compressor (A,B)	29511008	2	ELGI		EXGS 923723 A , EX	(GS 923729 B			
13	Air Dryer	29162051	1	TRIDENT		LD2-11-0931-24				
14	Auxillary Compressor	25513000	1	CEC		RH 3354-08-24				
15	Air Brake Panel	29180016	1	Faiveley		Sep 24-17-WAG9-3	597			
16	Controller (A,B)	29180016	2	Faiveley		L24-059 A , L24-054	4 B			
17	Break Up Valve	29162026	2	Faiveley						
18	Wiper Motor		4	Auto Industry						

SAMSHER § SINGH BIST Date: 2025.01.24 17:16:05 +05'30'

Digitally signed by SAMSHER SINGH BIST

SSE/ABS

PLW/PTA

ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 39419 LIST OF ITEMS FITTED BY ECS

RLY: SWR SHED: KJMD

PROPULSION SYSTEM: MEDHA

HOTEL LOAD CONVERTER: AAL

SN	DESCRIPTION OF ITEM	ITEM PL NO	. ITEM SR. NO	CAB-1/CAB-2	MAKE/SUPPLIER	
1	LED Based Flasher Light Cab I & II	29612937	4525	5/4693	POWER TECH	
2	Led Marker Light Cab I & II	29612925	143146/143058	3/143009/143124	MATSUSHI P.TECH	
3	Cab Heater Cab I & II	29170011	2492	2/2540	TOPGRIP	
4	Crew Fan Cab I & II	29470080	05490924/05050924	/05600924/05840924	ROTO TECH	
5	Master Controller Cab I		2	16		
6	Master Controller Cab II	29860015	2	46	AAL	
7	Complete Panel A Cab I & II	29170564	1494	1511	KONTACT	
8	Complete Panel C Cab I & II	29170539	021/11 .	025/11	TOPGRIP/MEDHA ,	
9	Complete Panel D Cab I & II	29170564	1522	1519	KONTACT	
10	Complete Cubicle- F Panel Cab I & II	29178162	SLCF00012410331	SLCF00012410329	STESALIT	
11	Speed Ind.& Rec. System	29200040	6004/5343		MEDHA	
12	Battery (Ni- Cd)	29680025	B-	B-66		
13	Set of Harnessed Cable Complete	29600418			PPS INTERNATIONAL	
14	Transformer Oil Pressure Sensor (Cab-1) (pressure sensor oil circuit transformer)	29500047			BG INDUSTRIES	
15	Transformer Oil Pressure Sensor (Cab-2)				DO INDUSTRIES	
16	Transformer Oil Temperature Sensor (Cab-1)(temperature sensor oil circuit transformer)	29500035			BG INDUSTRIES	
17	Transformer Oil Temperature Sensor (Cab-2)					
18	Roof mounted Air Conditioner I	29811028	23K	2527	DIT	
19	Roof mounted Air Conditioner II	29011020	24E/RMPU/007 .		INTEC/DAULAT RAM	
			India rail navigator			
20.	RTIS(Real time information system)		Power supply module		Aventel Ltd., India	
			Rail MSS Terminal			

SSE/ECS

JE/ECS

		LOCO NO :- 39419/	WAP-7/SWR/K	GMD			
S.N.	Equipment	PL No.		ent Serial No.		Лake	
	Complete Shell Assembly with piping	29171064		1/20, 12/24		ECBT	
	Side Buffer Assly Both Side Cab I	25171004	83, 11/24	NOT VISIBLE, 07/24	FASP	AEU	
	Side Buffer Assly Both Side Cab I	29130050	93, 10/24	274, 10/24	FASP	FASP	
	CBC Cab I & II	29130037	1319, 07/24	1271, 06/2024	ESCORTS	ESCORTS	
	Hand Brake	29130037	9/24- 849			ngg. Concern	
5	naliu biake	29045034	3/	24- 043	Kisirig Li	igg. Concern	
	Set of Secondry Helical Spring	29041041				GBD	
	Battery Boxes (both side)	29680013	20, 10/24	19, 10/24	D R STEEL	D'R STEEL	
8	Traction Bar Bogie I		143	39, 12/23		FASL	
9	Traction Bar Bogie II		142	26, 12/23		FASL	
10	Centre Pivot Housing in Shell Bogie I side	20100057	24	4, 09/24		ANIL	
11	Centre Pivot Housing in Shell Bogie II side	29100057	27	1, 09/24		ANIL	
12	Elastic Ring in Front in Shell Bogie I side	20400040	04	1, 07/24	А	VADH	
	Elastic Ring in Front in Shell Bogie II side	29100010	75	0, 09/24	А	VADH	
	Main Transformer	29731008 for WAG 9 29731057 for WAP-7		I-LT1001/12, 2024		CG	
15	Oil Cooling Radiator I		P1024R	C2263, 10/24	FINE AUT	OMOTIVE LTD	
	Oil Cooling Radiator II	29470031		15002/24-25/167		AT EXCHANGER	
	Main Compressor I with Motor			23729, 10/24	ELGi		
	Main Compressor II with Motor	29511008		23723, 10/24	ELGi		
-	Transformer Oil Cooling Pump I			0707, 06/24	FLOWOIL		
	Transformer Oil Cooling Pump II			0774, 06/24	FLOWOIL		
	Oil Cooling Blower OCB I					ACCEL	
		29470043	10/24, AC 58327, LHP1001564928			ACCEL	
	Oil Cooling Blower OCB II			10/24, AC-58308, LHP1001553764		ACCEL	
	TM Blower I	29440075		12/24, AC-61041, CGLXKAM23155 10/24, 24P2913AF12, 24P2913/12			
	TM Blower II				SAINI ELECTRICAL PVT LTD		
	Machine Room Blower I	29440105		MF-24.10.97	GTR CO PVT LTD GTR CO PVT LTD		
	Machine Room Blower II			MF-24.10.92		7	
	Machine Room Scavenging Blower I	29440129		5758, CF25/D7130		RAND PVT LTE	
	Machine Room Scavenging Blower II			07.46, 07/24		O PVT LTD	
29	TM Scavenging Blower Motor I	29440117		10.88, 10/24		O PVT LTD	
30	TM Scavenging Blower Motor II	23110117		ST-24.10.104	GTR C	O PVT LTD	
31	Traction Convertor I			05, 09/24			
32	Traction Convertor II		570	06, 09/24			
33	Vehicle Control Unit I	29741075		13, 09/24	N	IEDHA	
	Vehicle Control Unit II			43, 09/24			
	Aux. Converter Box I (BUR 1)			29, 09/24			
	Aux. Converter Box 2 (BUR 2 + 3)			29, 09/24	ADILIANI	FILECTRICAL	
	Axillary Control Cubical HB-1	29176645		(0001-07/2024		ELECTRICAL	
-	Axillary Control Cubical HB-2	29176657		/0001-07/2024 /0001-05/2024		T ELECTRICAL T ELECTRICAL	
	Complete Control Cubicle SB-1	29176669		/0001-05/2024 4/D/0321/1055		CTIFIERS LTD	
	Complete Control Cubicle SB-2	29178174 29480140		4/G/0656/568		CTIFIERS LTD	
	Filter Cubical (FB) (COMPLETE FILTER Driver Seats	29171131		5, 214, 215, 229	-	RUDEEP	
	Hotel Load Converter I			20199, 10/24		ALLAINCE PVT	
	Hotel Load Converter II	29741087	102402	20200, 10/24	AUTOMETERS	ALLAINCE PVT	
	Transformer oil steel pipes	29230044		ANT PIPES	,		
	Hotel Load Contactor I			20199, 10/24		ALLAINCE PVT	
	Hotel Load Contactor II	20721057		20200, 10/24		ALLAINCE PVT IETRPRISES LTD	
48	Conservator Tank Breather Silica Gel Ballast Assembly (only for WAG-9)	29731057 29170163	24-105	23, 24-10524	TOGTAEN	ILTREMISES LID	
	Head Light	29611908	07	23, 1032	E	NSAVE	
50	Trous Eight	23011300		/6,11849/18,11849/13		RNATIONAL	

NAME SHUBHAM SHARMA SSE/LAS

NAME Karan Singh JE/LAS/ NAME ANKIT UPPA

Issue No.: 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)
Page 1 of 1

पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 39419

Rly: SWP

Shed: KJMD

S. No.	ITEM TO BE CHECKED	Specified Value		Observe	d Val	ue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK		4/1		
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2. TM scavenging blower 1 & 2 & Oil Cooling unit.	ОК		0/2		
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		6/4	_	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		all	_	
1.5	Check proper Fitment of FB panel on its position.	OK		612		
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		012		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		al	2	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK	-3-	0	12	
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		d	14	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK			12	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK			DK	
1.12	Check proper fitment of Bogie Body Safety Chains.	OK			1/2	
1.13	Check proper fitment of Cow catcher.	OK			112	
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK			012	
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK			OK	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK	0/2			
1.17	Check proper fitment of both battery box.	OK			OK	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK			OK	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	OK			OK	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch.		CA	\B-1	(CAB-2
	ELRS/TC/ 0082 (Rev 1) dated 17.09.2015	Vertical-Std	LP	ALP	LP	ALP
		:35-60 mm	49	49	40	
		Lateral Ctd			-	-
		Lateral Std- 45-50 mm	28	41	55	44
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	3	R/S
	Drg No IB031-02002.	mm	FRONT		-	
				109		1098
			REAR	109		1095
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/S	-	R/S
	Drg No-SK.DL-3430.		FRONT	64	7	648
			REAR	61	n	645
	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	3	R/S
1.23		42	FRANT			112
1.23	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	112		
1.23	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	REAR	112	-	
1.23	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives. CBC Height: Range (1090, +15,-5)	1090, +15		117		115

(Signature of SSE/Elect. Loco)

NAME SHUBMAN SMARMA

DATE 29/12/24

(Signature of /JE/Elect Loco)

NAME Karan Singh

DATE 29/12/24

(Signature of JE/UF)

NAME ANICIT UPPAL

DATE 29/12/24

Loco No. 39419

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-339	ECBT	29100677	101682	As per PO/IRS
REAR	SL-307	ECBT	29101104	102221	conditions

2. Hydraulic Dampers (PL No.29040140) Make: KONI/KONI

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	27395	27867	27719	27507	27744	27801
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	PLW24-399	PLW24-591	PLW24-631	CNC24-3197	CNC24-2819	CNC24-2755
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
FREE END	PLW24-400	PLW24-592	PLW24-630	CNC24-3204	CNC24-2818	CNC24-2756
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
Bull Gear No.	5568	24-J-41	24-F-04	5773	5795	5730
Bull Gear Make	GGAG	LMS	LMS	GGAG	GGAG	GGAG

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

AXLE POSITION NO		1	2	3	4	5	6
Gear	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
End	PO NO. & dt	00091	00091	00091	00091	00091	00091
Free End	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
	PO NO. & dt	00091	00091	00091	00091	00091	00091

6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	946 KN	102 T	102 T	100 T	99 T	934 KN
FREE END	995 KN	95 T	90 T	820 KN	83 T	783 KN

Loco No. 39419

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION	1	2	3	4	5	6	
S.T. PL 29100288	MAKE	BSL	IN	KPE	SDI	KPE	SDI
GE Brg. PL 29030110	MAKE	NBC	SKF	SKF	NBC	NBC	NBC
FE Brg. PL 29030110	MAKE	NBC	SKF	SKF	NBC	NBC	NBC

9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	EEE	KM	EEE	KM	KM	KM
BACKLASH (0.254 – 0.458mm)	0.260	0.270	0.280	0.280	0.270	0.280

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	17.38	16.10	17.80	17.11	15.65	16.82
LEFT SIDE	16.25	16.28	16.60	17.70	16.36	15.41

11. TRACTION MOTOR: (PL No.29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	HIND RECTIFIER	101655	237010154/008
2	HIND RECTIFIER	101655	237010154/011
3	HIND RECTIFIER	101655	237010154/009
4	TMS		PLW-3083
5	TMS		PLW-3077
6	TMS		PLW-3079

Socie Shor

TOP 13 COSTLIEST ITEMS OF WAP-7 LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29741087	2X500KVA IGBT Based Hotel Load Converter to CLW Specn. no. CLW/ES/3/IGBT/0490 aLT.D (REV.1) issued on December,2017	As per clause no. 3.1.6 of CLW SPECN. NO. CLW/ES/3/IGBT/0490 ALT.D REV.1 ISSUED ON DEC-2017. [60 months after commissioning or 72 months from date of supply whichever earlier]
3	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
4	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
5	29600418	SET OF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018.	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

6	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.
		COMPLETE ELLTED CURIOLE ALCANO MUTULALI	
7	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
8	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.

9	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
10	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
13	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



भारत सरकार GOVERNMENT OF INDIA

रेल मंत्राल्य

MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना

PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com

फैक्स/Fax No.: 0175-2397244 फोन/ Phone: 0175- 2396422

मोबाईल: 9779242310 पटियाला, 147003, भारत् PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: As signed

(Through Mail)

Sr. Div. Mechanical Engineer, Diesel Loco Shed, Krishnarajapuram.

Email: srdmekjm@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 39419 WAP-7.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 39419 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to DLS/KJM/SWR on 14.01.2025. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed by NISHANT BANSIWAL Date: 2025.02.24 17:57:24 +05'30'

(निशांत बंसीवाल)

उप म्ख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/SWR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please

Loco No. 39419

311	ALINO	Deseifation of them	(e[jy _j
		ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
		MALE CONNECTORS 1/2" TUBE OD X 1/2" BSPT, BRASS FITTINGS	06 nos.
		FEMALE CONNECTORS (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS FITTINGS	03 noș
		FEMALE TEE 3/8" BSPP – BRASS	06 nos
2	29611994	HEX PLUG -3/8" BSPT – BRASS	02 nos
		FEMALE TEE 1/2" BSPP – BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT – BRASS	04 nos
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos
		HEX PLUG – 1/2" BSPT – BRASS	04 nos
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos
3	29170114	Copper Tube OD 9.52mm (3/8") X 1.245 Mm W.T X 6 Mtr	1.2Mtr

AWM/ABS & LFS

SSEIGIARS

SN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.	7	WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	· ,	One circular hole of 80 mm dia. provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	-	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.	-	DIN Rail fitted inside the driver desk (LP Side)	02 nos.

AWMIABS & LFS

SSE/G/LFS

Annexure-C

SN	PLNo	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm ² provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 moles
, 2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.	-	Harness provided from KAVACH SB to SB-1	07 wires
5.		Harness provided from KAVACH SB to SB-2	05 wires
6.	-	Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	-	Harness provided from KAVACH SB to CAB-1	24 wires
8.	- ,	Harness provided from KAVACH SB to CAB-2	16 wires

AWMIECS

SSEGIECS