


भारतीय रेल Indian Railways

डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernation Chorks, Patiala

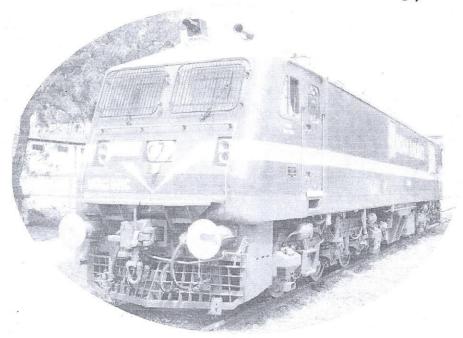

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

41530

TYPE:

WAG9HC

RAILWAY SHED:

ECR/GMO

PROPULSION SYSTEM:

BT

DATE OF DISPATCH:

02.09.2021

लोको निर्माण रिकार्ड



डीजल रेलइंजिन आधुनिकीकरण कारख़ाना, पटियाला Diesel Loco Modernisation Clorks, Patiala

LOCO NO.: 41530

RAILWAY/SHED: ECR/GMO DOD: SEPTEMBER 2021

INDEX

SN	PARA	ACTIVITIES	PAGE NO
		Testing & Commissioning (TRS)	-
1.	1.0	Continuity Test of the cables	
	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	1-4
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS (Ω)	
	2.2	Check Points	5-6
	2.3	Low Tension Test Battery Circuits (without control electronics)	=
3	3.0	Downloading of Software	
	3.1	Check Points	
	3.2	Download Software	7 10
	3.3	Analogue Signal Checking	7-10
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	1
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
- 1	4.3	Primary Voltage Transformer	
- 1	4.4	Minimum voltage relay (Pos. 86)	
	4.5	Maximum current relay (Pos. 78)	11-16
	4.6	Test current sensors	
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)	
- 1	4.8	Verification of Converter Protection Circuits (Hardware limits)	
	4.9	Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	A
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	88
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5.4	Auxiliary circuit 415/110	10-25
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	~
	5.8	Test Harmonic Filter	2 4
	5.9	Test important components of the locomotive	
6.	6.0	Running Trial of the locomotive	25-26
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27
3.	8.0	Status of RDSO modifications	28
9.	1-10	Pneumatic Test Parameters	29 - 32
0.		Loco Check Sheet(LRS)	33
1.	-	Component History (LRS,TRS,ABS)	34-36
2.	-	Component History & Testing Parameter (Bogie Shop)	
3	. 127	Warranty Conditions as per Tenders	37 - 38 39 -41

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/530 1.0 Continuity *Test of the cables*

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ok	100 ΜΩ	1500
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	ok	100 ΜΩ	1500
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	1500.
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	2000
Transformer	Power Converter 1	ok	100 ΜΩ	2000
Transformer	Power Converter 2	ok	100 ΜΩ	1500
Power Converter 1	TM1, TM2, TM3	ok	100 ΜΩ	2000.
Power Converter 2	TM4, TM5, TM6	ok	100 ΜΩ	1500
Earth	Power Converter 1	ok	100 ΜΩ	1500
Earth	Power Converter 2	ok	100 ΜΩ	1500

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	ok	100 ΜΩ	1000
Transformer	BUR2	ok	100 ΜΩ	1800
Transformer	BUR3	ok	100 MΩ	1500
Earth	BUR1	ok	100 MΩ	1500
Earth	BUR2	ok	100 ΜΩ	1500
Earth	BUR3	ok	100 MΩ	1500
BUR1	HB1	OK	100 MΩ	1500
BUR2	HB2	ok	100 MΩ	1500
HB1	HB2	ok	100 MΩ	1500
HB1	TM Blower 1	ok	100 ΜΩ	200
HB1	TM Scavenge Blower 1	ok	100 ΜΩ	150
HB1	Oil Cooling Unit 1	OK	100 ΜΩ	200
HB1	Compressor 1	ok	100 ΜΩ	150
HB1	TFP Oil Pump 1	OK	100 ΜΩ	200
HB1	Converter Coolant Pump 1	ok	100 ΜΩ	200
HB1	MR Blower 1	ok	100 MΩ	150
HB1	MR Scavenge Blower 1	ok	100 MΩ	100
HB1	Cab1	OK	100 ΜΩ	150
Cab1	Cab Heater 1	ok	100 ΜΩ	150
HB2	TM Blower 2	ok	100 ΜΩ	200
HB2	TM Scavenge Blower 2	ok	100 ΜΩ	150
HB2	Oil Cooling Unit 2	OK	100 ΜΩ	200
HB2	Compressor 2	ok	100 MΩ	00
HB2	TFP Oil Pump 2	ok	100 ΜΩ	100
HB2	Converter Coolant Pump 2	ok	100 MΩ	150
HB2	MR Blower 2	ok	100 MΩ	100
HB2	MR Scavenge Blower 2	ok	100 ΜΩ	200
HB2	Cab2	Ok	100 ΜΩ	150
Cab2	Cab Heater 2	ok	100 MΩ	150

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	OK
Battery (Wire no. 2052)	Connector 50.X7-2		014
SB2 (Wire no 2050)	Connector 50.X7-3		OK

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>lo</u> MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured .
2050	> 50 MΩ	Value 69 MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	OK
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	ou.

ge ,

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	OK
Terminal fault indication cab-1 & 2	09F	OK
Brake pipe pressure actual BE electric	06H	OK
Primary current sensors	12B, 12F	DIL.
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	OK
Oil circuit transformer bogie 1	12E, 12I	DK.
Magnetization current	12C, 12G	0K
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	9K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	DK-
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	8K
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OK.
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance=	13A	OK
10KΩ± ± 10%)		=
UIC line	13B	OK
Connection FLG1-Box TB	13A	01

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.0 Low relision test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9 K $\Omega \pm 10\%$	3.9 KB
Resister to maximum current relay.	1 Ω ± 10%	150
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.352
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0,2-2
Between wire 6 & 7	0.2 Ω	0.252
Between wire 5 & 7	0.4 Ω	0.452
For train bus, line U13A to earthing.	10 k Ω ± 10%	10451
For train bus, line U13B to earthing.	10 k Ω ± 10%	10.01 55
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	200 MJ
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	25.0
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.29 s
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0,29.52
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.252
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ ± 10%	2.2 × 52
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2-691
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9Ks
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.8-52
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	3902
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	1052

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	cheered or
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheeked or

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	81/L
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	DK
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	DIL
Pretest speedometer	Sheets of Group 10	OK
Pretest vigilance control and fire system	Sheets of Group 11	ΘK
Power supply train bus	Sheets of Group 13	OK

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

LUCC	inotive No //
3.0	Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	yes
Check that all the fibre optic cables are correctly connected to the bus stations.	yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.0.3.6
Traction converter-2 software version:	1:0:3.6
Auxiliary converter-1 software version:	1.8.2.2
Auxiliary converter-2 software version:	2.8.2.2
Auxiliary converter-3 software version:	2.8.2.2
Vehicle control unit -1 software version:	1.6.8.7
Vehicle control unit -2 software version:	1.6.8.7

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OV-
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	11 %
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	100%.
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	25.7-

fr JEISSEIL

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/DE : /DE : !!	EL C1 ANTOD OLOI		
TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans	Between 99% and 101%	1-11
position from both cab	FLG2; AMSB_0101-	Detween 55% and 101%	100%
	XangTrans	=	
TE/BE at 'BE Minimal'	FLG1; AMSB_0101-		
position from both cab	XangTrans	Between 20% and 25%	25%
L. Comments of the Comments of	FLG2; AMSB_0101-	7.	25)
	XangTrans		=
TE/BE at '1/3' position	HBB1; AMS_0101-		
in TE and BE mode in	LT/BDEM>1/3	Between 42 and 44%	447
both cab.	HBB2; AMS_0101-		
	LT/BDEM>1/3		
TE/BE at '1/3' position in TE and BE mode in	11001, 11110_0101-		71
both cab.	LT/BDEM>2/3	Between 72 and 74%	74%
DOLLI CAD.	HBB2; AMS_0101-		_
	LT/BDEM>2/3		
Both temperature	SLG1; AMSB 0106-	Between 10% to 11.7% depending	
sensor of TM1	XAtmp1Mot -	upon ambient temperature	3800
	1	0°C to 40°C	1
		Between 10% to 11.7% depending	38°C
Both temperature	SLG1; AMSB 0106-	upon ambient temperature 0°C to 40°C	20
sensor of TM2	Xatmp2Mot	40 C	_
	r	×	
		Between 10% to 11.7% depending	37.800
Both temperature	SLG1; AMSB 0106-	upon ambient temperature 0°C to	3/12
sensor of TM3	Xatmp3Mot	40°C	~
SCHSOI OF TIVIS	Zaunpsiviot		
		Between 10% to 11.7% depending	0- 501
Roth tomporations	CL CO ANGR 0105	upon ambient temperature 0°C to	37.5°L
Both temperature sensor of TM4	SLG2; AMSB_0106-	40°C	· ·
3511301 01 11014	XAtmp1Mot		
		Between 10% to 11.7% depending	00
		upon ambient temperature 0°C to	38.1-
Both temperature	SLG2; AMSB_0106-	40°C	
sensor of TM5	Xatmp2Mot		
Dath to the state of the state	OL CO. ANGR. STOC		
	SLG2; AMSB_0106-	Between 10% to 11.7% depending	391
sensor of TM6		upon ambient temperature 0°C	
		to 40°C	



Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41

41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through	VCB must open.	checked ou
emergency stop switch 244	Panto must lower.	Chefen
Shut Down through cab activation	VCB must open.	
switch to OFF position	Panto must lower.	cheekeelod
Converter and filter contactor	FB contactor 8.41 is closed.	
operation with both Power	By moving reverser handle:	
Converters during Start Up.	 Converter pre-charging contactor 	
- "	12.3 must close after few seconds.	
	 Converter contactor 12.4 must close. 	cheekeelou
	 Converter re-charging contactor 	
	12.3 must opens.	
= 0	By increasing TE/BE throttle:	20
	 FB contactor 8.41 must open. 	
2 5	 FB contactor 8.2 must close. 	
	• FB contactor 8.1 must close.	
Converter and filter contactor		
operation with both Power	0	
	 VCB must open. 	
	Panto must lower.	cheeked on
2	 Converter contactor 12.4 must open. 	- Cherry
I	 FB contactor 8.1 must open. 	2
	 FB contactors 8.41 must close. 	
a m	• FB contactor 8.2 must remain closed.	

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC Page : 10 of 27

L		n
Contactor filter adaptation by	Isolate any one bogie through bogie	
isolating any bogie	cut out switch. Wait for self-test of	
	the loco.	1 8
n 11 **	• Check that FB contactor 8.1 is open.	
	• Check that FB contactor 8.2 is open.	o checked ou
	After raising panto, closing VCB, and	
B W	setting TE/BE	
	FB contactor 8.1 closes.	=
<i>8</i>	• FB contactor 8.2 remains open.	
Test earth fault detection battery	By connecting wire 2050 to	9
circuit positive & negative	earth, create earth fault	
	negative potential.	
	message for earth fault	
ti .	By connecting wire 2095	cherredon
	to earth, create earth	7
	fault positive potential.	
	message for earth fault	
	• message for earth fault	
Took fine contain Contain and in	10/1	
Test fire system. Create a smoke in	When smoke sensor-1 gets	
the machine room near the FDU.	activated then	
Watch for activation of alarm.	Alarm triggers and fault	
	message priority 2	
	appears on screen.	- eLecked OK
19	When both smoke sensor	
	1+2 gets activated then	
	 A fault message priority 	at a state of the
	1 appears on screen and	
	lamp LSF1 glow.	
	 Start/Running interlock occurs and 	
	TE/BE becomes to 0.	l l
Time, date & loco number	Ensure correct date time and Loco	
	number	OK
		* *

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.04~1	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.05VP	OK
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.047	8K
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.0410	OK
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.9 Vp (OV
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.1279 6.448 Rms	On.

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$, $41.5V_{RMS}$ and opposite polarity.	58.6 VP (41.4 V Rms (DK
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15471 7	PN.

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	25kV	250%	25KV	2507
SLG2 G 87-XUPrim	25 kV	250%	25 KV	250%

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17 FW	1701
SLG2 G 87-XUPrim	17 kV	170%	1750	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	BOKV	3004
SLG2_G 87-XUPrim	30 kV	300%	30 BU	300%

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

runctionality test.	1 - 1 t COO/	
Minimum voltage relay (Pos. 86) must be adjusted to approx 68%		
Activate loco in cooling mode. Check Power supply of 48V to	(Yes/No)	
minimum voltage relay. Disconnect primary voltage		
transformer (wire no. 1511 and 1512) from load resistor (Pos.	E	
74.2) and connect variac to wire no. 1501 and 1502. Supply		
200V _{RMS} through variac. In this case; Minimum voltage relay		
(Pos. 86) picks up		
	a 2	
	(Vas/Na)	
Try to activate the cab in driving mode:	L(Yes/No)	
Contactor 218 do not close; the control	N	
electronics is not be working.	2	
Turn off the variac :	(Yes/No)	
Contactor 218 closes; the control electronics is be		
working		
Test Under Voltage Protection	,	
Activate the cab in cooling mode; Raise panto;	L(Yes/No)	
Supply 200V _{RMS} through variac to wire no. 1501		
& 1502; Close the VCB; Interrupt the supply		
voltage The VCR goes off after 2 second time delay	2 ,7	
The VCB goes off after 2 second time delay.	(Yes/No)	
Again supply 200V _{RMS} through variac to wire no.	4763/110)	
1501 & 1502; Decrease the supply voltage below		
$140V_{RMS} \pm 4V$;		
Fine tune the minimum voltage relay so that VCB opens.		

4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current trans &1522 (including the resistor at Pos. 6.11); Put loco in sim on contact 136.3; Close VCB; supply 3.6A _{RMS} at the opmaximum current relay Pos. 78 for correct over current variables.	ulation for driving mode; Open $R_3 - R_4$ en wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on	L(Yes/No)

Keep contact R_3 – R_4 of 136.3 closed; Close VCB; Tune the resistor 78.1 for the current of 7.0A_{RMS} /9.9A_p at the open wire 1521;

VCB opens with Priority 1 fault message on display.

(Yes/No)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298 ma
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		
	Supply 333mA_{DC} to the test winding of sensor through connector $415.\text{AC}/1$ or 2 pin no. $7(+)$ & $8(-)$		322mp
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/101 2 pin no. 7(+) & 8(-)		
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		340mB
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8 8(-)	7-4.	HA
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	MA

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Pá

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OV-
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	gu .

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	close	open	clos	open	close	open	close	clos	open
BUR1 off	clos	open	clos	clos	open	clos	open	open	alos
BUR2 off	open	open	log	closs	close	clos	spe,	open	Closs
BUR3 off	close	lose	open	closs	close	clos	open	open	Close

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	769
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yey
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Tes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yey
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yoy
KABA key interlocking system.	705

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheeked ou
Emergency stop	Raise panto in driving	VCB must open.	
in driving mode	mode in. Put the brake	Panto must	cherkedou
	controller into RUN	lower.	# y
	position. Close the VCB.	Emergency	75 18 18
	Push emergency stop	brake will be	
	button 244.	applied.	
Under voltage	Raise panto in cooling	VCB must open.	cheekedou
protection in	mode. Close the VCB.	n. W	che cer
cooling mode	Switch off the supply of	×	= 11 2
	catenary by isolator		
Under voltage	Raise panto in driving	VCB must open with	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
protection in	mode. Close the VCB.	diagnostic message that catenary voltage out of	chelled ou
driving mode	Switch off the supply of	limits	
	catenary by isolator	22	
Shut down in	Raise panto in cooling mode.	VCB must open.	cheeked ou
cooling mode.	Close the VCB. Bring the BL- key in O position.	Panto must lower.	-people - u
Shutdown in	Raise panto in driving mode. Close		0 000 000
aluti dia anno anno alla	the VCB. Bring the BL-key in O position.	Panto must	chelbedon
driving mode	position	lower.	
Interlocking	Raise panto in cooling	VCB must open.	cheered on
pantograph-	mode. Close the VCB.	,	LUCKER
VCB in cooling	Lower the pantograph		r v
mode	by ZPT		
Interlocking	Raise panto in driving mode. Close	VCB must open.	chelked on
pantograph-	the VCB. Lower the pantograph by ZPT	1	Cherry
VCB in driving	41-1		V 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
mode			

fer

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.1	9.3
Oil pump transformer 2	9.8 amps	9.1	9.2
Coolant pump converter 1	19.6 amps	3,3	6.5
Coolant pump converter 2	19.6 amps	3.2	5.9
Oil cooling blower unit 1	40.0 amps	40.8	109.0
Oil cooling blower unit 2	40.0 amps	40.0	102.0
Traction motor blower 1	34.0 amps	25.9	207.0
Traction motor blower 2	34.0 amps	26.8	217.0
Sc. Blower to Traction motor blower 1	6.0 amps	2.6	250
Sc. Blower to Traction motor blower 1	6.0 amps	2.5	24.5
Compressor 1	25 amps at 0 kg/cm ² 40 amps at 10 kg/cm ²	24.9	40.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	25.6	50.0



Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	1045V	101
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	6300	10)
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	IAmp	yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10201	403
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	632V	xes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	6 Amp	yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	24 Amp	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	14Am	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110~	res

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10500	Yey
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	6340	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	6:2 Am	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	22 Am	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	quarel	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	yes

Readings are dependent upon charging condition of the battery.

fr

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery C charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by the

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	5.5	27.3
Machine room blower 2	15.0 amps*	5.4	24,0
Sc. Blower to MR blower 1	1.3 amps	1.5	8.0
Sc. Blower to MR blower 2	1.3 amps	1. 4	7,6
Ventilator cab heater 1	1.1 amps	1.1	1.2
Ventilator cab heater 2	1.1 amps	1.1	1.2
Cab heater 1	4.8 amps	5.2	5.5
Cab heater 2	4.8 amps	5.5	55

^{*} For indigenous MR blowers.

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and precharging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Cheeked Ou
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekeedou
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked on
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	checked on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Cholcoel Ou
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherred su
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chelked on

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41536

Type of Locomotive: WAP-7/WAG-9HC Page : 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
charging and pre- charging and charging	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherked ou
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Chekeel on
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	cheliced del
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	challed on
of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherked on
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	checked on

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or	
electronics.	reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.	o cheered on
	VCB goes off	
, , ,	 Priority 1 fault mesg. on DDU 	
	appears	
NA	Disturbance in Converter 1	
Measurement of	Start up the loco with both the	()
protective shutdown	converter. Raise panto. Close VCB.	
by Converter 2	Move Reverser handle to forward or	
electronics.	reverse. Remove one of the orange	
	fibre optic feedback cable from	
	converter 2. Check that converter 2	o checked of
=	electronics produces a protective shut	And the second s
	down.	
	• VCB goes off	
	 Priority 1 fault mesg. on diagnostic display appears 	
	Disturbance in Converter 2	

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained		
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	choliced ou		



Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	• FB contactor 8.2 must close.	1
	• FB contactor 8.1 must close	
	Check the filter current in diagnostic laptop	
	Bring the TE/BE throttle to O Switch off the VCB	o cheesed in
	• FB contactor 8.1must open.	
	FB discharging contactor 8.41 must close	
	Check the filter current in	
	diagnostic laptop	
Test earth fault	Make a connection between wire	h
detection harmonic	no. 12 and vehicle body. Start up	
filter circuit.	the loco. Close VCB.	/
	 Earth fault relay 89.6 must pick up. 	chelked de
	 Diagnostic message comes that - 	
	Earth fault in harmonic filter circuit	
p		
Test traction motor	Traction converter manufacturer	8 0 144
speed sensors for	to declare the successful operation	cherculum .
both bogie in both	and demonstrate the same to the	
cabs	supervisor/ DMW	1

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	chelked od
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cheeced en
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	cherced on
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	choices on
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	cheesed on

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	chocked ax
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cherked of
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	Chelberton
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Cheweelou
Illuminated Push button	All illuminated push buttons should glow during the operation	chemielon
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: 9
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m ³ /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	seen during trail run ab activation in driving No fault message should appear on the diagnostic panel of Cherkel	
1	Cab activation in driving mode		
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	Chercos
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	cherced
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	choliced
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	Choland

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41530

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .
	locomotive	For 60 seconds do not press vigilance foot switch or
		sanding foots switch or TE/BE throttle or BPVG
		switch then
	, , , , , , , , , , , , , , , , , , ,	Buzzer should start buzzing.
		a LCV//// ala avida ala vi a avida ala vi a avida
	#	Do not acknowledge the alarm through BPVG or
		vigilance foot switch further for 8 seconds then:-
	W.	Emergency brake should be applied automatically.
		VCB should be switched off.
	- 4	Resetting of this penalty brake is possible only after
	20	180 seconds by bringing TE/BE throttle to 0 and
		acknowledge BPVR and press & release vigilance
	-2	foot switch.
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).
		With park brake in applied condition.
		• With direct loco brake applied (BP< 4.75Kg/cm ²).
		• With automatic train brake applied (BP<4.75Kg/cm ²).
		• With emergency cock (BP < 4.75 Kg/cm ²).
8.	Check traction interlock	Switch of the brake electronics. The
		Tractive /Braking effort should ramp down, VCB
		should open and BP reduces rapidly.
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed
	braking.	should start reducing.
10.	Check for BUR	In the event of failure of one BUR, rest of the two
	redundancy test at	BURs can take the load of all the auxiliaries. For this
	ventilation level 1 & 3 of	BURS can take the load of all the auxiliaries. For this switch off one BUR.
	loco operation	Auxiliaries should be catered by rest of two BURs.
		Switch off the 2 BURs; loco should trip in this case.
11.	Check the power	Create disturbance in power converter by switching
	converter	Create disturbance in power converter by switching off the electronics. VCB should open and converter
	isolation test	should get isolated and traction is possible with
		another power converter.

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

41530 Locomotive No.:

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OK	OK C	-
2	Marker Red	on	DN.	
3	Marker White	01	211	8
4	Cab Lights	OK	orl	Checed worker
5	Dr Spot Light	ou	011	Chelled Worker
6	Asst Dr Spot Light	OL	ON	
7	Flasher Light	DN	~ an	
8	Instrument Lights	ou	OK	
9	Corridor Light	or	on	
10	Cab Fans	de	dk	
11	Cab Heater/Blowers	OL	214	*
12	All Cab Signal Lamps Panel 'A'	OK	orl	

Status of RDSO modifications

LOCO NO: 41530



Sn	meanion No.	Description	Remarks
1.	RDSO/2008/EL/MS/035 Rev.'0' Dt 20.02.08	Rev.'0' Dt 20.02.08 Light of three phase electric locomotives.	
2.	RDSO/2009/EL/MS/037 Rev.'0' Dt 22.04.09	locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	three phase locomotives to improve reliability	
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit	Ok/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase less than 1 and 1 a	ØK/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	three phase locomotives to avoid fire harmal	✓ Ok/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid	Øk/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	assembly.	Ok/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	White and Red marker light in three phase electric locomotives	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Ok/Not Ok
2	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
3	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	phase electric locomotives.	Ok/Not Ok
	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over	Ok/Not Ok
	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three	Ok/Not Ok
	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting	Ok/Not Ok
	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09.19	Implementation of push pull scheme.	Ok/Not Ok

Signature of JE/SSE/TRS



Page 1 of 4

DMW/PATIALA

Loco No.: 41530

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	Parameters	Reference	Value	Result
1.0	Auxillary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph		0	0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	57 Sec
	Record pressure Build up time (8.5kg/cm2)			
1.3	Auxillary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.5 Kg/cm2
		DMTS-014-1, 8	-	
	si di	CLW's check sheet		
		no. F60.812 Version		THE PERSON NAMED IN COLUMN TO PERSON NAMED I
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.5 Kg/cm2
		no. F60.812 Version	kg/cm2 closes	
		2	5.5±0.15 kg/cm2	
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 is	olating Cocks & KABA co	ock by Key (KABA Key)	-1
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	OK
			Rises.	Table of the Control
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	8 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.4 kg/cm2
			Min.	in 5 Min.
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		T
	out all the reservoirs by opening the drain cocks and then	calculation and test	20	
	closed drain cocks. MR air pressure build up time by each	performed by		
	compressor from 0 to 10 kg/cm2.	Railways,		
	i) with 1750 LPM compressor		i) 7 Mts. Max.	6.8 Mts
	ii) with 1450 LPM compressor		ii) 8.5 Mts. Max.	
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-28 Sec
	compressors, Check pressure build time of individual		1	
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-28 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.5 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
	2	MM3946	5.60±0.15kg/cm2	5.6 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10.1 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	8±0.20 kg/cm2	8.1 Kg/cm2
2:6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.4 minute



DMW/PATIALA

Page 2 of 4 Loco No.:41530

2.8 2.9 2.10 2.11	Check CP-I deli Direct by BLCP. Check CP-2 del direct by BLCP Switch 'OFF' the	ivery safety valve sett	ng (10/1). Run CP	D&M 1		Approx. 12 Sec. Operates when Compressor starts	9 sec
2.10	Direct by BLCP. Check CP-2 delidirect by BLCP Switch 'OFF' the valve to reset a	ivery safety valve sett				The same of the sa	
2.11	direct by BLCP Switch 'OFF' the valve to reset a		ing (10/2). Run CP	MIM3882	est spec. & MM3946	11.50±0.35kg/cm2	11.5 Kg/cm
	valve to reset a	e compressors and an		The second secon	est spec. & MM3946	11.50±0.35kg/cm2	11.5 Kg/cm
2.12	Annual Control of the	t pressure 12 kg/cm2	sure that the safety less than opening	D&M t	est spec. & MM3946		
	by drain cock o	vitch 'OFF' compresso f 1" Main Reservoir, S ressure of Duplex Che	tart Compressor,	CLW's che	eck sheet 12 Version 2	5.0±0.10kg/cm2	5.0 Kg/cm2
2.13	FP pressure: Fit Test Gauge i	n Test point 107F FPT		CLW's che no. F60.83	ck sheet 12 Version 2	6.0±0.20kg/cm2	6.0 Kg/cm2
3.0	Air Dryer Ope						
3.1	Open Drain Coc open for Test C	k 90 of 2 nd MR to star heck Air Dryer Tower:	s to change.			Tower to change i) Every minute (FTIL & SIL) ii)every two minute (KBIL)	ОК
3.2			at Compressor stops				
3.3		of humidity indicato	<u> </u>			Blue	Blue
4.0	Main Reservoir						
meer (annual on the entire of	leakage from bo	(A-9) in full service, Coth cabs.	heck MR Pressure air	1	est spec. & MM3946	Should be less than 1 kg/cm2 in 15 minutes	0.4 Kg/cm2 In 15 minutes
4.2	Check BP Air lea	akage (isolate BP char	ging cock-70)	1	est spec. & MN3946	0.15 kg/cm2 in 5 minutes	0.04 Kg/cm2 in 5 minutes
5.0	Brake Test (A	tomatic Brake ope	ration)				2 millutes
5.1		pe & Brake Cylinder p		The second secon			
	Check proportion	nality of Auto Brake s	system		neck sheet 2 Version 2		
	Auto controller	position		BC (WAG-9 Kg/cm2	3 & WAG-7)	BC (WAP-5) Kg/cm2	
		BP Pressure kg/cı	m2	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	
and the second	Initial	4.60±0.1	4.5 Kg/cm2	0.40±0.1		0.75±0.15	
	Full service	3.35±0.2	3.5 Kg/cm2	2.50±0.1	0.40Kg/ cm2 2.5Kg/ cm2	5.15±0.30	
F	Emergency	Less than 0.3	0.1 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	

DMW/PATIALA



Loco No.:41530

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	8 Sec
	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 25 kg/cm2	ОК
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05-4.35 kg/cm2 Opens at BP 2.85-3.15 kg/cm2	4.2 Kg/cm ² 2.8 Kg/cm ²
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2 WAG9 - BC 2.50 ± 0.1 kg/cm2	D&M test spec. MM3882 & MM3946	4±1 sec. 7.5±1.5 sec. 21±3 sec.	20 Sec
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAG9 / WAP7	D&M test spec. MM3882 & MM3946	17.5±25 sec. 52±7.5 sec.	
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	47 Sec 73 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake. * Allow The MR pressure to build up to maximum	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.2 Kg/cm2
	stipulated limit. * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A (Automatic brake controlling) at run position. * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe. The test shall be carried out with all the compressors in working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
5.0	Direct Brake (SA-9)			***************************************
5.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.5Kg/cm2
5.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (îvîax.)	6.45 Sec

Page 4 of 4

DMW/PATIALA

Loco No.:41530

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.1 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	10 Sec
7.0	Sanding Equipment			1
7.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	ОК
7.2	Test Vigilance equipment : As per D&IVI test specification			ÜK

Signature of Loco testing staff

Signature of SSE/Shop



Issue No.: 03

Effective Date: April-2021

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

डीजल रेळइंजन आधुनिकीकरण कारखाना पटियाला। DIESEL LOCO MODERNISATION WORKS, PATIALA

ELECTRIC LOCO CHECK SHEET

LOCO NO: 41530

Rly: FR

Shed: GMO

S. No.	ITEM TO BE CHECKED	Specified Value	Ob	served V	alue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	-GK	NOT A	phicop	08
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2.	ОК	GK		
1.3	Check proper of Fitment of oil cooling unit (OCU).	ОК	00		
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its	OK	OK)	
1.5	Check proper Fitment of FB panel on its position.	OK	0		
1.6	Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2.	OK	OK	7	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK	010		
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK	OK		
1.10	Check proper fitment, torquing & Locking of Main transformer bolt.	OK	6	1	85
1.12	Check proper fitment of compressor both side with the compressor safety wire rope.	ОК	6		
1.13	Proper setting of the dampers as required.	OK	01		
1.14	Check proper position of Secondary Helical Springs between Bogie &	OK	01		
1.15	Check proper fitment of Body Bogie Safety Chains fitted properly.	OK	01		
1.16	Check proper fitment of Cow catcher.	OK		C	
1.17	Check coolant level in SR 1 & 2 Expansion Tank	ОК		K	
1.18	Check Transformer Oil Level in both conservators Tank (Breather	OK		K	
1.19	Cattle Guard Height (150 mm) Drg No IB061-00160.	150 mm		310	
1.20	Check proper fitment of both battery box.	ОК		319	
1.21	Check proper fitment of Push Pull rod its bolt torquing and safety slings.	ОК		312	
1.22	Buffer height: Range (1085 mm to 1105 mm) Drg No IB031-02002.	1085-1105 mm		L/S	R/S
			FRONT	1105	1105
	2 18		REAR	1093	1100
1.23	Buffer Length: Range (633.5 mm to 637 Mm) Drg No-SK.DL-4748.	633.5 - 637 mm		L/S	R/S
			FRONT	634	637
			REAR	637	637
1.25	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S
		mm,-12 mm	FRONT	118	119
			REAR	117	118
1.26	CBC Height: Range (1085 mm to 1105 mm) Drg No- IB031-02002	1085-1105 mm	FRONT:	1103	
			REAR:	1090	100

(Signature of SSE/Elect. Loco)

NAME<u>BUUPIND</u>ERSINGH DATE 0269 N

(Signature of JE/Elect Loco)

DATE 02/09/2

(Signature of JE/UF)

NAME SANTA CUMAN

DATE 02/09/

			EL LOCO MODERNISATION WORKS LOCO NO -: 41530 Under frame component		
s.n. d	escrition of component	PL No.	Make	Mfg. date & Serial no.	Warrar
1 S	hell	29171064	SELVOC ENGG. WORKS	02/33,08/21	
2 N	Nain Transformer	29731057	AB8	ABB-65-07-21-2XYT000000-ABY-026, 2021	
3 C	onservator Tank BREATHER	29731057	YOGYA ENTERPRISES	21-0661 , 21-0638	
4 C	ompressor both side	29511008		EUAS926193(04/21), EUAS926195(04/21)	
5 B	attery Box both side		CHANDRA UDOYGA ,BBSS	05-21,4621/14 (07/21)	As per PO condition
5 T	raction Bar Cab-1	29100069	KMRI	6606-03-21	- 등
7 T	raction Bar Cab-2	29100069	KMRI	6608-03-21	- 5
s Si	ide Buffer Assly Both Side	11803587		LP04-21-255,05-21-015,LP04-21-563,04-21-165	1 0
	il Cooling Pump both Side	 	SAMAL HARAND OF INDIA PVT.LTD.		니 만
	ransformer oil Steel pipes		RANFLEX INDIA PVT.LTD.	D2472 & D2460	be
	oft Draft Gear (CBC)	23230044		02.04.00.04	48
	econdry Helical Spring on Bogie	20045024	RIL	02-21 ,02-21	1
	LASTIC RING (Center pivot Ring)		G.B. SPRING PVT. LTD.		
		29100010	<u> </u>		
	enter Pivot Housing	29100057		339-04-21 ,338-04-21	
TH	otel Load Contactor	29741087	Machine room Component cab 1		
	otel Load Converter				
	M-Blower	29741087	AIR CONTROL & CUSTAVGAV FAVOR 1770 0	0.2.2.2.2.2.2.2.2.2.2.2.2.2.2.2.2.2.2.2	
	VI-Scavenging Blower Motor		AIR CONTROL & CHEMICAL ENGG. LTD &	05/21 AC-45484, CGLUEAM-0090	
	killary Control Cubical (HB-1)		SAMAL HARAND	04/21 CF30/D5299	
meter formanie			TROLEX	06/21 & 21469	As per PO condition
	Iter Cubical (FB-1)		AUTIMETER ALLIANCE	06/21 & AALN/06/2021/01/FB/005	<u> </u>
	omplete Control Cubicle SB-1		KAYSONS ELECTRICALS	08/21 & KEPCO/SB1/100	_
	ehicle Control Unit (VCU)		BOMBARDIER	BTIL/06/2021/23/PROPULSION_A/1573	0
	ux. Converter (BUR) 1		BOMBARDIER	06/21 & 2021F/10578/57A/0859	U.
	I Cooling Unit (OCU)		SAINI ELECTICALS	07/21 & 321061810 FAN-32106AF1810	₩ be
	CU RADIATOR	29470031	STANDAR RADIATORS	04/21 & 337-SRPL	As
-	/C Room Blower	29440105	AIR CONTROL & CHEMICAL ENGG. LTD &	03/21 & AC-45391, CGLUAAM-13951	
	/C Room Scavenging Blower	29440129	AIR CONTROL & CHEMICAL ENGG, LTD &	06/21 & AC-46549, CGLUDBM-17113	
	action Convertor	29741075	BOMBARDIER	BTIL/08/2021/19/PROPULSION_A/1723	
Ho	etel load convertor I.V. Coupler	29741087	THE TOWNS AND THE STREET		
1			MACHINE ROOM COMPONENT Cab	-2	
	otel Load Contactor	29741087		and drawn	
-	otel Load Converter	29741087		NAME OF THE PARTY	
	A-Blower			05/21 AC-45492, CGLUEAM-0209	
	4- Scavenging Blower Motor		SAMAL HARAND	D4/21 & CF30/D5300	As per PO condition
and the same of	cillary Control Cubical HB-2		KAYSONS ELECTRICALS	06/21 & KSEL/HB2/099	- H
	ehicle Control Unit (VCU)		TROLEX INDIA PVT. LTD.	07/21 & 21831	_
	ix. Converter (BUR) 2&3		BOMBARDIER BOMBARDIER	BTIL/06/2021/23/PROPULSION_A/1574	1 0
	l Cooling Unit (OCU)		BOMBARDIER SAINI ELECTICALS	06/21 & 2021F/10578/58B/0860	D O
	CU RADIATOR		STANDAR RADIATORS	07/21 & 321061801 & FAN-321 06A F1801 04/21 & 341-SRPL	Se J
	/C Room blower			03/21 & AC-45387, CGLUAAM-11854	S
mer Proceedings	/C Room Scav. blower			06/21 & AC-45387, CGLUAAM-11854 06/21 & AC-46547, CGLUD B M-17047	-
-	action Convertor		BOMBARDIER	BTIL/08/2021/19/PROPULSION_A/1724	-
	itel load convertor I.V. Coupler	29741073		0114 30/2021/13/FROFULSION_A/1724	
1	- Sa control of the couplet	2771007	Driver Cabin		1
На	and Brake	29140050	Mechwell modified hand brake com	12308	
	r Conditioner	29811028	INTEC CORPORATION	21C776 , 21C785	2 6
Ca	b Heater	29170011		330, 352	di e
Cre	ew Fans	29470080		455, 500, 484, 542	As per PO condition
Inc	iver Seats	29171131	EASTRIN EQP.	78, 67, 69, 75	1 4 0

SIGN (1004) 2 NAME BHYRIAIDER SINOH SSE/LAS SIGN NAME SOTOSH KUMPR JE/LAS

DMW/PTA

ELECTRIC LOCO HISTORY SHEET (TRS)

ELECTRIC LOCO NO: 41530 LIST OF ITEMS FITTED BY TRS

SHED: GMO

RLY: ECR

PROPULSION SYSTEM: BT

WARRANTY	COVERED					9			CONDITIONS			e * 0			
QPL		04 Nos.	02 Set	04 Set	04 Nos.	02 Set	04 Nos.	02 Nos.	02 Set	02 Nos.	02 Nos.	02 Nos.	01 Set	01 Set	01 Set
MAKE/SUPPLIER		M/s PCE	M/s SCS	M/s POWER TECH	M/s EIC	M/s TOP GRIP	M/s. RANJAN	M/s AUTOMETER	M/s. KEPCO	M/s. KEPCO	M/s PATRA & CHANDA	Ms. TROLEX	M/s AUTOMETER		
SR. NO.	CAB-2	6/2021	FLE03640	4568,4541	2522,2538	352	500,455	AALN/05/2021/022/ MCT/040	KEPCO/A1/1853	KEPCO/CUF/122	PCE/970/3/970	7424	MTELS-2106124	No 230 maintenance kit)	
ITEM SR. NO	CAB-1	6/2021	FLE03604	4530,4492	2732,2633	330	542,484	AALN/05/2021/015/ MCT/033	KEPCO/A1/1856	KEPCO/CUF/125	PCE/960/3/2021	7477	MTELM-2106124	Battery Set No 230 (Along with Battery maintenance kit)	
ITEM PL	NO.	29610023	25984962	25984860	29610461	29170011	29470080	29860015	29178204	29178162	29700012	29500059	29200040	29680025	29600418
DESCRIPTION OF ITEM		HEAD LIGHT LAMP	LED BASED FL LIGHT	LED MARKER LIGHT	DRIVER CAB LIGHT	CAB HEATER	CREW FAN	MASTER CONTROLLER	COMPLETE PANEL A,C,D	COMPLETE CUBICLE- F PANEL	HEATER ROTERY SWITCH	DIFFRENCIAL AMPLIFIRE	SPEED IND. & REC. SYSTEM	BATTERY (Ni- Cd)	HARNESSED CABLE COMPLETE
NS	=	~	2	m	4	2	9		ω	o o	10	<u></u>	12	13	41





	3	_	-
	/		0)
1	2	1	2
1	4	,	3
I	-	-	1

	Warrantv	Á												STEED OF ONLY SU	S per may r o conditions									
		Sr. no.	10339-07/21 10369 021	10065 04/21 10048 04/21	10003-04/21,10046-04/21	,,, co ,c/, co	17/71,07/71		21/05/2346	2020/51460418	VCBA 2107145	12/1911/10	T-1 -2) -1/ 12/ 12/ 12/ 12/ 12/ 12/ 12/ 12/ 12/ 1	LEFL/ NF/ 883	AALN/06/2021/030/ES/167	HA13032715,HA13032724		FUAS 9261954 &FILAS 926193B	2413-06-21	RC 392-3-71	12-02 0-21	21 10 WACO 1523	531 0304 F21 000B	L ZI-USSA, L ZI-UUSB
ROOF COMPONENT CAR 1 8 3	NOOF COMPONEIN CAB I & 2	Supplier	Contransys Private Ltd. Kolkata	Contransvs Private Ltd Kolkata	VIKRANT	BHFI		MIDDLE ROOF COMPONENT	EIPL	RITZ	AUTOMETER ALIANCE	BHEL	Elicos engineering	ALITOMOTHER ALIANOT	ACTOMICIEN ACIAINCE	ABB	Air Brake Components		PRAG	CEC	Elgi	FAIVELY	faivelev	f-10.10
		QPL /Nos.	2	2	2	o c			1	1	1	6	1	-	1	2		2	1	1	4	T	2	C
		Description	Pantograph	Servo motor	Air Intake filter Assly	Insulator Panto Mtg.			High Voltage Bushing	Voltage Transformer	Vacuum Circuit Breaker VCB	Insulator Roof line	Harmonic Filter	Earth Switch	- T	surge Arrester		Air Compressor	Air Dryer	Auxillary Compresssor	Wiper Motor	Air Brake Panel	Contoller	Breakin Valve
	12	S.NO.	1	2	3	4			5	9	7	8	6	10		11			13	14	15	16 /	17 (18

SSE/Testing

SSE/ABS



DIESEL LOCO MODERNISATION WORKS

Loco No. 41530

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	DLN		
FRONT		901/01/POT 12:00 C 2:00	PL No.	PO No. & dt.	Warranty Period
	SL-1090	ECBT		100074	As per PO/IRS
REAR	SL-1091	ECBT	29105146		conditions
				100074	

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: ESCORT

3. AXLES:

AXLE POSITION NO	1	2	2	Ι		
D. // A. I. / E. /	· ·		3	4	5	6
MAKE/	DMW	DMW	DMW	DMW	DMW	DMW
S.NO	21511	21536	21567	21531		
Ultrasonic Testing	014		21007	21531	21432	21471
ortrasonic resting	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	Г	
GEAR END	CNC/21- 775	CNC/21- 794	CNC/21- 860	CNC/21-	5 CNC/21-	6 21-820
Ultrasonic Testing	OK	OK	OK	781 OK	645 OK	OK
FREE END	CNC/21- 777	CNC/21- 789	CNC/21- 859	CNC/21- 783	CNC/21-	21-807
Ultrasonic Testing	OK	OK	OK	OK	643 OK	OK

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	2	T .		
0	MANICE	1		3	4	5	6
Gear	MAKE	SKF	NBC	NBC	SKF	SKF	NBC
End	PO NO. & dt	771678	771567	774507	7710-	815	
	MARKE		771307	771567	771678	771678	771567
Free	MAKE	SKF	NBC	NBC	SKF	SKF	NBC
End	PO NO. & dt	771678	771507	774507	12-02-010		
		111010	771567	771567	771678	771678	771567

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2				- 1
			3	4	5	6
BULL GEAR END	855	903	957	913	866	050
FREE END	880	005		0.10	000	852
- LIVE	000	825	975	908	899	935



Loco No. 41530

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1093	1093	1093	1093	1093	1093
DIA IN mm FE	1093	1093	1093	1093	1093	1093
WHEEL PROFILE GAUGE (1596±0.5mm)	ОК	OK	OK	OK	OK	ОК

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITIO	NO NO	1	2	3	4	5	6
S.T.	MAKE	KPE	KPE	KPE	KPE	IN	KPE
G.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KP	KP	KP	KP	KP	KP
BACKLASH (0.254 – 0.458mm)	0.350	0.340	0.310	0.330	0.350	0.340

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	16.59	18.19	17.70	15.63	17.91	15.59
LEFT SIDE	17	16.66	17.15	15.71	16.40	16.34

11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	DMW	-	DMW-560
2	DMW	-	DMW-569
3	DMW	-	DMW-689
4	DMW	-	DMW-747
5	DMW	-	DMW-704
6	DMW	-	DMW-675

Q

SSE/ Bogie Shop



/	-
61	0)
14	1
-	

9 11 6 t			-
As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMIMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	
BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TIMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	
29180016	29480140	29942007	
Ŋ	9		

1	-	7	
1	N	1	
(-1		,
-	_		

	Σ		T	
As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.
29105146	29171192	29171210	29171209	29171180
∞	б	10	11	12