


# भारतीय रेल Indian Railways

डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला शिंदइर्ध श्रेण्ट Modernation Chocks, Patiala

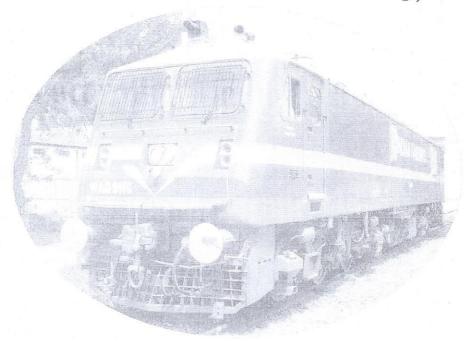

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

TYPE:

RAILWAY SHED:

PROPULSION SYSTEM:

DATE OF DISPATCH:

41544

WAG9HC

WCR/NKJ

BT

09.10.2021

लोको निर्माण रिकार्ड



# डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernisation Chorks, Patiala

LOCO NO.: 41544

RAILWAY/SHED: WCR/NKJ DOD: OCOTOBER 2021

#### INDEX

SN	PARA	ACTIVITIES	PAGE NO
		Testing & Commissioning (TRS)	
1.	1.0	Continuity Test of the cables	
	1.1	Continuity Test of Traction Circuit Cables	
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4
	1.3	Continuity Test of Battery Circuit Cables	
	1.4	Continuity Test of Screened Control Circuit Cables	
2.	2.0	Low Tension test	
	2.1	Measurement of resistor in OHMS ( $\Omega$ )	<i>F</i> 0
	2.2	Check Points	5-6
0	2.3	Low Tension Test Battery Circuits (without control electronics)	
3 -	3.0	Downloading of Software	
	3.1	Check Points	
	3.2	Download Software	7-10
	3.3	Analogue Signal Checking	
	3.4	Functional test in simulation mode	
4	4.0	Sensor test & convertor test	
	4.1	Test wiring Transformer Circuits – Polarity Test	
	. 4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)	
	4.3	Primary Voltage Transformer	
	4.4	Minimum voltage relay (Pos. 86)	11-16
	4.5	Maximum current relay (Pos. 78)	11-10
	4.6 4.7	Test current sensors	
	4.8	Test DC Link Voltage Sensors (Pos 15.6/*)	- 1
	4.9	Verification of Converter Protection Circuits (Hardware limits) Sequence of BUR contactors	
5.	5.0	Commissioning with High Voltage	
	5.1	Check List	
	5.2	Safety test main circuit breaker	
	5.3	Auxiliary Converter Commissioning	
	5.3.1	Running test of 3 ph. auxiliary equipments	
	5.3.2	Performance of Auxiliary Converters	
	5.3.3	Performance of BURs when one BUR goes out	16-25
	5.4	Auxiliary circuit 415/110	10-25
	5.5	Hotel Load Circuit	
	5.6	Traction Converter Commissioning	
	5.7	Test protective shutdown SR	
	5.8	Test Harmonic Filter	
	5.9	Test important components of the locomotive	22
	6.0	Running Trial of the locomotive	25-26
	7.0	Final Check List to be verified at the time of Loco dispatch	27
	8.0	Status of RDSO modifications	28
	1-10	Pneumatic Test Parameters	29 - 32
2.		Loco Check Sheet(LRS)	33
1.		Component History (LRS,TRS,ABS)	34-36
2.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
3-	-	Warranty Conditions as per Tenders	39 -41

# DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

41544 Locomotive No.: 1.0 Continuity Test of the cables Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	ok	100 ΜΩ	1500
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	ok	100 ΜΩ	1500
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	1500.
Earthing Choke	Earth Return Brushes	ok	100 ΜΩ	150
Transformer	Power Converter 1	ok .	100 ΜΩ	1500
Transformer	Power Converter 2	Ok	100 ΜΩ	1500
Power Converter 1	TM1, TM2, TM3	ok	100 ΜΩ	1500
Power Converter 2	TM4, TM5, TM6	Ok	100 ΜΩ	1500
Earth	Power Converter 1	OK	100 ΜΩ	2000
Earth	Power Converter 2		100 ΜΩ	2000

# 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 ΜΩ	1000
Transformer	BUR2	OK	100 ΜΩ	1000
Transformer	BUR3	ok	100 MΩ	1000
Earth	BUR1	OK	100 MΩ	1500
Earth	BUR2	ok	100 MΩ	1500
Earth	BUR3	OK	100 ΜΩ	1900
BUR1	HB1	ok	100 MΩ	1500
BUR2	HB2	OK	100 ΜΩ	1500
HB1	HB2	ok	100 ΜΩ	1500
HB1	TM Blower 1	ok	100 ΜΩ	1900
HB1	TM Scavenge Blower 1	ok	100 ΜΩ	200
HB1	Oil Cooling Unit 1	0 k	100 ΜΩ	200
HB1	Compressor 1	OK	100 MΩ	200
HB1	TFP Oil Pump 1	OK.	100 ΜΩ	150
HB1	Converter Coolant Pump 1	ek.	100 ΜΩ	200
HB1	MR Blower 1	OK	100 MΩ	200
HB1	MR Scavenge Blower 1	OK	100 MΩ	150
HB1	Cab1	ok.	100 MΩ	150
Cab1	Cab Heater 1	OK	100 MΩ	200
HB2	TM Blower 2	OK	100 MΩ	200
HB2	TM Scavenge Blower 2	OK	100 ΜΩ	200
HB2	Oil Cooling Unit 2	ok	100 ΜΩ	200
HB2	Compressor 2	OK OK	100 ΜΩ	200
HB2	TFP Oil Pump 2	OK	100 MΩ	200
HB2	Converter Coolant Pump 2		100 ΜΩ	200
HB2	MR Blower 2	OK	100 ΜΩ	150
HB2	MR Scavenge Blower 2	ok	100 ΜΩ	150
HB2	Cab2	ok	100 ΜΩ	200
Cab2	Cab Heater 2	ok	100 MΩ	150

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	DK
Battery (Wire no. 2052)	Connector 50.X7-2		ÐK_
SB2 (Wire no 2050)	Connector 50.X7-3		OK

Close the MCB 112, 110, 112.1, and 310.4 and measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	Prescribed value $> 0.5~\text{M}\Omega$	Measured  Value  MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 & 2050	Prescribed value: $> 50 \ M\Omega$	Measured  Value  60 MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

# 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	·04B	OK
Memotel circuit of cab1 &2	10A	OK
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	ok

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	OK
Terminal fault indication cab-1 & 2	09F	DIR
Brake pipe pressure actual BE electric	06H	OK
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	OK
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	OK.
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	DK-
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	OK .
Traction motor speed sensors (2 nos) and temperature sensors (1 no.) of TM-3	12D	OK.
Traction motor speed sensors (2 nos.)	12H	OK
and temperature sensors (1 no.) of TM-4  Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	de
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OK
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing	13A	OK
resistance= 10K <b>Ω</b> ± ± 10%)		
UIC line	13B	OK
Connection FLG1-Box TB	. 13A	Ove

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS ( $\Omega$ )

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K <b>Ω</b> ± 10%	3.9 KM
Resister to maximum current relay.	1 <b>Ω</b> ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3.35
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.22
Between wire 6 & 7	0.2 Ω	0.25
Between wire 5 & 7	0.4 Ω	0.4.52
For train bus, line U13A to earthing.	10 kΩ± 10%	10.045
For train bus, line U13B to earthing.	10 k <b>Ω</b> ± 10%	10.01 KZ
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	40 om 12
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.281
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.2952
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.28.0
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	<b>2.2 kΩ</b> ± 10%	2.2K2
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	2.7K2
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	3,950
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.8 KV
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	390N
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k <b>Ω</b> ± 10%	reA
Resistance for headlight dimmer; Pos. 332.3.	10 <b>Ω</b> ± 10%	,0-52

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	cheered or
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheesedou

#### 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	cheeped on
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	ox
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	δĽ
Test control Pneumatic devices	Sheets of Group 06	OK.
Test lighting control	Sheets of Group 07	OK
Pretest speedometer	Sheets of Group 10	οK
Pretest vigilance control and fire system	Sheets of Group 11	OK
Power supply train bus	Sheets of Group 13	OK

for the second

# DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

41112 No. 111544

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

Loco	omotive No.: 91311
3.0	Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

of opulsion equipment to be ensured and noted.	
Traction converter-1 software version:	1.0.3.6
Traction converter-2 software version:	1.0.3.6
Auxiliary converter-1 software version:	1.8.2.2
Auxiliary converter-2 software version:	2.8.2.2
Auxiliary converter-3 software version:	3.8.2.2
Vehicle control unit -1 software version:	1,6,8.7
Vehicle control unit -2 software version:	1.6.8.7

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OIL
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB 0101- Xang Trans	Between 9% and 11 %	25
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	ok.
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	DK-

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/544

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	ÐΚ
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	OK
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	OK
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	OK
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	38°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	38°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	37.5°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot		38 4 C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot		
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	27.500

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

#### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	cheered ou
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	chercel ox
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed.  By moving reverser handle:  Converter pre-charging contactor 12.3 must close after few seconds.  Converter contactor 12.4 must close.  Converter re-charging contactor 12.3 must opens.  By increasing TE/BE throttle:  FB contactor 8.41 must open.  FB contactor 8.2 must close.  FB contactor 8.1 must close.	checkeelok
Converter and filter contactor operation with both Power Converters during Shut Down.	Bring TE/BE to O. Bring the cab activation key to "O"  VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed.	

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

ontactor filter adaptation by	Isolate any one bogie through bogie cut out switch. Wait for self-test of	
olating any bogie	the loco.	
	• Check that FB contactor 8.1 is open.	
	check that FB contactor 8.2 is open	cheeredon
	• Check that FB contactor 8.2 is open.	1
	After raising panto, closing VCB, and	
	setting TE/BE	
	• FB contactor 8.1 closes.	
	• FB contactor 8.2 remains open.	<u>J</u>
Test earth fault detection battery	By connecting wire 2050 to	)
circuit positive & negative	earth, create earth fault	
en cure positivo 1.	negative potential.	0
	message for earth fault	, checked on
	By connecting wire 2095	di ne-
	to earth, create earth	
	fault positive potential.	
	message for earth fault	
	- Message is	)
Constant make in	When smoke sensor-1 gets	)
Test fire system. Create a smoke in	activated then	* *
the machine room near the FDU.	Alarm triggers and fault	
Watch for activation of alarm.	message priority 2	7
	appears on screen.	
	When both smoke sensor	> checked on
	1+2 gets activated then	
	A fault message priority	
	1 appears on screen and	
	lamp LSF1 glow.	-
	<ul> <li>Start/Running interlock occurs and</li> </ul>	
	TE/BE becomes to 0.	<u> </u>
Time, date & loco number	Ensure correct date time and Loco	DIE
Time, date & loco number	number	10
	13	

# (Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A-804A	10.05V <sub>p</sub> and same polarity	10.0400	OK
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A-814A	10.05V <sub>p</sub> and same polarity	10.0478	0K
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B-804B.	10.05V <sub>p</sub> and same polarity	10.0340	OK
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0470	OK.
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.88P 9	
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.10VP 6.44Vpms	POK

#### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203-1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	output	Measured polarity
Cable no. 1218 - 1200	59.7V 41.5Vaus and opposite polarity.	586 VP 41.4 V RM	DIL
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15-4V8)	04

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

# 4.3 Primary Voltage Transformer

Apply  $250V_{eff}/350V_p$  by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	voltmeter	Monitored value in SR diagnostic tool
OLGI C 97 VIIDrim	25kV	250%	25KV	250%
SLG1_G 87-XUPrim SLG2_G 87-XUPrim	25 kV	250%	25KV	250-1

Decrease the supply voltage below 140  $V_{RMS}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
17kV	170%	17KY	170%
17.60	170%	1745	170%
		catenary voltmeter value in Micview	value in value in Micview value in catenary voltmeter  17kV 170% 17KV

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
OLGI C 97 VIIDrim	30kV	300%	30KV	300%
SLG1_G 87-XUPrim SLG2 G 87-XUPrim	30 kV	300%	30Kn	300%

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.:

(Pos. 86) picks up

working

41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

# 4.4 Minimum voltage relay (Pos. 86)

Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V<sub>RMS</sub> through variac. In this case; *Minimum voltage relay* 

(Yes/No)

(Yes/No)

Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.

Turn off the variac : Contactor 218 closes; the control electronics is be (Yes/No)

Test Under Voltage Protection;

Activate the cab in cooling mode; Raise panto; Supply 200V<sub>RMS</sub> through variac to wire no. 1501 & 1502; Close the VCB; Interrupt the supply voltage

(Yes/No)

voltage The VCB goes off after 2 second time delay.

Again supply 200V<sub>RMS</sub> through variac to wire no. 1501 & 1502; Decrease the supply voltage below

(Yes/No)

 $140V_{RMS} \pm 4V$ ;

Fine tune the minimum voltage relay so that VCB opens.

# 4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current transformer; Connect variac to wire 1521 &1522 (including the resistor at Pos. 6.11); Put loco in simulation for driving mode; Open  $R_3 - R_4$  on contact 136.3; Close VCB; supply 3.6A<sub>RMS</sub> at the open wire 1521; Tune the drum of the maximum current relay Pos. 78 for correct over current value;

VCB opens with Priority 1 fault message on display.

L(Yes/No)

Keep contact  $R_3$  –  $R_4$  of 136.3 closed; Close VCB; Tune the resistor 78.1 for the current of 7.0A<sub>RMS</sub> /9.9A<sub>p</sub> at the open wire 1521;

VCB opens with Priority 1 fault message on display.

(Yes/No)

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

#### 4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298 mp
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		
	Supply $333\text{mA}_{DC}$ to the test winding of sensor through connector $415.\text{AC}/1$ or 2 pin no. $7(+)$ & $8(-)$		320mB
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		Byomb
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8 8(-)	Jan	NA
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	MA

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

# 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	should take place Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OV

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

#### Monitored contactor sequence

Officored conta	ictor seq							- 1.	-0-10
Chabus	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Status	32/1	3212		1	0000	oben	clos	close	open
AI BUR OK	closs	open	clos	open	cles	-		oben	Close
BUR1 off	closs	open	clos	clos	open	clos	Open	<u> </u>	0
BUR2 off	open	oper	clas	clos	ober	clos	oper	open	clos
	-	1	ober	Class	oper	Clas	Open	oper	clos
BUR3 off	oper	close	ope	all	ope		•		

# 5.0 Commissioning with High Voltage

#### 5.1 Check List

ems to be checked	Yes/No
	Yes
bre optic cables connected correctly.	
o rubbish in machine room, on the roof, under the loco.	Yes
ll the electronic Sub-D and connectors connected	Yes
III the MCBs of the HB1 & HB2 open.	Yes
Ill the three fuses $40/*$ of the auxiliary converters	Yes
he fuse of the 415/110V auxiliary circuit (in HB1) open.	tes
Roof to roof earthing and roof to cab earthing done	Y03
ixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Tes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Yes

# 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC Page : 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	chelfedor
Emergency stop	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cheered or
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	chercedor
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	chercolox
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	Panto must lower.	chekedon
Interlocking pantograph-VCB in cooling mode	Raise panto in cooling mode. Close the VCB.  Lower the pantograph by ZPT	VCB must open.	chelkeelon
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Clos the VCB. Lower the pantograph b ZPT	VCB must open.	choekedou

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	9.6	10.5
Oil pump transformer 2	9.8 amps	10.0	11.0
Coolant pump converter 1	19.6 amps	5.3	6.3
Coolant pump converter 2	19.6 amps	5.4	6.5
Oil cooling blower unit 1	40.0 amps	42.0	150.0
Oil cooling blower unit 2	40.0 amps	40.0	143.0
Traction motor blower 1	34.0 amps	297	136.0
Traction motor blower 2	34.0 amps	30.4	138.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.6	7.8
Sc. Blower to Traction motor blower 1	6.0 amps	4.8	8.7
Compressor 1	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	24.3	72.0
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	25.0	100.0

Ser

(Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
Input voltage to BUR1	75% (10%=125V)	1048V	yes
C DUID4	60% (10%=100V)	636V	Yes
430000000000000000000000000000000000000	0% (10%=50A)	1 Am	Yes
		Input voltage to BUR1 75% (10%=125V)  DC link voltage of BUR1 60% (10%=100V)	Input voltage to BUR1 $75\% (10\%=125\text{V})$ $19\% \text{V}$ DC link voltage of BUR1 $60\% (10\%=100\text{V})$ $636\% \text{V}$

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1050V	70
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	638V	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	TAM	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	arAmp	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12Am)	res
BUR2 7303 –XUUB	Voltage battery of BUR2	110%(10%=10V)	110~	Yes

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by

commissioning engineer of the firm.

commissioning engli Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1050	79
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	6381	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Amp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	2200	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12/2m	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	Yes

\* Readings are dependent upon charging condition of the battery.

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery ( charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

#### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase	Measured phase current	Measured starting current
	current		
Machine room blower 1	15.0 amps*	7.7	25.3
Machine room blower 2	15.0 amps*	8.0	28.0
Sc. Blower to MR blower 1	1.3 amps	1.8	10.2
Sc. Blower to MR blower 2	1.3 amps	1.8	10.3
Ventilator cab heater 1	1.1 amps	0.9	1,0
Ventilator cab heater 2	1.1 amps	0.9	6.1
Cab heater 1	4.8 amps	5-1	5'3
Cab heater 2	4.8 amps	5.1	53

<sup>\*</sup> For indigenous MR blowers.

As

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 1544

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

#### 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### 5.6 Traction Converter Commissioning

#### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherredal
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chelledou
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chelkedou
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chelleed one
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheucelou
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chercal ou
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chelkedow

fr

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

#### For Converter 2

CSC   another	Results desired in sequence	Result obtained
charging and pre-	raction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chelkeelou
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherroelou
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chereelou
Earth fault detection on negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	chelfedou
Earth fault detection on AC part of the traction circuit of Converter 2.	declare the successful operation and demonstrate the same to the DMW supervisor.	chelkedon
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	e foliced or
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chalkeelok

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

t up the loco with both the verter. Raise panto. Close VCB. The Reverser handle to forward or erse. Remove one of the orange er optic feedback cable from verter 1Check that converter 1 tronics produces a protective shut on.  CB goes off	o cheesed se
iority 1 fault mesg. on DDU	
Disturbance in Converter 1	
vn.	cheekeelod
	erse. Remove one of the orange e optic feedback cable from verter 2. Check that converter 2 ctronics produces a protective shut

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	g cheuceelow

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1must open. FB discharging contactor 8.41 must close Check the filter current in
	diagnostic laptop  Make a connection between wire
Test earth fault detection harmonic filter circuit.	no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW

# 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	chelked ou
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	In .
Ni-Cd battery voltage	i l l li militaga shauld ha	chelled so
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Cherkeel on
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	chelkeelon



# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	chelledou
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	chelped on
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	chelped ou
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	chelled on
Illuminated Push button	All illuminated push buttons should glow during the operation	
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1:2
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m <sup>3</sup> /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### 6.0 Running Trial of the locomotive

SN	Description of the items to	Action which should take place	Remarks
1	be seen during trail run  Cab activation in driving  mode	No fault message should appear on the diagnostic panel of the loco.	chelical
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	cheuced
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	cheused
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75</li> <li>Kg/cm<sup>2</sup>, by pressing BPCS again.</li> </ul>	Chellad
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	e Louceau

# DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

j.	Check vigilance	Set the speed more than 1.5 kmph and ensure that
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .
	locomotive	For 60 seconds do not press vigilance foot switch or
	16	sanding foots switch or TE/BE throttle or BPVG
	11	switch then
		Buzzer should start buzzing.
		• LSVW should glow continuously.
		Do not acknowledge the alarm through BPVG or
	W .	vigilance foot switch further for 8 seconds then:-
		Emergency brake should be applied
		automatically.
		VCB should be switched off.
		Resetting of this penalty brake is possible only after
	<i>Y</i> **	180 seconds by bringing TE/BE throttle to 0 and
		acknowledge BPVR and press & release vigilance
		foot switch.
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).
/.	Check start/run interiori	• With park brake in applied condition.
		• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).
		• With direct loco brake applied (BPSA 75Kg/cm²). Schoekeel &
		With automatic train brake applied (b) (4.73)(g) (1.77)
	Na Carlotte	• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).
8.	Check traction interlock	Switch of the brake electronics. The
		Tractive /Braking effort should ramp down, VCB should open and BP reduces rapidly.  Bring the TE/BE throttle to BE side. Loco speed
		should open and BP reduces rapidly.
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed
	braking.	should start reducing.
10.	Check for BUR	In the event of failure of one BUR, rest of the two
	redundancy test at	BURs can take the load of all the auxiliaries. For this
	ventilation level 1 & 3 of	switch off one BUR.
	loco operation	Auxiliaries should be catered by rest of two BURs.
	Total Control of Contr	Switch off the 2 BURs; loco should trip in this case.
11.	Check the power	Create disturbance in power converter by switching
	converter	off the electronics. VCB should open and converter
	isolation test	should get isolated and traction is possible with
	ISOlution test	another power converter.

# DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41544

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

# 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

N	Item	Cab-1	Cab-2	Remarks
1	Head lights	1014	OVE	
2	Marker Red	OV	014	
3	Marker White	OK.	OK	
4	Cab Lights	OK	OK	
5	Dr Spot Light	OV	OK	cheeked worthing
6	Asst Dr Spot Light	OK	ore	
7	Flasher Light	OK	OK	
8	Instrument Lights	OK	OK	9
9	Corridor Light	OK	OK	*
10	Cab Fans	OK	OK	
11	Cab Heater/Blowers	or.	DC	
12	All Cab Signal Lamps Panel 'A'	OK	214	

# Status of RDSO modifications



LOCO NO:

S	modification No.	Description	
1			Remarks
	Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Hea Light of three phase electric locomotives.	
2	RDSO/2009/EL/MS/03* Rev.'0' Dt 22.04.09	77 Modification to voltage songing	Ok/Not Ok
3.	RDSO/2010/EL/MS/030	locomotives.	1 OK/NO+ OL
4.	Rev.'0' Dt 31.12.10	three phase locomotives to improve and Relays of	of Ok/Not Ok
5.	Rev.'0' Dt 08.08.11	from MCPA circuit	6 01/11 0
	RDSO/2011/EL/MS/040 Rev.'0' Dt 10.08.11	KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HR2 panel and	3
6.	RDSO/2011/EL/MS/040 Rev.'0' Dt 10.08.11	Modification sheet for relaying of the locomotives.	
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine rearry's sixty and switching of machine rearry's sixty and switching of machine rearry's sixty and sixty and switching of machine rearry's sixty and switching s	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of termin	Ok/Not Ok
9.	RDSO/2012/EL/MS/0411 Modification		OK/NOT OK
10	Rev.'1' dated 02.11.12 RDSO/2012/EL/MS/0413	locomotives.	Ok/Not Ok
11	Rev.'1' Dt 25.04.16 RDSO/2012/EL/MS/0419	contactors of three phase leave to contactors and auxiliary	Ok/Not Ok
	Rev.'0' Dt 20.12.12 RDSO/2013/EL/MS/0420	Master Controller of three phase locomotives.	Ok/Not Ok
13	Rev.'0' Dt 23.01.13  RDSO/2013/EL/MS/0425	arrangement in Primary Over Current Relay of three phase	Ok/Not Ok
.	Rev.'0' Dt 22.05.13 RDSO/2013/EL/MS/0426	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
5	Rev.'0' Dt 18.07.13	phase electric locomotives	Ok/Not Ok
6	Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
	Rev. 0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
1	Rev.'0' Dt 12.03.14	current relay of three phase clostric to terminal of over	Ok/Not Ok
	Rev.'0' Dt 25.09.17	filter ON (8.1)/adoption (8.2) Contactoring of Harmonic	
) F	RDSO/2017/EL/MS/0467   1	Modification in blocking diodes to improve reliability	Ok/Not Ok
) F	RDSO/2018/EL/MS/0475 N	Modification in existing Control Floatres (AF)	Ok/Not Ok
R	DSO/2019/EL/MS/0477 I	mplementation of push pull scheme.	Ok/Not Ok
I	ev.'0' Dt 18.09.19		Ok/Not Ok

Signature of JE/SSE/TRS

#### DMW/PATIALA

Loco No.: 41544

# PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	Parameters	2.6		
1.0		Reference	Value	Result
1.1	Ensure, Air is completely vented from pantograph			
	Reservoir (Ensure Panto gauge reading is Zero)		0	0
1.2	Turn On BL Key. Now MCPA starts.			
	Record pressure Build up time (8.5kg/cm2)		60 sec. (Max.)	56 Sec
1.3	Auxillary compressor safety Valve 23F setting			
	, and safety valve 251 Setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.5 Kg/cm2
		DMTS-014-1, 8	-	
		CLW's check sheet		
		no. F60.812 Version	1	
1.4	Check VCB Pressure Switch Setting	2		
	Tobal Carrier Setting	CLW's check sheet	Opens 4.5±0.15	4.5 Kg/cm2
		no. F60.812 Version	0,	
1.5	Set pantograph Selector Switch is in Auto Co	2	5.5±0.15 kg/cm2	
1.6	Set pantograph Selector Switch is in Auto, Open pan-1&2! Set Cab-1 Pan UP in Panel A.	solating Cocks & KABA	cock by Key (KABA Key)	
2.0	Set Cab-1 Pail OF III Panel A.		Observed Pan-2	OK
1.7	Close Pan-2 isolating Cock		Rises.	r designation and the second
	Open Pan -2 isolating Cock		Panto-2 Falls Down	OK
1.8			Panto-2 Rises	
1.9	Record Pantograph Rise time		06 to 10 seconds	7 Sec
1.10	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.5 kg/cm2
2.0			Min.	in 5 Min.
	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical	T	
	out all the reservoirs by opening the drain cocks and then	calculation and test		Profession was as
	closed drain cocks. MR air pressure build up time by each	performed by		- Marian Control of the Control of t
	compressor from 0 to 10 kg/cm2.	Railways.		Springer Francis
	i) with 1750 LPM compressor		i) 7 Mts. Max.	6.8 Mts
	ii) with 1450 LPM compressor		ii) 8.5 Mts. Max.	0.0 14172
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	1
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CD1 27 C
	compressors, Check pressure build time of individual		TO Sec. (IVIGA)	CP1-27 Sec
	compressor from 8 kg/cm2 to 9 kg/cm2			CD2 27 5
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	CP2-27 Sec
		MM3882 &	kg/cm2 Opens at	6.5 Kg/cm2
		MM3946	5.60±0.15kg/cm2	5 6 Valama
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	5.6 Kg/cm2
		MM3882 &	kg/cm2 Opens at	10.0 Kg/cm2
		MM3946	8±0.20 kg/cm2	00%-10
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	8.0 Kg/cm2
	The principal section of the principal section	erresuits	a.a Minutes Max.	3.4 minute

# W.M.Q

Page 2 of 4 Loco No.:41544

							.:41544
2.7		r valve operation tin				Approx. 12 Sec.	10 sec
2.8	Check Auto Dr	ain Valve functioning	(124 & 87)			Operates when Compressor starts	10.561
2.9	Check CP-I deli Direct by BLCP	very safety valve set	ting (10/1). Run CP		test spec.	11.50±0.35kg/cm2	11.5 Kg/cm
2.10	direct by BLCP			D&M	test spec.	11.50±0.35kg/cm2	11.5 Kg/cm
2.11	valve to reset a pressure.	the compressors and ensure that the safety at pressure 12 kg/cm2 less than opening  D&M test spec. MM3882 & MM3946					
2.12	by drain cock of check setting p	witch 'OFF' compress of 1" Main Reservoir, oressure of Duplex Ci	sor, Drain MR Pressure Start Compressor, neck Valve 92F.	CI W's che no. F60.8	eck sheet 12 Version 2	5.0+0.10kg/cm2	5.0 Kg/cm2
2.13	FP pressure: Fit Test Gauge 136F. Check pr	in Test point 107F Fl essure in Gauge.	PTP. Open isolate cock	no. F60.8	eck sheet 12 Version 2	6.0±0.20kg/cm2	6.0 Kg/cm2
3.0	Air Dryer Ope						<u> </u>
3.1	Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave open for Test Check Air Dryer Towers to change.			Tower to change i) Every minute (FTIL & SIL) ii)every two minute (KBIL)	ок		
3.2	Check Purge Ai	r Stops from Air Dry	er at Compressor stops				
3.3	Check condition of humidity indicator		Blue	Blue			
4.0	Main Reservoir Leakage Test						
4.1	leakage from b	oth cabs.	Check MR Pressure air	D&M test spec. MM3882 & MM3946		Should be less than 1 kg/cm2 in 15 minutes	0.4 Kg/cm2 in 15 minutes
4.2		Check BP Air leakage (isolate BP charging cock-70)  D&M test spec.  MM3882 & MM3946		TOTAL COLUMN TO SERVICE STATE OF THE SERVICE STATE	0.15 kg/cm2 in 5 minutes	0.06 Kg/cm2 in 5 minutes	
5.0		utomatic Brake op					
5.1	Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  Auto controller position		1	neck sheet .2 Version 2			
			BC (WAG-9 Kg/cm2	9 & WAG-7)	BC (WAP-5) Kg/cm2		
Аленуу танан осой жаза мандалиран жазан жа	3	BP Pressure kg/	cm2	Value	Result	Value	Result
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	
		1		0.40.04		0.75±0.15	
	Initial	4.60±0.1	4.5 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.7510.15	i
	Initial Full service	4.60±0.1 3.35±0.2	4.5 Kg/cm2 3.5 Kg/cm2	0.40±0.1 2.50±0.1	0.40Kg/ cm2 2.5Kg/ cm2	5.15±0.30	



# DMW/PATIALA

Page 3 of 4

Loco No.:41544

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure Automatic Brake Controller handle is Full Service from Run	D&M test spec.	8±2 sec.	9 Sec
5.3	The state of the s	MM3882 & MM3946		d de la constante de la consta
***************************************	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 25 kg/cm2	ОК
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05-4.35 kg/cm2 Opens at BP	4.2 Kg/cm 2.9 Kg/cm
			2.85-3.15 kg/cm2	
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC 5.15 ± 0.3 kg/cm2 apply time WAP7 - BC 2.50 ± 0.1 kg/cm2	D&M test spec. MM3882 & MM3946	1±1 sec.	
	WAG9 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec. 21±3 sec.	22.5
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAG9 / WAP7	D&M test spec. MM3882 & MM3946	17.5±25 sec.	23 Sec
	WAPS WAGI-9		52±7.5 sec.	48 Sec
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	76 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake.  * Allow The MR pressure to build up to maximum stipulated limit.  * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A (Automatic brake controlling) at run position.  * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe.  The test shall be carried out with all the compressors in working condition.	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.2 Kg/cm2
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
5.0	Direct Brake (SA-9)			
5.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.5Kg/cm2
5.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (iviax.)	7 Sec

# Page 4 of 4

#### DMW/PATIALA

Loco No.:41544

6,3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.+0.1 kg/cm2	0.1 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	11 Sec
7.0	Sanding Equipment	1		
7.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	ОК
8.0	Test Vigilance equipment : As per D&ivi test specification			ОК

Signature of Loco testing staff

Signature of SSE/Shop



Issue No.: 03

Effective Date: Oct-2021

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

#### डीजल रेळइंजन आधुनिकीकरण कारखाना पटियाला। DIESEL LOCO MODERNISATION WORKS, PATIALA

ELECTRIC LOCO CHECK SHEET

RIV: WCR Shed: NKJ

S. No.	NO: 4/544 Rly: WCK	Specified Value	Obse	erved Val	ue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	_OK	- NI	9 —	
1.1	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2.	ОК	OK		-
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK	OK		
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its	OK	019	Water Committee of the	
1.5	Check proper Fitment of FB panel on its position.	OK	0 4		
1.6	Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2.	ОК	01		
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	ОК	0	The second second	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	ОК	OK		
$\frac{1.8}{1.10}$	Check proper fitment torquing & Locking of Main transformer bolt.	OK	0	K	
1.12	Check proper fitment of compressor both side with the compressor safety wire rope.	OK	01		-
1.13	Proper setting of the dampers as required.	OK	OK	1	
1.14	Check proper position of Secondary Helical Springs between Bogie & Shell	OK	ok		
	Check proper fitment of Body Bogie Safety Chains fitted properly.	OK	01	(	
1.15	Check proper fitment of Cow catcher.	OK	OK		
1.16		ОК	OK		- VIII-
1.17	Check coolant level in SR 1 & 2 Expansion Tank	ОК	OK		
1.18	Check Transformer Oil Level in both conservators Tank (Breather Tank).	il comment in the second	OK		
1.19	Check proper fitment of both battery box.	OK	( - T		
1.20	Check proper fitment of Push Pull rod its bolt torquing and safety slings.	OK	0	,	
1.21	Buffer height: Range (1085 mm to 1105 mm) Drg No IB031-02002.	1090-1105		L/S	R/S
1.21	build height. Kange (2000	mm	FRONT	1093	1103
			REAR	1090	109
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) <b>Drg No</b> -	641 mm		L/S	R/:
1.22	SK.DL-3430.		FRONT	648	64
			REAR	648	64.
	1 (114 mm 12 mm)	114 mm +		L/S	R/
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	5 mm,-12	FRONT	112	11
		mm	REAR	116	100
	CBC Height: Range (1085 mm to 1105 mm) <b>Drg No- IB031-02002.</b>	1085-1105	FRONT		1
1.24	CBC Height: Range (1085 mm to 1105 mm) Dig No 15031-020021	mm	REAR:	1093	

(Signature of SSE/Elect. Loco)

NAME BHUPINDER SINGH DATE 09 (10)2)

(Signature of JE/Elect Loco)

NAME SATISH KUMAR

DATE 09/10/2/

NAME SANJAY LUMMA DATE 09/10/2

		SEL LOCO MODERNISATION WORKS LOCO NO -:41544 Under frame component		
i.N. Descrition of component	PL No.	Make	Mfg. date & Serial no.	Warrar
1 Shell	29171064	Trident		upto
2 Main Transformer	29731057		12/49, 08/21	
3 Conservator Tank BREATHER	29731057	YOGYA ENTERPRISES	ABB-65-08-21-2XYT000000-ABY-029,2021	
4 Compressor both side	29511008	FLGI	212565	
5 Battery Box both side	29680013		EUDS926501(07/21),EUDS926511(07/21)	-
6 Traction Bar Cab-1	29100069	Bhartia bright & Seamless steel LTD.	A\$25	iti
7 Traction Bar Cab-2	29100069	TEW	2820-4-21	puo
8 Side Buffer Assly Both Side		TEW	3217-04-21	As per PO condition
9 Oil Cooling Pump both Side	11803587	KMRI	LP291-06-21,250-04-21,LP214-01-21,26-01-17	7 8
Transformer oil Steel pipes	29530027	SAMAL HARAND OF INDIA PVT.LTD.	D2684 & D2724	9
1 Soft Draft Gear (CBC)	29230044	RANSAL PVT.LTD		o s
2 Secondry Helical Spring on Bogie	2001500	[FAS	05-21 ,04-21	JA
3 ELASTIC RING ( Center pivot Ring)	29045034	FRONTIER		
4 Center Pivot Housing	29100010	AWADH		
1 Center Fivot Housing	29100057	TEW	3197-04-21 ,3217-04-21	
eyflotel Load Contactor	20744007	Machine room Component cab 1		
Potel Load Converter	29741087	The second secon	- 252444	
3 TM-Blower	29741087	White A state of the state of t	ACTIVE AC	
TM- Scavenging Blower Motor	29440075	IC ELECTRICAL COMPANYP (P)	07/21 & ICMB-210707	
Application of the state of the	29440117	G.T.R CO ( P) LTD.	ST-21-07-207	
Axillary Control Cubical (HB-1)	29171180	HIND RECTIFIER PVT LTD.	05/21 & HB-1/2021/H/0052/368	condition
Filter Cubical (FB-1) Complete Control Cubicle SP 1	29480140	KAYSONS ELECTRICALS PVT. LTD.	07/21 & KSEL/FB/232	=
	29171209	C.G.L	G6/SB-1/21070249	<b>4</b> 5
Vehicle Control Unit (VCU)  Aux. Converter (8UP) 1	29741075	BOMBARDIER	BTIL/09/2021/27/PROPULSION_A/1829	0
	29741075	BOMBARDIER	09/21 & 2021J/10226/1A/0055	2
Oil Cooling Unit (OCU)	29470043	SAINI ELECTICALS	06/21 & 321061790 FAN-32106AF1790	ber
OCU RADIATOR	29470031	APPOLO	08/21 & FG415002/M-2/21-22/377	As
M/C Room Blower	29440105	G.T.R CO ( P) LTD.	07/21 & MF-21-07-129	Q.
M/C Room Scavenging Blower	29440129	AIR CONTROL & CHEMICAL ENGG.	05/21 & AC-45691, CGLUDBM-16639	
Traction Convertor	29741075	BOMBARDIER	BTIL/09/2021/17//PROPULSION_A/1809	
Hotel load convertor I.V. Coupler	29741087	74 (0.00) at a		
Hotel Load Contactor		MACHINE ROOM COMPONENT Cab-	2	
Hotel Load Converter	29741087		4 4 10 V A	-
TM-Blower	29741087	## (P. P. P	Trade Color	
M- Scavenging Blower Motor	29440075	IC ELECTRICAL COMPANYP (P)	07/21 & ICTMB-210716	
Axillary Control Cubical HB-2	29440117	G.T.R CO (P) LTD.	ST-21-07-198	5
Complete Control Cubicle SB-2		AUTOMETER ALLIANCE	08/21 & AALN/08/2021/05/HB2G9/083	PO condition
Vehicle Control Unit (VCU)		KAYSONS ELECTRICALS PVT. LTD.	08/21 & KEPCO/SB-2/66	ĕ
Aux. Converter (BUR) 2&3	CONTRACTOR OF THE PROPERTY OF	BOMBARDIER	BTIL/09/2021/28/PROPULSION A/1832	0
Oil Cooling Unit (OCU)	The second secon	BOMBARDIER CAMPETECTIONS	09/21 & 2021J/10226/1B/0055	2
OCU RADIATOR	************		07/21 & 321071793, FAN : 32107AF1793	ē
M/C Room blower	····	APPOLO G.T.R.CO.(.R), LTD	08/21 & FG415002/M-1/21-22/367	As per
M/C Room Scav. blower		G.T.R.CO (P) LTD.	07/21 MF-21-07-614	A
Traction Convertor	2224000		05/21 AC-45692, CGLUDBM-16640	
Hotel load convertor I.V. Coupler	29741087		BTIL/09/2021/17/PROPULSION A/1810	
Hand Brake	29140050	Driver Cabin Mechwell Modif.com fitting	12220	
Air Conditioner		NTEC CORPORATION	03/21 & 21C750,21C774	0 c
Gab Heater		TO A CO. AND CO. LONG.	332, 349	As per PO condition
Crew Fans			1919, 1616, 1639, 1637	pe
Oriver Seats //	Anny Mark Control Cont	TARLER V. CO. A. A. A. W. C. A. W	66, 60, 754, 816	\$ 00

SIGN ODER SINOH NAME DHUPINDER SINOH SSE/LAS

SIGN SIGN CUMAR JE/LAS

# DIMW/PTA

# ELECTRIC LOCO HISTORY SHEET (TRS)

ELECTRIC LOCO NO: 41544 LIST OF ITEMS FITTED BY TRS

RLY: WCR

SHED: NKJ

PROPULSION SYSTEM: BT

WARRANTY	COVERED								AS PER IRS / D O	CONDITIONS						
QPL		04 Nos	02 Set	04 Set	04 Nos.	02 Set	04 Nos.	02 Nos		02 Set	02 Nos.	02 Nos.	ON CO	01 Set	01 Set	01 Set
MAKE/SUPPLIER		M/s PCE	M/s SCS	- December	M/s EIC	M/s TOP GRIP	M/s. MTI		M/s AUTOMETER	M/s. KEPCO	M/s. KAY SONS	M/s PATRA & CHANDA	Ms. TROLEX	M/s AUTOMETER	HBL	PPS DMW
ITEM SR. NO.	CAB-2	5/2021	FLE03708	4578,4587	2535,2488	349	1619,1616	AALN/06/2021/037/	MCT/097	KEPCO/A1/1765	KEPCO/CUF/146	PCE/472/7/2018	7652	MTELS2106122	No 245	PPS DMW
ITEM	CAB-1	5/2021	FLE03605	4543,4584	2537,2483	332	1639,1637	AALN/06/2020/016/	MCT/076	KEPCO/A1/1752	KEPCO/CUF/135	PCE/175/7/2021	7664	MTELM2106122	Battery Set No 245	
ITEM PL	Ö N	29610023	25984962	25984860	29610461	29170011	29470080	29860015		29178204	29178162	29700012	29500059	29200040	29680025	29600418
DESCRIPTION OF ITEM		HEAD LIGHT LAMP	LED BASED FL. LIGHT	LED MARKER LIGHT	DRIVER CAB LIGHT	CAB HEATER	CREW FAN	MASTER CONTROLLER		COMPLETE PANEL A,C,D	COMPLETE CUBICLE- F PANEL	HEATER ROTERY SWITCH	DIFFRENCIAL AMPLIFIRE	SPEED IND. & REC. SYSTEM	BATTERY (Ni- Cd)	HARNESSED CABLE COMPLETE
2		-	2	က	4	2	9	7		∞	0	10	7-	12	13	4



JE/TRS

(no

H

	no mandrato estationes estationes estatuares estatuares estatuares estatuares estationes estationes estationes	Many Administration of the Company of the American	DOOR CONSTRUCTOR - 0 -		And the second s
	P-Volume - STREET - STREET	and the second s	NOT COMPONENT CAB L & 2	THE PARTY STREET	Warranty
ON O		GPL /Nos	Supplier	Sr. no.	
	Pantograph	2	Contransys Pr vate Ltd. Kolkata	10331-07/21,10337-07/21	The state of the s
T	Servo motor	2	Contransys Private Ltd. Kolkata	10374-07/21,10332-07/21	CONTRACTOR OF THE PARTY OF THE
3	Air Intake fiiter Assly	2	PARKER		10 MIN
1	Insulator Panto Mtz.	00	BHEL	07/20,08/20	No.
	Annual Control of the		MIDDLE ROCF COMPONENT	and the section of white subject which commencements and the section of the secti	NAME .
	High Voltage Bushing	-1	Tdl3	5/21/2355	341
9	Voltage Transformer	1	RITZ	2020/51460477	21
7	Vacuum Circuit Breaker	Н	AUTOMETER ALIANCE	VCBA 2107149	
00	Insulator Roof line	6	IEC.	5/21,5/21	阿阿
6	Harmonic Filter	1	Elecos Engineers	EEPL/HF/890	
9	Earth Switch	1	Patra and Chanda	PCE-60/7/21	As per IRS/PO conditions.
11	Surge Arrester	2	CG POWER & INDUSTRIAL	853656 858653	In the state of th
		The continues of the co	e dinigas kalmas delakas baldes sauses ferden nagates ferdens baldasan daridas omanos, etistos umagas, etistos saka	Activities and activities of the contraction of the	MAPS.
		CONTRACTOR OF STREET,	Air Brake Components		8
12 /	Air Compressor	2	Elgi	EUDS 926511A & EUDS 926501B	
13	Air Dryer	1	PRAG	2414-06-21	
-	Auxillary Compressor	1	ROTOMAX	BTIS 104027	备
15 /	Air Brake Panel	1	FAIVELY	JUNE 21-30-WAG9-1585	
16	Contoller	2	FAIVELY	E21-050 A E21-079 B	
17 E	Breakup Valve	2	FAIVELY		
18	wiper motor	4	A STATE AND A STAT	A THE SECOND SEC	





# Loco No. 41544

# 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1093	1092.5	1093	1093	1092.5	1092.5
DIA IN mm FE	1093	1092.5	1093	1093	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

# 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T.	MAKE	IN	KPE	KPE	KP	KM	KM
G.E. BEARING	MAKE	SKF	FAG	NBC	FAG	FAG	FAG
F.E. BEARING	MAKE	SKF	FAG	FAG	FAG	FAG	FAG

# 9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KP	KM	KM	KP	KP
BACKLASH (0.254 – 0.458mm)	0.320	0.330	0.330	0.350	0.320	0.330

# 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

XLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	17.67	16.51	17.42	16.62	18.17	15.50
LEFT SIDE	16	16.01	16.45	16.60	16	16.30

# 11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	CGP	566629 Dt 19.01.19	2192001-2832
2	CGP	566629 Dt 19.01.19	2192001-2812
3	CGP	566629 Dt 19.01.19	2192001-2798
4	CGP	566629 Dt 19.01.19	2192001-2813
5	CGP	566629 Dt 19.01.19	2192001-2814
6	CGP	566629 Dt 19.01.19	2192001-2815



# DIESEL LOCO MODERNISATION WORKS



# Loco No. 41544

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period	
FRONT	SL-1136	ECBT	00405440	100074	As per PO/IRS	
REAR	SL-1132	ECBT	29105146	100074	conditions	

# 2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: ESCORT

#### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	DMW	DMW	DMW	DMW	DMW	DMW
S.NO	21140	21596	21710	21699	21722	21723
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/21- 1129	DM/21- 684	CNC/21- 1130	CNC/21- 1143	LMS/H-31	DM/21- 709
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/21- 1133	DM/21- 546	CNC/21- 1132	CNC/21- 1144	LMS/H-30	DM/21- 713
Ultrasonic Testing	OK	OK	OK	OK	ОК	OK

# 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

A.	XLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	NBC	NBC	NBC	NBC	NBC	NBC
End	PO NO. & dt	771567	771567	771567	771567	771567	771567
Free	MAKE	NBC	NBC	NBC	NBC	NBC	NBC
End	PO NO. & dt	771567	771567	771567	771567	771567	771567

# 6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	815	880	845	880	839	924
FREE END	820	912	822	889	883	894

	TOP 12 C	COSTLIEST ITEMS OF WAG9HC LOCO WITH	TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS
S No	PL No	DESCRIPTION	Warranty Period
₽	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
Е	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	SET OF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018.	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

1
(0)
\/

r)	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.
9	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
	,		

1	T.
1	$V_I)$
1	/

As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD		COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	ALL EQUIPMENTS AND CABLING TO CLW  SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE  AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONAN SPEC.NO.CLW/S/3/155 ALT-NIL.
29105146	29171192	29171210		29171209	29171180
∞	6	10	1 8	11	12