


भारतीय रेल Indian Railways

डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Micsel Loco Modernation Corks, Patiala

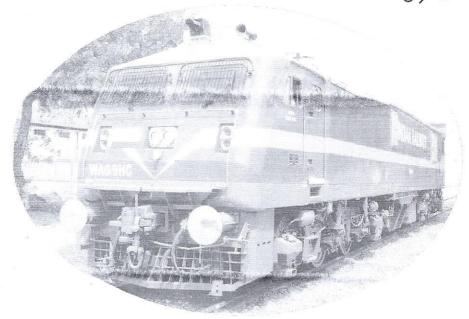

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

41580

TYPE:

WAG9HC

RAILWAY SHED:

SER/ROU

PROPULSION SYSTEM:

CGL

DATE OF DISPATCH:

21.01,2022

लोको निर्माण रिकार्ड



डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernisation Chorks, Patiala

LOCO NO.: 41580

RAILWAY/SHED: SCR/ROU DOD: JANUARY 2022

INDEX

2. 2 2 2 3 3 3 3 3 3	.2 3 4 5	Testing & Commissioning (TRS) Continuity Test of the cables Continuity Test of Traction Circuit Cables Continuity Test of Auxiliary Circuit Cables Continuity Test of Battery Circuit Cables Continuity Test of Screened Control Circuit Cables Continuity Test of Screened Control Circuit Cables Low Tension test Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	7-10
2. 22 22 22 3 3 3 3 3 3 3 3 3 4 4. 4. 4. 4. 4. 4. 4. 5. 5. 5.	1.1 1.2 1.3 1.4 2.0 2.1 2.2 2.3 3.0 2.1 2.2 3.3 4 5	Continuity Test of Traction Circuit Cables Continuity Test of Auxiliary Circuit Cables Continuity Test of Battery Circuit Cables Continuity Test of Screened Control Circuit Cables Low Tension test Measurement of resistor in OHMS (\Omega) Check Points Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer Minimum voltage Transformer Minimum voltage relay (Pos. 86)	5-6
2. 22 22 22 3 3 3 3 3 3 3 3 3 4 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	1.2 1.3 1.4 2.0 2.1 2.2 2.3 3.0 2.1 2.2 3.3 4 0 1.1 2.2 3.3 4 5	Continuity Test of Traction Circuit Cables Continuity Test of Auxiliary Circuit Cables Continuity Test of Battery Circuit Cables Continuity Test of Screened Control Circuit Cables Low Tension test Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer Minimum voltage Transformer Minimum voltage relay (Pos. 86)	5-6
2. 22 22 22 23 3 3 3 3 3 3 3 3 4 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	1.3 1.4 2.0 2.1 2.2 2.3 3.0 2.1 2.2 2.3 3.4 0 1.1 2.2 3.4	Continuity Test of Auxiliary Circuit Cables Continuity Test of Screened Control Circuit Cables Low Tension test Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer Minimum voltage Transformer Minimum voltage relay (Pos. 86)	5-6
2. 2 2 2 3 3 3 3 3 3 3 3 3 4 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	1.4 2.0 2.1 2.2 2.3 3.0 2.1 2.2 2.3 3.4 0 1.1 2.2 3.4	Continuity Test of Battery Circuit Cables Continuity Test of Screened Control Circuit Cables Low Tension test Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	5-6
2. 2 2 2 2 3 3 3 3 3 3 3 3 4 4 4. 4. 4. 4. 4. 4. 4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	2.0 2.1 2.2 2.3 3.0 3.1 3.2 3.3 4.4 .0 .1 2.3 3.4	Low Tension test Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer Minimum voltage Transformer Minimum voltage relay (Pos. 86)	5-6
3 3 3 3 3 3 3 3 3 3 3 3 4 4 4. 4. 4. 4. 4. 4. 4. 4. 4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	2.1 2.2 2.3 3.0 2.1 2.2 2.3 3.4 0 1.1 2.2 3.4 4.5	Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	
3 3 3 3 3 3 3 3 3 3 3 3 4 4 4. 4. 4. 4. 4. 4. 4. 4. 4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	2.2 2.3 3.0 2.1 2.2 3.4 0 1.1 2.2 3.4 4.5	Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	
3 3 3 3 3 3 3 3 3 3 3 4 4 4. 4. 4. 4. 4. 4. 4. 4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	2.3 3.0 2.1 2.2 3.3 4 0.1 1.2 3.3 4.5	Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	
3 3 3 3 3 3 3 3 4 4. 4. 4. 4. 4. 4. 5. 5. 5.	8.0 8.1 8.2 8.3 8.4 8.0 1.0 1.2 3.3 4.5	Low Tension Test Battery Circuits (without control electronics) Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	
3 3 3 3 3 4 4 4. 4. 4. 4. 4. 4. 5. 5. 5.	2.1 2.2 3.4 .0 1 2 3 4 5	Check Points Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	7-10
3 3 3 3 3 3 4 4 4. 4. 4. 4. 4. 4. 4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	.2 .3 .4 .0 .1 .2 .3 .4 .5	Check Points Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	7-10
3 3 3 4 4 4 4 4 4 4 4 5 5 5 5 5	.3 .4 .0 .1 .2 .3 .4 .5	Download Software Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	7-10
3 4 4 4. 4. 4. 4. 4. 5. 5. 5.	.4 .0 .1 .2 .3 .4 .5	Analogue Signal Checking Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	7-10
4 4. 4. 4. 4. 4. 4. 4. 5. 5. 5.	.0 .1 .2 .3 .4 .5	Functional test in simulation mode Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	
4. 4. 4. 4. 4. 4. 4. 5. 5.	.1 .2 .3 .4 .5	Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	
4. 4. 4. 4. 4. 4. 5. 5. 5.	.2 3 4 5	Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	
4. 4. 4. 4. 4. 5. 5. 5.	3 4 5	Prest withing auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer Minimum voltage relay (Pos. 86)	
4. 4. 4. 4. 4. 5. 5. 5.	<i>4 5</i>	Minimum voltage relay (Pos. 86)	
4. 4. 4. 4. 5. 5. 5.	5	Winimum voltage relay (Pos. 86)	
4. 4. 4. 4. 5. 5. 5.	5	Maying (1 03. 00)	
4. 4. 4. 5. 5. 5.		Maximum current relay (Pos. 78)	44.40
4. 4. 5. 5. 5.	6 Test current sensors		11-16
4. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5.	7	Test DC Link Voltage Sensors (Pos 15.6/*)	
5. 5. 5. 5.	8	Verification of Converter Protection Circuits (Hardware limits)	
5. 5. 5.		Sequence of BUR contactors	
5.2 5.3	0	Commissioning with High Voltage	
5.3	1	uneck List	
		Safety test main circuit breaker	
5.3	5 ,	Auxiliary Converter Commissioning	8
	. 1	Running test of 3 ph. auxiliary equipments	-
5.3	. 2 1	Performance of Auxiliary Converters	
5.3.	.3 /	Performance of BURs when one BUR goes out	
5.4	T /	Auxiliary circuit 415/110	16-25
5.5	5 1	Hotel Load Circuit	
5.6	5 7	raction Converter Commissioning	
5.7		Test protective shutdown SR	
5.8	3	Test Harmonic Filter	
5.9		Test important components of the locomotive	
6.0) F	Punning Trial of the locomotive	
7.0	F	inal Check List to be verified at the time of Loco dispatch	25-26
8.0	S	tatus of RDSO modifications	27
1-10		neumatic Test Parameters	28 -
	L	oco Check Sheet(LRS)	29 - 32
-	C	omponent History (LRS,TRS,ABS)	33
-		omponent History & Testing Parameter (Bogie Shop)	34-36
-	C	(arranty Conditions as per Tenders	37 - 38

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4158°
1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	1000
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	OK	100 ΜΩ	[800
Filter Cubicle	Earthing Choke	on.	100 ΜΩ	1000
Earthing Choke	Earth Return Brushes	ne	100 ΜΩ	[000
Transformer	Power Converter 1	DK.	100 ΜΩ	1000
Transformer	Power Converter 2	OK	100 ΜΩ	1000
Power Converter 1	TM1, TM2, TM3	on	100 ΜΩ	(000)
Power Converter 2	TM4, TM5, TM6	Oli	100 ΜΩ	1000
Earth	Power Converter 1	or	100 ΜΩ	1000
Earth	Power Converter 2	on	100 ΜΩ	1000

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

XM

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 MΩ	500
Transformer	BUR2	OV_	100 ΜΩ	100
Transformer	BUR3	OK	100 ΜΩ	700
Earth	BUR1	OK	100 ΜΩ	500
Earth	BUR2	2K	100 M Ω	500
Earth	BUR3	OL	100 ΜΩ	500
BUR1	HB1	8K	100 ΜΩ	700
BUR2	HB2	2K	100 ΜΩ	700
HB1	HB2	8X	100 ΜΩ	700
HB1	TM Blower 1	DK.	100 ΜΩ	150
HB1	TM Scavenge Blower 1	OK	100 ΜΩ	150
HB1	Oil Cooling Unit 1	NL	100 ΜΩ	200
HB1	Compressor 1	ax.	100 ΜΩ	200
HB1	TFP Oil Pump 1	on .	100 ΜΩ	100
HB1	Converter Coolant Pump 1	or	100 ΜΩ	150
HB1	MR Blower 1	ar.	100 ΜΩ	200
HB1	MR Scavenge Blower 1	3K	100 ΜΩ	200
HB1	Cab1	N.	100 ΜΩ	150
Cab1	Cab Heater 1	M	100 ΜΩ	100
HB2	TM Blower 2	W.	100 ΜΩ	200
HB2	TM Scavenge Blower 2	ak.	100 ΜΩ	200
HB2	Oil Cooling Unit 2	216	100 ΜΩ	100
HB2	Compressor 2	W.	100 MΩ	150
HB2	TFP Oil Pump 2	m	100 ΜΩ	100
HB2	Converter Coolant Pump 2	8X	100 ΜΩ	150
HB2	MR Blower 2	DV.	100 ΜΩ	100
HB2	MR Scavenge Blower 2	or .	100 ΜΩ	100
HB2	Cab2	OV	100 ΜΩ	150
Cab2	Cab Heater 2	0	100 ΜΩ	150

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	ok
Battery (Wire no. 2052)	Connector 50.X7-2	á.	OK
SB2 (Wire no 2050)	Connector 50.X7-3		ou

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value _1 o MΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 &	Prescribed value:	Measured
2050	> 50 MΩ	Value MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	OF
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	οκ
Brake controller cab-1 & 2	06F, 06G	ore

Si

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

/Anaton and a House L 4 0 2	Taba	
Vlaster controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	OK
Terminal fault indication cab-1 & 2	09F	OK
Brake pipe pressure actual BE electric	06H	OK
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	OK
Auxiliary current sensors	12B, 12F	CVL
Oil circuit transformer bogie 1	12E, 12I	DK.
Magnetization current	12C, 12G	OK
raction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
raction motor speed sensors (2nos) nd temperature sensors (1 no.) of TM-2	12D	OK
raction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OK
raction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	OK
raction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	OK
raction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	DK
rain Bus cab 1 & 2 Wire U13A& U13B to earthing esistance= .0KΩ± ± 10%)	13A	ou
JIC line	13B	OK
Connection FLG1-Box TB	13A	OK

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9KΩ ± 10%	3.912
Resister to maximum current relay.	1Ω ± 10%	, 52
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.35
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm\ 10\%$	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	022
Between wire 6 & 7	0.2 Ω	0252
Between wire 5 & 7	0.4 Ω	0-4-0
For train bus, line U13A to earthing.	10 kΩ± 10%	10.0KS
For train bus, line U13B to earthing.	10 k Ω ± 10%	10.012
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	Yours
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.32
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.352
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.282
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.28.50
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.212
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	2.712
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9 KM
Farrhing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kQ± 10%	1.8 kr
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	390-52
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k Ω ± 10%	NA
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	105

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Note:

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	checked or
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	checked on

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	checked on
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	OK
Test control Pneumatic devices	Sheets of Group 06	PL
Test lighting control	Sheets of Group 07	OK
Pretest speedometer	Sheets of Group 10	OK,
Pretest vigilance control and fire system	Sheets of Group 11	OK
Power supply train bus	Sheets of Group 13	OL.

Si

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4158²
3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	26
Traction converter-2 software version:	26
Auxiliary converter-1 software version:	3.0
Auxiliary converter-2 software version:	3.0
Auxiliary converter-3 software version:	3.0
Vehicle control unit -1 software version:	2008
Vehicle control unit -2 software version:	2008

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	UK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OL
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11%	10%-
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1001-
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2: AMSB_0101- Xang Trans	Between 20 % and 25 %	241-

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	XangTrans FLG2: AMSB_0101- XangTrans	Between 99% and 101%	100%
TE/BE at 'BE Minimal' position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS 0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	Ly.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	74y.
Both temperature sensor of TM1	SLGI; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0° C to 40° C	1800
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	18°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1800
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	17°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	18°C
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	17°

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41582

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	cheekedor
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	cheeped on
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	o cheekeed ox
Converter and filter contactor operation with both Power Converters during Shut Down.	Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed.	e cheesed on

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 10 of 27

Contact City		
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.	
		B 2
	• Check that FB contactor 8.1 is open.	cheekedos
	Check that Pb contactor 8.2 is open.	Crasses
	After raising panto, closing VCB, and setting TE/BE	ef
	• FB contactor 8.1 closes.	
	FB contactor 8.2 remains open.	
Test earth fault detection battery circuit positive & negative	By connecting wire 2050 to earth, create earth fault negative potential.	
		Leexedor
	By connecting wire 2095	necedan
	to earth, create earth	
	fault positive potential.	
	• message for earth fault	
	The stage for cardinadit	
Test fire system. Create a smoke in	When smoke sensor-1 gets	
the machine room near the FDU.	activated then	*
Watch for activation of alarm.	Alarm triggers and fault message priority 2	10 E
	appears on screen.	
	When both smoke sensor	cheekedon
	1+2 gets activated then	charred
	A fault message priority	
	1 appears on screen and	
	lamp LSF1 glow.	
8	Start/Running interlock occurs and	
	TE/BE becomes to 0.	
Time, date & loco number	Ensure correct date time and Loco	
9	number	HL

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A- 804A	10.05V _p and same polarity	10.0479	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A- 814A	10.05V _p and same polarity	10.0410	OK
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.0340	OK
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.03 /	OK
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	7.78P 5.4 Vems	ÐK
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.10VP 6.44VRMS	cu

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$, $41.5V_{RMS}$ and opposite polarity.	58.5VP 41.4VPM	OK
Cable no. 1216 - 650U	15.5%, 11.0 VIMS and appeals palarity.	15.2VP1	ac
		11. OVRMS	

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4-1580

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLGI_G 87-XUPrim	25kV	250%	25KV	250-1
SLG2_G 87-XUPrim	25 kV	250%	25KV	2501

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLGI_G 87-XUPrim	17kV	170%	17KV	170%
SLG2 G 87-XUPrim	17 kV	170%	17KV	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KV	300%
SLG2_G 87-XUPrim ·	30 kV	300%	30KV	300/1

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum voltage relay (Pos. 86) must be adjus	ted to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	Wes/No)
Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.	L(Yes/No)
Turn off the variac : Contactor 218 closes; the control electronics is be working	(Yes/No)
Test Under Voltage Protection;	
Activate the cab in cooling mode; Raise panto; Supply 200V _{RMS} through variac to wire no. 1501 & 1502; Close the VCB; Interrupt the supply voltage The VCB goes off after 2 second time delay.	(Yes/No)
Again supply $200V_{RMS}$ through variac to wire no. 1501 & 1502; Decrease the supply voltage below $140V_{RMS}\pm4V$; Fine tune the minimum voltage relay so that VCB opens.	(Yes/No)

4.5 Maximum current relay (Pos. 78)

display.

Disconnect wire 1521 & 1522 of primary current tra &1522 (including the resistor at Pos. 6.11); Put loco in s on contact 136.3; Close VCB; supply 3.6A _{RMS} at the maximum current relay Pos. 78 for correct over current	imulation for driving mode; Open $R_3 - R_4$ open wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	L(Yes/No)
Keep contact R_3 – R_4 of 136.3 closed; Close VCB; Tune to $/9.9A_p$ at the open wire 1521;	he resistor 78.1 for the current of 7.0A _{RMS}
VCB opens with Priority 1 fault message on	(Yes/No)

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)	-	
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298mm
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)		
	Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		330mg
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
	Supply 342mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		340mm
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	9K
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	DIL

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close						Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close		Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	close	open	closs	open	close	open	clos	close	open
BUR1 off	close	open	class	close	open	cleg	open	Oben	clos
BUR2 off	open	Open	clos	Clas	close	class	open	open	close
BUR3 off	open	close	open	asse	close	close	open	Open	close

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yey
No rubbish in machine room, on the roof, under the loco.	Yes
All the electronic Sub-D and connectors connected	Toy
All the MCBs of the HB1 & HB2 open.	Tes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Tos
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	700
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Yes

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	cherred ou
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake	VCB must open. Panto must	cherector
	controller into RUN position. Close the VCB. Push emergency stop	lower. Emergency brake will be	
	button 244.	applied.	
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	cheeked on
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	characel ox
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	cheered of
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cheeked or
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	cherroel on
interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	cheekedog

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	8.8	10.2
Oil pump transformer 2	9.8 amps	9.6	10.3
Coolant pump converter 1	19.6 amps	5.0	6.2
Coolant pump converter 2	19.6 amps	5.4	6.5
Oil cooling blower unit 1	40.0 amps	40.2	87.0
Oil cooling blower unit 2	40.0 amps	40.0	76.0
Traction motor blower 1	34.0 amps	32.0	180.0
Traction motor blower 2	34.0 amps	31.0	145.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.9	6.5
Sc. Blower to Traction motor blower 1	6.0 amps	4.8	6.3
Compressor 1	25 amps at 0 kg/cm ² 40 amps at 10 kg/cm ²	26.4	52.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	27.0	60.0

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	998 V	Yes
BURI 7303 XUUZI	DC link voltage of BUR1	60% (10%=100V)	6321	709
BURI 7303 XUIZI	DC link current of BUR1	0% (10%=50A)	1 Amr	x8

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10001	Yes
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	636V	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	6 Amp	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	20 Bm	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	10 Amp	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110	Yes

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1002√	Yen
BUR3 7303- XUUZI	DC link voltage of BUR3	60% (10%=100V)	637V	40
BUR3 7303-XUIZ I	DC link current of BUR3	1% (10%=50A)*	6 Am	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	21 Am	Yes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	10 Amp	tes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1101	Yes

^{*} Readings are dependent upon charging condition of the battery.

fr

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4,580

Type of Locomotive: WAP-7/WAG-9HC

Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3	e e
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery Charger and TM Scavenger blower 1&2	
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	cheekeelow
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.		-

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary	Typical	Measured phase	Measured
machine	phase	current	starting current
	current		
Machine room blower 1	15.0 amps*	6.3	3).0
Machine room blower 2	15.0 amps*	6 - 1	27.0
Sc. Blower to MR blower 1	1.3 amps	1.7	11.0
Sc. Blower to MR blower 2	1.3 amps	1.6	10.0
Ventilator cab heater 1	1.1 amps	1-2	1.4
Ventilator cab heater 2	1.1 amps	1.2	1.4
Cab heater 1	4.8 amps	4.9	5-0
Cab heater 2	4.8 amps	4.9	5.0

^{*} For indigenous MR blowers.

Si

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked or
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the	chested on
Earth fault detection on	DMW supervisor. Traction converter manufacturer to	checked on
positive potential of DC Link of Converter 1	declare the successful operation and demonstrate the same to the DMW supervisor.	
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherred on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked ok
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeted or
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	CReekeel al

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre- charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	choexed on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekad on
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Charted ou
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	Chocked ou
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheetool ou
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Choeked ou
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	choried on

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU appears Disturbance in Converter 1	o cheeked on
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. VCB goes off Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	o afected &

5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	cheeredor

St

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Lecomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. 	o cheeked on
Test earth fault	 FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop Make a connection between wire 	
detection harmonic filter circuit.	no. 12 and vehicle body. Start up the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	o cheeped an
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	o cheeped on

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	cheesed on
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	Cheked OK
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	Cheeped on
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	CROCKERS OU
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	cheekael ay

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	Cheekeel ou
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Charteel ou
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	cheekal on
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	Cheepeel ou
Illuminated Push button	All illuminated push buttons should glow during the operation	chocked or
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66 Newton.	For contactor 8.1: For contactor 8.2:
rew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m ³ /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place Remark
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of cherator the loco.
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again.
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow. Chocked Out

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

	Page: 26 of 27
Check vigilance	Set the speed more than 1.5 kmph and ensure that
operation of the	brakes are released i.e. BC < 1 Kg/cm ² .
locomotive	For 60 seconds do not press vigilance foot switch or
= 3	sanding foots switch or TE/BE throttle or BPVG
	switch then
	Buzzer should start buzzing.
	• LSVW should glow continuously.
	Do not acknowledge the alarm through BPVG or
	vigilance foot switch further for 8 seconds then:-
	Emergency brake should be applied automatically.
	VCB should be switched off. Possetting of this area by the desired of the same by th
	Resetting of this penalty brake is possible only after
	180 seconds by bringing TE/BE throttle to 0 and
	acknowledge BPVR and press & release vigilance foot switch.
Check start/run interlock	
and the start of tan interiori	• At low pressure of MR (< 5.6 Kg/cm ²).
	• With park brake in applied condition. ————————————————————————————————————
	• With direct loco brake applied (BP< 4.75Kg/cm ²).
	• With automatic train brake applied (BP<4.75Kg/cm ²).
	• With emergency cock (BP < 4.75 Kg/cm ²).
Check traction interlock	Switch of the brake electronics. The
	Tractive / Braking offort should as a 1
	should open and BP reduces rapidly.
Check regenerative	Bring the TE/BE throttle to BE side Loco speed
braking.	should start reducing.
Check for BUR	In the event of failure of one BUR, rest of the two
redundancy test at	DID contains the last of the
ventilation level 1 & 3 of	switch off one BUR.
loco operation	Auxiliaries should be catered by rest of two BURs.
	Switch off the 2 BURs; loco should trip in this case.
Check the power	Create disturbance in nower convertor by quitable 2
Check the power converter	Create disturbance in power converter by switching off the electronics, VCB should open and somewhere
	off the electronics. VCB should open and converter should get isolated and traction is possible with
	Check start/run interlock Check traction interlock Check regenerative braking. Check for BUR redundancy test at ventilation level 1 & 3 of

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41580

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OK	012	
2	Marker Red	ou	OK.	
3	Marker White	ou	9u	
4	Cab Lights	OK	De l	
5	Dr Spot Light	OK	de	5-P
5	Asst Dr Spot Light	DIL	Ou >	cheeked worken
7	Flasher Light	OR	8a	
3	Instrument Lights	Ore	200	
)	Corridor Light	ou	du	
0	Cab Fans	Du_	De	
1	Cab Heater/Blowers	OK	90(
2	All Cab Signal Lamps Panel 'A'	O.Z	94	

Status of RDSO modifications



LOCO NO: 41880

Sn	Modification No. Description		Remarks
	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	OK/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Ok/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	Øk/Not Ok
	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	Ok/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	Ok/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	OK/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly.	Øk/Not Ok
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	OK/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of EP contactors and auxiliary contactors of three phase locomotives to improve reliability.	Ok/Not Ok
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	Modification sheet to provide rubber sealing gasket in Master Controller of three phase locomotives.	Øk/Not Ok
12	RDSO/2013/EL/MS/0420 Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	ØK/Not Ok
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Ok/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	OWNot Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	9k/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
17	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	9K/Not Ok
18	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	9K/Not Ok
19	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three phase electric locomotives.	Øk/Not Ok
20	RDSO/2018/EL/MS/0475 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Øk/Not Ok
21	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09.10	Implementation of push pull scheme.	Ok/Not Ok

Signature of JE/SSE/TRS



DMW/PATIALA

Loco No.: 41580

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	1 diameters	Reference	Value	Result
1.0	Auxillary Air supply system (Pantograph & VCB)		7 3.100	Result
1.1	Ensure, Air is completely vented from pantograph		0	
	Reservoir (Ensure Pantograph gauge reading is Zero)		O	0
1.2	Turn On BL Key. Now MCPA starts.		60 000 (04-)	
	Record pressure Build up time (8.5kg/cm2)		60 sec. (Max.)	53 Sec
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	0.510.251.7	
		DMTS-014-1, 8	8.5±0.25kg/cm2	8.6 Kg/cm2
		CLW's check sheet	-	1
		no. F60.812 Version		
		2	U 8	
4	Check VCB Pressure Switch Setting	CLW's check sheet		
	8	92 (85%)	Opens 4.5±0.15	4.5 Kg/cm2
		no. F60.812 Version	kg/cm2	
		2	closes 5.5±0.15	5.5kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	polotice C. J. O. W. T.	kg/cm2	
1.6	Set Cab-1 Pan UP in Panel A.	olating Cocks & KABA co		
	The same of the aner A.		Observed Pan-2	OK
1.7	Close Pan-2 isolating Cock		Rises.	
	Open Pan -2 isolating Cock		Panto-2 Falls Down	OK
1.8	Record Pantograph Rise time		Panto-2 Rises	
1.9			06 to 10 seconds	9 Sec
1.10	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Pantograph line air leakage		0.7 kg/cm2 in 5	0.25 kg/cm2
2.0	Data di C		Min.	in 5 Min.
	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		I
	out all the reservoirs by opening the drain cocks and then	calculation and test		
	closed drain cocks. MR air pressure build up time by each	performed by		
6	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor	,	i) 7 Min. Max.	6min
	ii) with 1450 LPM compressor		ii) 8.5 Min. Max.	Omm
			ii) 0.0 iviiii. iylax.	
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors.		both compressors	OK
.3	Drain air from main reservoir up to 7 kg/cm2. Start			CD4 07 5
	compressors, Check pressure build time of individual		30 Sec. (Max)	CP1-27 Sec
	compressor from 8 kg/cm2 to 9 kg/cm2			
.4	Check Low MR Pressure Switch Setting (37)	D&M tost sees	Cl	CP2-27 Sec
		D&M test spec.	Closes at 6.40±0.15	6.40 Kg/cm2
		MM3882 &	kg/cm2	
		MM3946	Opens at	
			5.60±0.15kg/cm2	5.65 Kg/cm2



DMW/PATIALA

Loco No.: 41580

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10 Kg/cm2
		MM3882 & MM3946	kg/cm2 Opens at	J,
			8±0.20 kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.35
				minute
2.7	Check unloader valve operation time		Approx. 12 Sec.	10 sec
2.8	Check Auto Drain Valve functioning (124 & 87)		Operates when	
2.9	Charl CD L L L		Compressor starts	
2.9	Check CP-I delivery safety valve setting (10/1). Run CP Direct by BLCP.	D&M test spec.	11.50±0.35kg/cm2	11.5 Kg/cm
2.10	Check CP-2 delivery safety valve setting (10/2). Run CP	MM3882 & MM3946	44.50.00.551./	
700.000	direct by BLCP	D&M test spec. MM3882 & MM3946	11.50±0.35kg/cm2	11.6 Kg/cm
2.11	Switch 'OFF' the compressors and ensure that the safety	D&M test spec.		
	valve to reset at pressure 12 kg/cm2 less than opening	MM3882 & MM3946		
	pressure.			The state of the s
2.12	BP Pressure: Switch 'OFF' compressor, Drain MR Pressure	CLW's check sheet	5.0±0.10kg/cm2	5.0 Kg/cm2
	by drain cock of 1" Main Reservoir, Start Compressor, and	no. F60.812 Version 2		n j
2.13	check setting pressure of Duplex Check Valve 92F.			
2.13	FP pressure:	CLW's check sheet	6.0±0.20kg/cm2	6.0 Kg/cm2
	Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.	no. F60.812 Version 2		
3.0	Air Dryer Operation			L
3.1	Open Drain Cock 90 of 2 nd MR to start Compressor, leave		Tower to change	
	open for Test Check Air Dryer Towers to change.		i) Every minute	ОК
			(FTIL & SIL) ii)every	
2.2	Ch. L.D. Ali Ci.		two minute (KBIL)	
3.2	Check Purge Air Stops from Air Dryer at Compressor stops		= =	Control of the Contro
3.3	Check condition of humidity indicator		Blue	Blue
4.0	Main Reservoir Leakage Test			<u> </u>
4.1	Put Auto Brake (A-9) in full service, Check MR Pressure air	D&M test spec.	Should be less than	0.5 Kg/cm2
	leakage from both cabs.	MM3882 & MM3946	1 kg/cm2 in 15	in 15
			minutes	minutes
4.2	Check BP Air leakage (isolate BP charging cock-70)	D&M test spec.	0.15 kg/cm2 in 5	0.14
		MM3882 & MM3946	minutes	Kg/cm2 in
	,			5 minutes



Page 3 of 4

Loco No.: 41580

DMW/PATIALA

PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

5.0	Brake Test (Au	tomatic Brake op	eration)			
5.1	Record Brake Pip	oe & Brake Cylinder	pressure at Each St	ер		
	Check proportion	nality of Auto Brake	e system	CLW's ched	ck sheet no. F60.812	2 Version 2
	Auto controller p	oosition		BC (WA	AG-9 & WAG-7)Kg/c	m2
		BP Pressure kg/	cm2	Value		Result
		×				
	Run	5±0.1 5.0 Kg/cm2 0.00		0.	00 Kg/ cm2	
	Initial	4.60±0.1 4.6 Kg/cm2 0.40±0.1		.40Kg/ cm2		
	Full service	3.35±0.2	3.5 Kg/cm2	2.50±0.1		.5Kg/ cm2
	Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1		.5Kg/ cm2
5.2		P pressure drop to 3 ontroller handle is Ful		D&M test spec. MM3882 & MM3946	8±2 sec.	7 Sec
5.3	Operate Asst. Driv	ver Emergency Coc	k,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 2.5 kg/cm2	ОК
.4	Check brake Pipe	Pressure Switch 69	F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2 Opens at BP 2.85- 3.15	4.2 Kg/cm2 3.0 Kg/cm2
5.5		Controller handle f	W Lycuistics	D&M test spec.	kg/cm2	
	Emergency. BC fill Max. BC develope	ling time from 0.4 k ed.	g/cm2 i.e. 95% of	MM3882 & MM3946		
=	WAP7 - BC 2.50 ±				7.5±1.5 sec.	
	WAG9 - BC 2.50 ±	0.1 kg/cm2		7	21±3 sec.	19 Sec

DMW/PATIALA

Loco No.: 41580



PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

5.6	Move Auto Brake Controller handle to full service and kg/cm2. Move Brake controller to Running position BC	Relea	se time to fall	D&M spec.	test			
	BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC deve	oped		MM38	882 &			
	BC release Time			MM39		17.5±2	5	
	WAP7		₩.			sec.	J	
	WAP9					52±7.5	sec	48 Sec
5.7	Move Auto Brake Controller handle to Release, Check E	BP Pre	ssure Steady	CLW's	check	60 to 8		69 Sec
	at 5.5 0.2 kg/cm2 time.			sheet		Sec.		05 500
				F60.81				
				Versio				
5.8	Auto Brake capacity test: The capacity of the A9 valve i	n rele	ased condition	RDSO		BP	the trans	
	must confirm to certain limit in order to ensure comper	nsatio	n for air	Motive	2	pressur	- Δ	
	leakage in the train without interfering with the automates			power		should		
	brake.		8	Directo		fall belo		4.2
	* Allow The MR pressure to build up to maximum stipu	ated	limit	report		4.0 kg/d		CONTRACT
	* Close brake pipe angle cock and charge brake pipe to	5 kg/c	rm2 by A	MP Gu		with in		Kg/cm2
	(Automatic brake controlling) at run position.		5.11.2 Sy 7.1	No. 11		Sec.	θŲ	
	* Couple 7.5mm dia leak hole to the brake hose pipe of	locon	notive Open	1999 R	(9)	Sec.		
	the angle cock for brake pipe.	100011	notive. Open	1999 K	ev.1			
	The test shall be carried out with all the compressors in	work	ing condition					
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press D					BC comes		
	Switch (PVEF)		erra padare			to '0'	62	0
6.0	Direct Brake (SA-9)			I		10 0		
6.1	Apply Direct Brake in Full. Check BC pressure		CLW's check s	heet				
	WAG9/WAP7		no. F60.812 V	1000		0.20 kg/cm2		3.5Kg/cm2
	WAP5		2		1	5.15±0.3 kg/cr 8 sec. (Max.)		3.3Kg/ CI112
6.2	Apply Direct Brake, Record Brake Cylinder charging time)	D&M test spec	n.	8 sec			6 Sec
			MM3882 & M		8 sec. (Max.)			0 360
6.3	Check Direct Brake Pressure switch 59 (F)	D&I	M test spec.		2 +0 1	kg/cm2	0.2	kg/cm2
			13882 & MM394		.2.20.1	NB/ CITIZ	0.2	. Kg/CIIIZ
5.4	Release direct brake & BC Release time to fall BC			10 -15 Se		ec.	14.	5 Sec
	pressure up to 0.4 kg/cm2							
7.0	Sanding Equipment	7						
7.1	Check Isolating Cock-134F is in open position. Press			Sa	and on	Rail	ОК	
7 7	sander paddle Switch. (To confirm EP valves Operates)							
7.2	Test Vigilance equipment : As per D&M test specification						ОК	
	specification							

86

Signature of loco testing staff

Signature of SSA/Shop



Issue No.: 03 Effective Date: Oct-2021

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco) Page 1 of 1

डीजल रेळइंजन आधुनिकीकरण कारखाना पटियाला। DIESEL LOCO MODERNISATION WORKS, PATIALA

ELECTRIC LOCO CHECK SHEET

LOCO NO: 41580 Shade RAD Rlv: SFR

LUCU	Rly: <u>3+R</u>	\$	Shed:	KOU	
S. No.	ITEM TO BE CHECKED	Specified Value	Ob	served V	alue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	-0K	-	NA -	_
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2.	ОК		05	· · · · · · · · · · · · · · · · · · ·
1.3	Check proper of Fitment of oil cooling unit (OCU).	ОК		OK	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its	ОК		05	
1.5	Check proper Fitment of FB panel on its position.	ОК		OC	
1.6	Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2.	OK		OK	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	ОК		OK	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	ОК	11	or	
1.10	Check proper fitment, torquing & Locking of Main transformer bolt.	OK		OF	
1.12	Check proper fitment of compressor both side with the compressor safety wire rope.	ОК		OK	
1.13	Proper setting of the dampers as required.	OK		OK	
1.14	Check proper position of Secondary Helical Springs between Bogie & Shell	OK		6K	
1.15	Check proper fitment of Body Bogie Safety Chains fitted properly.	ОК		OK	
1.16	Check proper fitment of Cow catcher.	ОК		OC	
1.17	Check coolant level in SR 1 & 2 Expansion Tank	ОК		OK	
1.18	Check Transformer Oil Level in both conservators Tank (Breather Tank).	ОК		OK	
1.19	Check proper fitment of both battery box.	ОК	A Commence of the Commence of	or	
1.20	Check proper fitment of Push Pull rod its bolt torquing and safety slings.	ОК		BK	
1.21	Buffer height: Range (1085 mm to 1105 mm) Drg No IB031-02002.	1090-1105		L/S	R/S
		mm	FRONT	1100	1102
AT A			REAR	1090	1090
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No-	641 mm		L/S	R/S
	SK.DL-3430.		FRONT	646	645
)			REAR	645	645
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm +		L/S	R/S
		5 mm,-12	FRONT	113	113
		mm	REAR	115	110
1.24	CBC Height: Range (1085 mm to 1105 mm) Drg No- IB031-02002 .	1085-1105 mm	FRONT: REAR:	109	3

(Signature of SSE/Elect. Loco)

NAME BUUPINDER SINGY

DATE 21/01/2022

(Signature of JE/Elect Loco)

NAME SATISH KUMAR

DATE 21/01/2022

NAME <u>SANJAY</u> / CUMMC DATE <u>21/01/20</u>22

DIESEL LOCO MODERNISATION WORKS, PATIALA LOCO NO -:41580 Under frame component S.N. Descrition of component PL No. Make Shell Warranty Mfg. date & Serial no. 29171027 Trident Main Transformer covered 29731057 ABB 29/49 ,12/2021 Conservator Tank BREATHER upto 29731057 YOGYA ENTERPRISES ABB-65-12-21 2XYT000000-ABY-045,2021 Compressor both side 29511008 ELGI 21-7658, 21-6237 Battery Box both side EUFS927023 (09/21), EUFS927007(09/21) 29680013 BRITE Traction Bar Cab-1 29100069 KM 98/01449(10/21),37/01449(10/21) 7 Traction Bar Cab-2 condition 29100069 KM 7051-09-21 Side Buffer Assly Both Side 11803587 Oil Cooling Pump both Side 7059-09-21 AEU Lp09-21,09-21,Lp09-21,09-21 29530027 Transformer oil Steel pipes SAMAL HARAND OF INDIA PVT.LTD. PO 0 29230044 D2926 & D2893 11 Soft Draft Gear (CBC) RANSAL PVT. 29130037 per Secondry Helical Spring on Bogie 1 FAJF SN 29045034 09-21 & 10-21 ELASTIC RING (Center pivot Ring) FRONTIER 29100010 14 Center Pivot Housing 15.33 AVADA 29100057 Hotel Load Contactor 445-07-21 & 422-07-21 Machine room Component cab 1 29741087 Hotel Load Converter 29741087 TM-Blower 29440075 AIR CONTROL & CHEMICAL ENGG. LTD 07/21 & AC-47113, CGLUGAM-0642 TM- Scavenging Blower Motor Axillary Control Cubical (HB-1) 29171180 6 Filter Cubical (FB-1) ST-21-08-303 29480140 Complete Control Cubicle SB-1 HIND RECTIFIERS LIMITED 10/21 & CGHB1G21A134 02/21 & FB/2021/E/0506/371 condition 29171209 KAYSONS ELECTRICALS PVT. LTD Vehicle Control Unit (VCU) 11/21 & KEPCO/SB-1/132 q 29741075 Aux. Converter (BUR) 1 29741075 12/21 & T2112647-P275 OIL COOLING BLOWER(OCB) 29470043 SAINI ELECTRICALS 12/21 & CGAI00121C652 P277 OIL COOLING RADIATOR (OCR) 0 11 06/21,321061786 FAN 32106AF1786 29470031 STANDARD RADIATORS 12 M/C Room Blower per 29440105 AIR CONTROL & CHEMICAL ENGG. LTD 807/21 & AC-47413, CGLUEAM-12726 M/C Room Scavenging Blower 13 29440129 G.T.R CO (P) LTD. AS 14 Traction Convertor 15 Hotel load convertor I.V. Coupler 29741075 SM-21-08-324 C.G.L 29741087 12/21 & CGPI21C0687-P277 MACHINE ROOM COMPONENT Cab-2 Hotel Load Contactor 29741087 Hotel Load Converter 29741087 TM-Blower TM- Scavenging Blower Motor 29440075 AIR CONTROL & CHEMICAL ENGG. LTD 807/21 & AC-47112, CGLUGAM-0640 29440117 Axillary Control Cubical HB-2 29171192 Complete Control Cubicle SB-2 AUTOMETER ALLIANCE LTD. ST-21-10-486 09/21 & AALN/**09**/2021/08/HB2G9/102 Vehicle Control Unit (VCU) 29171210 KAYSONS ELECTRICALS PVT. LTD condition 29741075 Aux. Converter (BUR) 2&3 11/21 & KEPCO/SB-/086 29741075 OIL COOLING BLOWER(OCB) 12/21 & T21 2648-P275 C.G.L 29470043 P D STEELS 12/21 & CGAI00221C652-P277 OIL COOLING RADIATOR (OCR) 29470031 M/C Room blower STANDARD PDS2107012 RADIATORS 29440105 AIR CONTROL & CHEMICAL ENGG. LTD 8 M/C Room Scav. blower 08/21 & 043-SRPL per 29440129 G.T.R.CO (P) LTD. 09/21 & AC-47051, CGLUHAM-10372 Traction Convertor Hotel load convertor I.V. Coupler 29741075 SM-21-08-337 29741087 12/21 & CGPI21C0688 -P277 Hand Brake Driver Cabin 29140050 | Modif. Mechwell com.fitt Air Conditioner 29811028 KKI POWER DRIVES PVT. LTD. Cab Heater 29170011 KKI/HVAC/CLW/692 & 805 Crew Fans ESCORTS As per PC condition 29470080 RANJAN Driver Seats 1066, 1037, 1043, 961 29171131 | FEBCON 162, 122, 113, 111 SIGN

डी.एम.डब्ल्य

SIGN

NAME SOTISH KUMAK

NAME IGHUPINDER SZIVON

SSE/LAS

DMW/PTA

ELECTRIC LOCO HISTORY SHEET (TRS)

ELECTRIC LOCO NO: 415780 LIST OF ITEMS FITTED BY ECS

SHED: ROU

RLY: SER

PROPULSION SYSTEM: CGL

WARRANTY	COVERED								AS PER IRS / P.O	CONDITIONS					
QPL		04 Nos	02 Set	04 Set	04 Nos.	02 Set	04 Nos.	00 NOS	02 Set	02 Nos.	02 Nos.	SON CO	01 Set	01 Set	01 Set
MAKE/SUPPLIER		M/s PCE	M/s SCS		M/s EIC	M/s ESCORT	M/s. RANJAN	M/s WOAMA	M/s. KEPCO	M/s. HIREACT	M/s PATRA & CHANDA	Ms. TROI EX		HBL	PPS DMW
ITEM SR. NO.	CAB-2	9/2021	FLE03663	5571.5529	2528,2681	151	1037,985	3727	KEPCO/A1/1932	CF-2021G092-252A	PCE/128/7/2021	7469	MTELS2111311	Battery Set No 281 with Battery maintenance kill	WW.
ITEM (CAB-1	9/2021	FLE03698	5565,5578	2594,2793	80	1043,1066	3745	KEPC0/A1/1946	CF-2021G092-252B	PCE/132/7/2021	6541	MTELM2111312	Battery Set No 281 (Along with Battery maintens	WMQ SAA
ITEM PL	OZ	29610023	25984962	25984860	29610461	29170011	29470080	29860015	29178204	29178162	29700012	29500059	29200040	29680025	29600418
DESCRIPTION OF ITEM		HEAD LIGHT LAMP	LED BASED FL LIGHT	LED MARKER LIGHT	DRIVER CAB LIGHT	CAB HEATER	CREW FAN	MASTER CONTROLLER	COMPLETE PANEL A,C,D	COMPLETE CUBICLE- F PANEL	HEATER ROTERY SWITCH	DIFFRENCIAL AMPLIFIRE	SPEED IND. & REC. SYSTEM	BATTERY (Ni- Cd)	HARNESSED CABLE COMPLETE
S S		_	2	က	4	2	9	7	ω	თ	10	-	12		4





36

	200				
			ROOF COMPONENT CAB 1 & 2		Warranty
S.No.	Description	QPL /Nos.	Supplier	Sr. no.	
Н	Pantograph	2	Cotrasys Pvt.Ltd	10810-10/21,10813-10/21	
2	Servo motor	2	Cotrasys Pvt.Ltd	10774-10/21,10809-10/21	
m	Air Intake filter Assly	2	VIKRANT		
4	Insulator Panto Mtg.	∞	IEC	05/21,05/21	
			MIDDLE ROOF COMPONENT		
2	High Voltage Bushing	1	EIPL	8/21/2551	
9	Voltage Transformer	1	Sadtem	2021-N,625452	
_	Vacuum Circuit Breaker	1	Autometer Alliance	AALN/08/2021/021/VCBA/0240	
∞	Insulator Roof line	6	IEC	5/21,5/21	•
0	Harmonic Filter	1	Rsi Switchgear	448149/18	((((((((((((((((((((
10	Earth Switch	1	Autometer Alliance	AALN/06/2021/017/ES/154	As per IRS/PU conditions
11	Surge Arrester	2	CG POWER	9851182 9851179	
		15	Air Brake Components		
12	Air Compressor	2	Elgi	EUFS 927007A, EUFS927023B	100
13	Air Dryer	1	PRAG	2480-8-21	
14	Auxillary Compresssor	Н	ELGI	BUAS 104230	==
15	Air Brake Panel	1	FAIVELY	JUNE 21-17-WAG9-1572	11
16	Contoller	2	FAIVELY	K 21-051A,K21-054B	
17	Breakup Valve	2	FAIVELY		
18	wiper motor	4	ELGI		



SSE/Teseing

DIESEL LOCO MODERNISATION WORKS



Loco No. 41580

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-1303	ACPL	00405440	101274	As per PO/IRS
REAR	SL-610	ANUP	29105146	101276	conditions

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: ESCORT/KNOOR

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	DMW	DMW	DMW	DMW	DMW	DMW
S.NO	22036	21980	22040	21875	22023	22020
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/21- 1767	CNC/21- 1720	CNC/21- 1748	CNC/21- 1715	CNC/21- 1758	CNC/21- 1706
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/21- 1768	CNC/21- 1376	CNC/21- 1750	CNC/21- 1713	CNC/21- 1753	CNC/21- 1708
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

A)	XLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	SKF	SKF	SKF	SKF	NBC	NBC
End	PO NO. & dt	771678	771678	771678	771678	-	01616
Free	MAKE	SKF	SKF	SKF	SKF	NBC	NBC
End	PO NO. & dt	771678	771678	771678	771678	01616	01616

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	98T	864KN	877KN	938KN	903KN	975KN
FREE END	96T	880KN	975KN	987KN	913KN	986KN



Loco No. 41580

7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITIOI	NO NO	1	2	3	4	5	6
S.T.	MAKE	KM	KP	KM	KPE	KM	KM
G.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	7	2	3	4	h	ы
MAKE	KM	KM	KM	KM	KP	KM
BACKLASH (0.254 – 0.458mm)	0.330	0.340	0.310	0.340	0.310	0.340

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	18	17.21	17.80	16.78	15.78	15.22
LEFT SIDE	15.68	17.19	17.10	16.71	18.48	17.38

11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.		
1	BHEL	566628	201210659		
2	BHEL	566628	201210662		
3	BHEL 566628		201210653		
4	BHEL	566628	201210669		
5	BHEL	566628	201210672		
6	BHEL	566628	201210673		

Q

SSE/ Bogie Shop



SETOF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOGMITIVES TO CLW SPECN. NO. CLW/ES/03/646 ALTMILIVITH DMW REQUIREMENT OF HARNESSED core & 18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date.	2 29731057 WART 3-PHASE ELECTRIC LOCOMOTIVE TO CLW SPEIN INC.CLW/ES/3/0660/C COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		1 29741075 IGBIBARED 3-PHASE DRIVE PROPULSION 60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLM			DESCRIPTION DESCRIPTION Warranty Period Warranty Period Go months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW SPENTE LOT 7500 FOR AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE. SHELL ASSLY (PIPED & PAINTED) FOR AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE. RNESSED CABLE FOR 3-PHASE ELECTRIC No.10 of CLW Specn. CLW/ES/3/0458 & Clause COMMISSIONING of CLW S	DESCRIPTION IGBTBATED 3-PHASE DRIVE PROPULSION EQUIPMENT MAR TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAF7 3-PHASE ELECTRIC LOCOMOTIVE TO CLW SPEIN NO.CLW/ES/3/0660/C COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAF7 LIDCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-1- SETOF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCIMITIVES TO CLW SPECN. NO. CLW/ES/03/646 ALTAILINITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7. ALT-AL DATED 27/11/2018	782
		29731057 WAR 3-PHASE ELECTRIC LOCOMOTIVE TO CLW SPEIN NO.CLW/ES/3/0660/C	MAN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAR 3-PHASE ELECTRIC LOCOMOTIVE TO CLW SPEIN NO.CLW/ES/3/0660/C	1GBT3ANED 3-PHASE DRIVE PROPULSION EQUIPMENT MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WART 3-PHASE ELECTRIC LOCOMOTIVE TO CLW SPEIN ND.CLW/ES/3/0660/C	1GBTBARED 3-PHASE DRIVE PROPULSION EQUIPMENT MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR SPEIN ND.CLW/ES/3/0660/C	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.	COMPLEE SHELL ASSLY (PIPED & PAINTED) FOR WAP7 IDCO TO CLW SPEC. NO. CLW/MS/3/152 ALT.	29171064

	1	1	
1	-	1	5
1	C	1	/
1		1	

As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE. AS PER IRS COMDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	
BRAKE CONTROL SYSTEM INCLUDINE DRIVER'S VIGILANCE CONTROL DEVICE TO SETLST ND.EL29180016.	CDMPLETE FILTER CUBICLE ALONG WTH ALL EQUIPMENTS AND CABLING TO DRG/SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. ND. 1209-15-143-004 ALT-10 AND PRT DRG./SPEC ND AS PER ANNEXURE-A ATTACHED. 3PHASE ASYNCHRONOUS TRACTION/OTOR (RESISTANCE RING MECHANICALLY WTERLOCKED) TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LCD WITHOUT ALTIVE SPEED SENSOR TO SPECIFICATION NO. 4TIMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	
29180016	29480140	
ъ	9 /	

	/		-
1	1	1	
(_		/
1	_	/	

0		ΣOπ	T	Σ	T	>	Т	
As per clause 16of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60] months after commissioning or 72 months from date of	[\lambda ddns	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONINE, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONINE, WHICHEVER IS EARLIER] WILL BE APPLICABLE.		AS PER IRS CONTITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONINE, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW	Drg.No.1209.01.112-202 Alt-Nil	COMPLETE AUXILIARY CUBICLE HB2ALONG WITH ALL EQUIPMENTS AND CABLING TOCLW SPEC.NO.CLW/ES/3/0192 ALT-E ORLATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.		COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD		COMPLETE CONTROL CUBICLE SB1 PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD		COMPLETE AUXILIARY CUBICLE HB1ALONG WITH ALL EQUIPMENTS AND CABLING TOCLW SPEC.NO.CLW/ES/3/0191 ALT-D ORLATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.
29105146		29171192		29171210		29171209		29171180
∞		6		10		11		12