
# भारतीय रेल Indian Railways

डीजल रेलइंजन आधुनिकीकरण कारखाना, पटियाला शिंदहर्श श्रेक्ट Modernation Ulorks, Patiala

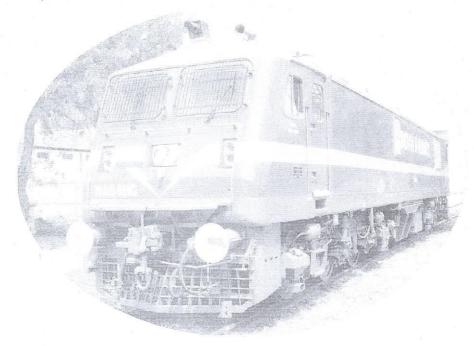

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

41589

TYPE:

WAG9HC

RAILWAY SHED:

CR/KYN

PROPULSION SYSTEM:

BT

DATE OF DISPATCH:

12.02.2022

लोको निर्माण रिकार्ड



# डीजल रेलइंजन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernisation Chorks, Patiala

LOCO NO.: 41589

RAILWAY/SHED: CR/KYN DOD: FEBRUARY 2022

#### INDEX

SN	PARA	ACTIVITIES	PAGE NO.
		Testing & Commissioning (TRS)	
1.	1.0 1.1 1.2 1.3 1.4	Continuity Test of the cables Continuity Test of Traction Circuit Cables Continuity Test of Auxiliary Circuit Cables Continuity Test of Battery Circuit Cables Continuity Test of Screened Control Circuit Cables	1-4
2.	2.0 2.1 2.2 2.3	Low Tension test Measurement of resistor in OHMS (Ω) Check Points Low Tension Test Battery Circuits (without control electronics)	5-6
3	3.0 3.1 3.2 3.3 3.4	Downloading of Software Check Points Download Software Analogue Signal Checking Functional test in simulation mode	7-10
4	4.0 4.1 4.2 4.3	Sensor test & convertor test Test wiring Transformer Circuits – Polarity Test Test wiring auxiliary transformer 1000V/415V-110V (pos. 67) Primary Voltage Transformer	
	4.4 4.5 4.6	Minimum voltage relay (Pos. 86) Maximum current relay (Pos. 78) Test current sensors	11-16
	4.7 4.8 4.9	Test DC Link Voltage Sensors (Pos 15.6/*) Verification of Converter Protection Circuits (Hardware limits) Sequence of BUR contactors	
5.	5.0 5.1 5.2 5.3 5.3.1 5.3.2 5.3.3 5.4 5.5 5.6 5.7	Commissioning with High Voltage Check List Safety test main circuit breaker Auxiliary Converter Commissioning Running test of 3 ph. auxiliary equipments Performance of Auxiliary Converters Performance of BURs when one BUR goes out Auxiliary circuit 415/110 Hotel Load Circuit Traction Converter Commissioning Test protective shutdown SR	16-25
6.	5.8 5.9 6.0	Test Harmonic Filter Test important components of the locomotive Running Trial of the locomotive	25-26
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27
8.	8.0	Status of RDSO modifications .	28
9.	1-10	Pneumatic Test Parameters	29 - 32
10.		Loco Check Sheet(LRS)	33
11	-	Component History (LRS,TRS,ABS)	34-36
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38
13	-	Warranty Conditions as per Tenders	39 -41

(Ref: WI/TRS/10)

## DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589
1.0 Continuity Test of the cables

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

## 1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	1000
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	8K	100 ΜΩ	1000
Filter Cubicle	Earthing Choke	DL	100 ΜΩ	1500
Earthing Choke	Earth Return Brushes	or.	100 ΜΩ	1800
Transformer	Power Converter 1	DL	100 ΜΩ	1800
Transformer	Power Converter 2	ØL.	100 ΜΩ	1500
Power Converter 1	TM1, TM2, TM3	OL	100 ΜΩ	1000
Power Converter 2	TM4, TM5, TM6	OK	100 ΜΩ	1000
Earth	Power Converter 1	OL	100 ΜΩ	1500
Earth	Power Converter 2	OL	100 ΜΩ	1500

## 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

## DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OL	100 MΩ	1500
Transformer	BUR2	8V	100 M $\Omega$	1500
Transformer	BUR3	DL	100 MΩ	1500
Earth	BUR1	8K	100 MΩ	1000
Earth	BUR2	20	100 MΩ	(200
Earth	BUR3	OL	100 MΩ	1000
BUR1	HB1	on	100 MΩ	1000
BUR2	HB2	De.	100 MΩ	1000
HB1	HB2	2K	100 ΜΩ	1000
HB1	TM Blower 1	8V_	100 MΩ	200
HB1	TM Scavenge Blower 1	5U	100 ΜΩ	100
HB1	Oil Cooling Unit 1	81L	100 ΜΩ	120
HB1	Compressor 1	ov.	100 MΩ	100
HB1	TFP Oil Pump 1	8V	100 ΜΩ	(50
HB1	Converter Coolant Pump 1	OV-	100 ΜΩ	100
HB1	MR Blower 1	876	100 MΩ	200
HB1	MR Scavenge Blower 1	2X	100 MΩ	200
HB1	Cab1	82	100 ΜΩ	150
Cab1	Cab Heater 1	ov	100 MΩ	100
HB2	TM Blower 2	ne	100 MΩ	100
HB2	TM Scavenge Blower 2	OK	100 ΜΩ	100
HB2	Oil Cooling Unit 2	5re	100 MΩ	100
HB2	Compressor 2	ov.	100 ΜΩ	150
HB2	TFP Oil Pump 2	N	100 MΩ	200
HB2	Converter Coolant Pump 2	or .	100 MΩ	200
HB2	MR Blower 2	ne	100 MΩ	200
нва	MR scavenge Blower 2	ne	100 ME3	200
HB2	Cab2	ne	100 ΜΩ	200
Cab2	Cab Heater 2	de	100 MΩ	200

(Ref: WI/TRS/10)

### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

1.3 Continuity Test of Battery Circuit Cables

Page: 3 of 27

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	OK
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	OK
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.X7-3		OK

Close the MCB 112, 110, 112.1, and 310.4 and	Prescribed value	Measured
measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	> 0.5 MΩ	Value <u>Jo</u> MΩ
Measure the resistance between 2093 & 2052,	Prescribed value:	Measured .
2093 & 2050, 2052 & 2050	> 50 MΩ	Value <u>60</u> ΜΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

#### 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	OK
Memotel circuit of cab1 &2	10A	OK
Memotel speed sensor	10A	OK
Primary voltage detection	01A, 12A	OK
Brake controller cab-1 & 2	06F, 06G	OK



Doc.No.F/TRS/01 (Ref: WI/TRS/10)

## DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	ok
Terminal fault indication cab-1 & 2	09F	OK
Broke pipe pressure actual BE electric	06H 12B, 12F	OK
Hirmary current agnisers  Harmonic filter current sensors	12B, 12F	DK
Auxiliary current sensors	12B, 12F	ok
Oil circuit transformer bogie 1	12E, 12I	9K
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	ρK
traction motor speed sensors (2Hes) and temperature sensors (1 no.) of TM-3	126	Automobilities valides validation validation in the control of the
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	οK
Traction motor speed sensors (2 nos) and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OK
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing	13A	OK
resistance= 10KΩ± ± 10%)		
UIC line	13B	OK
Connection FLG1-Box TB	13A	Och

(Ref: WI/TRS/10)

## DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Effective Date: March 2021

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

#### 2.0 Low Tension test

#### 2.1 Measurement of resistor in OHMS ( $\Omega$ )

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	$3.9$ K $\Omega \pm 10\%$	3.912
Resister to maximum current relay.	1 <b>Ω</b> ± 10%	1-52
Load resistor for primary current transformer (Pos. 6.11).	3.3 <b>Ω</b> ± 10%	3.352
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.2-2
Between wire 6 & 7	0.2 Ω	0.25
Between wire 5 & 7	0.4 Ω	0.452
For train bus, line U13A to earthing.	10 k <b>Ω</b> ± 10%	10.0148
For train bus, line U13B to earthing.	10 k <b>Ω</b> ± 10%	10.01
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	RMORE
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	2-8c.0
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.2852
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.2851
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	<b>2.2 kΩ</b> ± 10%	2.2 × 2
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k <b>Ω</b> ± 10%	2-69 FR
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	B.88 KJ
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 kΩ± 10%	1.8 kg
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	3902
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k <b>Ω</b> ± 10%	MA
Resistance for headlight dimmer; Pos. 332.3.	10 <b>Ω</b> ± 10%	10.5

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

## DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Note:

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not.  These earthing connections must be flexible and should be marked yellow & green	cheesed ou
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	cheeped or

## 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	Cheekoel ou
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	≥K
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	OK
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	3K
Test control Pneumatic devices	Sheets of Group 06	OK
Test lighting control	Sheets of Group 07	OK
Pretest speedometer	Sheets of Group 10	OK
Pretest vigilance control and fire system	Sheets of Group 11	عاد
Power supply train bus	Sheets of Group 13	Ope

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

LUCC	JIIIOLIVE INO J
3.0	Downloading of Software

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yey
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

Traction converter-1 software version:	1.0.3.6
Traction converter-2 software version:	1.0.3.6
Auxiliary converter-1 software version:	1.8.2.2
Auxiliary converter-2 software version:	2.8.2.2
Auxiliary converter-3 software version:	3.8.2.2
Vehicle control unit -1 software version:	1 . 6 . 8 . 7
Vehicle control unit -2 software version:	1.6.8.7

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured
			Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK.
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	DK
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB 0101- Xang Trans	Between 9% and 11 %	10%-
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101- Xang Trans	Between 99 % and 101 %	100%
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	247.

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 1589

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1001.
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	241,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	441.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	19°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	13°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	19.5°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	19.0°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	19°C
Both temperature sensor of TM6	SLO2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient tamperature $\mathfrak{g}^a\mathfrak{c}$ to $40^\circ\mathrm{C}$	19.5°C

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

#### 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	eRocked on
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	cheeped on
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed.  By moving reverser handle:  Converter pre-charging contactor 12.3 must close after few seconds.  Converter contactor 12.4 must close.  Converter re-charging contactor 12.3 must opens.  By increasing TE/BE throttle:  FB contactor 8.41 must open.  FB contactor 8.2 must close.  FB contactor 8.1 must close.	cheeked ok
Converter and filter contactor operation with both Power Converters during Shut Down.	Bring TE/BE to O .	efectedos

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

_ = #		
Contactor filter adaptation by isolating any bogie  Test earth fault detection battery	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.  • Check that FB contactor 8.1 is open.  • Check that FB contactor 8.2 is open.  After raising panto, closing VCB, and  • FB contactor 8.1 closes.  • FB contactor 8.2 remains open.  By connecting wire 2050 to	peheusedon
circuit positive & negative	earth, create earth fault negative potential.  • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault	o cheesedou
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then A fault message priority 1 appears on screen and lamp LSF1 glow. Start/Running interlock occurs and TE/BE becomes to 0.	perecedos
Time, date & loco number	Ensure correct date time and Loco number	Ork_

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page : 11 of 27

#### 4.1 Test wiring main Transformer Circuits

4.0 Sensor Test and Converter Test

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.034	OK
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.0310	OK
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.0476	OK
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.0420	OK
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.9 VP   SSVRIPS	OK
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.10VP 6.42 YRMS	Ov

#### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	$58.7V_p$ , $41.5V_{RMS}$ and opposite polarity.	58 5VP 41.4V RMS	OK
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15.4281	DK

11. OV RMS

SE! and ?

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

#### 4.3 Primary Voltage Transformer

Apply  $250V_{eff}/350V_p$  by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	25kV	250%	25KV	2501
SLG2 G 87-XUPrim	25 kV	250%	257KV	2507,

Decrease the supply voltage below 140  $V_{RMS}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	17kV	170%	17KV	170%
SLG2 G 87-XUPrim	17 kV	170%	17KV	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240  $V_{RMS}$  through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1_G 87-XUPrim	30kV	300%	30KV	300.1-
SLG2_G 87-XUPrim	30 kV	300%	30 KV	300-/-

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

#### (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

#### 4.4 Minimum voltage relay (Pos. 86)

Functionality test:

Minimum I (D 06)	
Minimum voltage relay (Pos. 86) must be adjus	ted to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V <sub>RMS</sub> through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	<b>L</b> (Yes/No)
Try to activate the cab in driving mode:	L(Yes/No)
Contactor 218 do not close; the control	LIFES/NO)
electronics is not be working.	
Turn off the variac :	
	L(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	-
The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no.	(Yes/No)
1501 & 1502; Decrease the supply voltage below	
$140V_{RMS} \pm 4V$ ;	
Fine tune the minimum voltage relay so that VCB opens.	

#### 4.5 Maximum current relay (Pos. 78)

Disconnect wire 1521 & 1522 of primary current transformer; Connect variac to wire 1521 &1522 (including the resistor at Pos. 6.11); Put loco in simulation for driving mode; Open  $R_3 - R_4$  on contact 136.3; Close VCB; supply 3.6A<sub>RMS</sub> at the open wire 1521; Tune the drum of the maximum current relay Pos. 78 for correct over current value;

inaximum current relay Pos. 78 for correct over current value;	
VCB opens with Priority 1 fault message on display.	(Yes/No)
Keep contact $R_3$ – $R_4$ of 136.3 closed; Close VCB; Tune the resistor /9.9 $A_p$ at the open wire 1521;	or 78.1 for the current of 7.0A <sub>RMS</sub>
vcb opens with Priority 1 fault message on display.	Leves/No)

Sp

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

#### 4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	
Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		298 mB
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. $7(+)$ & 8(-) Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. $7(+)$ & 8(-)		
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)	•	
	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		BHOMA
Hotel load current sensors (Pos. 33/1 &	5witch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8 8(-)		
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)		

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 1589

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

#### 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	O1L
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK

#### 4:9 dequence of BUA contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4-1589

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

#### Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	close	open	close	open	close	open	close	clos	open
BUR1 off	COBS!	open	closs	008	open	clos	opes	open	clos
BUR2 off	open	Open	close	clos	close	close	opes	opes	088
BUR3 off	open	lose	open	close	close	elde	open	open	close

#### 5.0 Commissioning with High Voltage

#### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	76)
No rubbish in machine room, on the roof, under the loco.	tes
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	Yes
All the three fuses 40/* of the auxiliary converters	Yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	Yes
Roof to roof earthing and roof to cab earthing done	tes
Fixing, connection and earthing in the surge arrestor done correctly.	, */e)
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	tes
Pulse generator (Pos. 94.1) connection done correctly.	Kes .
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Tes
KABA key interlocking system.	Yes

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	chelped on
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN	VCB must open. Panto must lower. Emarganey brake will be	cheeped on
Under voltage protection in cooling mode	button 244.  Raise panto in cooling mode. Close the VCB.  Switch off the supply of catenary by isolator	applied. VCB must open.	checkedok
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	chemedon
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	Charperl Od
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	cheeked on
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	cfelledoa
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	e Loepeelon

Effective Date: March 2021

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic massage will some that "Earth fault nexillary circuit."

#### 5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary	Typical phase	Measured	Measured	
machine	current	continuous phase	starting phase	
		current	current	
Oil pump transformer 1	9.8 amps	10.3	14.2	
Oil pump transformer 2	9.8 amps	10.7	12.0	
Coolant pump converter 1	19.6 amps	5.9	6.7	
Coolant pump converter 2	19.6 amps	5.9	6.3	
Oil cooling blower unit 1	40.0 amps	42.0	1800	
Oil cooling blower unit 2	40.0 amps	40.0	157.0	
Traction motor blower 1	34.0 amps	,34-2	171.0	
Traction motor blower 2	34.0 amps	33.5	164.0	
Sc. Blower to Traction motor blower 1	6.0 amps	5.0	31.0	
Sc. Blower to Traction motor blower 1	6.0 amps	5.0	29.0	
Compressor 1	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	28.0	120.0	
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	28.5	156.0	

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

#### 5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10501	Yes
BURI 7303 XUUZI	DC link voltage of BUR1	60% (10%=100V)	636V	Yes
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	Just 1	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	1052	Yes
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amb	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	24 Bmb	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	13 Amp	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1101	Yes

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	1050V	Tes
BUR3 7303- XUUZ1	DC link voltage of BUR3	60% (10%=100V)	637V	Ks
BUR3 7303-XUIZ	DC link current of BUR3	1% (10%=50A)*	7 Amp	Tes
BUR3 7303-XUILO	Current battery charger of BUR 3	3% (10%=100A)*	Solder	Kes .
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	quaci	Yes
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	1101	tes

<sup>\*</sup> Readings are dependent upon charging condition of the battery.



Effective Date: March 2021 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 20 of 27

#### 5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

	intilation level 3 of the it			
Condition of	Loads on BUR1	Loads in BUR2	Loads in BUR3	
BURs				
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery Charger and TM Scavenger blower 1&2	
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	chespod ac
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.		

#### 5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary	Typical	Measured phase	Measured
machine	phase	current	starting current
	current	**	
Machine room blower 1	15.0 amps*	6.6	26.3
Machine room blower 2	15.0 amps*	7.1	23.3
Sc. Blower to MR blower 1	1.3 amps	6-9	12.7
Sc. Blower to MR blower 2	1.3 amps	1.0	11.5
Ventilator cab heater 1	1.1 amps	1.4	1.5
Ventilator cab heater 2	1.1 amps	1.4	1.5
Cab heater 1	4.8 amps	4.9	5.0
Cab heater 2	4.8 amps	4.9	5.3

<sup>\*</sup> For indigenous MR blowers.

fe.

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### 5.6 Traction Converter Commissioning

#### This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and precharging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeped or
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherkeel ou
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked or
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherped ou
Earth fault detection on A part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekeel on
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekeel or
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheekedou

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/589

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

#### For Converter 2

Test Function	Results desired in sequence	Result obtained
charging and charging	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cholteelou
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeped on
positive potential of DC Link of Converter 2.	demonstrate the same to the DMW supervisor.	cheveel or
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	Choekeel ou
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chaeted on
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cferked ou
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chelked ou

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on DDU	efected of
	appears  Disturbance in Converter 1	
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on diagnostic display appears  Disturbance in Converter 2	cherked or

5.2 Test Harmonic Filter Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	o cheeked on

St

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

	• FB contactor 8.2 must close.	
	• FB contactor 8.1 must close	
	Check the filter current in	
	diagnostic laptop	
	Bring the TE/BE throttle to O	o cheeped on
	Switch off the VCB	
	• FB contactor 8.1must open.	
	• FB discharging contactor 8.41	
	must close	\
	Check the filter current in	,
	diagnostic laptop	
Test earth fault	Make a connection between wire	7
detection harmonic	no. 12 and vehicle body. Start up	
filter circuit.	the loco. Close VCB.	0000 (44
	• Earth fault relay 89.6 must pick up.	chercelor
*1	Diagnostic message comes that -	
	Earth fault in harmonic filter circuit	
Test traction motor	Traction converter manufacturer	ð
speed sensors for	to declare the successful operation	o OK
both bogie in both	and demonstrate the same to the	
cabs	supervisor/ DMW	<u></u>

#### 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	ctreated on
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	charked on
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	cheeped on
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	cheekeelow
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	cherkal of

St

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

Marker light	Both front and tail marker light should glow from both the cabs	cherked on
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	efected or
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	efectation
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	chested on
Illuminated Push button	All illuminated push buttons should glow during the operation	
of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.2.
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m <sup>3</sup> /minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### 6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	cheepolon
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	Largedov
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	of cours
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75</li> <li>Kg/cm², by pressing BPCS again.</li> </ul>	chatted
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	cheeked Su

#### (Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .	
	locomotive	For 60 seconds do not press vigilance foot switch or	
		sanding foots switch or TE/BE throttle or BPVG	-
		switch then	
		Buzzer should start buzzing.	cheepedou
		<ul> <li>LSVW should glow continuously.</li> </ul>	
		Do not acknowledge the alarm through BPVG or	
		vigilance foot switch further for 8 seconds then:-	
		<ul> <li>Emergency brake should be applied automatically.</li> </ul>	
		VCB should be switched off.	
		Resetting of this penalty brake is possible only after	
		180 seconds by bringing TE/BE throttle to 0 and	
		acknowledge BPVR and press & release vigilance	
		foot switch.	
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).	cheepelde
		With park brake in applied condition.	- rea
		• With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	$\Phi$
		• With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).	Cheepeelon
		• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).	
8.	Check traction interlock	Switch of the brake electronics. The	9
		Tractive /Braking effort should ramp down, VCB	cheekalos
	1	should open and BP reduces rapidly.	
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	Theesedou
1.0	braking.	should start reducing.	Checker
10.	Check for BUR	In the event of failure of one BUR, rest of the two	()
	redundancy test at	BURs can take the load of all the auxiliaries. For this	Checkeelou
	ventilation level 1 & 3 of	switch off one BUR.	
a	loco operation	Auxiliaries should be catered by rest of two BURs.	
11		Switch off the 2 BURs; loco should trip in this case.	
11.	Check the power	Create disturbance in power converter by switching	9
	converter	off the electronics. VCB should open and converter	chocked
	isolation test	should get isolated and traction is possible with	
		another power converter.	9

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

#### DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41589

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

#### 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	04	OK (	
2	Marker Red	OK	OL	
3	Marker White	OF	0K	
4	Cab Lights	OK	OK	
5	Dr Spot Light	ore	25	Cheesed working
6	Asst Dr Spot Light	OL	Oil	
7	Flasher Light	OK	OK	
8	Instrument Lights	OK	D.C.	
9	Corridor Light	Dre	DR	
10	Cab Fans	DK	82	
11	Cab Heater/Blowers	Ork	8d	
12	All Cab Signal Lamps Panel 'A'	DK	die	

## Status of RDSO modifications

LOCO NO: (1)389



Sn	wiedmediem No.	Description	Remarks
1.	RDSO/2008/EL/MS/035	7 Modification in control aircuit ( 5)	Remarks
	Rev.'0' Dt 20.02.08	Light of three phase electric locomotives.	d Øk/Not Ok
2.	RDSO/2009/EL/MS/037 Rev.'0' Dt 22.04.09	7 Modification to voltage sensing circuit in electri- locomotives.	c ØK/Not Ok
3.	RDSO/2010/EL/MS/039	Paralleling of interlocks of EP contactors and Relays of	JOINTOL OK
4.	Rev.'0' Dt 31.12.10 RDSO/2011/EL/MS/039	The bridge locollionives in improve reliability	I CKANOLOK
5.	Rev.'0' Dt 08.08.11 RDSO/2011/EL/MS/040	from MCPA circuit	MK/INOT ()k
0.	Rev.'0' Dt 10.08.11	KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resir bonded glass fiber sheet fact.	
6.	RDSO/2011/EL/MS/040 <sup>2</sup> Rev.'0' Dt 10.08.11	three phase locomotives to avaid 5	F OK/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	draining of hatteries in three phase all this lights to avoid	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	draining of batteries in three phase electric locomotives.  Modification of terminal connection of heater cum blower assembly.	OK/Not Ok
9.	RDSO/2012/EL/MS/0411	Modification sheet to avoid simultant	POKINOT OK
	Rev.'1' dated 02.11.12	White and Red marker light in three phase electric	Ok/Not Ok
	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	Paralleling of interlocks of FP contactors and auxilians	-Ok/Not Ok
1	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12	I would died to blookle libber sealing gacket in	
2	RDSO/2013/EL/MS/0420	Master Controller of three phase locomotives.  Modification sheet to provide mechanical locking	9k/Not Ok
	Rev.'0' Dt 23.01.13	Modification sheet to provide mechanical locking arrangement in Primary Over Current Relay of three phase locomotives.	Ok/Not Ok
3	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13	Modification sheet for improving illumination of head light in dimmer mode in three phase electric locomotives.	Øk/Not Ok
4	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13	Modification sheet of Bogie isolation rotary switch in three phase electric locomotives.	Ok/Not Ok
5	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13	Modification sheet for MCP control in three phase electric locomotives.	Ok/Not Ok
3	RDSO/2013/EL/MS/0428		OK/NOL OK
	Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	Ok/Not Ok
7	RDSO/2014/EL/MS/0432 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over	Øk/Not Ok
_	RDSO/2017/EL/MS/0464 Rev.'0' Dt 25.09.17	Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT	Øk/Not Ok
9	RDSO/2017/EL/MS/0467 Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three	
)	DD 0.0	Modification in existing Control Electronics (CE) resetting	OK/Not Ok
	RDSO/2019/EL/MS/0477 Rev.'0' Dt 18.09.19	scheme of 3 phase electric locomotives.  Implementation of push pull scheme.	Ok/Not Ok
	1 tev. 0 Dt 18.09.19	to the state of th	Øk/Not Ok

Signature of JE/SSE/TRS

# 29

#### DMW/PATIALA

Loco No.: 41589

## PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	Parameters	Reference	Value	Result
1.0	Auxillary Air supply system (Pantograph & VCB)			nesure
1.1	Ensure, Air is completely vented from pantograph		0	0
	Reservoir (Ensure Panto gauge reading is Zero)			0
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	F2.C-
	Record pressure Build up time (8.5kg/cm2)	A	ou sec. (IVIAX.)	53 Sec
1.3	Auxillary compressor safety Valve 23F setting	CLW's check sheet	9 F±0 2Fl/2/2022	0.51/ / 0
	, , , , , , , , , , , , , , , , , , , ,	no. F60.812 Version	8.5±0.25kg/cm2	8.5 Kg/cm <sup>2</sup>
		2	-	
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4 F V = 1
		no. F60.812 Version	kg/cm2 closes	4.5 Kg /cm2
		2	5.5±0.15 kg/cm2	
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 is		5.5±0.15 kg/cm2	
1.6	Set Cab-1 Pan UP in Panel A.	Totaling Cocks & NABA (C		
	The same of an or any union A.		Observed Pan-2	OK
1.7	Close Pan-2 isolating Cock		Rises.	
	Open Pan -2 isolating Cock		Panto-2 Falls Down	OK
1.8	Record Pantograph Rise time		Panto-2 Rises	
1.9	Record Pantograph Lowering Time		06 to 10 seconds	8 Sec
1.10			06 to 10 seconds	8 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.6 kg/cm2
2.0			Min.	in 5 Min.
	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and test		
	closed drain cocks. MR air pressure build up time by each	performed by		
	compressor from 0 to 10 kg/cm2.	Railways.		
	i) with 1750 LPM compressor		i) 7 Mts. Max.	6.7 Mts
	ii) with 1450 LPM compressor		ii) 8.5 Mts. Max.	
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-26 Sec
	compressors, Check pressure build time of individual			
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-26 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.45 Kg/cm <sup>2</sup>
		MM3882 &	kg/cm2 Opens at	3.10 16/01/12
		MM3946	5.60±0.15kg/cm2	5.5 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10 Kg/cm2
		MM3882 &	kg/cm2 Opens at	TO NE/ CITIZ
			"P) CITE OPETS at	
		MM3946	8±0.20 kg/cm2	8 Kg/cm2

DMW/PATIALA

Page 2 of 4

Loco No.:41589

27	Charles I I I I I I I I I I I I I I I I I I I		
2.1	Check unloader valve operation time	A = = = = 12 C	10
-	T Table operation time	Approx. 12 Sec.	10 sec
		4	

7-9	
	7 (30)

2.8	Check Auto	Drain Valve functioni	ng (124 & 87)			41	589
						Operates when	
2.9	Check CP-I d	elivery safety valve s	etting (10/1). Run CP	DOA		Compressor starts	
2.10	Direct by BEC	∟P.		MM38	M test spec. 82 & MM3946	11.50±0.35kg/cm2	11.5 Kg/cr
2.10	direct by BLC	ielivery safety valve s IP	setting (10/2). Run CP	D&N	∕l test spec.	11.50±0.35kg/cm2	11.5 Kg/cn
2.11	Switch 'OFF'	the compressors and	l ensure that the safety		82 & MM3946		
	valve to rese	t at pressure 12 kg/c	m2 less than opening		A test spec.		
	pressure.				32 & MM3946	i	
2.12	coodic.	Switch 'OFF' compre	ssor, Drain MR Pressure	CLM's	heck sheet		
1 1	ny diam cock	of 1" Main Reservoi	r Start Compressor and	COLUMN BUILDING	812 Version 2	5.0±0.10kg/cm2	5.0 Kg/cm <sup>2</sup>
	Check setting	pressure of Duplex (	Check Valve 92F.	110.100.	ors version 2		
2.13	FP pressure:			CIW's c	neck sheet	C 0 1 0 2 0 1 1	
	Fit Test Gauge	e in Test point 107F F	PTP. Open isolate cock		812 Version 2	6.0±0.20kg/cm2	6.0 Kg/cm <sup>2</sup>
2.0	130F. CHECK P	ressure in Gauge.		1101100.	012 VEISION 2		
3.0	Air Dryer Op	eration					
3.1	Open Drain Co	ock 90 of 2 <sup>nd</sup> MR to s	tart Compressor, leave			Tower to change	1
	open for Test	Check Air Dryer Tow	ers to change.			i) Every minute	0.11
						(FTIL & SIL) ii)every	OK
3.2	Chook Duran					two minute (KBIL)	
3.3	Check purge A	ur Stops from Air Dry	er at Compressor stops			two minute (RBIL)	
4.0	Main Posonus	on of humidity indica	tor			Blue	Blue
4.1	Put Auto Prok	ir Leakage Test					blue
7.1	leakage from b	e (A-9) in full service,	Check MR Pressure air	D&M	test spec.	Should be less than	0.8 Kg/cm2
	icakage nom t	oun caps.		MM3882	2 & MM3946	1 kg/cm2 in 15	in 15
4.2	Check BP Air Id	nakaga (igalata BB. I				minutes	minutes
	STEEK BI All 16	eakage (isolate BP ch	arging cock-70)	D&M	test spec.	0.15 kg/cm2 in 5	0.11
	m n			MM3882	. & MM3946	minutes	Kg/cm2 in
5.0	Brake Test (A	utomatic Brake op				70.70 Secretarios (10.00)	5 minutes
5.1	Record Brake F	ine & Brake Cylinder	peration)  pressure at Each Step				
	January & Brake 1	ipe & brake Cyllinger	pressure at Each Step				
							a 0°1
	Check proporti	onality of Auto Brake	system	CI W's c	heck sheet		2
			(C) 10 # 0.12 (c) 9 Res (c) (25 (0))		12 Version 2		
	ir v			1.0.100.0	12 (6131011 2	p H	
	Auto controller	nosition				F 11	
5	and dorrer one;	position			9 & WAG-7)	BC (WAP-5)	
H a				Kg/cm2	7	Kg/cm2	
		BP Pressure kg/	cm2	Value	Result	Value	Result
					1	value	Nesuit
						8	8 6
	Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	
	Initial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	
. 1	Full service	3.35±0.2	3.5 Kg/cm2	2.50±0.1			
			5.000	JU±U.1	2.5Kg/ cm2	5.15±0.30	
	Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1			

			-
	_	/	3
1	1	1	7
+	>	/	1
(		1	/
	_		

	Record time to BP pressure drop to 3.5 kg/cm2 Ensure	D&M test spec.	8±2 sec.	11589 8 Sec
5.3	Automatic Brake Controller handle is Full Service from Run	MM3882 & MM3946		3 366
	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946		ОК
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no	kg/cm2	
		F60.812 Version 2	<ul><li>Closes at BP</li><li>4.05- 4.35</li><li>kg/cm2</li></ul>	4.2Kg/cm
			Opens at BP 2.85- 3.15	3 Kg/cm2
5.5	Move Auto Brake Controller handle from Running to	D&M test spec.	kg/cm2	
	Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed	MM3882 & MM3946		
	WAP7 - BC 2.50 ± 0.1 kg/cm2	2= 0		
-	WAG9 - BC 2.50 ± 0.1 kg/cm2		7.5±1.5 sec.	
5.6	Move Auto Brake Controller handle to full service and		21±3 sec.	21 Sec
	BP pressure 3.5 kg/cm2. Move Brake controller to	D&M test spec.		
	Running position BC Release time to fall BC Pressure	MM3882 & MM3946		
	up to 0.4 kg/cm2 i.e. 95% of Max. BC developed	A		7 7
	BC release Time			
	WAP7	9		
	WAP9		17.5±25 sec.	
.7	Move Auto Brake Controller handle to Release, Check	CIAN's at the	52±7.5 sec.	48 Sec
	BP Pressure Steady at 5.5 0.2 kg/cm2 time.	CLW's check sheet no.	60 to 80 Sec.	72 Sec
.8	Auto Brake capacity test: The capacity of the A9 valve	F60.812 Version 2		
1	in released condition must conform to certain limit in	RDSO Motive power Directorate report no.	BP pressure	
	order to ensure compensation for air leakage in the	MP Guide No. 11 July,	should not fall	61 E1
1	train without interfering with the automatic	1999 Rev.1	below 4.0	
1	functioning of brake.		kg/cm2 with in 60 Sec.	4.25 Kg/cm <sup>2</sup>
	* Allow The MR pressure to build up to maximum		OU SEC.	
S	Stipulated limit.			
*	* Close brake pipe angle cock and charge brake pipe to	E	0	
5	5 kg/cm2 by A (Automatic brake controlling) at run	21		
		8		
lo	Couple 7.5 dia leak hole to the brake hose pipe of			
T	ocomotive. Open the angle cock for brake pipe.		, (sc	
ir	the test shall be carried out with all the compressors of working condition.	8		
	eep Auto Brake Controller (A-9) in Full Service. Press			
D	river End paddle Switch (PVEF)		BC comes to '0'	0
	virect Brake (SA-9)			
	pply Direct Brake in Full Check BC pressure			
W	/AG9/\/\AD7			
	/AP5			3.55Kg/cm2
	nnly Direct Praka Passard P. J. O. V.	2011	5.15±0.3 kg/cm2	
		1 × n / 1 + - 1	8 sec. (Max.)	

## Loco No.:41589

6.3	CI I		2000 10	041369
	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 &	0.2.±0.1 kg/cm2	0.2 kg/cm
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2	MM3946	10 -15 Sec.	13 Sec
7.0	Dynamic Brake (Brake Blending)			13 360
7.1	This test is to be done by forcing signal by laptop 06H			
	Actual BE E1 = 100%	D&M test spec. MM3882 & MM3946	WAP7 & WAG9 - 2.5 kg/cm2.	
7.2	This test is to be done by forcing signal by laptop 06H Actual BE E1 = 50%	D&M test spec. MM3882 &	WAP5-5.15kg/cm2 WAP7 & WAG9 - 1.25 kg/cm2.	
8.0	Parking Brake	MM3946	WAP5-2.55kg/cm2	
8.1	Press BPPB to Release brake	D&M test spec. MM3882 & MM3946	PB released Lamp off in Panel pressure in parking Brake gauge 60kg/cm2	
)	Press BPPB to apply parking brake		PB applied, Lamp On in panel Pressure in parking Brake gauge 0.0	
8.3	Manually release and apply Parking Brake by pressing solenoid valve 30F		kg/cm2 Verify release and application of	
8.4	Check Pressure in PB Gauge		parking Brake.	
8.5	Check Brake Block clearance	D&M test spec. MM3882 &	6.0.±0.15 kg/cm2 10 mm in TBU 3 mm in Disc. Brake	
9.0	Sanding Equipment	MM3946	(WAP5)	
	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operator)		Sand on Rail	OK
0.0	Test Vigilance equipment : As per D&M test specification			OK

Signature of loco testing staff

Signature of SSE/Shop



Issue No.: 03

Effective Date: Oct-2021

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco) Page 1 of 1

## डीजल रेळइंजन आधुनिकीकरण कारखाना पटियाला। DIESEL LOCO MODERNISATION WORKS, PATIALA

S. No	CO NO: 4589  ELECTRIC LOCO CHECK SHEET  Rly: CR		Shed	I: KYI	V
1.1	Check proper Fitzers (CV)	Specifie	ed	Observe	
1.2	Check proper Fitment of Hotel Load Converter & its output contactor.	Value			
	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2.	<del>OK</del>		- NA -	
1.3	Check proper of Fitment of oil and it	ОК		OK	
1.4	proper ritilient of HR 1 & 2 and its	OK		Or	
1.5	Check proper Fitment of FB panel on its position.	OK		o K	
1.6	Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2.	OK	-		
1.7	Check proper Etc	ОК		OC	
1.8	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).			OIC	
1.10	Check proper Fitment of Traction converter 1, 2 & 3-(BUR-1, 2 & 3).  Check proper fitment torquing & Level:	OK		6K	
1.12	Check proper fitment, torquing & Locking of Main transformer bolt.  Check proper fitment of compressor both side.	OK		60	
12	Check proper fitment of compressor both side with the compressor safety wire rope.	OK		al	
1.13	Proper setting of the dampers as required.	ОК		OK	
1.14	Check proper position of Secondary Helical Springs between Bogie & Shell Check proper fitment of Body Bogie Safety Check Proper fitted Check Proper fitment of Body Bogie Safety Check Proper fitment	OK			
1.15	Check proper fitment of Rody Paris and Springs between Bogie & Shell	ОК	+	ok	
1.16	Check proper fitment of Body Bogie Safety Chains fitted properly.  Check proper fitment of Cow catcher.	OK	-	Or	
1.17	Check coolant level in CD 1 a 2 7	OK		01	
1.18	Check Coolant level in SR 1 & 2 Expansion Tank	OK	-	68	
1.19	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		BK	
	r - por million () () () () () () ()			65	
1.21	Check proper fitment of Push Pull rod its bolt torquing and safety slings.  Buffer height: Range (1085 mm to 1105 mm ) Push Public Range (1085 mm to 1105 mm).	OK		OK	
1.2.1	Buffer height: Range (1085 mm to 1105 mm) <b>Drg No IB031-02002.</b>	OK		6K	
	21g No 1B031-02002.	1090-1105		L/S	D /6
		mm	FRONT		R/S
22	Buffer Length: Range (641 mm + 3 to 10 mm)		REAR		109
	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) <b>Drg No</b> -	641 mm	TUTT	1095	
		******	FDOX	L/S	R/S
.23 I	leight of Rail Guard. (114 mm + 5 mm,-12 mm).		FRONT	648	649
	dual d. (114 mm + 5 mm,-12 mm).	114	REAR	648	649
		114 mm +		L/S	R/S
24 C	RC Hoight D	5 mm,-12	FRONT	115	110
0	BC Height: Range (1085 mm to 1105 mm) <b>Drg No- IB031-02002.</b>	mm	REAR	6116	111
	7 - 8 · · · · D031-02002.	1085-1105	FRONT:	1103	1/1

(Signature of SSE/Elect. Loco)

NAMEBYUPINDER STNOY

DATE 12/0/2012

(Signature of JE/Elect Loco)

DATE 12/02/2022

(Signature of JE/UF)

NAME BHALINDER SING

DATE 12/02/2022

5.1	N. Descrition of component	PL No.	Under frame component		Warra
			Make	Mfg. date & Serial no.	cover
1		29171064	TRIDENT	34/49 ,01/2022	upt
2	The statistic statistics	29731057	CGL		
3	TOURSELVATOR TALIK BILLATHER	29731057	YOGYA ENTERPRISES	CG-65-12-21-BH11293/18 ,2021 21-6297, 21-6299	
5	T-o.mpi cosor both side	29511008		ELFS926901(09/21), EUDS926323(07/21)	
6	Took both side	29680013		4621/52(09/21) , 4621/42(09/21)	<b>⊣</b> 5
7	Traction Bar Cab-1	29100069	KM	6893-08-21	As per PO condition
8	Traction Bar Cab-2	29100069	KM	6698-08-21	- Š
9	Side Buffer Assly Both Side	11803587	AEU ,ADE& AEU	Lp06-21,01/21,Lp04-21,06-21	- ŏ
10	Oil Cooling Pump both Side	29530027	SAMAL HARAND OF INDIA PVT.LTD.	D2906 & D2916	- ē
11	Transfermer on Steel pipes	29230044	RANflex PVT.LTD		- 8
			KM	04-21 & 04-21	As As
2	Secondry Helical Spring on	29045034	FRONTIER SPRINGS LIMITED		
1	ELASTIC RING ( Center pivot Center Pivot Housing	29100010	SSPL		-
4	Center Pivot Housing	29100057	TEW	3605(09/21),3581(09/21)	-
l	TM-Blower	30440075	Machine room Component cab 1		
2	TM- Scavenging Blower Motor	29440075	AIR CONTROL & CHEMICAL ENGG. LTI	11/21 & AC-47151, CGLUJAM-5325	1
3	Axillary Control Cubical (HB-1)		G.T.N CO (P) LID.	ST-21-10-495	7
	Filter Cubical (FB-1)	29171180		10/21 & CGHB1G21A133	
	Complete Control Cubicle SB-1	29480140	TROLEX INDIA PVT. LTD.	10/21 & 2110610	
	Vehicle Control Unit (VCU)	29171209		CG/SB-1/21070248	ے ا
	Aux. Converter (BUR) 1	29741075	BOMBARDIER BOMBARDIER	BTIL/11/2021/PROPULSION_A/2007	As per PO condition
	OIL COOLING BLOWER(OCB)	29/410/3	SAININELECTRICALS	12/21 & 2021M/10202/22AA/0155	<u> </u>
	OIL COOLING RADIATOR (OCR)			06/21 & 321061785, FAN-:32106AF1785	8
0	M/C Room Blower	7	STANDARD RADIATORS	10/21 & 081-SRPL	7 0
	M/C Room Scavenging Blower		AIR CONTROL & CHEMICAL ENGG. LTD	1, 033, COLULAIVI-11239	e e
2	Traction Convertor	-	AIR CONTROL & CHEMICAL ENGG. LTD BOMBARDIER		o s
3	Head Light Housing		PATRA & CHANDA MFG.& ENG.(I) PVT.	BTIL/11/2021/31/PROPULSION_A/2017	] <
	Ballast Assembly	29170163	TATILA & CHANDA MEG.& ENG.(1) PV 1.		
	Transformer oil pressure Sensor		TROLEX INDIA PVT. LTD.	00/04/04	
1	Transformer oil Temperature	29250035	FLORICAN	06/21 & 21/4299, 21/4450	e
		1	MACHINE ROOM COMPONENT Cab-2	11/21 & 56934	~
1	TM-Blower	29440075		2.0	
1	TM- Scavenging Blower Motor	29440117	G.T.R CO (P) LTD.	11/21 & AC-47158, CGLUJAM-5331	
1	Axillary Control Cubical HB-2	29171192 A	AUTOMETER ALLIANCE LTD.	ST-21-10-462	
10	Complete Control Cubicle SB-2		ROLEX INDIA PVT. LTD.	09/21 & AALN/09/2021/10/HB2G9/104 11/21 & 211017	
V	Vehicle Control Unit (VCU)		OMBARDIER	BTIL/11/2021/26/PROPULSIONA/2008	
	Aux. Converter (BUR) 2&3		OMBARDIER	12/21 & 2021M/10202/23B/0156	ig.
10	OIL COOLING BLOWER(OCB)	29470043 A	IR CONTROL & CHEMICAL ENGG. LTD	08/21 & AC-46640, CGLUGAM-1169	As per PO condition
L	OIL COOLING RADIATOR (OCR)	23 17 0031 A	11000	10/21 & FG/15002/M 1/21 22/404	- 8
A	M/C Room blower	29440105 A	IR CONTROL & CHEMICAL ENGG. LTD	07/21 & AC 47042 CCLUEAR 442CO	6
T	M/C Room Scav. blower raction Convertor		III CONTROL & CHEWILAL ENGGETTE	06/21 & AC-46543, CGLUDBM-17022	<u></u>
Н	lead Light Housing		VIII DI CII	BTIL/11/2021/30/PROPULSION A/2015	ā
B	allast Assembly	29610953 PA	ATRA & CHANDA MFG.& ENG.(I) PVT.	TOTAL PROPERTY AND	ď
T	ransformer oil pressure Sensor	29170163			
Tr	ransformer oil Temperature		ROLEX INDIA PVT. LTD.	06/21 & 21/4381, 21/4341	4
	- Tringer du Temperature	29250035 FL	LORICAN	11/21 & 56947	4
Н	and Brake	29140050 184	Driver Cabin		
	ir Conditioner	29811028 KK		12966	0 -
2000	ab Heater	29170011 ES		KKI/HVAC/CLW/806, 819	As per PO condition
	rew Fans	29470080 RA	ALL AND	2167, 2180	per
Dr			Door	754, 775, 1128, 1102 135,	S
510 N/ SS	GNAME.v.) Aprod's Arrow, SE/LAS		-	SIGN SATISH KUMAR JE/LAS	

ATCIWINIS

# ELECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41589 LIST OF ITEMS FITTED BY ECS

RLY: CR

SHED: KYN

PROPULSION SYSTEM: BT

WARRANTY	COVERED			ď			EPS.	. Py.fl	AS PER IRS / P.O	CONDITIONS					
QPL		N NO	0000	04 Sp 10	04 Nos	02 Set		02 Nos	02 Set	02 Nos.	02 Nos.	ON CO	01 Set	01 Set	01 Set
MAKE/SUPPLIER		M/s PCE	M/s S/S	1	M/s FIC	M/s ES BEF	8	M/s SAITRONIX	M/s. KFPCO	M/s. HIREACT	M/s PATRA & CHANDA	Ms. TROLFX			MPS PLW
ITEM SR. NO.	CAB-2	9/2021	FLE03684	5577,5541	2663,2657	2167	1123,1102	3913	KEPCO/A1/1905	CF-2021G092-254A	PCE/1322/10/2021	7910	3596	No 290	ntenance kit)
TEM	CAB-1	9/2021	FLE03620	5528,5570	2625,2738	2180	754,775	3914	KEPCO/A1/1935	CF-2021G092-254B	PCE/1325/10/2021	7893	4292		PPS PLW
TEM PL	o Z	29610023	25984962	25984860	29610461	29170011	29470080	29860015	29178204	29178162	29700012	29500059	29200040	29680025	29600418
DESCRIPTION OF ITEM		HEAD LIGHT LAMP	LED BASED FL LIGHT	LED MARKER LIGHT	DRIVER CAB LIGHT	CAB HEATER	CREW FAN	MASTER CONTROLLER	COMPLETE PANEL A,C,D	COMPLETE CUBICLE- F PANEL	HEATER ROTERY SWITCH	DIFFRENCIAL AMPLIFIRE	SPEED IND. & REC. SYSTEM	BATTERY (Ni- Cd)	HARNESSED CABLE
200		~	2	<b>с</b>	4	2	9	7	ω	o	10		12	5	4







	M	vvarianty												as per IRS/PU conditions					1				-		
6		Sr. no.	10818-07/21,10375-07/21	10828-10/21,10812-10/21	05/21 04/24	03/21,04/21		21/08/2573	2021/51694707	AALN/08/2021/005/VCBA/224	5/21,5/21	05/21/212207/14		7	9851278 9851279			EUDS 926223A,EUFS926901B	LD2-10-6567-21	BUCS 104391	21-12-CO-2187	71 17 50 2222	Z1-1Z-EU-Z2U9A,21-12-EO-2209B		
41589	QPL /Nos	Cotrasvs Pv+ 1	2 Cotrasys Pvt.Ltd	2 VIKRANT	8 IEC	MIDDLE ROOF COMPONENT	1 EIPL	1 RITZ	1 Autometer Alliance	9 160		RESILECH E	1 Autometer Alliance	2 CG POWER		Air Brates Comme	2 Flai		1		T	2 KNORR	2 KNORR	4 ELGI	
	ription	Pantograph	2 Servo motor	1	Tillsulator Panto Mtg.	THICK ACID		T			9 Harmonic Filter	10 Earth Switch		11 Julge Arrester		$\neg$	12 Air Compressor	13 Air Dryer	14 Auxillary Compresssor	15 Air Brake Panel	16 Contoller	1		18 Wiper motor	





## DIESEL LOCO MODERNISATION WORKS

## Loco No. 41589

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-47	FRONTIER		101650	As per PO/IRS
REAR	SL-46	FRONTIER	29105146	101650	conditions

## 2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make: KNOOR

#### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	DMW	DMW	DMW	DMW	DMW	DMW
S.NO	22085	21950	22078	22075	21904	22072
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	DM/21- 986	CNC/21- 1908	CNC/21- 1914	CNC/21- 1877	CNC/21- 1899	CNC/21- 1892
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	DM/21- 985	CNC/21- 1907	CNC/21- 1896	CNC/21- 1827	CNC/21- 1915	CNC/21- 1863
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

## 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions )

A	XLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	SKF	SKF	SKF	SKF	SKF	SKF
End	PO NO. & dt	771678	771678	771678	771678	771678	771678
Free	MAKE	SKF	SKF	SKF	SKF	SKF	SKF
End P(	PO NO. & dt	771678	771678	771678	771678	771678	771678

## 6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	82.50T	97T	100T	905KN	102T	945KN
FREE END	95.2T	100T	102T	839KN	101T	862KN



## Loco No. 41589

# 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

1					
1	2	3	4	5	6
1092.5	1092.5	1092.5	1092 5	1002 5	1000.5
10925	1002 5				1092.5
1002.0	1092.3	1092.5	1092.5	1092.5	1092.5
OK	OK	OK	OK	OK	OK
	1092.5	1092.5	1092.5 1092.5 1092.5	1092.5 1092.5 1092.5 1092.5 1092.5	1092.5 1092.5 1092.5 1092.5 1092.5 1092.5 1092.5 1092.5

## 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1 2		3	1		
ST	MANICE	611.15	-	3	4	5	6
0.1.	MAKE	SIMPLEX	KP	SIMPLEX	KM	SIMPLEX	KM
G.E. BEARING	MAKE	FAG	FAG	F 4 0			17101
F F DEADWIN		170	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	FAG	E40	
				1710	FAG	FAG	FAG

## 9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	1		T
MAKE	VD	LVD	-	4	5	6
	NP	KP	KP	KM	KM	KP
BACKLASH 0.254 - 0.458mm)	0.315	0.285	0.325	0.330	0.300	0.380

# 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

XLE POSITION NO	1	2	3	4	5	G
RIGHT SIDE	17.57	16.14	16.45	18.47	18.05	45.70
LEFT SIDE	15	10.10		10.47	10.05	15.73
LLI I SIDE	15	16.13	16.37	16.87	16.26	17.66

# 11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

XLE POSITION NO	MAKE	PO No. & date	C NO
1	DMW	o. d. dato	S. NO.
		-	DMW-982
2	DMW	-	DMW-963
3	DMW	-	DMW-981
4	DMW	-	
5	DMW		DMW-992
0		-	DMW-984
6	DMW	-	DMW-985



		1
)	10	/
1	10	e.
	10	

As per specification no. CLW/MIS/3/001 Alt. 16 i.e., the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	
BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	
29180016	29480140	29942007	
Ŋ	9	7	

		1	- Alle	
1	1	1	X	1
(		"	1)	
-	-	-	-	

	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
6	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
$\dashv$			
	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.