
भारतीय रेल Indian Railways

डीजल रेलइंजन आधुनिकीकरण कारख़ाना, पटियाला Miesel Aoco Modernation Ulorks, Patiala

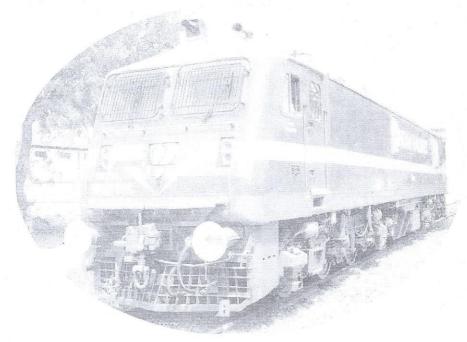

LOCO TESTING & DISPATCH REPORT OF IGBT BASED WAG9HC ELECTRIC LOCOMOTIVE

LOCO NO.:

41591

TYPE:

WAG9HC

RAILWAY SHED:

ECR/BJU

PROPULSION SYSTEM:

CGL

DATE OF DISPATCH:

14.02.2022

लोको निर्माण रिकार्ड



डीजल रेलइंजिन आधुनिकीकरण कारखाना, पटियाला Miesel Loco Modernisation Chorks, Patiala

LOCO NO.: 41591

RAILWAY/SHED: ECR/BJU DOD: FEBRUARY 2022

INDEX

N	PARA	ACTIVITIES	PAGE NO.	
Testing & Commissioning (TRS)				
1.	1.0	Continuity Test of the cables		
	1.1	Continuity Test of Traction Circuit Cables		
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4	
	1.3	Continuity Test of Battery Circuit Cables		
	1.4	Continuity Test of Screened Control Circuit Cables		
2.	2.0	Low Tension test		
	2.1	Measurement of resistor in OHMS (Ω)	5-6	
	2.2	Check Points		
	2.3	Low Tension Test Battery Circuits (without control electronics)		
3	3.0	Downloading of Software		
	3.1	Check Points	7.40	
	3.2	Download Software	7-10	
	3.3	Analogue Signal Checking		
	3.4	Functional test in simulation mode		
4	4.0	Sensor test & convertor test		
	4.1	Test wiring Transformer Circuits – Polarity Test		
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)		
	4.3	Primary Voltage Transformer		
	4.4	Minimum voltage relay (Pos. 86)	11-16	
	4.5	Maximum current relay (Pos. 78)		
	4.6	Test current sensors		
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)		
	4.8	Verification of Converter Protection Circuits (Hardware limits)		
	4.9	Sequence of BUR contactors		
5.	5.0	Commissioning with High Voltage		
	5.1	Check List		
	5.2	Safety test main circuit breaker		
	5.3	Auxiliary Converter Commissioning Running test of 3 ph. auxiliary equipments		
	5.3.1	Performance of Auxiliary Converters		
	5.3.2 5.3.3	Performance of BURs when one BUR goes out	16-25	
	5.3.3	Auxiliary circuit 415/110		
	5.5	Hotel Load Circuit		
	5.6	Traction Converter Commissioning		
	5.7	Test protective shutdown SR	Ta .	
	5.8	Test Harmonic Filter		
	5.9	Test important components of the locomotive		
6.	6.0	Running Trial of the locomotive	25-26	
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27	
8.	8.0	Status of RDSO modifications	28	
	1-10	Pneumatic Test Parameters	29 - 32	
9.		Loco Check Sheet(LRS)	33	
10.		Component History (LRS,TRS,ABS)	34-36	
11.		Component History (ERG, FRG, REG) Component History & Testing Parameter (Bogie Shop)	37 - 38	
12. 13		Warranty Conditions as per Tenders	39 -41	

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591 1.0 Continuity Test of the cables Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 500V megger.

From	TO	(OK/Not OK)	Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OL	100 ΜΩ	700
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	n	100 ΜΩ	700
Filter Cubicle	Earthing Choke	OR	100 ΜΩ	700
Earthing Choke	Earth Return Brushes	OR	100 ΜΩ	500
Transformer	Power Converter 1	ore	100 ΜΩ	200
Transformer	Power Converter 2	ou	100 ΜΩ	200
Power Converter 1	TM1, TM2, TM3	0×	100 ΜΩ	200
Power Converter 2	TM4, TM5, TM6	ou	100 ΜΩ	200
Earth	Power Converter 1	OK	100 ΜΩ	200
Earth -	Power Converter 2	m	100 ΜΩ	200

1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 500V megger.

the JE/SSE/Loco Testing

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	DK	100 ΜΩ	1000
Transformer	BUR2	DK.	100 ΜΩ	[000
Transformer	BUR3	2K	100 MΩ	1000
Earth	BUR1	W.	100 ΜΩ	1000
Earth	BUR2	DK	100 ΜΩ	1000
Earth	BUR3	2X	100 M Ω	1000
BUR1	HB1	nc.	100 MΩ	1000
BUR2	HB2	DL	100 M Ω	1000
HB1	HB2	DL	100 ΜΩ	1000
HB1	TM Blower 1	204	100 ΜΩ	100
HB1	TM Scavenge Blower 1	DV.	100 ΜΩ	170
HB1	Oil Cooling Unit 1	24	100 MΩ	100
HB1	Compressor 1	24	100 MΩ	200
HB1	TFP Oil Pump 1	De-	100 ΜΩ	150
HB1	Converter Coolant Pump 1	572	100 ΜΩ	200
HB1	MR Blower 1	DV	100 ΜΩ	150
HB1	MR Scavenge Blower 1	2/L	100 MΩ	200
HB1	Cab1	24	100 MΩ	120
Cab1	Cab Heater 1	ov.	100 M Ω	100
HB2	TM Blower 2	ne	100 M Ω	150
HB2	TM Scavenge Blower 2	27/	100 MΩ	200
HB2	Oil Cooling Unit 2	ne	100 MΩ	200
HB2	Compressor 2	OL	100 ΜΩ	200
HB2	TFP Oil Pump 2	ne	100 MΩ	100
HB2	Converter Coolant Pump 2		100 ΜΩ	150
HB2	MR Blower 2	ox.	100 ΜΩ	150
HB2	MR Scavenge Blower 2	2V	100 ΜΩ	200
HB2	Cab2	2V	100 ΜΩ	100
Cab2	Cab Heater 2	ne	100 ΜΩ	100

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	0)4
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	ok
Battery (Wire no. 2052)	Connector 50.X7-2		OK
SB2 (Wire no 2050)	Connector 50.X7-3		OK

Close the MCB 112, 110, 112.1, and 310.4 and measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	Prescribed value $> 0.5 \ \text{M}\Omega$	Measured Value $M\Omega$
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 & 2050	Prescribed value: $> 50 \text{ M}\Omega$	Measured Value 70 MΩ

Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B	ox
Memotel circuit of cab1 &2	10A	ok
Memotel speed sensor	10A	DK
Primary voltage detection	01A, 12A	ok
Brake controller cab-1 & 2	06F, 06G	014

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OK
TE/BE meter bogie-1 & 2	08E, 08F	OK
Terminal fault indication cab-1 & 2	09F	012
Brake pipe pressure actual BE electric	06H	οK
Primary current sensors	12B, 12F	0/2
Harmonic filter current sensors	12B, 12F	0K
Auxiliary current sensors	12B, 12F	OK
Oil circuit transformer bogie 1	12E, 12I	OK
Magnetization current	12C, 12G	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	ok
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OK
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	ok_
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-5	12H	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	OIL
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing resistance= $10K\Omega \pm \pm 10\%$)	13A	OK
UIC line	13B	OK.
Connection FLG1-Box TB	13A	OK

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.0 LOW TEHSION TEST

2.1 Measurement of resistor in OHMS (Ω)

Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9 K $\Omega \pm 10\%$	3-9K2
Resister to maximum current relay.	1 Ω ± 10%	12
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.32
Resistance harmonic filter (Pos 8.3). Variation allowed \pm 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.25
Between wire 6 & 7	0.2 Ω	0.20
Between wire 5 & 7	0.4 Ω	0.4.0
For train bus, line U13A to earthing.	10 kΩ± 10%	10.0KU
For train bus, line U13B to earthing.	10 k Ω ± 10%	988KD
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	300175
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.352
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.28_2
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.285
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	2.58-7
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ ± 10%	2.2 KM
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 k Ω ± 10%	2.69KR
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k Ω ± 10%	3.9KA
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k Ω ± 10%	1.8 2
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 Ω ± 10%	3905
Earthing registance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 kΩ± 10%	MA
Resistance for headlight dimmer; Pos. 332.3.	10 Ω ± 10%	102

Note:

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	Cheesed or
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	checked of

2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	Cheeped or
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	OK
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked.
Test control main apparatus	Sheets of Group 05.	علا
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	ok
Test control Pneumatic devices	Sheets of Group 06	OK
fest lighting control	Sheets of Group 07	5/4
Pretest speedometer	Sheets of Group 10	OK
Pretest vigilance control and fire system	Sheets of Group 11	OP
Power supply train bus	Sheets of Group 13	OK

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/59 | 3.0 Downloading of Software

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

3.1 Check Points.	Yes/No
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that control electronics off relay is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Yes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the propulsion equipment to be ensured and noted:

Traction converter-1 software version:	26
Traction converter-2 software version:	26
Auxiliary converter-1 software version:	3.0
Auxiliary converter-2 software version:	3.0
Auxiliary converter-3 software version:	3.0
Vehicle control unit -1 software version:	2008
Vehicle control unit -2 software version:	2006

3.3 Analogue Signal Checking
Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured
			Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	OK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK
TE/BE at 'o' position	FLG1; AMSB_0101- Xang Trans	Between 9% and 11%	10%.
from both cab	FLG2; AMSB_0101- Xang Trans		
TE/BE at 'TE maximal'	FLG1; AMSB_0101- Xang Trans	Between 99 % and 101 %	100%
position from both cab	FLG2; AMSB_0101- Xang Trans		
TE/BE at 'TE minimal'	FLG1; AMSB_0101- Xang Trans	Between 20 % and 25 %	257.
position from both cab	FLG2; AMSB_0101- Xang Trans	AT .	-37.

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

TE/BE at 'BE maximal'	FLG1; AMSB 0101-		
position from both cab	XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	1007.
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	257.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS 0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	447.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	747-
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	20 ^{1°}
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	19°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1900
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	20°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	20° C
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	1900



DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX $610\ 281$. through the Diagnostic tool/laptop :

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	cheeked on
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	Cherked on
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed. By moving reverser handle: Converter pre-charging contactor 12.3 must close after few seconds. Converter contactor 12.4 must close. Converter re-charging contactor 12.3 must opens. By increasing TE/BE throttle: FB contactor 8.41 must open. FB contactor 8.2 must close. FB contactor 8.1 must close.	charked on
Converter and filter contacto operation with both Powe Converters during Shut Down.	 Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed. 	Cheeked or

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC Page : 10 of 27

		
Contactor filter adaptation by isolating any bogie	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco. • Check that FB contactor 8.1 is open. • Check that FB contactor 8.2 is open. After raising panto, closing VCB, and setting TE/BE • FB contactor 8.1 closes. • FB contactor 8.2 remains open.	cheesed on
Test earth fault detection battery circuit positive & negative	By connecting wire 2050 to earth, create earth fault negative potential. • message for earth fault • By connecting wire 2095 to earth, create earth fault positive potential. • message for earth fault	o etalkador
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	 When smoke sensor-1 gets activated then Alarm triggers and fault message priority 2 appears on screen. When both smoke sensor 1+2 gets activated then A fault message priority 1 appears on screen and lamp LSF1 glow. Start/Running interlock occurs and TE/BE becomes to 0. 	checkador
Time, date & loco number	Ensure correct date time and Loco number	OK.

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

4.1 Test wiring main Transformer Circuits

Apply $198V_p/140V_{RMS}$ to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

the phase of the following of the transformers.

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U ₁ & 2V ₁	For line converter bogie 1 between cable 801A-804A	10.05V _p and same polarity	10.0440	OK
2U ₄ & 2V ₄	For line converter bogie 1 between cable 811A-814A	10.05V _p and same polarity	10.0420	OK
2U ₂ & 2V ₂	For line converter bogie 2 between cable 801B- 804B	10.05V _p and same polarity	10.05VP	OK
2U ₃ & 2V ₃	For line converter bogie 2 between cable 811B- 814B	10.05V _p and same polarity	10.05-40	OK
2U _B & 2V _B	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V _p , 5.6V _{RMS} and same polarity.	4.9VP 9 5-6VRMS	ادر ادر
2U _F & 2V _F	For harmonic filter between cable 4-12 (in FB)	9.12V _p , 6.45V _{RMS} and same polarity.	9.12 VP 6.44 V RMS	OIL

4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply $141V_p$ / $100V_{RMS}$ to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V _p , 41.5V _{RMS} and opposite polarity.	58.5 VI 41.4 V RMS	OK
Cable no. 1218 – 6500	15.5V _p , 11.0V _{RMS} and opposite polarity.	15.5VP	OK

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

4.3 Primary Voltage Transformer

Apply $250V_{eff}/350V_p$ by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/*) & catenary voltmeter (Pos. 74/*)

This test is to be done for each converter.

Activate cab in driving mode and supply $200V_{RMS}$ through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	25kV	250%	25KV	52011.
SLG2 G 87-XUPrim	25 kV	250%	25KV	2501

Decrease the supply voltage below 140 V_{RMS} . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	17kV	170%	17KV	1707.
SLG2 G 87-XUPrim	17 kV	170%	17KV	170%

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V_{RMS} through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV	300%	30KV	300%
SLG2 G 87-XUPrim	30 kV	300%	30KV	300%

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

Minimum voltage relay (Pos. 86) 4.4

Eunctionality test

Functionality test.	- I to announce COO/
Minimum voltage relay (Pos. 86) must be adjust	ed to approx 68%
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V _{RMS} through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	L (Yes∕No)
to the second se	
Try to activate the cab in driving mode:	√(Yes/No)
Contactor 218 do not close; the control	
electronics is not be working.	
Turn off the variac :	(Yes/No)
Contactor 218 closes; the control electronics is be	
working	
Test Under Voltage Protection	
10000 11000	
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V _{RMS} through variac to wire no. 1501	9
& 1502; Close the VCB; Interrupt the supply	
1	2
voltage The VCB goes off after 2 second time delay.	1
	(Yes/No)
Again supply 200V _{RMS} through variac to wire no. 1501 & 1502; Decrease the supply voltage below	(resynto)
$140V_{RMS} \pm 4V$;	
Fine tune the minimum voltage relay so that VCB opens.	

4.5 Maximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transf &1522 (including the resistor at Pos. 6.11); Put loco in simulation contact 136.3; Close VCB; supply 3.6A _{RMS} at the open maximum current relay Pos. 78 for correct over current variables.	en wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on display.	Wes/No)
Keep contact $R_3 - R_4$ of 136.3 closed; Close VCB; Tune the	resistor 78.1 for the current of $7.0A_{RMS}$
/9.9A _p at the open wire 1521;	
VCB opens with Priority 1 fault message on display.	(Yes/No)

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 1591

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors

Name of the sensor	Description of the test	Prescribed value	Set/Measured value
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)	_
Primary return current	Supply 90mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA _{DC} to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		2-98mA
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AC/1or 2 pin no. $7(+)$ & 8(-) Supply 333mA _{DC} to the test winding of sensor through connector 415.AC/1 or 2 pin no. $7(+)$ & 8(-)		230 mA
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA _{DC} to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		
	Supply 342mA_{DC} to the test winding of sensor through connector $415.\text{AE}/1\text{or}$ 2 pin no. $7(+)$ & $8(-)$		340 mg
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8 8(-)	NA	14
33/2)	Supply 1242mA _{DC} to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	MA	NA

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

4.7 Test DC Link Voltage Sensors (Pos 15.6/*)

Page: 15 of 27

This test is to be done by the commissioning engineer of the firm if required.

4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	n
Fibre optic failure In Power Converters	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK	
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	016	

4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Open	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4-1591

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
Al BUR OK	closs	open	close	open	closs	open	close	clos	open
BUR1 off	close	open	clos	close	open	clos	open	open	cos1
BUR2 off	open	open	class	clos	COSP	closp	open	open	clusp
BUR3 off	open	close	open	clase	close	Clase	open	open	closs

5.0 Commissioning with High Voltage

5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	Yey
No rubbish in machine room, on the roof, under the loco.	Ye,
All the electronic Sub-D and connectors connected	Yey
All the MCBs of the HB1 & HB2 open.	Yey
All the three fuses 40/* of the auxiliary converters	yes
The fuse of the 415/110V auxiliary circuit (in HB1) open.	reg
Roof to roof earthing and roof to cab earthing done	Yes
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	Yes
All the bogie body connection and earthing connection done correctly.	Yes
Pulse generator (Pos. 94.1) connection done correctly.	Yes
All the oil cocks of the gate valve of the transformer in open condition.	Yes
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	Yes
KABA key interlocking system.	Yes

5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Cheeked or
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB.	VCB must open. Panto must lower. Emergency	cheredor
	Push emergency stop button 244.	brake will be applied.	
Under voltage protection in cooling mode	Raise panto in cooling mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open.	checkedox
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Cherred or
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	cheekan ou
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Clerkedon
Interlocking pantograph- VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Cherried or
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	checkedou

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the sattle in Auxiliary sirguit by making pannertan between wire he 1117(in HES tableles) and warth Alter 3 minutes a diagnostic message will some that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	10.2	12.0
Oil pump transformer 2	9.8 amps	8.9	9.3
Coolant pump converter 1	19.6 amps	5.4	7.8
Coolant pump converter 2	19.6 amps	4.9	5.3
Oil cooling blower unit 1	40.0 amps	40.0	1950
Oil cooling blower unit 2	40.0 amps	40,0	190.0
Traction motor blower 1	34.0 amps	30.0	200,0
Traction motor blower 2	34.0 amps	26.8	190.0
Sc. Blower to Traction motor blower 1	6.0 amps	4.9	14.0
Sc. Blower to Traction motor blower 1	6.0 amps	5.3	28.0
Compressor 1	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	27.4	144.0
Compressor 2	25 amps at 0 kg/ cm ² 40 amps at 10 kg/ cm ²	27.0	154.0

Effective Date: March 2021

Doc.No.F/TRS/01 (Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/591

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it.

BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	10001	Yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636 V	yes
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	Just 1	Yes

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	988V	Yes
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	635 V	Yes
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	6 Amp	Yes
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	12 Amb	Yes
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	du Hac	Yey
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	110√	yes

^{*} Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	998√	Yes
BUR3 7303- XUUZI	DC link voltage of BUR3	60% (10%=100V)	636√	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	6 Amp	Yes
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	12 Amp	74
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	29 Am)	75
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	Yes

^{*} Readings are dependent upon charging condition of the battery.



(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the auxiliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery of charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary	Typical	Measured phase	Measured
machine	phase current	current	starting current
Machine room blower 1	15.0 amps*	6.0	20.0
Machine room blower 2	15.0 amps*	6.1	29.0
Sc. Blower to MR blower 1	1.3 amps	0.8	13.0
Sc. Blower to MR blower 2	1.3 amps	1 ·)	13.0
Ventilator cab heater 1	1.1 amps	1.2	1.7
Ventilator cab heater 2	1.1 amps	1.5	1.7
Cab heater 1	4.8 amps	4.8	4.9
Cab heater 2	4.8 amps	4.8	4.9

^{*} For indigenous MR blowers.

A8

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

5.6 Traction Converter Commissioning

This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

For Converter 1

Test Function	Results desired	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheesed on
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked on
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheused on
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherked on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	choused ox
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeked on
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	chercod ou

Issue No.02

Effective Date: March 2021

Doc.No.F/TRS/01

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4-1591

Type of Locomotive: WAP-7/WAG-9HC

Page: 22 of 27

For Converter 2

Test Function	Results desired in sequence	Result obtained
Measurement of charging and pre-charging and charging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cheeseel on
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherked ou
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherked on
	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	cherkedok
Earth fault detection on AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cteepeel ou
Pulsing of line converter of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	cherked ox
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the DMW supervisor.	Checked OIL

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4/591

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on DDU	o chewad on
	appears Disturbance in Converter 1	
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down. • VCB goes off • Priority 1 fault mesg. on diagnostic display appears Disturbance in Converter 2	Cherkedon

8.8 Test Hermanie Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle. • FB contactor 8.41 must open.	G chanced on

Effective Date: March 2021

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4/591

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	E cheused or
filter circuit.	the loco. Close VCB. • Earth fault relay 89.6 must pick up. • Diagnostic message comes that - Earth fault in harmonic filter circuit	cheered or
Test earth fault detection harmonic	Make a connection between wire no. 12 and vehicle body. Start up	9
	 FB contactor 8.2 must close. FB contactor 8.1 must close Check the filter current in diagnostic laptop Bring the TE/BE throttle to O Switch off the VCB FB contactor 8.1 must open. FB discharging contactor 8.41 must close Check the filter current in diagnostic laptop 	o chelked ok

5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remarks
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ DMW	chewood 8 K
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	cherkaelon
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	cherkedor
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	checked or
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	challed on

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

		•
Marker light	Both front and tail marker light should glow from both the cabs	Chelkedon
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	Charled OK
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	checkedow
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	chousedon
Illuminated Push button	All illuminated push buttons should glow during the operation	CLOUROADE
Centest pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured Criteria: The minimum contact pressure is 54 to 66	For contactor 8.1.
Crew Fan	Newton. All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured. Criteria: The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

6.0 Running Trial of the locomotive

SN	Description of the items to be seen during trail run	Action which should take place	Remarks
1.	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	cherkenox
	Loco charging	Loco to be charged and all auxiliaries should run. No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm ² , BP to 5 Kg/cm ² , FP to 6 Kg/cm ² .	, cloured &
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Cherkey
4.	Check function of BPCS.	 Beyond 5 kmph, press BPCS, the speed of loco should be constant. BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm², by pressing BPCS again. 	Cherron Ove
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	chercod

DIESEL LOCO MODERNISATION WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 1591

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	
	operation of the	brakes are released i.e. BC < 1 Kg/cm ² .	
w!	locomotive	For 60 seconds do not press vigilance foot switch or sanding foots switch or TE/BE throttle or BPVG switch then	
		Buzzer should start buzzing.	
		LSVW should glow continuously.	chelkod
	2	Do not acknowledge the alarm through BPVG or	A
		 vigilance foot switch further for 8 seconds then: Emergency brake should be applied automatically. 	
6	9	 VCB should be switched off. 	
		Resetting of this penalty brake is possible only after 180 seconds by bringing TE/BE throttle to 0 and acknowledge BPVR and press & release vigilance	5.
	E .	foot switch.	=
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm ²).	Ja Pares 1000
	N	With park brake in applied condition.	Checked ox
		 With direct loco brake applied (BP< 4.75Kg/cm²). 	9
	8	• With automatic train brake applied (BP<4.75Kg/cm ²).	CLEUKENOU
		• With emergency cock (BP < 4.75 Kg/cm ²).	Crestan
8.	Check traction interlock	Switch of the brake electronics. The	9
		Tractive /Braking effort should ramp down, VCB	cherred
		should open and BP reduces rapidly.	×
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	
	braking.	should start reducing.	Thereel on
10.	Check for BUR	In the event of failure of one BUR, rest of the two	9
	redundancy test at	BURs can take the load of all the auxiliaries. For this	chageod or
	ventilation level 1 & 3 of	switch off one BUR.	
	loco operation	Auxiliaries should be catered by rest of two BURs.	
		Switch off the 2 BURs; loco should trip in this case.	J
11.	Check the power	Create disturbance in power converter by switching	9
	converter	off the electronics. VCB should open and converter	6 cheroder
	isolation test	should get isolated and traction is possible with	E
	g =	another power converter.	J

(Ref: WI/TRS/10)

DIESEL LOCO MODERNISATION WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 41591

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	OV	ok (
2	Marker Red	OK	٥١ <i>८</i>	
3	Marker White	OK	2K	
4	Cab Lights	OK	OK	
5	Dr Spot Light	OK	OK	
6	Asst Dr Spot Light	OV	OK	cheesed workings
7	Flasher Light	OR	OK	
8	Instrument Lights	01	3K	
9	Corridor Light	OK	OK	
10	Cab Fans	04	OK	
11	Cab Heater/Blowers	ov	OK	
12	All Cab Signal Lamps Panel 'A'	Ove	OK	

Status of RDSO modifications

LOCO NO: 41591



	Modification No.	Description	
	RDSO/2008/EL/MS/035		Remarks
	Rev.'0' Dt 20.02.08	Light of three phase electric locomotives	d
	RDSO/2009/EL/MS/037		Ok/Not Ok
	Rev.'0' Dt 22.04.09	7 Modification to voltage sensing circuit in electric locomotives.	
	RDSO/2010/EL/MS/039		DK/Not OK
	Rev.'0' Dt 31.12.10	The state of the s	1
4.		three phase locomotives to improve reliability.	f OK/Not Ok
T.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	TOTAL OF THE HOCKS OF CONTROL STREET	PRINOI OR
5.	RDSO/2011/EL/MS/0400	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 3×2.5 armination of \$GKW, 1.8	K/NOT OK
	Rev.'0' Dt 10.08.11	KV. 70 sq mm cables and 3×2.5	
			Ok/Not Ok
6.	RDSO/2011/EL/MS/0401		
	Rev.'0' Dt 10.08.11		1
	RDSO/2011/EL/MS/0403		
	Rev.'0' Dt 30.11.11	rate switchilly of machine room/service	7
	RDSO/2012/EL/MS/0408	draining of batteries in three phase electric locomotives.	9k/Not Ok
	Rev.'0'	Connection of basis	/
			OK/Not Ok
	RDSO/2012/EL/MS/0411	Modification sheet to avoid simultaneous switching ON of White and Red marker light in the	JOHN TOLOK
	Rev.'1' dated 02.11.12	White and Red marker light in three phase electric	
		locomotives.	ØK/Not Ok
0	RDSO/2012/EL/MS/0413		
	Rev.'1' Dt 25.04.16		
	NESU/2012/EL/MS/0419		Ok/Not Ok
	Rev.'0' Dt 20.12.12		
	RDSO/2013/FL/MS/0420	Modification of three phase locomotives.	Ok/Not Ok
	Rev.'0' Dt 23.01.13	Wideling Street to provide	
		arrangement in Primary Over Current Data Cur	04/11-1-01
	RDSO/2013/EL/MS/0425		OK/Not Ok
	Day in Di oo oo	Modification sheet for improving illumination of head light in dimmer mode in three phase alastic.	/
	PDS0/0012/EL #10/9	dimmer mode in three phase electric locomotives.	Ok/Not Ok
1	Pay 'O' Di so and	modification street of Bodie isolation rotans - :	OWNED ON
			Øk/Not Ok
5	RDSO/2013/EL/MS/0427	Modification sheet for MCP control in three phase electric	NIAGE OK
	Rev.'0' Dt 23.10.13	locomotives.	OHIN-LO
9	RDSO/2013/EL/MS/0428	Modification sheet for releast	OK/Not Ok
		Modification sheet for relocation of earth fault relays for	2
			ØK/Not Ok
	RDSO/2014/EL/MS/0432	three phase electric locomotives.	THITTON
	Rev. 0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over	/
	RDS0/2017/EL/MS/0464	current relay of three phase electric locomotives.	Ok/Not Ok
	D - '0' D - 0	TOVISION OF AUXILIARY Interlock for	
D			OKINICA OL
		ocomotives.	OKINUT OK
	RDS0/2017/FL/MQ/0407 .	(IOCITICATION in blank)	/
	Rev '0' Dt 07 12 15	Modification in blocking diodes to improve reliability in the	
	Rev.'0' Dt 07.12.17	Modification in blocking diodes to improve reliability in three has electric locomotives.	Ok/Not Ok
	Rev.'0' Dt 07.12.17 pRDSO/2018/EL/MS/0475 A	Modification in existing Control Floats	Ok/Not Ok
	Rev.'0' Dt 07.12.17 RDSO/2018/EL/MS/0475 N Rev.'0'	Modification in existing Control Floats	/
	Rev.'0' Dt 07.12.17 RDSO/2018/EL/MS/0475 N Rev.'0' s RDSO/2019/EL/MS/0477 II	Modification in existing Control Electronics (CE) resetting cheme of 3 phase electric locametics.	Ok/Not Ok Ok/Not Ok
	Rev.'0' Dt 07.12.17 PRDSO/2018/EL/MS/0475 Rev.'0' s	Modification in existing Control Electronics (CE) resetting cheme of 3 phase electric locomotives. In the property of the pro	/

Signature of JE/SSE/TRS

DMW/PATIALA

Loco No.: 41591



PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

S.N	Parameters	Reference	Value	Result
1.0	Auxillary Air supply system (Pantograph & VCB)			- TOUR
1.1	Ensure, Air is completely vented from pantograph		0	0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	52 Sec
	Record pressure Build up time (8.5kg/cm2)		oo see. (iviax.)	32 360
1.3	Auxillary compressor safety Valve 23F setting	CLW's check sheet	8.5±0.25kg/cm2	8.55 Kg/cm2
	2 2 2	no. F60.812 Version	-	0.55 Kg/ citi
		2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.5 Kg /cm2
		no. F60.812 Version	kg/cm2 closes	
		2	5.5±0.15 kg/cm2	
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co	ock by Key (KABA Key)	
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
	V 90		Rises.	0
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	OK
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.2 kg/cm2
			Min.	in 5 Min.
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and test		
	closed drain cocks. MR air pressure build up time by each	performed by		
	compressor from 0 to 10 kg/cm2.	Railways.	"	
	i) with 1750 LPM compressor	9	i) 7 Mts. Max.	6.75 Mts
	ii) with 1450 LPM compressor		ii) 8.5 Mts. Max.	
		H N	The state of the s	S1
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-27 Sec
	compressors, Check pressure build time of individual	E 12 11 11		
	compressor from 8 kg/cm2 to 9 kg/cm2		*	CP2-27 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.4 Kg/cm2
		MM3882 &	kg/cm2 Opens at	3, 5,2
		MM3946	5.60±0.15kg/cm2	5.6 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Closes at 10±0.20	10.1 Kg/cm2
- 1		MM3882 &	kg/cm2 Opens at	-0/ -//12
2.6		MM3946	8±0.20 kg/cm2	8 Kg/cm2

DMW/PATIALA

Page 2 of 4

Loco No.:41591

2.7 Chock unloader valve engenties time		
2.7 Check unloader valve operation time	Approx. 12 Sec.	10 sec
	11ppi ox. 12 occ.	10.260

41591 Operates when Compressor starts 11.50±0.35kg/cm2 11.5 Kg/cm2 11.50±0.35kg/cm2 11.5 Kg/cm2 5.0±0.10kg/cm2 5.0 Kg/cm2 6.0±0.20kg/cm2 6.0 Kg/cm2 Tower to change i) Every minute OK (FTIL & SIL) ii)every two minute (KBIL) Blue Blue Should be less than 0.6 Kg/cm2 1 kg/cm2 in 15 in 15 minutes minutes 0.15 kg/cm2 in 5 0.1 Kg/cm2 minutes in 5 minutes

					98	
Check proporti	onality of Auto Brake	system	E BESCHEVICEROUS PE HEAVE	eck sheet 2 Version 2		
Auto controller	position		BC (WAG-9	9 & WAG-7)	BC (WAP-5) Kg/cm2	
	BP Pressure kg/c	m2	Value	Result	Value	Result
Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	
Initial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	
Full service	3.35±0.2	3.5 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	
Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	

D&M test spec.

MM3882 & MM3946

D&M test spec.

MM3882 & MM3946

D&M test spec.

MM3882 & MM3946

no. F60.812 Version 2

no. F60.812 Version 2

D&M test spec.

MM3882 & MM3946

D&M test spec.

MM3882 & MM3946

CLW's check sheet

CLW's check sheet

2.8

2.9

2.10

2.11

2.12

2.13

3.0

3.1

3.2

3.3

4.0

4.1

4.2

5.0

5.1

Direct by BLCP.

direct by BLCP

pressure.

FP pressure:

136F. Check pressure in Gauge.

Check condition of humidity indicator

Main Reservoir Leakage Test

leakage from both cabs.

Air Dryer Operation

Check Auto Drain Valve functioning (124 & 87)

Check CP-I delivery safety valve setting (10/1). Run CP

Check CP-2 delivery safety valve setting (10/2). Run CP

Switch 'OFF' the compressors and ensure that the safety

BP Pressure: Switch 'OFF' compressor, Drain MR Pressure

by drain cock of 1" Main Reservoir, Start Compressor, and

Fit Test Gauge in Test point 107F FPTP. Open isolate cock

Open Drain Cock 90 of 2nd MR to start Compressor, leave

Check Purge Air Stops from Air Dryer at Compressor stops

Put Auto Brake (A-9) in full service, Check MR Pressure air

Record Brake Pipe & Brake Cylinder pressure at Each Step

Check BP Air leakage (isolate BP charging cock-70)

Brake Test (Automatic Brake operation)

check setting pressure of Duplex Check Valve 92F.

open for Test Check Air Dryer Towers to change.


valve to reset at pressure 12 kg/cm2 less than opening



41591

1	-		7
1	9	2	1
(4	, ,

F 2			11.24	
5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure Automatic Brake Controller handle is Full Service from Run	D&M test spec. MM3882 & MM3946	8±2 sec.	6 Sec
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 2.5 kg/cm2	ОК
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35	4.3 Kg/cm2
		* ***	kg/cm2 Opens at BP 2.85- 3.15 kg/cm2	3.0 Kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed	D&M test spec. MM3882 & MM3946		
= 1	WAP7 - BC 2.50 ± 0.1 kg/cm2 WAG9 - BC 2.50 ± 0.1 kg/cm2	2	7.5±1.5 sec. 21±3 sec.	21 Sec
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure	D&M test spec. MM3882 & MM3946	2220 300.	21 360
	up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAP7	9	43.5.05	
	WAP9		17.5±25 sec. 52±7.5 sec.	46 Sec
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	72 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the	RDSO Motive power Directorate report no. MP Guide No. 11 July,	BP pressure should not fall below 4.0	3 -
	train without interfering with the automatic functioning of brake. * Allow The MR pressure to build up to maximum stipulated limit.	1999 Rev.1	kg/cm2 with in 60 Sec.	4.2 Kg/cm2
	* Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A (Automatic brake controlling) at run position.	2		
	* Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe. The test shall be carried out with all the compressors in working condition.			
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2	3.5Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	5.15±0.3 kg/cm2 8 sec. (Max.)	6.5 Sec

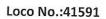



6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.2 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2	1111133 10	10 -15 Sec.	12 Sec
7.0	Dynamic Brake (Brake Blending)			
7.1	This test is to be done by forcing signal by laptop 06H Actual BE E1 = 100%	D&M test spec. MM3882 & MM3946	WAP7 & WAG9 - 2.5 kg/cm2. WAP5-5.15kg/cm2	
7.2	This test is to be done by forcing signal by laptop 06H Actual BE E1 = 50%	D&M test spec. MM3882 & MM3946	WAP7 & WAG9 - 1.25 kg/cm2. WAP5-2.55kg/cm2	
8.0	Parking Brake		1 11 11 2 21331/6/ 01112	
8.1	Press BPPB to Release brake	D&M test spec. MM3882 & MM3946	PB released Lamp off in Panel pressure in parking Brake gauge	
8.2	Press BPPB to apply parking brake		60kg/cm2 PB applied, Lamp On in panel Pressure in parking Brake gauge 0.0 kg/cm2	
8.3	Manually release and apply Parking Brake by pressing solenoid valve 30F		Verify release and application of parking Brake.	
8.4	Check Pressure in PB Gauge		6.0.±0.15 kg/cm2	
8.5	Check Brake Block clearance	D&M test spec. MM3882 & MM3946	10 mm in TBU 3 mm in Disc. Brake (WAP5)	
9.0	Sanding Equipment			
9.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	ОК
10.0	Test Vigilance equipment : As per D&M test specification			ОК

Signature of loco testing staff

Signature of SSE/Shop



Issue No.: 03

Effective Date: Oct-2021

DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco) Page 1 of 1

डीजल रेळइंजन आधुनिकीकरण कारखाना पटियाला। DIESEL LOCO MODERNISATION WORKS, PATIALA

ELECTRIC LOCO CHECK SHEET

LOCO NO: 41591 Rly: ECR S. No. | ITEM TO BE CHECKED

3. N	D. TIEM TO BE CHECKED		Sileu:	000		
1.1		Specified Value	i	Observed	l Value	
1.2	Check proper Fitment of Hotel Load Converter & its output contactor.			10		
	Blower 1 & 2.	OK		0 K		
1.3	Check proper of Fitment of oil cooling unit (OCU).			0.1		
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its	ОК		OK		
1.5	Check proper Fitment of FB panel on its position.	OK		OK		
1.6	Check proper Fitment of assembled SB1 & SB2 with VCU1 & VCU2.	OK		OK		_
1.7	Charles proper Fix.	OK		01		-
1.8	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	ОК		. /		
1.10	Check proper Fitment of Traction convertor 1 0 2 (cp. 4 0 2)	OK		OC		
1.12	dicek proper fittilefit, tordiling & Locking of Main transfer	OK	-	Br		
1.12	sheek proper fittilefit of compressor both side with the compressor			or		
1.13		OK		OR		
100000	Proper setting of the dampers as required.	OK				
1.14	Check proper position of Secondary Helical Springs between Paris and Paris			GC		
1.15	Check proper fitment of Body Bogie Safety Chains fitted properly.	OK		BK	Alexander of the second	
1.16	Check proper fitment of Cow catcher.	OK		BR		
1.17	Check coolant level in SR 1 & 2 Expansion Tank	ок		GC		\neg
1.18	Check Trees Court and	OK		00		\dashv
	Check Transformer Oil Level in both conservators Tank (Breather Tank).	ОК				4
1.19	Check proper fitment of both battery hox	100000000		OK		1
1.20	Check proper fitment of Push Pull rod its bolt torquing and safety slings.	OK		OK		٦
1.21	Buffer height: Range (1085 mm to 1105 mm) Drg No IB031-02002.	OK		OK		1
	Drg No IB031-02002.	1090-1105		L/S	R/S	-
	*	mm	FRONT			-
1.22	D.CC I		REAR	1092	-	4
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face) Drg No- SK.DL-3430	641 mm	KEAK	1090	1090	
	SK.DL-3430.	041 IIIII		L/S	R/S	1
			FRONT	649	649	1
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).		REAR	648	649	1
	5	114 mm +		L/S	R/S	+
-	5	5 mm,-12	FRONT	105		+
1.24	CRC Hoight, Day (1905	mm	REAR	105	110	1
21	CBC Height: Range (1085 mm to 1105 mm) Drg No- IB031-02002.	1085-1105	FRONT:		107	1
		mm		1093		
		111111	REAR:	1090		

NAME BHUPSNOER SENCOH

(Signature of JE/Elect Loco)

NAME SPISH KUMAR

DATE 14/02/2022

NAME BHALLADER SALL

DATE 14/02/2022

7	/	· ·	DIESEL LOCO MODERNISATION WORKS LOCO NO -:41591 Under frame component	S, PATIALA	
	Descrition of component	PL No.	Make	Mfg. date & Serial no.	Warra
_	Shell	29171027	TRIDENT	36/49 ,01/2022	upto
	Main Transformer	29731057	ABB		_
	Conservator Tank BREATHER	.29731057		ABB-65-12-2XYT000000ABY-050,2021	1.
4	Compressor both side	29511008		21-62 9 8, 21 -6286 62 - 42	=
5	Battery Box both side	29680013		EUFS926896(09/21),EUIS927485(12/21)	
6	Traction Bar Cab-1	29100069		, 48/01449(10/21)	As per PO condition
7	Traction Bar Cab-2	29100069		47(10/21)	D D
8	Side Buffer Assly Both Side	11803587		109(10/21)	3
9	Oil Cooling Pump both Side	29530027		Lp01-22-40,12-21-403,Lp01-22-02,12-21-36	7 8
0	Transformer oil Steel pipes	29230044	SAMAL HARAND OF INDIA PVT.LTD.	D2896 &D 2899	ē
1	Soft Draft Gear (CBC)	23230044	KWINCE		ds
	Secondry Helical Spring on	29045034	SN / FAS	09-21 , 02/22	7 4
3 1	ELASTIC RING (Center pivot				1
1 6	Center Pivot Housing	29100010	SSPL		1
4 1	center Pivot Housing	29100057	TEW	3596(09/21) ,3602(09/21)	4
1	ΓM-Blower	1	Machine room Component cab 1	1 1 1 - 1 / 2 0 2 (0 3 / 2 1)	
_		29440075	AIR CONTROL & CHEMICAL ENGG. LTD	07/21 & AC-47163, CGLUJAM-5346	T
1	M- Scavenging Blower Motor	29440117	G.T.R CO (P) LTD.	ST-21-10-495	1
F	Axillary Control Cubical (HB-1)	29171180	HIND RECTIFIERS LIMITED	03/21 & HB-1/2021/H/0052/372	+
	ilter Cubical (FB-1)	29480140	AUTOMETER ALLIANCE LTD.	11/21 & AALN/11/2021/10/FB//053	1
1	Complete Control Cubicle SB-1	29171209	kaysons electricals pvt ltd	10/21 & KEPCO/SB-1/111	
1	/ehicle Control Unit (VCU)	29741075	C.G.L.	12/21 & T2112649-P276	As per PO condition
	Aux. Converter (BUR) 1	29741075	C.G.L.	01/22 & CGAI001221662 -P287	ŧ
	OIL COOLING BLOWER(OCB)	29470043	AIR CONTROL & CHEMICAL ENGG. LTD	08/21 & AC-46641, CGLUIAM-5528	Į į
C	OIL COOLING RADIATOR (OCR)	29470031	SANDARD RADIATORS	10/21 & 085-SRPL	0
	1/C Room Blower		AIR CONTROL & CHEMICAL ENGG. LTD		ď
1	M/C Room Scavenging Blower	29440129	AIR CONTROL & CHEMICAL ENGG. LTD	07/21 & AC-47026, CGLUEAM-11288	je
	raction Convertor	29741075	C.G.L.	06/21 & AC-46551, CGLUDBM-17121	8
Н	lead Light Housing	29610953	PATRA & CHANDA MFG.& ENG.(I) PVT.	01/22 & CGPI2210716 -P290	4
	allast Assembly	29170163	GNAT FOUNDRY		
T	ransformer oil pressure Sensor		TROLEX INDIA PVT. LTD.	10/21 21/2001	
T	ransformer oil Temperature	29250035	FLORICAN	10/21, 21/7/21, 10/21,21/7005	4
			MACHINE ROOM COMPONENT Cab-2	11/21, 56902	
	M-Blower	29440075	AIR CONTROL & CHEMICAL ENGG. LTD	los to	
TI	M- Scavenging Blower Motor	29440117	G.T.R CO (P) LTD.	07/21 & AC-47155 CGLUJAM-5321	
A	xillary Control Cubical HB-2	29171192	AUTOMETER ALLIANCE LTD.	ST-21-10-459	
C	omplete Control Cubicle SB-2	29171210	kaysons electricals pvt ltd	09/21 & AALN/09/2021/16/HB2G9/110	
Ve	ehicle Control Unit (VCU)	29741075	C.G.L.	11/21 & KEPCO/SB-2/085	_
Aı	ux. Converter (BUR) 2&3	29741075	C.G.L.	12/21 & T2112650 -P276	Ę.
0	IL COOLING BLOWER(OCB)		AIR CONTROL & CHEMICAL ENGG. LTD	01/22 & CGAI00221662 -P287	<u> </u>
0	IL COOLING RADIATOR (OCR)	29470031	SANDARD RADIATORS	10/21 & AC-46642 CGLUIAM-5790	As per PO condition
M	/C Room blower		AIR CONTROL & CHEMICAL ENGG. LTD	10/21 & 058-SRPL	0
M	/C Room Scav. blower	29440129	AIR CONTROL & CHEMICAL ENGG. LTD	07/21 & AC-45404 CGLUEAM-12353	σ.
Tr	action Convertor	29741075	C.G.L.	01/22 & AC-45555, CGULBM-15367	be
He	ead Light Housing		PATRA & CHANDA MFG.& ENG.(I) PVT.	01/22 & CGPI2210715-P290	As
Ba	Illast Assembly	29170163	P GNAT FOUNDRY		
Tr	ansformer oil pressure Sensor	29250047	TROLEX INDIA PVT. LTD.	h 21 21 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
Tr	ansformer oil Temperature	29250035		10 21, 21 7043, 10 21, 21 7122	4
	1		Driver Cabin	11/21, 56873	de la companya della companya della companya de la companya della
	ind Brake	29140050 N		12968	Victoria de la composição
	Conditioner				0 -
	b Heater	29170011 E	SCORTS	KKI/HVAC/CLW/812 ,825 21, 105	r ō ₫
	ew Fans	29470080 F		1121, 816, 834, 998	pe
Dri	iver Seats	29171131 F	FROM	13,96,98,35	As per PO condition
CIA	GN sali			20,00,00,00	
	-111			SIGN	

डी.एम.डब्स्यु D.M.W.

(36)

Pantograph Corrasys Pvt.Ltd 10789-10/21,10792-10/21 Servo motor 2 Cotrasys Pvt.Ltd 10789-10/21,10792-10/21 Air Intake filter Assly 2 VIKRANT 10789-10/21,10829-10/21 Insulator Panto Mtg. 8 IEC 105/21,0829-10/21 High Voltage Bushing 1 EIPL 2021 N, 625414 Voltage Transformer 1 SADTEM 2021 N, 625414 Insulator Roof line 9 IEC 2021 N, 625414 Insulator Roof line 9 IEC 2021 N, 625414 Insulator Roof line 9 IEC 2021 N, 625414 Insulator Roof line 1 Autometer Alliance 3/21,5/21 Earth Switch 1 Autometer Alliance 3/21,5/21 Surge Arrester 2 CG POWER 9851275 9851276 Air Compressor 2 EIgl 8UES 104473 Air Brake Panel 1 KNORR 21-12-60-2210,21-12-60-2211 Air Brake Panel 2 KNORR 21-12-60-2210,21-12-60-2211 Air Brake Panel 2 KNORR 21-12-60-2210,21-12-60-2211 Air Brake Motor 4 ELG EIGl 21-12-60-2210,21-12-60-2211 Air Brake Motor 4 ELG 41-2-60-2210,21-12-60-2211 Air Brake Motor 4 ELG 41-2-60-2210,21-12-60-2210 Air Brake Motor 4 ELG 41-2-2-60-2010,21-12-60-2210,21-12-60-2210,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2010,21-2-60-2			Warranty		T		T									As per IRS/PO conditions									
Pantograph Serviption Apl /Nos Pantograph Servo motor Air Intake filter Assly Servo motor Air Intake filter Assly Servo motor Air Intake filter Assly Air Intake Filter Air International Antometer Alliance Accuum Circuit Breaker Accuum Cir				Sr. no.	10789-10/21,10792-10/21	10824-10/21,10829-10/21		05/21,05/21		21/08/2574	2021 N, 625414	AALN/08/2021/023/V/CBA /242	5 (2.7 = 1.5 = 2.5) VCBA/ 242	5/21,5/21	05/21/212207/17	AALN/06/2021/045/ES/182			EUIS 927485,EUFS 926096	LD2-10-6573-21	BUES 104473	21-12-CO-2188	21-12-EO-2210,21-12-EO-2211		
Description Pantograph Servo motor Air Intake filter Assly Insulator Panto Mtg. Insulator Panto Mtg. Joltage Transformer Aacuum Circuit Breaker Insulator Roof line Iarmonic Filter arth Switch urge Arrester r Dryer Lxillary Compressor r Brake Panel ontoller eakup Valve per motor		ROOF		Cotracus Dut 1	204403				ľ					RECITECU CI COARDO	Automotor All:	CG DOWIER	CO POWER		1.4					ELGI	
			Description				1		-	-	+	-	ine		Earth Switch					1		Contoller 2	Breakup Valve 2	wiper motor 4	





DHWIPTA

ECTRIC LOCO HISTORY SHEET (ECS)

ELECTRIC LOCO NO: 41591

LIST OF ITEMS FITTED BY ECS

W.

SHED: BJU

ROPULSION SYSTEM: CGL

WARRANTY	COVERED								CONDITIONS	N T		2			
OPL	# # # # # # # # # # # # # # # # # # #	04 Nos.	02 Set	04 Set	04 Nos.	02 Set	04 Nos.	02 Nos.	02 Set	02 Nos.	02 Nos.	02 Nos.	01 Set	01 Set	01 Set
MAKE/SUPPLIER		M/s PCE	M/s MATSUSHI	M/s POWER TECH	M/s EIC	M/s ESCORT	M/s. RANJAN	M/s SAITRONIX	M/s. KEPCO	M/s. HIREACT	M/s PATRA & CHANDA	Ms. TROLEX	M/s MEDHA	HBL	PPS DMW
R. NO.	CAB-2	9/2021	22840	2443,2482	2471,2613	. 105	1121,816	3915	KEPCO/A1/1941	CF-2021G092-274A	PCE/1330/10/2021	7883	3683	No 292 maintenance kit)	MW
ITEM SR. NO	CAB-1	9/2021	20822	4472,3841	2675,2694	21	998,834	3933	KEPCO/A1/1923	CF-2021G092-274B	PCE/1323/10/2021	7965	4294	Battery Set No 292 (Along with Battery maintenance kit)	PPS DMW
ITEM PL	o S	29610023	25984962	25984860	29610461	29170011	29470080	29860015	29178204	29178162	29700012	29500059	29200040	29680025	29600418
DESCRIPTION OF ITEM		HEAD LIGHT LAMP	LED BASED FL LIGHT	LED MARKER LIGHT	DRIVER CAB LIGHT	CAB HEATER	CREW FAN	MASTER CONTROLLER	COMPLETE PANEL A,C,D	COMPLETE CUBICLE- F PANEL	HEATER ROTERY SWITCH	DIFFRENCIAL AMPLIFIRE	SPEED IND. & REC. SYSTEM	BATTERY (Ni- Cd)	HARNESSED CABLE COMPLETE
Z S		~	2	0	4	2	6	2	∞	o	10		12	13	4





37

DIESEL LOCO MODERNISATION WORKS

Loco No. 41591

1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-55	FRONTIER	00405440	101650	As per PO/IRS
REAR	SL-56	FRONTIER	29105146	101650	conditions

2. Hydraulic Dampers (Axle, Vertical, Yaw and Horizontal) Make:ESCORT

3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	DMW	DMW	DMW	DMW	DMW	DMW
S.NO	22116	22094	21808	22029	21936	22025
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

4. WHEEL DISCS NO. AND TYPE

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	CNC/21- 1971	CNC/22- 26	CNC/21- 1701	CNC/21- 1940	CNC/22- 16	CNC/21- 1913
Ultrasonic Testing	OK	OK	OK	OK	OK	OK
FREE END	CNC/21- 1970	CNC/22- 24	CNC/21- 1937	CNC/21- 1961	CNC/22- 18	CNC/21- 1952
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear End	MAKE	SKF	SKF	SKF	SKF	SKF	SKF
	PO NO. & dt	771678	771678	771678	0771678	771678	771678
Free End	MAKE	SKF	SKF	SKF	SKF	SKF	SKF
	PO NO. & dt	771678	771678	771678	0771678	771678	771678

6. WHEEL DISC PRESSING (PRESSURE IN KN): SPECIFIED 80-105 T

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	912	942	957	98T	927	839
FREE END	933	936	991	101T	954	890

Loco No. 41591



7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + 5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.5	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITIO	NNO	1	2	3	4	5	6
S.T.	MAKE	KM	KM	KM	KM	KM	KM
G.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG
F.E. BEARING	MAKE	FAG	FAG	FAG	FAG	FAG	FAG

9. GEAR CASE & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	KM	KM	KM	KM
BACKLASH 0.254 – 0.458mm)	0.320	0.320	0.330	0.340	0.380	0.390

10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

XLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	17.28	16.38	16.52	15.00	15.41	19.00
LEFT SIDE	16.73	16.39	18.27	17.40	17.80	15.70

11. TRACTION MOTOR: (PL No. 29942007, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & date	S. NO.
1	BHEL	566628	201210860
2	BHEL	566628	201210857
3	BHEL	566628	201210818
4	BHEL	566628	201210671
5	BHEL	566628	201210822
6	BHEL	566628	201210823



	TOP 12 C	OSTLIEST ITEMS OF WAG9HC LOCO WITH	TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS
1			
S No	PL No	DESCRIPTION	Warranty Period
Н	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
7	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT-8	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	SET OF HARNESSED CABLE FOR 3-PHASE ELECTRIC LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646 ALT-NIL WITH DMW REQUIREMENT OF HARNESSED CABLE FOR WAP-7, ALT-A1 DATED 27/11/2018.	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.	
BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	
29180016	29480140	29942007	
7.	. 9		

COMPLETE AUXILIARY CL ALL EQUIPMENTS AND C ALL EQUIPMENTS AND CCLW/ES/3/0192 WAP7 LOCO WITH HOTEI AS PER CLW SPEC.NO.CLW SPEC.NO.CLV COMPLETE CONTROL CU EQUIPMENTS AND CABLI LOCO WITH HOTEL LOAD CLW/ES/3/0195/A ALT-H LOCO WITH HOTEL LOAD COMPLETE CONTROL CUE SCHEME COMPLIANT) ALL EQUIPMENTS AND CABLII EQUIPMENTS AND CABLII EQUIPMENTS AND CABLII COMPLETE AUXILIARY CU ALL EQUIPMENTS AND CA LOAD	JBICLE HB2 ALONG WITH ABLING TO CLW 2 ALT-E OR LATEST FOR L LOAD WITH BARE CUBICLE W/MS/3/155 ALT-NIL. BICLE SB2 ALONG WITH ALL NG (EXCLUDING CONTROL OR LATEST FOR WAP7 AG (EXCLUDING CONTROL ONG WITH ALL NG (EXCLUDING CONTROL ONG WITH ALL AG (EXCLUDING CONTROL ONG WITH ALL AG (EXCLUDING CONTROL AG (EXCLUDIN	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE. AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE. AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE. AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE. AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE COMMISSIONING, WHICHEVER IS FARLIER] WILL BE
--	--	--