# भारतीय रेल Indian Railways

पटियाला रेलइंजन कारख़ाना, पटियाला

# PATIALA LOCOMOTIVE WORKS, PATIALA



LOCO TESTING & DISPATCH REPORT OF IGBT BASED wAg9hc ELECTRIC LOCOMOTIVE

LOCO NO.: 42009

TYPE: WAG9HC

Rail way shed: WCR/ETE

ProPulsion system: CGL

Date of Dispatch: 31.01.2025

लोको निर्माण रिकार्ड



# पटियाला रेलइंजन कारख़ाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA

LOCO NO.: 42009

**RAILWAY/SHED: WCR/ETE** 

DOD: Jan-2025

#### **INDEX**

SN	PARA	ACTIVITIES	PAGE NO.		
	Testing & Commissioning (ECS)				
1.	1.0	Continuity Test of the cables			
	1.1	Continuity Test of Traction Circuit Cables			
	1.2	Continuity Test of Auxiliary Circuit Cables	1-4		
	1.3	Continuity Test of Battery Circuit Cables			
	1.4	Continuity Test of Screened Control Circuit Cables			
2.	2.0	Low Tension test			
	2.1	Measurement of resistor in OHMS (Ω)	5-6		
	2.2	Check Points	3-0		
	2.3	Low Tension Test Battery Circuits (without control electronics)			
3	3.0	Downloading of Software			
	3.1	Check Points			
	3.2	Download Software	7-10		
	3.3	Analogue Signal Checking			
	3.4	Functional test in simulation mode			
4	4.0	Sensor test & convertor test			
	4.1	Test wiring Transformer Circuits – Polarity Test			
	4.2	Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)			
	4.3	Primary Voltage Transformer			
	4.4	Minimum voltage relay (Pos. 86)	11-16		
	4.5	Maximum current relay (Pos. 78)	17.76		
	4.6	Test current sensors			
	4.7	Test DC Link Voltage Sensors (Pos 15.6/*)			
	4.8	Verification of Converter Protection Circuits (Hardware limits)			
	4.9	Sequence of BUR contactors			
5.	5.0	Commissioning with High Voltage			
	5.1	Check List			
	5.2	Safety test main circuit breaker			
	5.3	Auxiliary Converter Commissioning			
	5.3.1	Running test of 3 ph. auxiliary equipments			
	5.3.2	Performance of Auxiliary Converters	40.05		
	5.3.3	Performance of BURs when one BUR goes out	16-25		
	5.4 5.5	Auxiliary circuit 415/110			
	5.5 5.6	Hotel Load Circuit Treation Convertor Commissioning			
	5.6 5.7	Traction Converter Commissioning Test protective shutdown SP			
	5.7 5.8	Test protective shutdown SR Test Harmonic Filter			
	5.6 5.9	Test important components of the locomotive			
6.	6.0	Running Trial of the locomotive	25-26		
7.	7.0	Final Check List to be verified at the time of Loco dispatch	27		
8.	8.0	Status of RDSO modifications	28		
9.	1-10	Pneumatic Test Parameters	29 - 32		
10.		Loco Check Sheet(LAS)	33		
11.	-	Component History (LAS,ECS,ABS)	34-36		
12.	-	Component History & Testing Parameter (Bogie Shop)	37 - 38		
13	-	Warranty Conditions as per Tenders	39 -41		

(Ref: WI/ECS/10)

DOC.NO.1/LCC

#### PATIALA LOCOMOTIVE WORKS, PATIALA

#### Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42009 - August /equ

Type of Locomotive: WAP-7/WAG-9HC

Page: 1 of 27

1.0 Continuity Test of the cables

1.1 Continuity Test of Traction Circuit Cables

As per cable list given in Para 1.3 of document no. 3 EHX 410 124, check the continuity with continuity tester and megger each cable to be connected between following equipment with 1000V megger.

From	То	Continuity (OK/Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Filter Cubicle	Transformer	OK	100 ΜΩ	850MSZ
Filter Cubicle	Terminal Box of Harmonic Filter Resistor (Roof)	ok	100 ΜΩ	950ms
Filter Cubicle	Earthing Choke	ok	100 ΜΩ	750m2
Earthing Choke	Earth Return Brushes	OR	100 ΜΩ	Sooma
Transformer	Power Converter 1	OK	100 ΜΩ	900 M2
Transformer	Power Converter 2	OK	100 ΜΩ	800Ars)
Power Converter 1	TM1, TM2, TM3	OK	100 ΜΩ	200 ms.
Power Converter 2	TM4, TM5, TM6	oK	100 ΜΩ	900ms2
Earth	Power Converter 1	OK	100 ΜΩ	Dooma
Earth	Power Converter 2	OK	100 ΜΩ	Jooms

#### 1.2 Continuity Test of Auxiliary Circuit Cables

As per cable list given in Para 1.4 of document no. 3 EHX 410 124, check the continuity with continuity meter and megger each cable to be connected between following equipment with the help of 1000V megger.

Signature of the JE/SSE/Harness

Signature of the JE/SSE/Loco Cabling

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.:

Type of Locomotive: WAP-7/WAG-9HC

Page: 2 of 27

From	То	Continuity(OK/ Not OK)	Prescribed Megger Value (min)	Measured Megger Value
Transformer	BUR1	OK	100 ΜΩ	800.MN
Transformer	BUR2	OK	100 MΩ	700 MM
Transformer	BUR3	0K	100 MΩ	600 MN
Earth	BUR1	OK	100 ΜΩ	500 Mil
Earth	BUR2	OK	100 ΜΩ	600 MM
Earth	BUR3	OK	100 ΜΩ	700 MM
BUR1	HB1	OK	100 MΩ	500 Mil
BUR2	HB2	OK.	100 ΜΩ	600 MM
HB1	HB2	OK	100 ΜΩ	700 MM
HB1	TM Blower 1	OK	100 MΩ	800 MM
HB1	TM Scavenge Blower 1	OK	100 M $\Omega$	500 MM
HB1	Oil Cooling Unit 1	OK	$100~{ m M}\Omega$	600 MIR
HB1	Compressor 1	OK	100 MΩ	700 MM
HB1	TFP Oil Pump 1	OK	100 ΜΩ	800 Ms
HB1	Converter Coolant Pump 1	ÖK	100 ΜΩ	700 MM
HB1	MR Blower 1	0K	100 MΩ	800 MM
HB1	MR Scavenge Blower 1	OK	100 ΜΩ	600 Mis
HB1	Cab1	OK	100 MΩ	700 MM
Cab1	Cab Heater 1	OK	100 M $\Omega$	800 MM
HB2	TM Blower 2	OK	100 MΩ	600 MM
HB2	TM Scavenge Blower 2	OK	100 ΜΩ	700 MM
HB2	Oil Cooling Unit 2	OK	100 MΩ	500 MM
HB2	Compressor 2	OK	100 ΜΩ	600 Mil
HB2	TFP Oil Pump 2	OK_	100 M $\Omega$	700 MM
HB2	Converter Coolant Pump 2		100 MΩ	800 MM
HB2	MR Blower 2	OK	100 ΜΩ	500 MM
HB2	MR Scavenge Blower 2	014	100 MΩ	600 MN
HB2	Cab2	OK	100 ΜΩ	700 MM
Cab2	Cab Heater 2	OK	100 ΜΩ	800 MM

E/SELLoco Testing Signature of the

Effective Date: Feb 2022

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 3 of 27

1.3 Continuity Test of Battery Circuit Cables

Check continuity of following cables as per Para 2.3 of document no. 3 EHX 610 299

From	То	Condition	Continuity (OK/Not OK)
Battery (wire no 2093)	Circuit breakers 110- 2, 112.1-1, 310.4-1	By opening and closing MCB 112	ev.
MCB 110	Connector 50.X7-1	By opening and closing MCB 110	⊖k
Battery (Wire no. 2052)	Connector 50.X7-2		οκ
SB2 (Wire no 2050)	Connector 50.X7-3		Oik

Close the MCB 112, 110, 112.1, and 310.4 and measure the resistance of battery wires 2093, 2052, 2050 with respect to the loco earth.	Prescribed value $> 0.5 \ M\Omega$	Measured Value <u>プ</u> ΜΩ
Measure the resistance between 2093 & 2052, 2093 & 2050, 2052 & 2050	Prescribed value: $> 50 \text{ M}\Omega$	Measured  Value  65 MΩ

. Commission the indoor lighting of the locomotive as per Sheet No 7A & 7B.

## 1.4 Continuity Test of Screened Control Circuit Cables

Check the continuity and isolation of the screen cable of the following circuits with the help of sheet no. mentioned against each as per document no. 3 EHX 610 299.

Screened control circuit cables for	Corresponding Sheet Nos.	Continuity & Isolation (OK/Not OK)
Battery voltage measurement	04B `	OK
Memotel circuit of cab1 &2	10A	OK
Memotel speed sensor	10A	PK
Primary voltage detection	01A, 12A	OK.
Brake controller cab-1 & 2	06F, 06G	OK.

£s

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 4 of 27

Master controller cab-1 &2	08C, 08D	OL
TE/BE meter bogie-1 & 2	08E, 08F	On
Terminal fault indication cab-1 & 2	09F	OK
Brake pipe pressure actual BE electric	06H	Ope
Primary current sensors	12B, 12F	OK
Harmonic filter current sensors	12B, 12F	ક્ષ
Auxiliary current sensors	12B, 12F	SIL .
Oil circuit transformer bogie 1	12E, 12I	OŁ.
Magnetization current ,	12C, 12G	01
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-1	12D	OK
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-2	12D	on
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-3	12D	OK.
Traction motor speed sensors (2 nos.) and temperature sensors (1 no.) of TM-4	12H	. °Y
Traction motor speed sensors (2 nos) and temperature sensors (1 no.) of TM-5	12H	or_
Traction motor speed sensors (2nos) and temperature sensors (1 no.) of TM-6	12H	94
Train Bus cab 1 & 2 (Wire U13A& U13B to earthing	13A	92
resistance= 10K <b>Ω</b> ± ± 10%)		
UIC line	13B	OK.
Connection FLG1-Box TB	13A	٥,

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 5 of 27

2.0 Low Tension test

2.1 Measurement of resistor in OHMS  $(\Omega)$ Measure the resistances of the load resistors for primary voltage transformer, load resistors for primary current transformer and Resistor harmonic filter as per Para 3.2 of the document

no. 3 EHX 610 279.

Name of the resistor	Prescribed value	Measured value
Load resistor for primary voltage transformer (Pos. 74.2).	3.9K <b>Ω</b> ± 10%	3.9Kl
Resister to maximum current relay.	1Ω ± 10%	152
Load resistor for primary current transformer (Pos. 6.11).	3.3 Ω ± 10%	3.352
Resistance harmonic filter (Pos 8.3). Variation allowed $\pm$ 10%	WAP7	WAP7
Between wire 5 & 6	0.2 Ω	0.22
Between wire 6 & 7	0.2 Ω	0.2-2
Between wire 5 & 7	0.4 Ω	0.452
For train bus, line U13A to earthing.	10 kΩ± 10%	10.0 KD
For train bus, line U13B to earthing.	10 kΩ ± 10%	9.9 9K1
Insulation resistance of High Voltage Cable from the top of the roof to the earth (by1000 V megger).	200 ΜΩ	300MV
Resistance measurement earth return brushes Pos. 10/1.	≤0.3 Ω	0.251
Resistance measurement earth return brushes Pos. 10/2.	≤0.3 Ω	0.28-1
Resistance measurement earth return brushes Pos. 10/3.	≤0.3 Ω	0.291
Resistance measurement earth return brushes Pos. 10/4.	≤0.3 Ω	0.3.2
Earthing resistance (earth fault detection) Harmonic Filter –I; Pos. 8.61.	2.2 kΩ± 10%	2.212
Earthing resistance (earth fault detection) Harmonic Filter –II; Pos 8.62.	2.7 kΩ± 10%	2:762
Earthing resistance (earth fault detection) Aux. Converter; Pos. 90.3.	3.9 k <b>Ω</b> ± 10%	39102
Earthing resistance (earth fault detection) 415/110V; Pos. 90.41.	1.8 k <b>Ω</b> ± 10%	1.8100
Earthing resistance (earth fault detection) control circuit; Pos. 90.7.	390 <b>Ω</b> ± 10%	39052
Earthing resistance (earth fault detection) Hotel load; Pos. 37.1(in case of WAP5).	3.3 k <b>Ω</b> ± 10%	MA
Resistance for headlight dimmer; Pos. 332.3.	10Ω ± 10%	. 102

Effective Date: Feb 2022

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 6 of 27

Note:

Make sure that the earthing brush device don't make direct contact with the axle housing, earth connection must go by brushes.

#### 2.2 Check Points

Items to be checked	Remarks
Check whether all the earthing connection in roof and machine room as mentioned in sheet no. 22A is done properly or not. These earthing connections must be flexible and should be marked yellow & green	checked ok .
Check whether all the earthing connection between loco body and bogie is done properly or not. These cables must be flexible having correct length and cross section	Checked ok

# 2.3 Low Tension Test Battery Circuits (without control electronics)

These tests are done with the help of the special type test loop boxes as per procedure given in Para 3.6 of the document no. 3 EHX 610 279

Para 3.6 of the document no. 3 EHX 6  Name of the test	Schematic used.	Remarks
Test 24V supply	Sheet 04F and other linked sheets	checked ok
Test 48V supply	Sheet 04F & sheets of group 09	Fan supply to be checked.
Test traction control	Sheets of Group 08.	ok
Test power supply bus stations.	Sheets of Group 09.	Fan supply to be checked. $G/_{\circ}$
Test control main apparatus	Sheets of Group 05.	@/c
Test earth fault detection battery circuit by making artificial earth fault to test the earth fault detection	Sheet 04C	ok.
Test control Pneumatic devices	Sheets of Group 06	ok
Test lighting control	Sheets of Group 07	o le
Pretest speedometer,	Sheets of Group 10	OK
Pretest vigilance control and fire system	Sheets of Group 11	o le
Power supply train bus	Sheets of Group 13	o k

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

## Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Page J . on aviton

Type of Locomotive: WAP-7/WAG-9HC

Page: 7 of 27

	MOUVE NO.		
3.0	Downloading	of	Software

	Yes/No
3.1 Check Points.	_ <del></del>
Check that all the cards are physically present in the bus stations and all the plugs are connected.	Yes
Check that all the fibre optic cables are correctly connected to the bus stations.	Yes
Make sure that <b>control electronics off relay</b> is not energized i.e. disconnect Sub-D 411.LG and loco is set up in simulation mode.	Yes
Check that battery power is on and all the MCBs (Pos. 127.*) in SB1 &SB2 are on	Jes

3.2 Download Software

The software of Traction converter, Auxiliary converter and VCU should be done by commissioning engineer of the firm in presence of supervisor. Correct software version of the

propulsion equipment to be ensured and noted:

propulsion equipment to be ensured and the services	5~
Traction converter-1 software version:	5-0
Traction converter-2 software version:	<u> </u>
Auxiliary converter-1 software version:	4.0
Auxiliary converter-2 software version:	4.0
Auxiliary converter-3 software version:	4.0
Vehicle control unit -1 software version:	1600
Vehicle control unit -2 software version:	1600

3.3 Analogue Signal Checking

Check for the following analogue signals with the help of diagnostic tool connected with loco.

Description	Signal name	Prescribed value	Measured Value
Brake pipe pressure	FLG2;0101XPrAutoBkLn	100% (= 5 Kg/cm2)	DK
Actual BE electric	FLG2; AMSB_0201- Wpn BEdem	100% (= 10V)	OK.
TE/BE at 'o' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 9% and 11 %	104,
TE/BE at 'TE maximal' position from both cab	FLG1; AMSB_0101-Xang Trans FLG2; AMSB_0101- Xang Trans	Between 99 % and 101 %	1001,
TE/BE at 'TE minimal' position from both cab	FLG1; AMSB_0101- Xang Trans FLG2; AMSB_0101- Xang Trans	Between 20 % and 25 %	2.4.1.

2022 (Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 8 of 27

		e	
	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 99% and 101%	10-01,
TE/BE at 'BE Minimal' position from both cab	FLG1; AMSB_0101- XangTrans FLG2; AMSB_0101- XangTrans	Between 20% and 25%	241.
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>1/3 HBB2; AMS_0101- LT/BDEM>1/3	Between 42 and 44%	444,
TE/BE at '1/3' position in TE and BE mode in both cab.	HBB1; AMS_0101- LT/BDEM>2/3 HBB2; AMS_0101- LT/BDEM>2/3	Between 72 and 74%	741.
Both temperature sensor of TM1	SLG1; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature $0^{\circ}$ C to $40^{\circ}$ C	16°C
Both temperature sensor of TM2	SLG1; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C
Both temperature sensor of TM3	SLG1; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15.5°C
Both temperature sensor of TM4	SLG2; AMSB_0106- XAtmp1Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	16°C
Both temperature sensor of TM5	SLG2; AMSB_0106- Xatmp2Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	76
Both temperature sensor of TM6	SLG2; AMSB_0106- Xatmp3Mot	Between 10% to 11.7% depending upon ambient temperature 0°C to 40°C	15°C

Effective Date: Feb 2022

eb 2022

# PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 9 of 27

DOC.NO.I /LCG/01

(Ref: WI/ECS/10)

## 3.4 Functional test in simulation mode

Conduct the following functional tests in simulation mode as per Para 5.5 of document no.3EHX 610 281. through the Diagnostic tool/laptop:

Test Function	Result desired in sequence	Result obtained
Emergency shutdown through emergency stop switch 244	VCB must open. Panto must lower.	cherckes ok
Shut Down through cab activation switch to OFF position	VCB must open. Panto must lower.	checkedou
Converter and filter contactor operation with both Power Converters during Start Up.	FB contactor 8.41 is closed.  By moving reverser handle:  Converter pre-charging contactor 12.3 must close after few seconds.  Converter contactor 12.4 must close.  Converter re-charging contactor 12.3 must opens.  By increasing TE/BE throttle:  FB contactor 8.41 must open.  FB contactor 8.2 must close.  FB contactor 8.1 must close.	checkedok
Converter and filter contactor operation with both Power Converters during Shut Down.	Bring TE/BE to O. Bring the cab activation key to "O" VCB must open. Panto must lower. Converter contactor 12.4 must open. FB contactor 8.1 must open. FB contactors 8.41 must close. FB contactor 8.2 must remain closed.	Checkes

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4909

Type of Locomotive: WAP-7/WAG-9HC Page: 10 of 27

Contactor filter adaptation by isolating any bogie  Test earth fault detection battery circuit positive & negative	Isolate any one bogie through bogie cut out switch. Wait for self-test of the loco.  • Check that FB contactor 8.1 is open.  • Check that FB contactor 8.2 is open.  After raising panto, closing VCB, and setting TE/BE  • FB contactor 8.1 closes.  • FB contactor 8.2 remains open.  By connecting wire 2050 to earth, create earth fault negative potential.  • message for earth fault  • By connecting wire 2095 to earth, create earth fault positive potential.  • message for earth fault	Checked Ok
Test fire system. Create a smoke in the machine room near the FDU. Watch for activation of alarm.	When smoke sensor-1 gets activated then  • Alarm triggers and fault message priority 2 appears on screen.  When both smoke sensor 1+2 gets activated then  • A fault message priority 1 appears on screen and lamp LSF1 glow.  • Start/Running interlock occurs and TE/BE becomes to 0.	Checked ok
Time, date & loco number	Ensure correct date time and Loco number	0K

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

## Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 48009

Type of Locomotive: WAP-7/WAG-9HC

Page: 11 of 27

4.0 Sensor Test and Converter Test

# 4.1 Test wiring main Transformer Circuits

Apply  $198V_p/140V_{RMS}$  to the primary winding of the transformer (at 1u; wire no. 2 at surge arrestor and at 1v; wire no. 100 at earthing choke). Measure the output voltage and compare

Output Winding nos.	Description of winding.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
2U <sub>1</sub> & 2V <sub>1</sub>	For line converter bogie 1 between cable 801A- 804A	10.05V <sub>p</sub> and same polarity	10.0410	O.L
2U <sub>4</sub> & 2V <sub>4</sub>	For line converter bogie 1 between cable 811A- 814A	10.05V <sub>p</sub> and same polarity	10.0570	ac
2U <sub>2</sub> & 2V <sub>2</sub>	For line converter bogie 2 between cable 801B- 804B	10.05V <sub>p</sub> and same polarity	10.0400	OK.
2U <sub>3</sub> & 2V <sub>3</sub>	For line converter bogie 2 between cable 811B- 814B	10.05V <sub>p</sub> and same polarity	10.05V	OK.
2U <sub>B</sub> & 2V <sub>B</sub>	For aux. converter 1 between cable 1103- 1117 (in HB1) For Aux converter 2 between cable 1103- 1117 (in HB2)	7.9V <sub>p</sub> , 5.6V <sub>RMS</sub> and same polarity.	7.84P 5-6 NO.193	QK.
2U <sub>F</sub> & 2V <sub>F</sub>	For harmonic filter between cable 4-12 (in FB)	9.12V <sub>p</sub> , 6.45V <sub>RMS</sub> and same polarity.	9.10 VP 6-44 VENS	an.

#### 4.2 Test wiring auxiliary transformer 1000V/415V-110V (pos. 67)

Apply  $141V_p$  /  $100V_{RMS}$  to input of the auxiliary transformer at cable no 1203 –1117 and measure the output at

Description of wire no.	Prescribed Output Voltage & Polarity with input supply.	Measured output	Measured polarity
Cable no. 1218 - 1200	58.7V <sub>p</sub> , 41.5V <sub>RMS</sub> and opposite polarity.	58.6VP 41.5VRM)	OV.
Cable no. 1218 – 6500	15.5V <sub>p</sub> , 11.0V <sub>RMS</sub> and opposite polarity.	15.578	<b>ે</b> પ

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 4 2009

Type of Locomotive: WAP-7/WAG-9HC

Page: 12 of 27

DOC.NO.F/ECS/V

#### **Primary Voltage Transformer** 4.3

Apply 250Veff/350Vp by variac to roof wire 1 and any wire 0 and measure the magnitude and polarity of the output of the primary voltage transformer for both bogies as per the procedure specified and suggested by the traction converter manufacturer. Primary voltage measurement converters (Pos. 224.1/\*) & catenary voltmeter (Pos. 74/\*)

This test is to be done for each converter.

Activate cab in driving mode and supply  $200V_{RMS}$  through variac to wire no 1501 and 1502. Monitor the following parameters through Diagnostic tool and in catenary voltmeter.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	25kV	250%	25 KV	9.50X
SLG2 G 87-XUPrim	25 kV	250%	95 KV	2.5 w/s

Decrease the supply voltage below 140  $V_{\text{RMS}}$ . VCB must open at this voltage. In this case the readings in Diagnostic Tool and catenary voltmeter will be as follows.

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	17kV	170%	17 KV	170 X
SLG2 G 87-XUPrim	17 kV	170%	17 KV	170×

Reactivate VCB to on by increasing this voltage to 175% (17.5 kV).

Increase the supply to 240 V<sub>RMS</sub> through variac. VCB must open at this voltage, In this case the readings in diagnostic tool and catenary voltmeter will be as follows:

Signal name	Prescribed value in catenary voltmeter	Prescribed value in Micview	Monitored value in catenary voltmeter	Monitored value in SR diagnostic tool
SLG1 G 87-XUPrim	30kV	300%	30 KV	300%
SLG2_G 87-XUPrim	30 kV	300%	30 KV	300×

Reactivate VCB to on by decreasing this voltage to 290% (29 kV).

display.

display.

/9.9A<sub>p</sub> at the open wire 1521;

VCB opens with Priority 1 fault message on

Effective Date: Feb 2022

# PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.:

Type of Locomotive: WAP-7/WAG-9HC

Page: 13 of 27

(Ref: WI/ECS/10)

#### Minimum voltage relay (Pos. 86) 4.4

Functionality test:	ted to approx 68%
Minimum voltage relay (Pos. 86) must be adjust	(Vec/No)
Activate loco in cooling mode. Check Power supply of 48V to minimum voltage relay. Disconnect primary voltage transformer (wire no. 1511 and 1512) from load resistor (Pos. 74.2) and connect variac to wire no. 1501 and 1502. Supply 200V <sub>RMS</sub> through variac. In this case; <i>Minimum voltage relay (Pos. 86) picks up</i>	(Yes/No)
	(Vec(No)
Try to activate the cab in driving mode: Contactor 218 do not close; the control electronics is not be working.	(123)10)
Turn off the variac : Contactor 218 closes; the control electronics is be working	(Yes/No)
Test Under Voltage Protection	;
Activate the cab in cooling mode; Raise panto;	(Yes/No)
Supply 200V <sub>RMS</sub> through variac to wire no. 1501	
& 1502; Close the VCB; Interrupt the supply	
voltage	
The VCB goes off after 2 second time delay.	
Again supply 200V <sub>RMS</sub> through variac to wire no. 1501 & 1502; Decrease the supply voltage below 140V <sub>RMS</sub> ± 4V;	(Yes/No)
Fine tune the minimum voltage relay so that VCB opens.	
4.5 Maximum current relay (Pos. 78)	
Disconnect wire 1521 & 1522 of primary current transform &1522 (including the resistor at Pos. 6.11); Put loco in simulat on contact 136.3; Close VCB; supply 3.6A <sub>RMS</sub> at the open maximum current relay Pos. 78 for correct over current value;	ion for driving mode; Open $R_3 - R_4$ wire 1521; Tune the drum of the
VCB opens with Priority 1 fault message on	L(Yes/No)

Signature of the JE/SSE/Loco Testing

(Yes/No)

Keep contact  $R_3 - R_4$  of 136.3 closed; Close VCB; Tune the resistor 78.1 for the current of 7.0 $A_{RMS}$ 

Effective Date: Feb 2022

Doc.No.F/ECS/UI (Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 48009

Type of Locomotive: WAP-7/WAG-9HC

Page: 14 of 27

4.6 Test current sensors  Prescribed value   Set/Measured				
Name of the sensor	Description of the test	Prescribed value	value	
Primary return current sensor (Test-1,Pos.6.2/1 & 6.2/2)	Activate cab in driving mode supply 10A. Measure the current through diagnostic tool or measuring print.	(Variation allowed is ± 10%)		
پئ Primary return current	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		_	
sensor (Test-2, Pos.6.2/1 & 6.2/2)	Supply 297mA <sub>DC</sub> to the test winding of sensor through connector 415.AA/1or 2 pin no. 7(+) & 8(-)		2-98min	
Auxiliary winding current sensor (Pos. 42.3/1 & 42.3/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1or 2 pin no. 7(+) & 8(-)			
	Supply 333mA <sub>DC</sub> to the test winding of sensor through connector 415.AC/1 or 2 pin no. 7(+) & 8(-)		336mn	
Harmonic filter current sensors (Pos.8.5/1 &8.5/2)	Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/10 2 pin no. 7(+) & 8(-)			
15%	Supply 342mA <sub>DC</sub> to the test winding of sensor through connector 415.AE/1or 2 pin no. 7(+) & 8(-)		3 46mm	
Hotel load current sensors (Pos. 33/1 &	Switch on hotel load. Supply 90mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) 8(-)	&	710	
33/2)	Supply 1242mA <sub>DC</sub> to the test winding of sensor through connector 415.AG/1or 2 pin no. 7(+) & 8(-)	NA	NA	

Effective Date: Feb 2022

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 15 of 27

4.7 Test DC Link Voltage Sensors (Pos 15.6/\*)

This test is to be done by the commissioning engineer of the firm if required.

# 4.8 Verification of Converter Protection Circuits (Hardware limits) -

This test is to be done as per para 6.17 of the document no. 3EHX 610 282 for both the converters.

Protection circuits	Limit on which shutdown should take place	Measured limit	
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 1	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 18.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	ok
Current sensors (Pos 18.2/1, 18.2/2, 18.2/3, 18.4/4, 18.5/1, 18.5/2, 18.5/3) for Power Converter 2	Increase the current quickly in the test winding of the current sensors, VCB will off at 2.52A with priority 1 fault for each sensor.	For 18.2/1= For 8.2/2= For 18.2/3= For 18.4/4= For 18.5/1= For 18.5/2= For 18.5/3=	Pok
Fibre optic failure In Power Converter1	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	OK	
Fibre optic failure In Power Converter2	Remove one of the orange fibre optic plugs on traction converter. VCB should trip	0k	

#### 4.9 Sequence of BUR contactors

The sequence of operation of BUR contactors for 'ALL BUR OK' BUR 1 out BUR 2 out and BUR 3 out condition has to be verified by putting the Loco in driving mode (VCB should not be closed) and isolating the BURs one by one. In these condition following will be the contactor sequence.

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
AI BUR OK	Close	Open	Close	Open	Close	Open	Close	Close	Open
BUR1 off	Close	Öpen	Close	Close	Open	Close	Open	Open	Close
BUR2 off	Open	Open	Close	Close	Close	Close	Open	Open	Close
BUR3 off	Open	Close	Open	Close	Close	Close	Open	Open	Close

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 49 069

Type of Locomotive: WAP-7/WAG-9HC

Page: 16 of 27

Monitored contactor sequence

Status	52/1	52/2	52/3	52/4	52/5	52.4/1	52.4/2	52.5/1	52.5/2
ALBUR OK	10000	Dean	Const	de	Close	o Den	cose	00080	open
BUR1 off	(12)0	Men	Centre	Conle	Nen	close	Men	Den	Owse
BUR2 off	Nex	Olm	COMBO	Claro	Clare	Clase	den	aen-	Cen 30
BUR3 off	Ger	clare	nen	COBSO	( Oc. 30	CC19 SQ	open	apen	Clare

#### 5.0 Commissioning with High Voltage

#### 5.1 Check List

Items to be checked	Yes/No
Fibre optic cables connected correctly.	400
No rubbish in machine room, on the roof, under the loco.	10)
All the electronic Sub-D and connectors connected	Yes
All the MCBs of the HB1 & HB2 open.	res
All the three fuses 40/* of the auxiliary converters	Ver.
The fuse of the 415/110V auxiliary circuit (in HB1) open.	ves
Roof to roof earthing and roof to cab earthing done	ves
Fixing, connection and earthing in the surge arrestor done correctly.	Yes
Connection in all the traction motors done correctly.	VP8
All the bogie body connection and earthing connection done correctly.	Ves
Pulse generator (Pos. 94.1) connection done correctly.	Ves
All the oil cocks of the gate valve of the transformer in open condition.	Vies .
All covers on Aux & Power converters, Filter block, HB1, HB2 fitted	103
KABA key interlocking system.	Yen

#### 5.2 Safety test main circuit breaker

Prepare to switch off the catenary supply during the first charging of the locomotive in case of any unexpected behavior of the electrical component of the loco. Charge the loco for the first time by closing BLDJ switch. The VCB will trip after certain time as no oil/coolant pumps are running yet.

Perform the following safety test of main circuit breaker through both the cabs of the locomotive.

Effective Date: Feb 2022

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC Page: 17 of 27

Name of the test	Description of the test	Expected result	Monitored result
Emergency stop in cooling mode	Raise panto in cooling mode. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Checkedok
Emergency stop in driving mode	Raise panto in driving mode in. Put the brake controller into RUN position. Close the VCB. Push emergency stop button 244.	VCB must open. Panto must lower. Emergency brake will be applied.	Cheeked on
Under voltage protection in cooling mode	Raise panto in cooling	VCB must open.	checked ok
Under voltage protection in driving mode	Raise panto in driving mode. Close the VCB. Switch off the supply of catenary by isolator	VCB must open with diagnostic message that catenary voltage out of limits	Checkelok
Shut down in cooling mode.	Raise panto in cooling mode. Close the VCB. Bring the BL- key in O position.	VCB must open. Panto must lower.	Checkedok
Shutdown in driving mode	Raise panto in driving mode. Close the VCB. Bring the BL-key in O position.	VCB must open. Panto must lower.	Checkedon
Interlocking pantograph-VCB in cooling mode	Raise panto in cooling mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	Checkedok
Interlocking pantograph- VCB in driving mode	Raise panto in driving mode. Close the VCB. Lower the pantograph by ZPT	VCB must open.	checkedol

Effective Date: Feb 2022

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4 2009

Type of Locomotive: WAP-7/WAG-9HC

Page: 18 of 27

#### 5.3 Auxiliary Converter Commissioning

Switch on the high voltage supply and set up the loco in driving mode. Raise the panto. Close the VCB. Check that there is no earth fault in the auxiliary circuit, Switch off the VCB. Lower the panto. Create the earth fault in auxiliary circuit by making connection between wire no 1117(in HB2 cubicle) and earth. After 3 minutes a diagnostic message will come that "Earth fault auxiliary circuit."

5.3.1 Running test of 3 ph. auxiliary equipments

Switch on the 3 ph. auxiliary equipment one by one. Check the direction of rotation of each auxiliary machine and measure the continuous current and starting current drawn by them.

Name of the auxiliary machine	Typical phase current	Measured continuous phase current	Measured starting phase current
Oil pump transformer 1	9.8 amps	6.5	7.0
Oil pump transformer 2	9.8 amps	6.6	7,0
Coolant pump converter 1	19.6 amps	4 · 7	5-7
Coolant pump converter 2	19.6 amps	5.0	5-6
Oil cooling blower unit 1	40.0 amps	31.3	83.0
Oil cooling blower unit 2	40.0 amps	36.7	79.0
Traction motor blower 1	34.0 amps	27.5	50.9
Traction motor blower 2	34.0 amps	28,6	22.9
Sc. Blower to Traction motor blower 1	6.0 amps	4.7	5-1
Sc. Blower to Traction motor blower 1	6.0 amps	4.6	5'2
Compressor 1	25 amps at 0 kg/cm <sup>2</sup> 40 amps at 10 kg/cm <sup>2</sup>	250	33.8
Compressor 2	25 amps at 0 kg/ cm <sup>2</sup> 40 amps at 10 kg/ cm <sup>2</sup>	28.2	33.9.

Effective Date: Feb 2022

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 19 of 27

5.3.2 Performance of Auxiliary Converters

Measure the performance of the auxiliary converters through software and record it. BUR1 (Condition: Switch off all the load of BUR 1)- to be filled by commissioning engineer

of the firm.

Signal name	Description of the signal	Prescribed value	Monitored value	Value under Limit (Yes/No)
BUR1 7303 XUUN	Input voltage to BUR1	75% (10%=125V)	(002V	Yey
BUR1 7303 XUUZ1	DC link voltage of BUR1	60% (10%=100V)	636 V	Y 29.
BUR1 7303 XUIZ1	DC link current of BUR1	0% (10%=50A)	* Amp	74

BUR2 (Condition: Switch off all the load of BUR 2, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed value by the firm	Monitored value	Value under Limit (Yes/No)
BUR2 7303-XUUN	Input voltage to BUR2	75% (10%=125V)	10044	Yey
BUR2 7303-XUUZ1	DC link voltage of BUR2	60% (10%=100V)	637V	ارم
BUR2 7303-XUIZ 1	DC link current of BUR2	1% (10%=50A)*	7 Amy	Yey
BUR2 7303-XUILG	Current battery charger of BUR2	3% (10%=100A)*	22 Asry	705
BUR2 7303-XUIB1	Current battery of BUR2	1.5%(10%=100A)*	12 Brook	Yes
BUR2 7303 -XUUB	Voltage battery of BUR2	110%(10%=10V)	1/0	Y:

<sup>\*</sup> Readings are dependent upon charging condition of the battery.

BUR3 (Condition: Switch off all the load of BUR 3, Battery Charger on) to be filled by commissioning engineer of the firm.

Signal name	Description of the signal	Prescribed set value by the firm	Monitored value	Value under limit (Yes/No)
BUR3 7303-XUUN	Input voltage to BUR3	75% (10%=125V	10024	Yey
BUR3 7303- XUUZI	DC link voltage of BUR3	60% (10%=100V)	6374	Yes
BUR3 7303-XUIZ 1	DC link current of BUR3	1% (10%=50A)*	7 Brook	le)
BUR3 7303-XUILG	Current battery charger of BUR 3	3% (10%=100A)*	22A4	tes
BUR3 7303-XUIB1	Current battery of BUR 3	1.5%(10%=100A)*	12-13-1	Yey
BUR3 7303-XUUB	Voltage battery of BUR 3	110%(10%=10V)	110~	Yey

\* Readings are dependent upon charging condition of the battery.

DOC.NO.F/ECG/VI (Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC Page: 20 of 27

5.3.3 Performance of BURs when one BUR goes out

When any one BUR goes out then rest of the two BURs should take the load of all the

auviliaries at ventilation level 3 of the locomotive.

Condition of BURs	Loads on BUR1	Loads in BUR2	Loads in BUR3
All BURs OK	Oil Cooling unit 1&2	TM blower1&2, TFP oil pump 1&2, SR coolant pump 1&2.	Compressor 1&2, Battery ( charger and TM Scavenger blower 1&2
BUR 1 out		Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2,TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 2 out	Oil Cooling unit 1&2, TM blower 1&2, TM Scavenger blower 1&2		Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.
BUR 3 out	Oil Cooling unit 1&2, TM blower1&2, TM Scavenger blower 1&2	Compressor 1&2, TFP oil pump 1&2, SR coolant pump 1&2 and Battery charger.	

5.4 Auxiliary circuit 415/110

For checking earth fault detection, make a connection between wire no. 1218 and vehicle body. On switching on VCB, Earth fault relay 89.5 must pick up and after 3 minutes a message will come in the Diagnostic display that Earth Fault 415/110V Circuit

Switch on the 1 ph. auxiliary equipment one by one. Check the direction of rotation of each

Name of the auxiliary machine	Typical phase current	Measured phase current	Measured starting current
Machine room blower 1	15.0 amps*	5.1	11.3
Machine room blower 2	15.0 amps*	5.2	14 6
Sc. Blower to MR blower 1	1.3 amps	1.7	2.0
Sc. Blower to MR blower 2	1.3 amps	1.1	1.8
Ventilator cab heater 1	1.1 amps	1.5	1.6
Ventilator cab heater 2	1.1 amps	1.3	1.6
Cab heater 1	4.8 amps	5.0	5.2
Cab heater 2	4.8 amps	50	5-2

<sup>\*</sup> For indigenous MR blowers.

Effective Date: Feb 2022

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# <u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u> <u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 49 ov 9

Type of Locomotive: WAP-7/WAG-9HC

Page: 21 of 27

# 5.5 Hotel load circuit (Not applicable for WAG-9HC)

For WAP-7 locomotive with Hotel load converter refer to Annexure-HLC

#### 5.6 Traction Converter Commissioning

# This test is carried out in association with Firm.

Traction converter commissioning is being done one at a time. For testing Converter 1, switch off the traction converter 2 by switch bogie cut out switch 154. For testing Converter 2, switch off the traction converter 2 by switch bogie cut out switch 154. Isolate the harmonic filter also by switch 160. Start up the loco by one converter. Follow the functionality tests.

#### For Converter 1

For Converter 1		Result obtained
Test Function	Results desired	kesuit optained
Measurement of charging and pre-charging and charging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok
Measurement of discharging of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkled ok
Earth fault detection on positive potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok
Earth fault detection on negative potential of DC Link of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	cheeked on
Earth fault detection on AC part of the traction circuit of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Cheeked ok
Pulsing of line converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok
Pulsing of drive converter of Converter 1	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	Checked ok

Effective Date: Feb 2022

# PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC Page: 22 of 27

DOC.NO.F/ECO/VI

(Ref: WI/ECS/10)

#### For Converter 2

For Converter 2  Results desired in sequence   Result obtained				
Test Function	Results desired in sequence	Result obtained		
charging and pre- charging and charging	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok		
Measurement of discharging of DC Link of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked or		
positive potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked or		
Earth fault detection on negative potential of DC Link of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/v	checked ok		
AC part of the traction circuit of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked or		
of Converter 2.	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checked ok		
Pulsing of drive converter of Converter 2	Traction converter manufacturer to declare the successful operation and demonstrate the same to the PLW supervisor.	checkel or		

DOC.NO.F/EUS/VI (Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 4200 9

Type of Locomotive: WAP-7/WAG-9HC

Page: 23 of 27

#### 5.7 Test protective shutdown SR

Test Function	Results desired in sequence	Result obtained
Measurement of protective shutdown by Converter 1 electronics.	Start up the loco with both the converter. Raise panto. Close VCB.  Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 1Check that converter 1 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on DDU appears  Disturbance in Converter 1	checkedok
Measurement of protective shutdown by Converter 2 electronics.	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Remove one of the orange fibre optic feedback cable from converter 2. Check that converter 2 electronics produces a protective shut down.  • VCB goes off • Priority 1 fault mesg. on diagnostic	Checked ok

#### 5.8 Test Harmonic Filter

Switch on the filter by switch 160

Test Function	Results desired in sequence	Result obtained
Measurement of filter currents	Start up the loco with both the converter. Raise panto. Close VCB. Move Reverser handle to forward or reverse. Apply a small value of TE/BE by moving the throttle.  • FB contactor 8.41 must open.	Checked ok

lo.03

(Ref: WI/ECS/10)

# Effective Date: Feb 2022 PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 43008

Type of Locomotive: WAP-7/WAG-9HC

Page: 24 of 27

•	<ul> <li>FB contactor 8.2 must close.</li> <li>FB contactor 8.1 must close</li> <li>Check the filter current in diagnostic laptop</li> <li>Bring the TE/BE throttle to O</li> <li>Switch off the VCB</li> <li>FB contactor 8.1 must open.</li> <li>FB discharging contactor 8.41 must close</li> <li>Check the filter current in diagnostic laptop</li> </ul>	Checked o k
Test earth fault detection harmonic filter circuit.	Make a connection between wire no. 12 and vehicle body. Start up the loco. Close VCB.  • Earth fault relay 89.6 must pick up.  • Diagnostic message comes that - Earth fault in harmonic filter circuit	checked ok
Test traction motor speed sensors for both bogie in both cabs	Traction converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	ok.

#### 5.9 Test important components of the locomotive

Items to be tested	Description of the test	Monitored value/remark	
Speedometer	VCU converter manufacturer to declare the successful operation and demonstrate the same to the supervisor/ PLW	checkedeix	
Time delay module of MR blower	The time after which the starting capacitor for MR blower should go off the circuit should be set to 10-12 seconds	Checkedok	
Ni-Cd battery voltage	At full charge, the battery voltage should be 110V DC.	cheekedole	
Flasher light	From both cab flasher light should blink at least 65 times in one minute.	Checkelok	
Head light	Head light should glow from both cabs by operating ZLPRD. Dimmer operation of headlight should also occur by operating the switch ZLPRD.	Checkedok	

DOC.NO.F/ECG/VI

Effective Date: Feb 2022

(Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

# Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT based Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 42009

Type of Locomotive: WAP-7/WAG-9HC

Page: 25 of 27

	Both front and tail marker light should glow	checkedok
Marker light	from both the cabs	
Cab Light	Cab light should glow in both the cabs by operating the switch ZLC	cheekedok
Spot lights	Both Drivers and Asst. Drivers Spot light should glow in both cabs by operating ZLDD	checkedok
Instrument lights	Instrument light should glow from both cab by operating the switch ZLI	checked ok
Illuminated Push button	All illuminated push buttons should glow during the operation	checkesol«
Contact pressure of the high rating contactors	The contact pressure of FB contactors (8.1, 8.2) is to be measured  Criteria:  The minimum contact pressure is 54 to 66  Newton.	For contactor 8.1:
Crew Fan	All crew fans should work properly when VCB of the loco is switched on. The airflow from each cab fan is to be measured.  Criteria:  The minimum flow of air of cab fan should be 25 m³/minute	Cab 1 LHS: Cab 1 RHS: Cab 2 LHS: Cab 2 RHS:

#### **6.0** Running **Trial of the locomotive**

SN <sub>.</sub>	Description of the items to be seen during trail run	Action which should take place	Remarks
1	Cab activation in driving mode	No fault message should appear on the diagnostic panel of the loco.	Checker
	Loco charging	Loco to be charged and all auxiliaries should run.  No fault message to appear on the diagnostic panel of the loco. Raise MR pressure to 10 Kg/cm <sup>2</sup> , BP to 5 Kg/cm <sup>2</sup> , FP to 6 Kg/cm <sup>2</sup> .	Charke ok
3.	Check function of Emergency push stop.	This switch is active only in activated cab. By pushing this switch VCB should open & pantograph should be lowered.	Checke ok
4.	Check function of BPCS.	<ul> <li>Beyond 5 kmph, press BPCS, the speed of loco should be constant.</li> <li>BPCS action should be cancelled by moving TE/BE throttle, by dropping BP below 4.75 Kg/cm<sup>2</sup>, by pressing BPCS again.</li> </ul>	checise 019
5.	Check train parting operation of the Locomotive.	Operate the emergency cock to drop the BP Pressure LSAF should glow.	cheele

Doc.No.F/ECS/01 (Ref: WI/ECS/10)

# PATIALA LOCOMOTIVE WORKS, PATIALA

Testing & Commissioning Format For 3-Phase Locomotive fitted with IGBT trased Traction Converter, Auxiliary Converter and TCN based VCU

Locomotive No.: 43eo9

Type of Locomotive: WAP-7/WAG-9HC

Page: 26 of 27

6.	Check vigilance	Set the speed more than 1.5 kmph and ensure that	7		
ļ	operation of the	brakes are released i.e. BC < 1 Kg/cm <sup>2</sup> .			
	locomotive	For 60 seconds do not press vigilance foot switch or			
		sanding foots switch or TE/BE throttle or BPVG			
ľ		switch then	- {{		
		Buzzer should start buzzing.		Ī	
		<ul> <li>LSVW should glow continuously.</li> </ul>		•	
		Do not acknowledge the alarm through BPVG or	\[		
	,	vigilance foot switch further for 8 seconds then:-	. ]	<b>1</b>	, )
		• Emergency brake should be applied	ľ	chec	ked o
		automatically.			
ļ		VCB should be switched off.			
1		Resetting of this penalty brake is possible only after	1		
	ASSES	32 seconds by bringing TE/BE throttle to 0 and			
	***	acknowledge BPVR and press & release vigilance	$-\{\}$	1	
		foot switch.		:	!
7.	Check start/run interlock	• At low pressure of MR (< 5.6 Kg/cm <sup>2</sup> ).		Chec	ked o
		With park brake in applied condition.	7	-NA	
		With direct loco brake applied (BP< 4.75Kg/cm <sup>2</sup> ).	V	-NA Chee	. i
		• With automatic train brake applied (BP<4.75Kg/cm <sup>2</sup> ).		Chec	Kellol
		• With emergency cock (BP < 4.75 Kg/cm <sup>2</sup> ).		· 	
8.	Check traction interlock	Switch of the brake electronics. The	7		
		Tractive /Braking effort should ramp down, VCB	(	Chec	ked of
	. }	should open and BP reduces rapidly.	2		
9.	Check regenerative	Bring the TE/BE throttle to BE side. Loco speed	1	Chec Chec	1.01.4
_	braking.	should start reducing.		? WICE	KENON
10.	Check for BUR	In the event of failure of one BUR, rest of the two			
	redundancy test at	BURs can take the load of all the auxiliaries. For this	<b>\</b>	check	ر (صا
	ventilation level 1 & 3 of	switch off one BUR.	Į		600
	loco operation	Auxiliaries should be catered by rest of two BURs.	ال		
	W.	Switch off the 2 BURs; loco should trip in this case.			
11.	Check the power	Create disturbance in power converter by switching	9	chel	rkes
	converter	off the electronics. VCB should open and converter	(	p	011
	isolation test	should get isolated and traction is possible with	]		
		another power converter.	d		

Effective Date: Feb 2022

Feb 2022

(Ref: WI/ECS/10)

## PATIALA LOCOMOTIVE WORKS, PATIALA

<u>Testing & Commissioning Format For 3-Phase Locomotive fitted with</u>
<u>IGBT based Traction Converter, Auxiliary Converter and TCN based VCU</u>

Locomotive No.: 49009

Type of Locomotive: WAP-7/WAG-9HC

Page: 27 of 27

# 7.0 Final check list to be verified at the time of Loco dispatch

Condition /Operations of the following items are to be checked:

SN	Item	Cab-1	Cab-2	Remarks
1	Head lights	<b>e</b> /e	0/5	
2	Marker Red	0k	6/5	
3	Marker White	01<	øk	
4	Cab Lights	o k	ok	
5	Dr Spot Light	ø/s	ot	checked cocoding or
6	Asst Dr Spot Light	0/<	- ok	
7	Flasher Light	Ok.	ok	
8	Instrument Lights		ok_	
9	Corridor Light		ak	
10	Cab Fans	OK.	ak	
11	Cab Heater/Blowers	ok_	Ols	
12	All Cab Signal Lamps Panel 'A'	61<	OK	

# Status of RDSO modifications

LOCO NO: 42009

· 1	#8 difference No	Remarks	
Sn	Modification No.	Description Linear Line	
1.	RDSO/2008/EL/MS/0357 Rev.'0' Dt 20.02.08	Modification in control circuit of Flasher Light and Head Light of three phase electric locomotives.	Ok/Not Ok
2.	RDSO/2009/EL/MS/0377 Rev.'0' Dt 22.04.09	Modification to voltage sensing circuit in electric locomotives.	Ok/Not Ok
3.	RDSO/2010/EL/MS/0390 Rev.'0' Dt 31.12.10	Paralleling of interlocks of EP contactors and Relays of three phase locomotives to improve reliability.	Øk/Not Ok
4.	RDSO/2011/EL/MS/0399 Rev.'0' Dt 08.08.11	Removal of interlocks of control circuit contactors no. 126 from MCPA circuit.	OK/Not Ok
5.	RDSO/2011/EL/MS/0400 Rev.'0' Dt 10.08.11	Modification sheet for shifting the termination of \$GKW, 1.8 KV, 70 sq mm cables and 2x2.5 sq mm cables housed in lower portion of HB2 panel and provision of Synthetic resin bonded glass fiber sheet for three phase locomotives.	QK/Not Ok
6.	RDSO/2011/EL/MS/0401 Rev.'0' Dt 10.08.11	Modification sheet for relaying of cables in HB-2 panel of three phase locomotives to avoid fire hazards.	øk/Not Ok
7.	RDSO/2011/EL/MS/0403 Rev.'0' Dt 30.11.11	Auto switching of machine room/corridor lights to avoid draining of batteries in three phase electric locomotives.	Ok/Not Ok
8.	RDSO/2012/EL/MS/0408 Rev.'0'	Modification of terminal connection of heater cum blower assembly	
9.	RDSO/2012/EL/MS/0411 Rev.'1' dated 02.11.12	Modification sheet to avoid simultaneous switching ON of White and Red marker light in three phase electric locomotives.	Ok/Not Ok
10	RDSO/2012/EL/MS/0413 Rev.'1' Dt 25.04.16	contactors of three phase locomotives to improve reliability.	
11	RDSO/2012/EL/MS/0419 Rev.'0' Dt 20.12.12		Ok/Not Ok
12	RDSO/2013/EL/MS/0420 Rev '0' Dt 23.01.13		
13	RDSO/2013/EL/MS/0425 Rev.'0' Dt 22.05.13		Qk/Not Ok
14	RDSO/2013/EL/MS/0426 Rev.'0' Dt 18.07.13		Ok/Not Ok
15	RDSO/2013/EL/MS/0427 Rev.'0' Dt 23.10.13		Ok/Not Ok
16	RDSO/2013/EL/MS/0428 Rev.'0' Dt 10.12.13	Modification sheet for relocation of earth fault relays for harmonic filter and hotel load along with its resistors in three phase electric locomotives.	ØK/Not Ok
17	RDSO/2014/EL/MS/043 Rev.'0' Dt 12.03.14	Removal of shorting link provided at c-d terminal of over current relay of three phase electric locomotives.	ON TOOL OIL
18	RDSO/2017/EL/M/3/046 Rev.'0' Dt 25.09.17	4 Provision of Auxiliary interlock for monitoring of Harmonic filter ON (8.1)/adoption (8.2) Contactor in GTO/IGBT locomotives.	Ok/Not Ok
19	RDSO/2017/EL/MS/046 Rev.'0' Dt 07.12.17	7 Modification in blocking diodes to improve reliability in three phase electric locomotives.	OK/NOT OK
20	RDSO/2018/EL/MS/047 Rev.'0'	Modification in existing Control Electronics (CE) resetting scheme of 3 phase electric locomotives.	Ok/Not Ok

Signature of JE/SSE/ECS

Loco No.: 42009

#### PLW/PATIALA

#### PNEUMATIC TEST PARAMETERS OF 3-PHASE ELECTRIC LOCOMOTIVES

(As per DG/RDSO/LKO's letter No.-EL/3.2.19/3phase, dated-29.03.2012)

SN	Parameters	Reference	Value	Result
	Brake Panel: M/s Faiveley			
1.0	Auxiliary Air supply system (Pantograph & VCB)			
1.1	Ensure, Air is completely vented from pantograph			0
	Reservoir (Ensure Panto gauge reading is Zero)			
1.2	Turn On BL Key. Now MCPA starts.		60 sec. (Max.)	58 sec
	Record pressure Build up time (8.0 kg/cm2)			
1.3	Auxiliary compressor safety Valve 23F setting	Faiveley Doc. No.	8.5±0.25kg/cm2	8.5 Kg/cm2
		DMTS-014-1, 8 CLW's	-	
		check sheet no.		
		F60.812 Version 2		
1.4	Check VCB Pressure Switch Setting	CLW's check sheet	Opens 4.5±0.15	4.45 Kg/cm2
		no. F60.812 Version 2	kg/cm2, closes	
			5.5±0.15 kg/cm2	5.45 Kg/cm2
1.5	Set pantograph Selector Switch is in Auto, Open pan-1&2 Is	solating Cocks & KABA co		
1.6	Set Cab-1 Pan UP in Panel A.		Observed Pan-2	ОК
			Rises.	
1.7	Close Pan-2 isolating Cock		Panto-2 Falls Down	ОК
	Open Pan -2 isolating Cock		Panto-2 Rises	
1.8	Record Pantograph Rise time		06 to 10 seconds	9 Sec
1.9	Record Pantograph Lowering Time		06 to 10 seconds	9 Sec
1.10	Panto line air leakage		0.7 kg/cm2 in 5	0.10 kg/cm2
			Min.	in 5 Min.
1.11	High Reach Panto emergency test and reset.			ok
2.0	Main Air Supply System			
2.1	Ensure, Air is completely vented from locomotive. Drain	Theoretical		
	out all the reservoirs by opening the drain cocks and then	calculation and		
	closed drain cocks. MR air pressure build up time by each	test performed by		
	compressor from 0 to 10 kg/cm2.	Railways.	:\ 7 \ A	6 : 8 50
	i) with 1750 LPM compressor		i) 7 mins Max.	6 min. & 50
	ii) with 1450 LPM compressor		ii) 8.5 mins Max.	sec.
2.2	Drain air below MR 8 kg/cm2 to start both the		Check Starting of	ok
	compressors		both compressors	
2.3	Drain air from main reservoir up to 7 kg/cm2. Start		30 Sec. (Max)	CP1-28 Sec
	compressors, Check pressure build time of individual		, ,	
	compressor from 8 kg/cm2 to 9 kg/cm2			CP2-28 Sec
2.4	Check Low MR Pressure Switch Setting (37)	D&M test spec.	Closes at 6.40±0.15	6.45 Kg/cm2
		MM3882 &	kg/cm2 Opens at	
		MM3946	5.60±0.15kg/cm2	5.6 Kg/cm2
2.5	Check compressor Pressure Switch RGCP setting (35)	D&M test spec.	Opens at 10±0.20	10 Kg/cm2
		MM3882 &	kg/cm2, Closes	
		MM3946	at 8±0.2kg/cm2	8 Kg/cm2
2.6	Run both the compressors Record Pressure build up time	Trial results	3.5 Minutes Max.	3.45 minute

#### PLW/PATIALA

Loco No.: 42009

2.8   Check Auto Drain Valve functioning (124 & 87)	2.7	Check unloader val	ve operation time				Approx. 12 Sec.	12 sec
Compressor   Com				24 & 87)				
2.9   Check CP-I delivery safety valve setting (10/1). Run CP   D&M test spec.   M3882 & MM3946   kg/cm2   11.5 Valve   M3882 & M38946   kg/cm2   11.5 Valve   Kg/cm2				,				
Direct by BLCP.  2.10 Check CP-2 delivery safety valve setting (10/2). Run CP direct by BLCP  2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.  2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.  3.0 Air Dryer Operation  3.1 Open Drain Cock 90 of 2" MR to start Compressor, leave open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops open for Test Check Air Dryer Towers to change.  4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  Brake Test (Automatic Brake operation)  5.0 Brake Test (Automatic Brake operation)  Check proportionality of Auto Brake system  Check proportional BP Pressure kg/cm2  Auto controller  Posting Proportional System Start Compressor System Start Compressor System Start Compressor Syste								
2.10   Check CP-2 delivery safety valve setting (10/2). Run CP   D&M test spec.   MM3882 & MM3946   kg/cm2   D&M test spec.   MM3882 & MM3946   pressure:   D&M test spec.   MM3882 & MM3946   D&M test spec.   D&M	2.9	Check CP-I delivery	safety valve setting	(10/1). Run CP	D&M t	est spec.	11.50±0.35	11.6 Kg/cm2
direct by BLCP  Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.  2.13 FP pressure: FIT Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.  3.0 Air Dryer Operation  3.1 Open Drain Cock 90 of 2" MR to start Compressor, leave open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check Purge Air Stops from Air Dryer at Compressor stops 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  Brake Test (Automatic Brake operation)  5.0 Brake Test (Automatic Brake operation)  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Tower to change every minute  Auto controller BP Pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  BC (WAG-9 & WAP-7) Rg/cm2 in 5 minutes  CLW's check sheet no. F60.812 Version 2  BC (WAG-9 & WAP-7) Rg/cm2 in 5 minutes  CLW's check sheet no. F60.812 Version 2  Auto controller BP Pressure kg/cm2 BC (WAG-9 & WAP-7) Rg/cm2 in 5 minutes  Auto controller Result Value Result Valu				MM3882	& MM3946	kg/cm2		
2.11 Switch 'OFF' the compressors and ensure that the safety valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.  2.13 FP pressure:  FIT Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.  3.0 Air Dryer Operation  3.1 Open Drain Cock 90 of 2 <sup>rd</sup> MR to start Compressor, leave open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops  3.3 Check condition of humidity indicator  4.0 Main Reservoir Leakage Test  4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  Brake Test (Automatic Brake operation)  5.0 Brake Test (Automatic Brake operation)  Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Blue  Check BP Air leakage (isolate BP charging cock-70)  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  MM3882 & MM3946  Should be less than 1 kg/cm2 in 15 minutes  MM3882 & MM3946  MM3882 & MM3946  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  CLW's check sheet no. F60.812 Version 2  CLW's check sheet no. F60.812 Version 2  BC (WAG-9 & WAP-7)  Kg/cm2  Value  Result  Value  Rospicance  O.75±0.15  -	2.10	Check CP-2 delivery	safety valve setting	g (10/2). Run CP	D&M t	est spec.	11.50±0.35	11.5 Kg/cm2
valve to reset at pressure 1.2 kg/cm2 less than opening pressure.  2.12 BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.  2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.  3.0 Air Dryer Operation  3.1 Open Drain Cock 90 of 2" MR to start Compressor, leave open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops leakage from both cabs.  4.0 Main Reservoir Leakage Test Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  CLW's check sheet no. F60.812 Version 2  Tower to change every minute  Alou Controller position  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3882 & MM3946  MM3882 & MM3946  D&M test spec. MM3946  D&M test spec. MM3946  D&M test spec. MM3946  D&M test spec. MM394					MM3882	& MM3946	kg/cm2	
pressure.  BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.  2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.  3.0 Air Dryer Operation  3.1 Open Drain Cock 90 of 2" MR to start Compressor, leave open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops a.3.3 Check condition of humidity indicator  4.0 Main Reservoir Leakage Test  4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  D&M test spec. MM3882 & MM3946  D.15 kg/cm2 in 5 minutes  5.0 Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  CLW's check sheet no. F60.812 Version 2  Should be less than 1 kg/cm2 in 15 minutes minutes  0.15 kg/cm2 in 5 minutes  0.04 Kg/cm2 in 5 minutes  D.8M test spec. MM3882 & MM3946  Check BP Air leakage (isolate BP charging cock-70)  D&M test spec. MM3882 & MM3946  Check BP Air leakage Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  CLW's check sheet no. F60.812 Version 2  BC (WAG-9 & WAP-7)  Kg/cm2 in 5 minutes  CLW's check sheet no. F60.812 Version 2  BC (WAG-9 & WAP-7)  Kg/cm2 bC (WAG-9 & WAP-7)  Kg/cm2  Value Result Va	2.11		•	•		•		
2.12   BP Pressure: Switch 'OFF' compressor, Drain MR Pressure by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.   CLW's check sheet no. F60.812 Version 2   G.0±0.10kg/cm2   G.05   Kg/cm2   G.05		· ·	essure 1.2 kg/cm2 le	ess than opening	MM3882	& MM3946		
by drain cock of 1" Main Reservoir, Start Compressor, check setting pressure of Duplex Check Valve 92F.  2.13 Fy pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.  3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Air Check condition of humidity indicator Blue Blue Blue 4.0 Main Reservoir Leakage Test A.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70) D&M test spec. MM3882 & MM3946 MM3882 & MM3946  D&M test spec. MM3882 & MM3946  Check BP Air leakage (isolate BP charging cock-70)  D&M test spec. MM3882 & MM3946  D&M test spec. MM3882		'						
check setting pressure of Duplex Check Valve 92F.  2.13 FP pressure: Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.  3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test Put Auto Brake (4-9) in full service, Check MR Pressure air leakage from both cabs.  4.1 Put Auto Brake (4-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  Brake Test (Automatic Brake operation)  5.0 Brake Test (Automatic Brake operation)  Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  BC (WAP-5) Kg/cm2  Auto controller position  Value Result Value Result Value Result Value Result Run 5±0.1 5.0 Kg/cm2  Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/ cm2 0.75±0.15 -	2.12						5.0±0.10kg/cm2	5.0 Kg/cm2
CLW's check sheet no.   F60.812 Version 2   F1 Test Gauge in Test point 107F FPTP. Open isolate cock   136F. Check pressure in Gauge.   Air Dryer Operation					F60.812 Ve	ersion 2		
Fit Test Gauge in Test point 107F FPTP. Open isolate cock 136F. Check pressure in Gauge.  3.0 Air Dryer Operation  3.1 Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops  3.3 Check condition of humidity indicator  4.0 Main Reservoir Leakage Test  4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  5.0 Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Auto controller position  BP Pressure kg/cm2  Value Result Value Result Value Result Value Result  Run 5±0.1 5.0 Kg/cm2  Run 5±0.1 6.0 4.6 Kg/cm2  Run 5±0.1 6.0 4.6 Kg/cm2  Run 5±0.1 6.0 4.6 Kg/cm2  Run 6.0 5±0.1 6.0 4.6 Kg/	2.12		ure of Duplex Check	( valve 92F.	CLVA// l	.11	6.010.201-/2	6.05
3.0 Air Dryer Operation 3.1 Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave open for Test Check Air Dryer Towers to change. 3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  5.0 Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Auto controller position  PP Pressure kg/cm2  Value Result Value Result Value Result Value Result  Run 5±0.1 5.0 Kg/cm2  Check BC Air Dryer Towers to change every minute  Tower to change every minute  D&M test spec. Should be less than 1 kg/cm2 in 15 minutes  O.4 Kg/cm2 in 5 minutes  O.5 Kg/cm2 in 5 minutes  CLW's check sheet no. F60.812 Version 2  BC (WAG-9 & WAP-7) Kg/cm2  Run 5±0.1 5.0 Kg/cm2  O.00 0.00 Kg/cm2  O.00 - Intial 4.60±0.1 4.6 Kg/cm2  O.75±0.15 -	2.13	•	oct point 107E EDTD	Open isolate cock			6.0±0.20kg/cm2	
3.0 Air Dryer Operation  3.1 Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops  3.3 Check condition of humidity indicator  4.0 Main Reservoir Leakage Test  4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Auto controller position  BP Pressure kg/cm2  Value Result Value Result Value Result Value Result  Run 5±0.1 5.0 Kg/cm2  Intial 4.60±0.1 4.6 Kg/cm2  O.40±0.1 0.40Kg/cm2  O.75±0.15 - Intial C.10±0.25 (ABC) C.10±0.15 (ABC) C.1		_	•	Open isolate cock	F00.812 VE	:131011 2		Ng/CIIIZ
3.1 Open Drain Cock 90 of 2 <sup>nd</sup> MR to start Compressor, leave open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops  3.3 Check condition of humidity indicator  4.0 Main Reservoir Leakage Test  4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  5.0 Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  Auto controller position  Value Result Value Result Value Result Value Result  Run 5±0.1 5.0 Kg/cm2 0.00 0.00 kg/cm2 0.75±0.15 -  Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 -	3.0	-	_					
open for Test Check Air Dryer Towers to change.  3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator  4.0 Main Reservoir Leakage Test  4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  5.0 Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Auto controller position  Value Result  Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 -  Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 -				Compressor leave			Tower to change	ok
3.2 Check Purge Air Stops from Air Dryer at Compressor stops 3.3 Check condition of humidity indicator 4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  Check proportionality of Auto Brake system  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Auto controller position  Value Result  Run 5±0.1 5.0 Kg/cm2  Name Test (Automatic Brake Operation)  Result  Value Result  Value Result  Value Result  Value Result  Value Result  Run 5±0.1 5.0 Kg/cm2  O.00 0.00 Kg/cm2  O.75±0.15  -  Intial 4.60±0.1 4.6 Kg/cm2  O.40 LM/ (A.0. D.50) Check on Test (Automatic Brake Compressor on Test (Automa	3.1	-		•				
3.3   Check condition of humidity indicator   Blue   Blue	3.2							
4.0 Main Reservoir Leakage Test 4.1 Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.  4.2 Check BP Air leakage (isolate BP charging cock-70)  5.0 Brake Test (Automatic Brake operation)  5.1 Record Brake Pipe & Brake Cylinder pressure at Each Step  Check proportionality of Auto Brake system  Check proportionality of Auto Brake system  Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Auto controller position  BP Pressure kg/cm2  Value  Result							Blue	Blue
A.1   Put Auto Brake (A-9) in full service, Check MR Pressure air leakage from both cabs.   D&M test spec.   MM3882 & MM3946   Should be less than 1 kg/cm2 in 15 minutes	4.0	·						
4.2 Check BP Air leakage (isolate BP charging cock-70)  D&M test spec. MM3882 & MM3946  Solution in the second specific in the	4.1			eck MR Pressure air	D&M t	est spec.	Should be less	0.4 Kg/cm2
A.2   Check BP Air leakage (isolate BP charging cock-70)   D&M test spec.   MM3882 & MM3946   Similar   MM3882 & MM3946   MM3882 & MM3946   Similar		leakage from both	cabs.		1		than 1 kg/cm2 in	in 15
MM3882 & MM3946   minutes   Kg/cm2 in 5   minutes							15 minutes	minutes
S.0   Brake Test (Automatic Brake operation)	4.2	Check BP Air leakag	ge (isolate BP chargi	ng cock-70)	D&M t	est spec.	0.15 kg/cm2 in 5	
S.0   Brake Test (Automatic Brake operation)					MM3882	& MM3946	minutes	Kg/cm2 in 5
Check proportionality of Auto Brake system  CLW's check sheet no. F60.812 Version 2  Auto controller position  BP Pressure kg/cm2  Value  Result  Run  S±0.1  S-0.0 Kg/cm2  D.000  0.00 Kg/cm2  0.40Kg/cm2  0.75±0.15  -  CLW's check sheet no. F60.812 Version 2  BC (WAG-9 & WAP-7)  Kg/cm2  Kg/cm2  Result  Value  Result  Value  Result  O.000  O.00 Kg/cm2  O.75±0.15  -		_						minutes
Check proportionality of Auto Brake system		•	-	•				
Auto controller position   BP Pressure kg/cm2   BC (WAG-9 & WAP-7)   BC (WAP-5)   Kg/cm2   Kg/cm2   Kg/cm2   Kg/cm2   Result   Value   Result   Value   Result   Value   Result   Run   5±0.1   5.0 Kg/cm2   0.00   0.00 Kg/cm2   0.00   - Intial   4.60±0.1   4.6 Kg/cm2   0.40±0.1   0.40Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.0   0.00 Kg/cm2   0.00 Kg/cm2   0.75±0.0   0.00 Kg/cm2	5.1	Record Brake Pipe 8	& Brake Cylinder pr	essure at Each Step				
Auto controller position   BP Pressure kg/cm2   BC (WAG-9 & WAP-7)   BC (WAP-5)   Kg/cm2   Kg/cm2   Kg/cm2   Kg/cm2   Result   Value   Result   Value   Result   Value   Result   Run   5±0.1   5.0 Kg/cm2   0.00   0.00 Kg/cm2   0.00   - Intial   4.60±0.1   4.6 Kg/cm2   0.40±0.1   0.40Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.0   0.00 Kg/cm2   0.00 Kg/cm2   0.75±0.0   0.00 Kg/cm2								
Auto controller position   BP Pressure kg/cm2   BC (WAG-9 & WAP-7)   BC (WAP-5)   Kg/cm2   Kg/cm2   Kg/cm2   Kg/cm2   Result   Value   Result   Value   Result   Value   Result   Run   5±0.1   5.0 Kg/cm2   0.00   0.00 Kg/cm2   0.00   - Intial   4.60±0.1   4.6 Kg/cm2   0.40±0.1   0.40Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.15   - Intial   0.05±0.0   0.00 Kg/cm2   0.75±0.0   0.00 Kg/cm2   0.00 Kg/cm2   0.75±0.0   0.00 Kg/cm2		Check proportional	ity of Auto Brake sy	stem	CLW's che	ck sheet no		
Auto controller position    BP Pressure kg/cm2   BC (WAG-9 & WAP-7)   BC (WAP-5)   Kg/cm2   Kg/cm2		encek proportional	ity of Auto Brake sy	300111				
position         Kg/cm2         Kg/cm2           Value         Result         Value         Result           Run         5±0.1         5.0 Kg/cm2         0.00         0.00 Kg/cm2         0.00           Intial         4.60±0.1         4.6 Kg/cm2         0.40±0.1         0.40Kg/cm2         0.75±0.15         -								
position         Kg/cm2         Kg/cm2           Value         Result         Value         Result           Run         5±0.1         5.0 Kg/cm2         0.00         0.00 Kg/cm2         0.00           Intial         4.60±0.1         4.6 Kg/cm2         0.40±0.1         0.40Kg/cm2         0.75±0.15         -								
Value         Result         Value         Result         Value         Result           Run         5±0.1         5.0 Kg/cm2         0.00         0.00 Kg/cm2         0.00         -           Intial         4.60±0.1         4.6 Kg/cm2         0.40±0.1         0.40Kg/cm2         0.75±0.15         -		Auto controller	BP Pressure kg/cn	n2	BC (WAG-9	& WAP-7)	BC (WAP-5)	
Run 5±0.1 5.0 Kg/cm2 0.00 0.00 Kg/cm2 0.00 - Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 0.40Kg/cm2 0.75±0.15 -		position			Kg/cm2		Kg/cm2	
Run       5±0.1       5.0 Kg/cm2       0.00       0.00 Kg/cm2       0.00       -         Intial       4.60±0.1       4.6 Kg/cm2       0.40±0.1       0.40Kg/cm2       0.75±0.15       -			Value	Result	Value	Result	Value	Result
Intial 4.60±0.1 4.6 Kg/cm2 0.40±0.1 <sub>0.40Kg/cm2</sub> 0.75±0.15 -								
5. II		Run	5±0.1	5.0 Kg/cm2	0.00	0.00 Kg/ cm2	0.00	-
Full comics 2.2510.2 2.45/2m2 2.5010.1		Intial	4.60±0.1	4.6 Kg/cm2	0.40±0.1	0.40Kg/ cm2	0.75±0.15	-
Full service   3.35±0.2   <b>5.4 kg/cm2</b>   2.50±0.1   2.5Kg/cm2   5.15±0.30   -		Full service	3.35±0.2	3.4 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-
Emergency Less than 0.3 <b>0.2 Kg/cm2</b> 2.50±0.1 2.5Kg/cm2 5.15±0.30 -		Emergency	Less than 0.3	0.2 Kg/cm2	2.50±0.1	2.5Kg/ cm2	5.15±0.30	-

#### PLW/PATIALA

Loco No.: 42009

5.2	Record time to BP pressure drop to 3.5 kg/cm2 Ensure Automatic Brake Controller handle is Full Service from Run	D&M test spec. MM3882 & MM3946	8±2 sec.	9 Sec
5.3	Operate Asst. Driver Emergency Cock,	D&M test spec. MM3882 & MM3946	BP pressure falls to Below 2.5 kg/cm2	ОК
5.4	Check brake Pipe Pressure Switch 69F operates	CLW's check sheet no. F60.812 Version 2	Closes at BP 4.05- 4.35 kg/cm2 Opens at BP 2.85- 3.15 kg/cm2	4.30 Kg/cm2 3.05 Kg/cm2
5.5	Move Auto Brake Controller handle from Running to Emergency BC filling time from 0.4 kg/cm2 i.e. 95% of Max. BC developed WAP5 – BC $5.15 \pm 0.3$ kg/cm2 apply time WAP7 - BC $2.50 \pm 0.1$ kg/cm2 WAG9 - BC $2.50 \pm 0.1$ kg/cm2	D&M test spec. MM3882 & MM3946	4±1 sec. 7.5±1.5 sec. 21±3 sec.	22 Sec.
5.6	Move Auto Brake Controller handle to full service and BP pressure 3.5 kg/cm2. Move Brake controller to Running position BC Release time to fall BC Pressure up to 0.4 kg/cm2 i.e. 95% of Max. BC developed BC release Time WAP7 WAG9	D&M test spec. MM3882 & MM3946	17.5±25 sec. <b>52±7.5 sec</b> .	57 sec.
5.7	Move Auto Brake Controller handle to Release, Check BP Pressure Steady at 5.5± 0.2 kg/cm2 time.	CLW's check sheet no. F60.812 Version 2	60 to 80 Sec.	78 Sec
5.8	Auto Brake capacity test: The capacity of the A9 valve in released condition must conform to certain limit in order to ensure compensation for air leakage in the train without interfering with the automatic functioning of brake.  * Allow The MR pressure to build up to maximum stipulated limit.  * Close brake pipe angle cock and charge brake pipe to 5 kg/cm2 by A-9 (Automatic brake controlling) at run position.  * Couple 7.5 dia leak hole to the brake hose pipe of locomotive. Open the angle cock for brake pipe.  The test shall be carried out with all the compressors in working condition.	RDSO Motive power Directorate report no. MP Guide No. 11 July, 1999 Rev.1	BP pressure should not fall below 4.0 kg/cm2 with in 60 Sec.	4.5 Kg/cm2
5.9	Keep Auto Brake Controller (A-9) in Full Service. Press Driver End paddle Switch (PVEF)		BC comes to '0'	0
6.0	Direct Brake (SA-9)			
6.1	Apply Direct Brake in Full Check BC pressure WAG9/WAP7 WAP5	CLW's check sheet no. F60.812 Version 2	3.5±0.20 kg/cm2 5.15±0.3 kg/cm2	3.6 Kg/cm2
6.2	Apply Direct Brake, Record Brake Cylinder charging time	D&M test spec. MM3882 & MM3946	8 sec. (Max.)	8 Sec

#### **PLW/PATIALA**

Loco No.: 42009

6.3	Check Direct Brake Pressure switch 59 (F)	D&M test spec. MM3882 & MM3946	0.2.±0.1 kg/cm2	0.25 kg/cm2
6.4	Release direct brake & BC Release time to fall BC pressure up to 0.4 kg/cm2		10 -15 Sec.	15 Sec
7.0	Modified System Software (only for CCB)		-NA-	-NA-
7.1	Bail-off de-activated during emergency by any means			
7.2	DPWCS and Non-DPWCS mode enabled		Multi Loco	
7.3	TCAS and Non-TCAS mode enabled		Not Yet Launched	Presently
7.4	Penalty brake application deactivated for Fault code 113 (FC 113) and CCB health signal will not drop to avoid loco detention/failure. The Brake Electronics Failure "message will not generate on DDS.	RDSO letter no.	Pressure Setting Needed is12 kg/sqcm causing mismatching with standard Pr Setting	not happening in PLW
7.5	CCB health signal logic revised (Now will remain high) for penalty condition occurring with FC 108 due to wrong operation/not affecting operation/ Not a CCB Fault (i.e Both controllers selected as LEAD etc) The Brake electronic failure message will not generate on DDS	EL/3.2.19/3-phase (CCB), dtd 30.01.2023		
7.6	CCB health signal logic for FC 102 (In case of BC request from VCU is more than 90 %-above 9V DC) is changed i.e CCB health signal will not drop for FC 102 which will avoid loco detention/failure. The brake electronic failure message will not generate on DDS.		Could not performed by M/s Knorr	Presently Not happening in PLW
7.7	Booting time for CCB with TCAS/TPM/PTWS/DPWCS mode 15-20 sec. However, in case of absence of either one or both system booting time subsequently increased to 40-50 sec.			
8.0	Sanding Equipment			
8.1	Check Isolating Cock-134F is in open position. Press sander paddle Switch. (To confirm EP valves Operates)		Sand on Rail	Ok
9.0	Test Vigilance equipment : As per D&M test specification			Ok



Signature of SSE/Shop

	42009								
		ı	ROOF COME	PONENT CAB 1 & 2		Warranty			
S.No.	Description	PL NO.	QPL /Nos.	Supplier	Sr. no.	,			
1	Pantograph	29880014(HR), 29880026	2	FAIVELEY, CONTRANSYS	A25-0845/JAN-2025, 15676-10/24				
2	Servo motor	29880026	2	CONTRANSYS	15281-09/24				
3	Air Intake filter Assly	29480103	2	PARKER	O/C 1675P/A/01 (PLW) 10/24, O/C 1675P/A/02 (PLW) 10/24				
4	Insulator Panto Mtg.	29810127	8	BHEL	08-2024, 09-2024				
		•	MIDDLE RC	OF COMPONENT					
5	High Voltage Bushing	29731021	1	ELECTRANEX	EIPL-5818-11-24				
6	Voltage Transformer	29695028	1	CG POWER & INDUSTRIAL	243329-18/09/2024				
7	Vacuum Circuit Breaker	25712202	1	AUTOMETERS	AALN/10/2024/011/VCBA/719				
8	Insulator Roof line	29810139	9	MIL	06-2024, 07-2024				
9	Harmonic Filter	29650033	1	Sunshine	1262-09-2024	AS Per PO/IRS Conditions			
10	Earth Switch	29700073	1	AUTOMETERS	AALN/04/2024/015/ES/015				
11	Surge Arrester	29750052	2	CG POWER & INDUSTRIAL	57728-2024, 57729-2024				
			Air B	rake Components					
12	Air Compressor (A,B)	29511008	2	ELGI	EXGS 923354 A, EXGS 923675 B				
13	Air Dryer	29162051	1	KNORR	E24 E 0423				
14	Babby compressor	25513000	1	ELGI	BXFS 109 393				
15	Air Brake Panel	29180016	1	FAIVELEY	OCT-23-60-WAG9-3199				
16	Contoller (A,B)	29180016	2	FAIVELEY	M 24-121 A, M 24-140 B				
17	Breakup Valve	29180016	2	FAIVELEY					
18	wiper motor	29162026	4	AUTO INDUSTRY					

SAMSHER Digitally signed by SAMSHER SINGH BIST Date: 2025.02.18 15:43:31 +05'30' SSE/ABS

# PLW/PTA

# ELECTRIC LOCO HISTORY SHEET (ECS)

**ELECTRIC LOCO NO: 42009** 

RLY:

SHED:

PROPULSION SYSTEM: CGL

	)C/02/1317	24K/RMPU/DC/02/1317	29811028	Roof mounted Air Conditioner I	18
	)C/02/1334	24K/RMPU/DC/02/1334		Transformer Oil Temperature Sensor (Cab-2)	17
1	TFP/7332 Jun-24	ВС/ТЕР/733	29500035	(Temperature Sensor Oil Circuit Transformer)	16
	'8 Aug-24	BG/TFP/8878 Aug-24		Transformer Oil Temperature Sensor (Cab-1)	15
110	BG/PS/2872 Sep-24	BG/PS/2869 Sep-24	29500047	(Pressure Sensor Oil Circuit Transformer)	14
1	BG/PS/2892 Sep-24	BG/PS/2879 Sep-24		Transformer Oil Pressure Sensor (Cab-1)	
			29600420	Dattery (141 CC)	-
			29680025	Battery (Ni- Cd)	
		B-68	29200040	Speed Ind.& Rec. System	
1	284	5963/5284	7010/167	Complete Cubicle- F Panel Cab I & II	10
1	2726/12/24	2742/1/25	20178162	Complete Panel D Cab I & II	9
1	K11634	KT1489	20178265	Complete Panel C Cab I & II	00
	C20167	251024	29170539	Complete Failer Coap i &	-
	254023	KT1613	29178265	Waster Collinoid Cab   & II	
	KT1614			Master Controller Cab II	
1		403	29860015	Master Controller Cab I	<u>ω</u>
1		397		Crew Fan Cab I & II	4
	6/10/10	5888/58/6/5/82/37/3	29470080	Cap nealer Cap i a ii	C
- 1	00/5773	0820	29170011	Sek Lington Cah I & II	+
1 .	3295	3300	27871967	Led Marker Light Cab I & II	2
1	3489/142937	143564/143514/143489/142937	Z901Z937	LED Based Flasher Light Cab I & II	_
1	4656		17EM PL NO.		NS
1	NO CAB-1/CAB-2	ITEM SR. NO CAI			

SSE/ECS

		LOCO NO- 42009/	WAG-9HC/WCR	/ETE		
S.No.	Equipment	PL No.		ent Serial No.	Ma	ıke
1	Complete Shell Assembly with piping	29171027	57/6	63, 01/25	EC	BT
2	Side Buffer Assly Both Side Cab I	29130050	217, 09/24	25, 11/24	AEU	AEU
3	Side Buffer Assly Both Side Cab II	29130030	342, 09/24	not visible, 09/24	AEU	AEU
4	CBC Cab I & II	29130037	156, 11/24	145, 11/24	FASP	FASP
5	Hand Brake		12/24- 1092		Rising Engg.Concern	
6	Set of Secondry Helical Spring	29045034 29041041		-	FRON	TIERS
7	Battery Boxes (both side)	29680013	02, 11/24	54, 12/24	BHARTIA BRIGHT	BHARTIA BRIGHT
8	Traction Bar Bogie I			0, 12/24	K	M
9	Traction Bar Bogie II	_ e <sup>2</sup> = 11 = 1 = 1 = 1 = 1	874	6, 12/24	K	M
10	Centre Pivot Housing in Shell Bogie I side	20100057	340	0, 12/24	AN	IIL
11	Centre Pivot Housing in Shell Bogie II side	29100057	332	2, 12/24	AN	IIL
12	Elastic Ring in Front in Shell Bogie I side	20100010	143	3, 10/24	AVA	DH
13	Elastic Ring in Front in Shell Bogie II side	29100010	145	1, 10/24	AVA	DH
14	Main Transformer	29731008 for WAG 9 29731057 for WAP-7	CG-65-01-25-B	BHL11500/45, 2025	C	G
15	Oil Cooling Radiator I		10/24 P	1024RC2304	FINE AUTOM	MOTIVE LTD
16	Oil Cooling Radiator II	29470031		1024RC2312	FINE AUTON	
17	Main Compressor I with Motor			3675, 10/24	EL	
18	Main Compressor II with Motor	29511008		3354, 09/24	EL	
19	Transformer Oil Cooling Pump I			286, 08/23	FLOWWELL	
20	Transformer Oil Cooling Pump II	1.11.11.11.11.11.11.11.11.11.11.11.11.1		350, 08/23	FLOWWELL	
21	Oil Cooling Blower OCB I			731, 32409AF3731	SAINI ELECTR	
22	Oil Cooling Blower OCB II	29470043		725, 32409AF3725	SAINI ELECTR	
23	TM Blower I	221122=		81, CGLXKAM6655	ACC	
24	TM Blower II	29440075		70, CGLXKAM23176	ACC	
25	Machine Room Blower I	20110105		933, MF42/D5980	SAMAL HARA	
26	Machine Room Blower II	29440105		943, MF42/D5990	SAMAL HARA	
27	Machine Room Scavenging Blower I	20110120		D7184, D25-6812	SAMAL HARA	
28	Machine Room Scavenging Blower II	29440129		D7202, D25-6830	SAMAL HARA	
29	TM Scavenging Blower Motor I	20440447		ST-24.10.180	GTR CO F	
30	TM Scavenging Blower Motor II	29440117		ST-24.10.205	GTR CO F	
31	Traction Convertor I			12512440-P1139		
32	Traction Convertor II			12512439-P1139		
33	Vehicle Control Unit I	20744075		011375-P1139	CGL	
34	Vehicle Control Unit II	29741075		011376-P1139		
	Aux. Converter Box I (BUR 1)			12511557-P1139		
	Aux. Converter Box 2 (BUR 2 + 3)			)22511557-P1139		
	Axillary Control Cubical HB-1	29171180		HB1624A0828	CG	L
	Axillary Control Cubical HB-2	29171192		1/24/10/HB2G9/08		
	Complete Control Cubicle SB-1	29171209		SB1/24110924	CG	
	Complete Control Cubicle SB-2	29171210		024/J/0225/1296	HIND RECT	IFIERS LTD
41	Filter Cubical (FB) (COMPLETE FILTER CUBICLES)	29480140		2/2024/23/FB/215	AUTOMETERS A	
42	Driver Seats	29171131	11//24-	17, 18, 41, 35	MODERN F	
	Transformer oil steel pipes	29230044		ANT PIPES		
	Conservator Tank Breather	29731057		21, 22-0734	YOGYA ENETI	RPRISES LTD
	Ballast Assembly (only for WAG-9)	29170163		33, 80, 94	GF	
	Head Light	-	1050	1057	ENSAUE	

NAME SHUBHAM FINAM SSE/LAS

NAME TAINE MEON

NAME ARMIT UPPAR
JE/LAS

Issue No. : 05 Effective Date: July-2023 DOC NO: F/LAS/Electric Loco CHECK SHEET (Ref: WI/LAS/Elect/01, 02, 03 & 04 & QPL/LAS/Elect. Loco)

Page 1 of 1

#### पटियाला रेलइंजन कारखाना, पटियाला PATIALA LOCOMOTIVE WORKS, PATIALA ELECTRIC LOCO CHECK SHEET

LOCO NO: 42009

Rly: WCR

Shed: ETE

S. No.	ITEM TO BE CHECKED	Specified Value	Ol	oserved V	alue
1.1	Check proper Fitment of Hotel Load Converter & its output contactor.	OK	_	- MA	
1.2	Check proper Fitment of MR Blower 1 & 2, MR Scavenging Blower 1 & 2, TM Blower 1 & 2, TMB Scavenging Blower 1 & 2.  TM scavenging blower 1 & 2 & Oil Cooling unit.	ОК		0/2	
1.3	Check proper of Fitment of oil cooling unit (OCU).	OK		0/2	
1.4	Check proper Fitment of HB 1 & 2 and its respected lower part on its position.	OK		CIL	
1.5	Check proper Fitment of FB panel on its position.	OK		0/2	
1.6	Check proper Fitment of assembled SB1 & SB2 panel.	OK		UL	
1.7	Check proper Fitment of Auxiliary converter 1, 2 & 3-(BUR-1, 2 & 3).	OK		0/2	
1.8	Check proper Fitment of Traction converter 1 & 2 (SR-1 & 2).	OK		Q2	
1.9	Check proper fitment, torquing & Locking of Main Transformer bolt.	OK		W2	
1.10	Check proper fitment of Main compressor both side with the compressor safety wire rope.	OK		UL	
1.11	Check proper resting of Secondary Helical Springs between Bogie & Shell body.	OK		0/2	
1.12	Check proper fitment of Bogie Body Safety Chains.	OK		0/2	
1.13	Check proper fitment of Cow catcher.	OK		0/2	*
1.14	Check coolant level in SR 1 & 2 Expansion Tank.	OK		all	4
1.15	Check Transformer Oil Level in both conservators Tank (Breather Tank).	OK		0/2	
1.16	Check proper fitment and maintain required gaps from Loco Shell Body of all metallic pipes to avoid any damage during online working of Locomotives.	OK		0/2	
1.17	Check proper fitment of both battery box.	OK		012	
1.18	Check for any gap between Main Transformer mounting base & Loco Shell.	OK		0/2	
1.19	Check proper fitment of Push Pull rod its bolt torquing and fitment of fixing cable. As per Drg No 1209-01-113-001	ОК		OK	
1.20	Secondary Vertical and Lateral Clearance on leveled track at the time of Loco Dispatch. <u>ELRS/TC/ 0082 (Rev 1) dated 17.09.2015</u>	Vertical-Std :35-60 mm Lateral Std- 45-50 mm		ALP L	CAB-2 .P ALP 12 42 16 32
1.21	Buffer height: Range (1090, +15,-5)	1085-1105		L/S	R/S
	Drg No IB031-02002.	mm	FRONT	1097	1100
			REAR	1043	1100
1.22	Buffer Length: Range (641 mm + 3 to 10 mm with buffer face)	641 mm		L/S	R/S
1.22	Drg No-SK.DL-3430.	041111111	FRONT	644	647
	big ito diabatorio.		REAR	-	_
		444	NEAR	647	646
1.23	Height of Rail Guard. (114 mm + 5 mm,-12 mm).	114 mm + 5		L/S	R/S
	As per RDSO Pamphlet Important Bogie Clearances of Electric Locomotives.	mm,-12 mm	FRONT	118	119
			REAR	118	115
1.24	CBC Height: Range (1090, +15,-5)  Drg No- IB031-02002.	1090, +15 -5 mm	FRONT: REAR:	1097	
	DIG NO- 1003 1-02002.	-5 11111	112/111	1011	

(Signature of SSE/Elect. Loco )

NAMES NO BRAM SHARMA

DATE 31/01/25

(Signature of /JE/Elect Loco)

NAME Raynty or meng

DATE 31/01/25

(Signature of JE/UF)

NAME ANICIT UPPAL

DATE 31/01/25

#### **Loco No.** 42009

#### 1. BOGIE FRAME:

BOGIE	FRAME NO	Make	PL No.	PO No. & dt.	Warranty Period
FRONT	SL-2689	ACPL	29100677	102222	As per PO/IRS
REAR	SL-19/22	TACPL	29100677	102223	conditions

#### 2. Hydraulic Dampers (PL No.29040012) Make: G.B. / G.B.

#### 3. AXLES:

AXLE POSITION NO	1	2	3	4	5	6
MAKE/	PLW	PLW	PLW	PLW	PLW	PLW
S.NO	28158	28043	28000	27919	28080	28062
Ultrasonic Testing	OK	OK	OK	OK	OK	OK

#### 4. WHEEL DISCS NO. AND TYPE & BULL GEAR

AXLE POSITION NO	1	2	3	4	5	6
GEAR END	EV90-089	EQC6-040	EQA3-061	EQ38-087	EV79-071	EQ38-090
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
FREE END	EV90-058	EQC6-001	EQD1-055	EV68-090	EV68-028	EV36-009
Make	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED	IMPORTED
Bull Gear No.	23-L-982	23-L-973	23-L-10255	24-D-924	24-K-1551	23-L-10202
Bull Gear Make	KPCL	KPCL	KPCL	KPCL	KPCL	KPCL

#### 5. AXLE ROLLER BEARING (CRU) (PL No. 29010020, Warranty: As per PO/IRS conditions)

	AXLE POSITION NO	1	2	3	4	5	6
Gear	MAKE	FAG	NBC	NBC	NBC	FAG	FAG
End	PO NO. & dt	02312	02311	02311	02311	02312	02312
Free	MAKE	FAG	NBC	NBC	NBC	FAG	FAG
End	PO NO. & dt	02312	02311	02311	02311	02312	02312

#### 6. WHEEL DISC PRESSING PRESSURE IN KN: (SPECIFIED 80-105 T)

AXLE POSITION NO	1	2	3	4	5	6
BULL GEAR END	913 KN	91 T	98 T	846 KN	830 KN	94 T
FREE END	906 KN	98 T	86 T	864 KN	825 KN	104 T

#### Loco No. 42009

#### 7. DIAMETER AFTER PROFILE TURNING: SPECIFIED 1092 + .5 mm - 0 mm

AXLE POSITION NO	1	2	3	4	5	6
DIA IN mm GE	1092.4	1092.5	1092.5	1092.5	1092.5	1092.5
DIA IN mm FE	1092.4	1092.5	1092.5	1092.5	1092.5	1092.5
WHEEL PROFILE GAUGE (1596±0.5mm)	OK	OK	OK	OK	OK	OK

#### 8. SUSPENSION TUBE & ITS TAPER ROLLER BEARING:

AXLE POSITION NO		1	2	3	4	5	6
S.T. PL 29100288 MAKE		PITTI	PITTI	KPE	PITTI	IN	KPE
GE Brg. PL 29030110	MAKE	NBC	NBC	NBC	NBC	NBC	NBC
FE Brg. PL 29030110	MAKE	NBC	NBC	NBC	NBC	NBC	NBC

#### 9. GEAR CASE (PL No. 29030018) & BACKLASH:

AXLE POSITION NO	1	2	3	4	5	6
MAKE	KM	KM	EEE	KM	KM	KM
BACKLASH (0.254 – 0.458mm)	0.320	0.350	0.320	0.300	0.300	0.320

#### 10 A/BOX TO BOGIE FRAME LATERAL CLEARANCES (SPECIFIED 15.0 to 19.0mm):

AXLE POSITION NO	1	2	3	4	5	6
RIGHT SIDE	16.21	15.71	17.35	15.85	17.22	16.00
LEFT SIDE	15.57	16.29	15.69	16.45	17.90	15.52

#### 11. TRACTION MOTOR: (PL No.29940606, Warranty: As per PO/IRS conditions)

AXLE POSITION NO	MAKE	PO No. & Date	S. NO.
1	CGP	102027	2232006-7752
2	CGP	102027	2232006-7742
3	PIONEER	102028	318A241032
4	TMS		PLW-3204
5	TMS		PLW-3194
6	TMS		PLW-3198

JE/SSE/ Bogie Shop

#### TOP 12 COSTLIEST ITEMS OF WAG9HC LOCO WITH WARRANTY CONDITIONS AS PER TENDERS

S No	PL No	DESCRIPTION	Warranty Period
1	29741075	IGBT BASED 3-PHASE DRIVE PROPULSION EQUIPMENT	60 months after commissioning or 72 months from date of supply whichever earlier as per special conditions given by CLW
2	29731057	MAIN TRANSFORMER 7775 KVA TYPE LOT 7500 FOR WAP7 3- PHASE ELECTRIC LOCOMOTIVE TO CLW SPECN NO.CLW/ES/3/0660/C	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
3	29171064	COMPLETE SHELL ASSLY (PIPED & PAINTED) FOR WAP-7 LOCO TO CLW SPEC. NO. CLW/MS/3/152 ALT- 8	AS PER IRS CONDITIONS-30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER.
4	29600418	LOCOMOTIVES TO CLW SPECN. NO. CLW/ES/03/646  ALT-NIL WITH DMW REQUIREMENT OF HARNESSED	As per clause no.9 of CLW Specn. CLW/ES/3/0458 & Clause No.10 of CLW SpecnCLW/ES/3/0459. [18 months after commissioning or 20 months from date of supply for single core & 18 months after commissioning or 24 months from date of supply for multi core]

7	29942007	3-PHASE ASYNCHRONOUS TRACTION MOTOR (RESISTANCE RING MECHANICALLY INTERLOCKED TO END PLATE DESIGN ROTOR, SCHEME-II), TYPE 6FRA-6068 FOR WAP-7 ELECTRIC LOCO WITHOUT ACTIVE SPEED SENSOR TO SPECIFICATION NO. 4TMS.096.081 ALT-2 AND STR NO. CLW/2008/3PHTM/STR/0001.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
6	29480140	COMPLETE FILTER CUBICLE ALONG WITH ALL EQUIPMENTS AND CABLING TO DRG./SPEC NO. [1] CLW/ES/3/0193 ALT-F OR LATEST AND CLW DRG. NO. 1209-15-143-004 ALT-10 AND PART DRG./SPEC NO AS PER ANNEXURE-A ATTACHED.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
5	29180016	BRAKE CONTROL SYSTEM INCLUDING DRIVER'S VIGILANCE CONTROL DEVICE TO SET LIST NO.EL29180016.	As per specification no. CLW/MS/3/001 Alt. 16 i.e. the manufacturer is required to guarantee that the brakevalves/equipment work satisfactorily for a period of five (5) years after commissioning. Any equipment/part which failsduring the guarantee period shall be replaced free of cost by the manufacturer. The replaced components shallfurther be under warranty for five (5) years from the date of their fitment and should the replaced components proveunsatisfactory in service, they shall be replaced by modified and improved components by the supplier free of cost.

8	29105146	Bogie Frame Complete for WAP-7 for 3 Phase Co Co Locomotive to CLW specification No. CLW/MS/3/Bogie/003 alt-1 and CLW Drg.No.1209.01.112-202 Alt-Nil	As per clause 16 of Spec.No.CLW/MS/3/Bogie/003 Alt-1. [60 months after commissioning or 72 months from date of supply]
9	29171192	COMPLETE AUXILIARY CUBICLE HB2 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0192 ALT-E OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
10	29171210	COMPLETE CONTROL CUBICLE SB2 ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0195/A ALT-H OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
11	29171209	COMPLETE CONTROL CUBICLE SB1 (PUSH PULL SCHEME COMPLIANT) ALONG WITH ALL EQUIPMENTS AND CABLING (EXCLUDING CONTROL ELECTRONICS) TO CLW SPECN. NO. CLW/ES/3/0194 ALT-G OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.
12	29171180	COMPLETE AUXILIARY CUBICLE HB1 ALONG WITH ALL EQUIPMENTS AND CABLING TO CLW SPEC.NO.CLW/ES/3/0191 ALT-D OR LATEST FOR WAP7 LOCO WITH HOTEL LOAD WITH BARE CUBICLE AS PER CLW SPEC.NO.CLW/MS/3/155 ALT-NIL.	AS PER IRS CONDITIONS OF CONTRACT [i.e. 30 MONTHS FROM THE DATE OF SUPPLY OR 24 MONTHS FROM THE DATE OF COMMISSIONING, WHICHEVER IS EARLIER] WILL BE APPLICABLE.



#### भारत सरकार GOVERNMENT OF INDIA

रेल मंत्राल्य

#### MINISTRY OF RAILWAYS

पटियाला रेलइंजन कारखाना

#### PATIALA LOCOMOTIVE WORKS

Email: dyceeloco.dmw@gmail.com फैक्स/Fax No.: 0175-2397244

फोन/ Phone: 0175-239/244 फोन/ Phone: 0175- 2396422 मोबाईल: 9779242310

पटियाला, 147003, भारत् PATIALA, 147003, INDIA



(An ISO 9001, ISO 14001, ISO 45001 & ISO 50001, 5S & Green Building certified Organization)

संख्या. PLW/M/ECS/Tech/Kavach

तिथि: As signed

(Through Mail)

Sr. Div. Electrical Engineer, Electric Loco Shed, Itarsi.

Email: srdeetrset@gmail.com

विषय:- Fitment of KAVACH in three Phase Electric Loco. No. 42009 WAG9-HC.

संदर्भ:- (i)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 21.08.2023.

(ii)Director General Stds./Electrical/RDSO letter no. EL/0.1.3/3 dated 26.09.2023

In ref. to the above letter's Loco No. 42009 has been dispatched with fittings for implementation of KAVACH system in locomotive at home shed in Zonal Railway. This Loco was dispatched to ELS/ET/WCR on 19.02.2025. The details of fittings are attached as Annexure-A (pneumatic fittings), Annexure-B (Kavach equipment mounting Brackets) & Annexure-C (Wago with harnessed lay out).

This is for your information & necessary action please.

Digitally signed by NISHANT BANSIWAL Date: 2025.03.21 17:33:15 +05'30'

(निशात बंसीवाल)

उप मुख्य विद्युत अभियंता/लोको

प्रतिलिपि:-

CEE/Loco & CEE/D&Q, CMM, CELE/WCR:- for kind information please Dy CME/Design, Dy. CMM/Depot: for information & necessary action please WM/LAS, AWM/LFS&ABS, AWM/ECS: for necessary action please


# Loco No. 42009

SN	PL No.	Description of item	Oty.
		ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITH VENT	04 nos.
1	29163341	ISOLATING COCK 3/8" (FEMALE) LEGRIS TYPE WITHOUT VENT	02 nos.
		TEE UNION 3/8"X3/8"X3/8" BRASS FITTINGS	02 nos.
		MALE CONNECTORS 3/8" TUBE OD X 3/8" BSPT, BRASS FITTINGS	09 nos.
	FEMALE TEE 1/2" BSPP – BRASS  HEX NIPPLE 3/8X3/8" BSPT – BRASS  RED HEX NIPPLE 3/8X1/2" BSPT – BRASS  HEX PLUG – 1/2" BSPT – BRASS  MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS	06 nos.	
			01 no.
		MALE CONNECTOR (NYLON TUBE) DIA 6 TUBE X 3/8" BSPP BRASS	03 nos
		FEMALE TEE 3/8" BSPP – BRASS	06 nos
2		HEX PLUG -3/8" BSPT – BRASS	02 nos
		FEMALE TEE 1/2" BSPP – BRASS	04 nos
		HEX NIPPLE 3/8X3/8" BSPT BRASS	04 nos
		RED HEX NIPPLE 3/8X1/2" BSPT - BRASS	02 nos
		HEX PLUG – 1/2" BSPT – BRASS	04 nos
		MALE ELBOW CONNECTORS 3/8" TUBE OD X 3/8) BSPT. BRASS FITTINGS	02 nos
3	29170114	Copper Tube OD 9.52mm (3/8" ) X 1.245 Mm W.T X 6 Mtr	1.2Mtr

AWM/ABS & LFS

SSE/G/ABS

SN	PL No.	Description of item	Quantity
1.	29611945	Mounting bracket arrangement provided for RF Antenna on the roof top of both driver cabs.	04 nos.
2.		Mounting bracket arrangement provided for GPS/GSM Antenna on the roof top of both driver cabs.	02 nos.
3.		Protection Guards for RFID reader provided behind the cattle guards of both side.	04 nos.
4.		Inspection door with latch provided on the both driver desk covers (LP side) in each cab to access isolation cock.	02 nos.
5.		Cable Entry Plate fitted for routing of cable with RF Antenna & GPS/GSM Antenna bracket.	06 nos.
6.	-	WAGO bracket fitted in Machine room at back side of SB-1.	01 no.
7.	-	One circular hole of 80 mm dia provided in each cabs on LP side behind the driver desk toward the wall for routing of OCIP (DMI) cables.	02 nos.
8.	-	80 mm holes provided on TM1 and TM6 Junction box inspection cover hole for drawing of RFID reader cables.	02 nos.
9.		DIN Rail fitted inside the driver desk (LP Side)	02 nos.

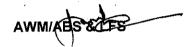



## Annexure-C

SN	PL No.	Description of item	Quantity
1.	42310301	Flexible conduit size 25mm <sup>2</sup> provided for RF-1, 2 & GPS Antenna cable layout from CAB-1&2 to Machine room.	06 mtr.
2.	29611982	Wago terminals in CAB-1&2 (25 nos. in each CAB).	50 nos.
3.	29611982	Wago terminal in Machine room at back side of SB-1.	75 nos.
4.		Harness provided from KAVACH SB to SB-1	07 wires
5.	-	Harness provided from KAVACH SB to SB-2	05 wires
6.		Harness provided from KAVACH SB to Pneumatic Panel	12 wires
7.	-	Harness provided from KAVACH SB to CAB-1	gu wires
8.	_	Harness provided from KAVACH SB to CAB-2	16 wires

AWMEGS

SSEIGIECS